

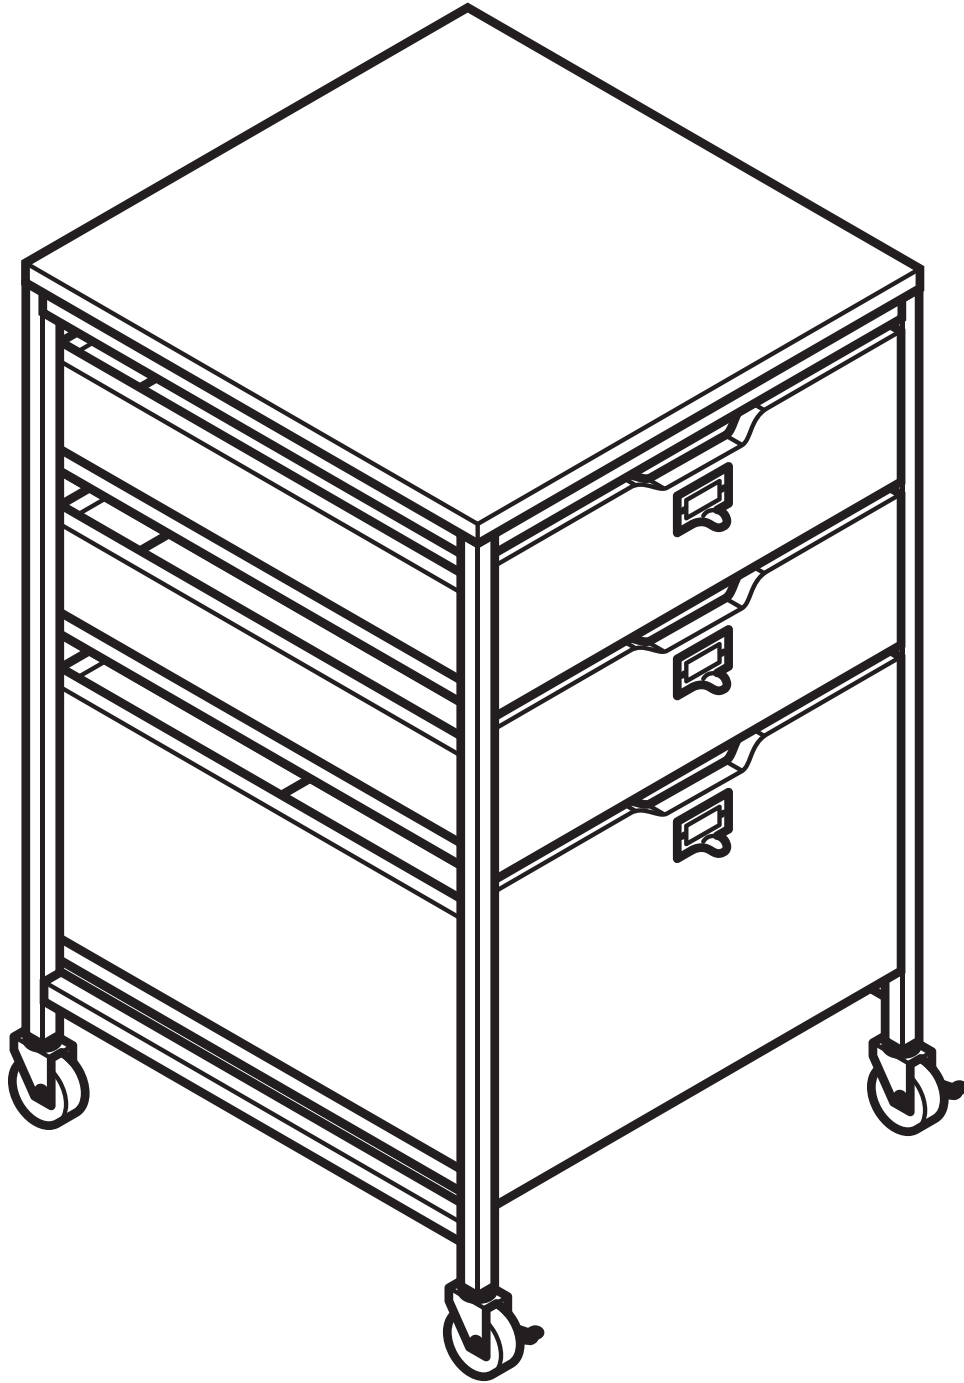
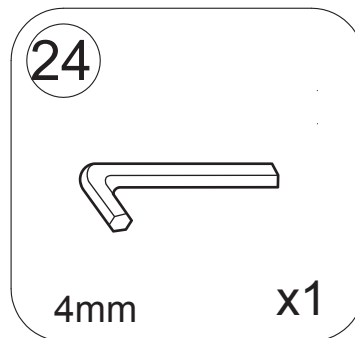
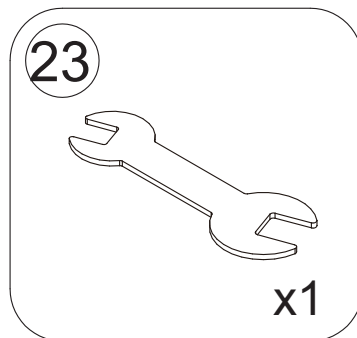
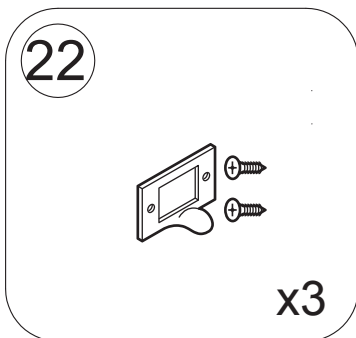
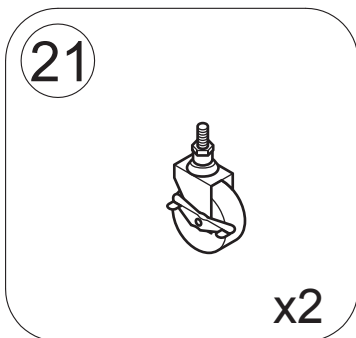
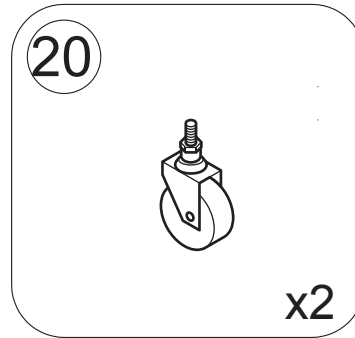
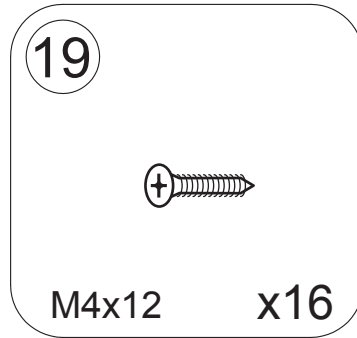
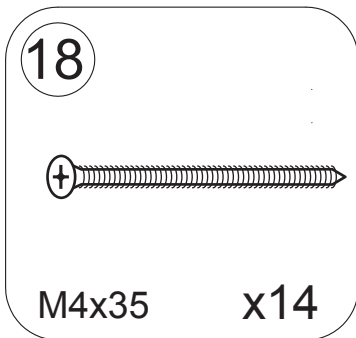
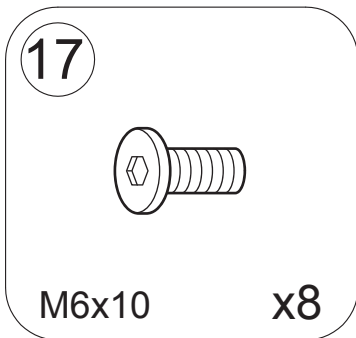
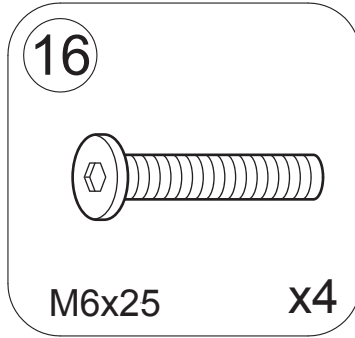
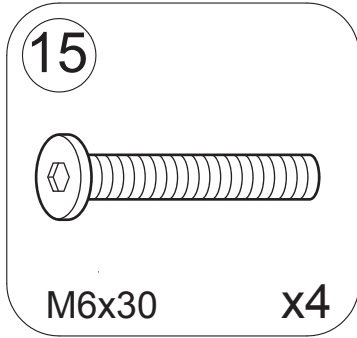
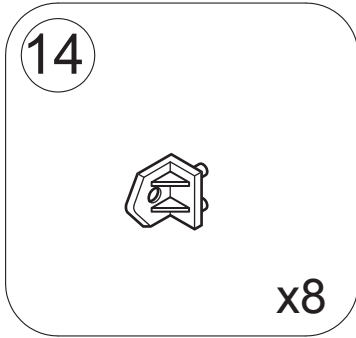
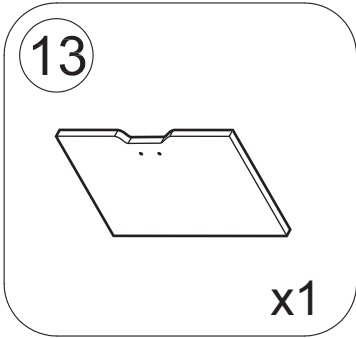
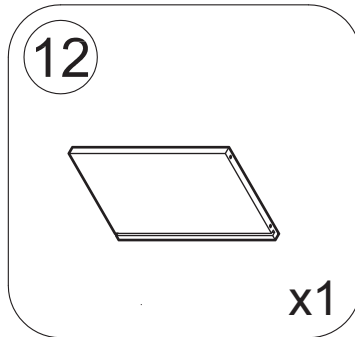
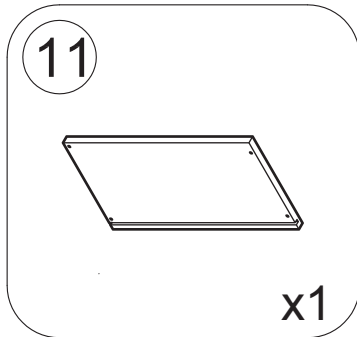
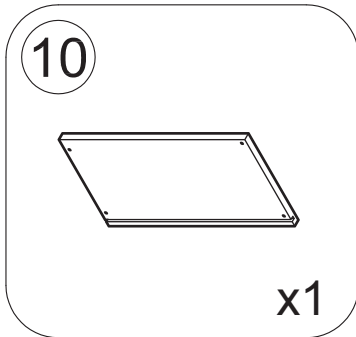
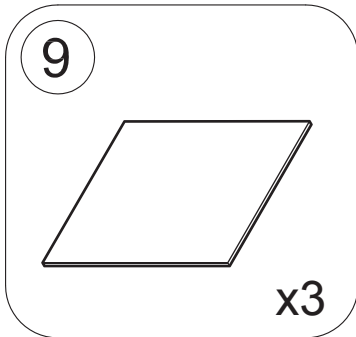
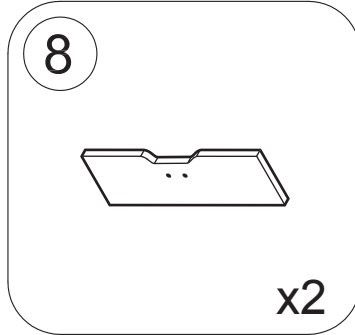
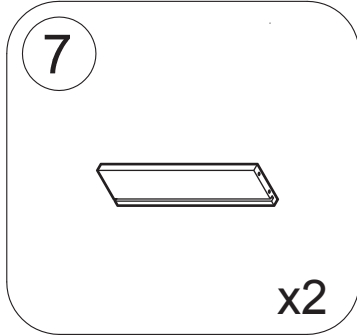
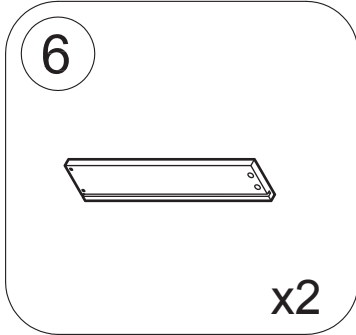
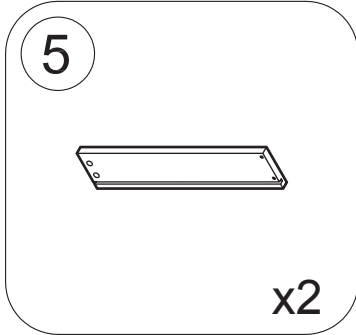
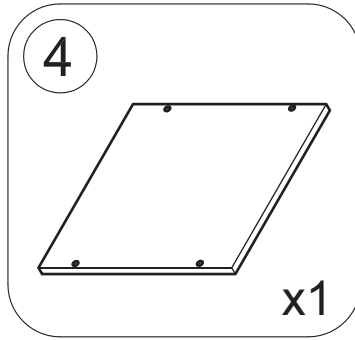
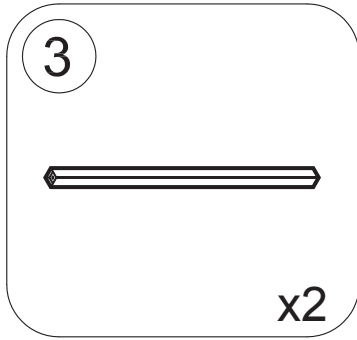



Assembling Instruction

Attention: Do not tighten the screws until all of them are in right positions

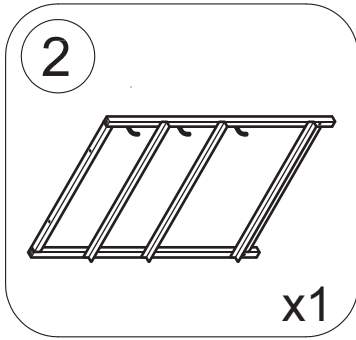


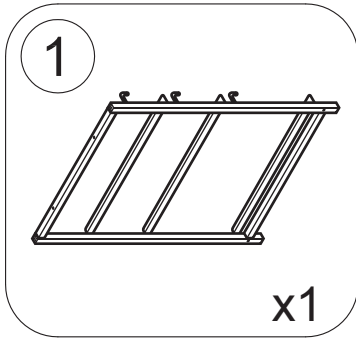

1

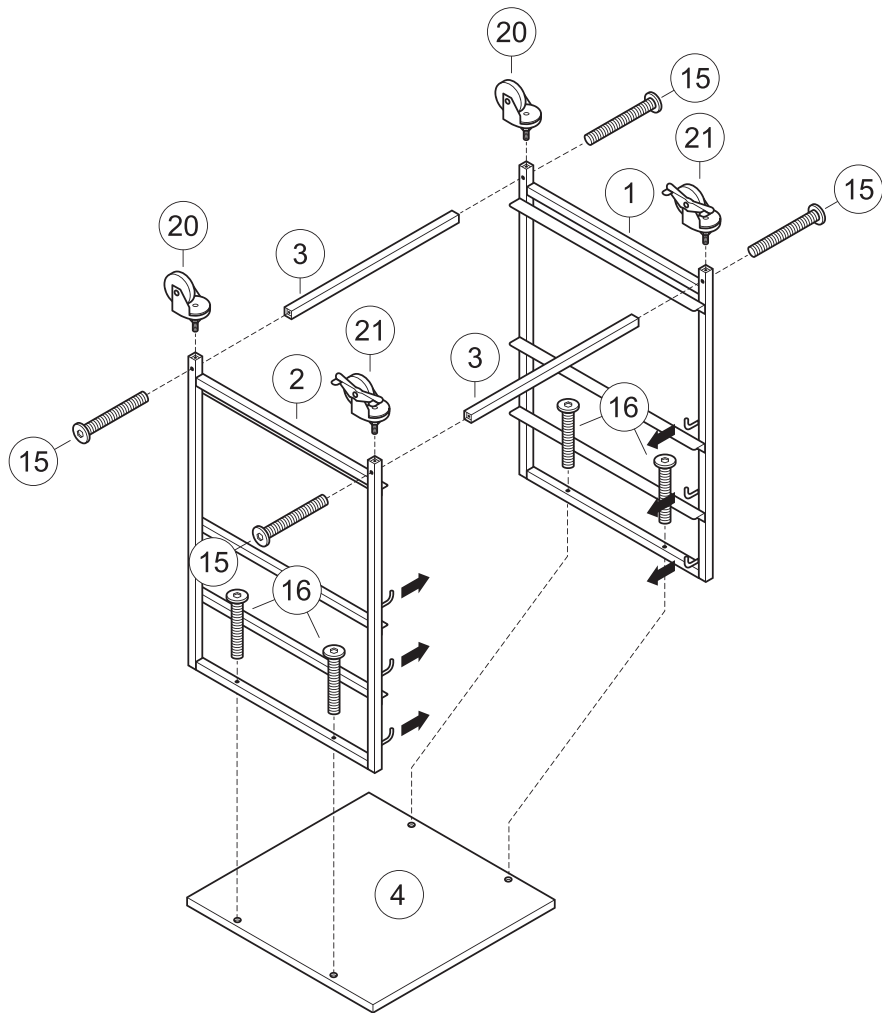


2

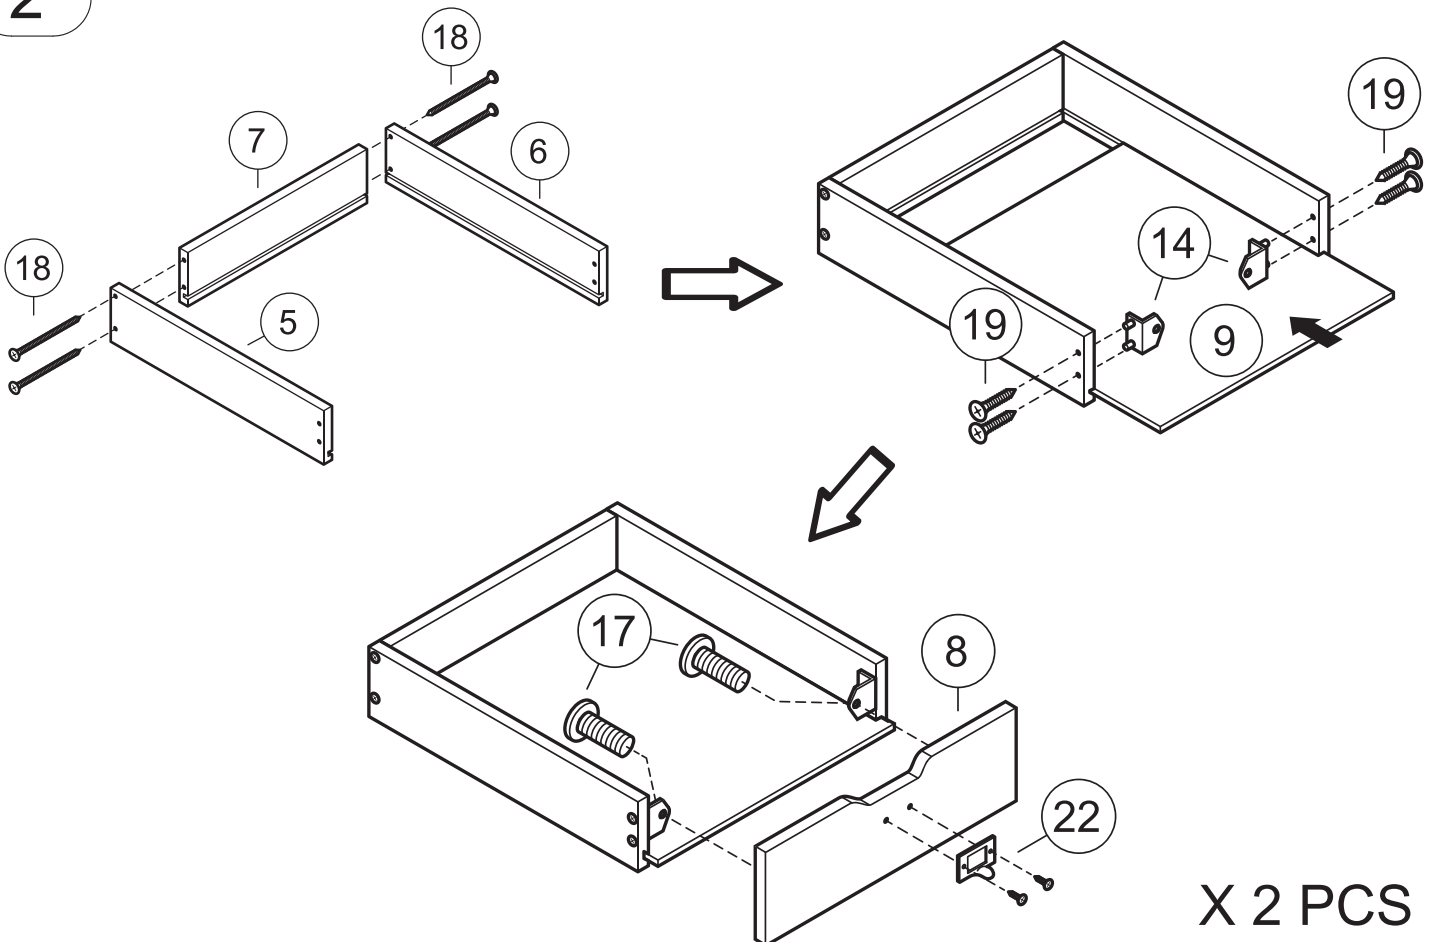

X 2 PCS

3

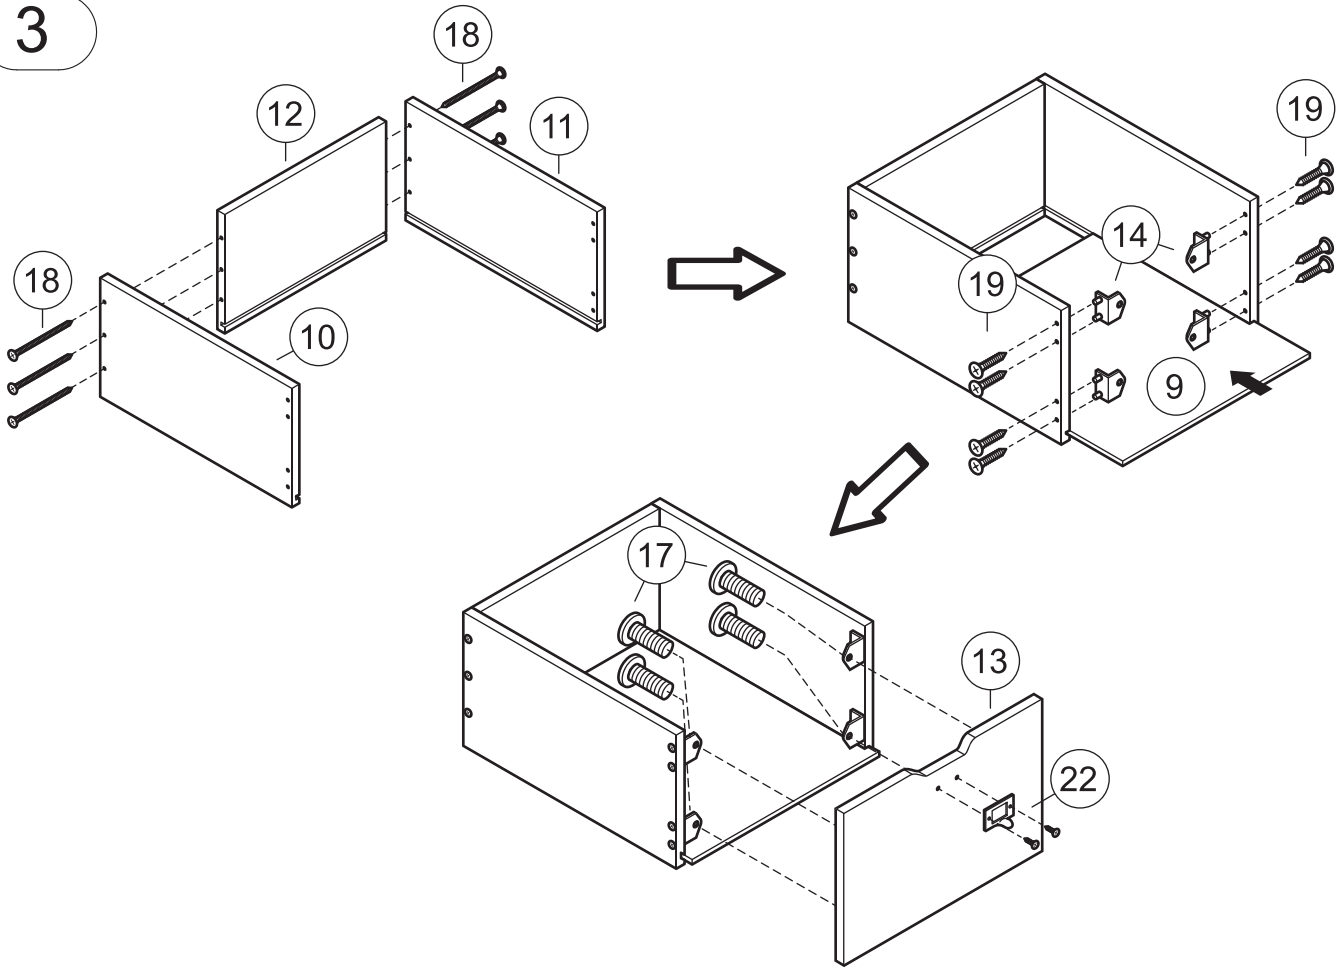

4

