
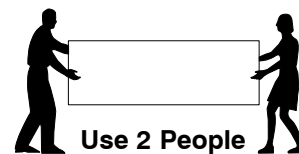


Daybed Trundle

Assembly Instructions




WII-0419

1 Assembled View

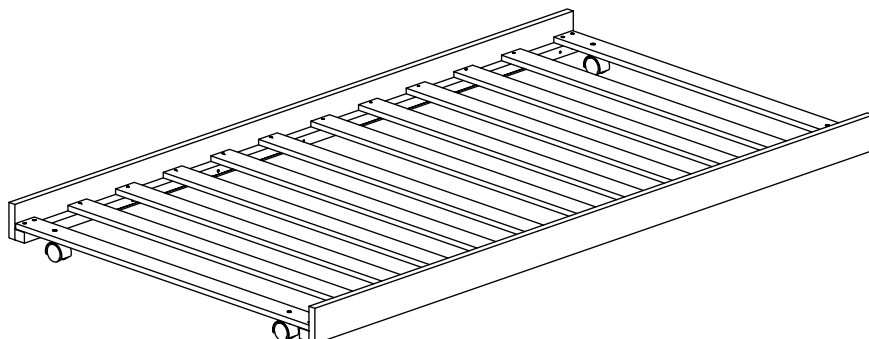

Note: Do not assemble using power tools. This can cause the bolts to be overtightened


2 Parts List

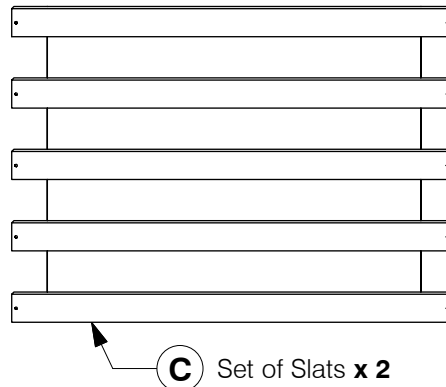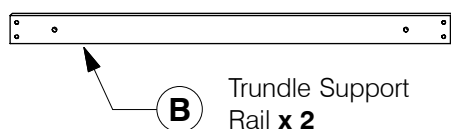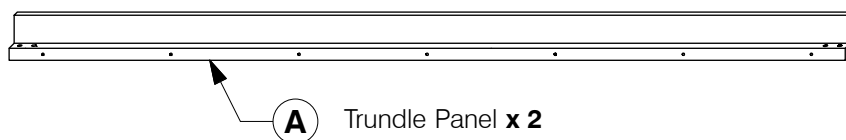

3 Hardware List




1 M6 x 40mm JCB
x 8



2 Wood Screw
(M4 x 32mm)
x 20



3 Allen Key
x 1




4 Wheels
x 4

Daybed Trundle

Assembly Instructions

WII-0419

- 4** Fit the Wheels (4) to the Trundle Support Rail (B).

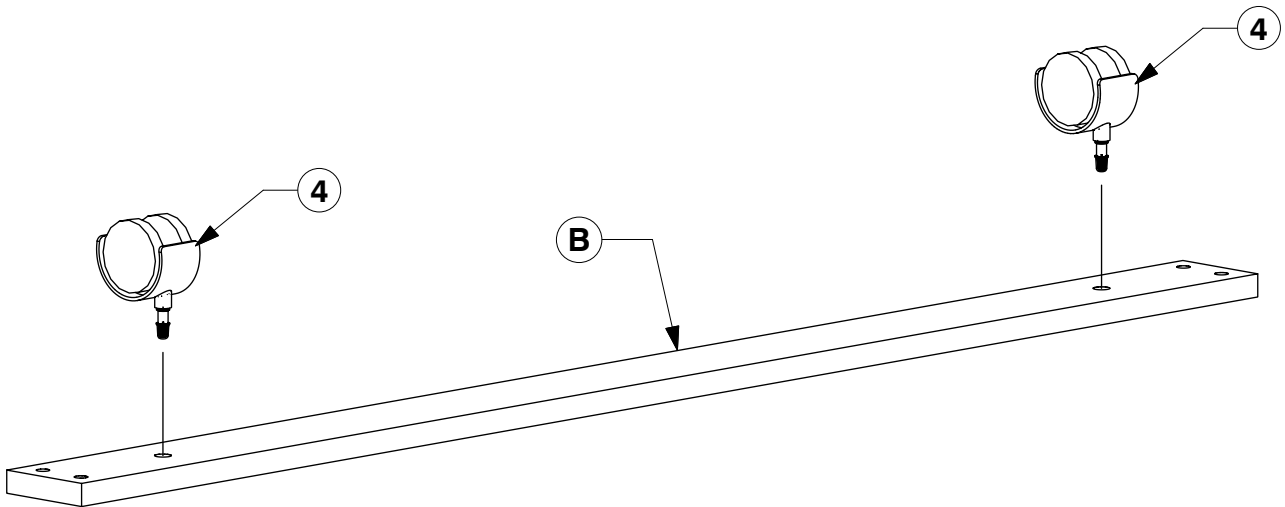

- 5** Assemble the Set of Slats (C) & Trundle Support Rail (B) to the Trundle Panel (A).

