
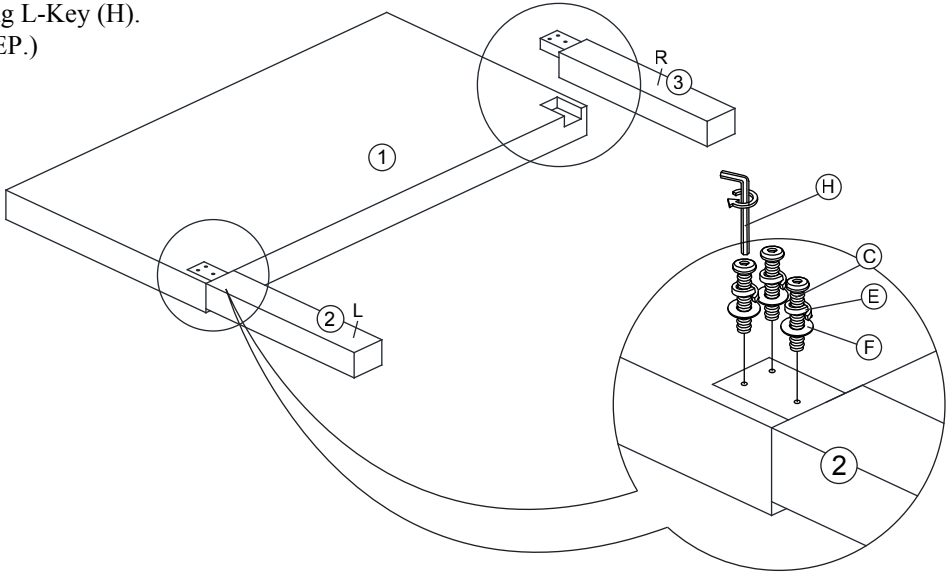



ASSEMBLY INSTRUCTION

ITEM : EMLYN-QB		
NO	PARTLIST	QTY
1	 HEADBOARD	1PC
2	 HEADBOARD LEG WITH LABEL “L”	1PC
3	 HEADBOARD LEG WITH LABEL “R”	1PC
4	 FOOTBOARD	1PC
5	 FOOTBOARD LEG	2PCS
6	 SIDE RAIL L/R	2PCS
7	 SLAT	4PCS
8	 SUPPORT LEG WITH ADJUSTABLE FEET	4PCS
ITEM	HARDWARE	QTY
A	 JCBB SCREW M8 x 20MM	8PCS
B	 JCBC SCREW M6 x 35MM	6PCS
C	 JCBC SCREW M6 x 50MM	6PCS
D	 WOOD DOWEL M8 x 30MM	2PCS
E	 SPRING WASHER M6 x 12MM	8PCS
F	 FLAT WAHSER M6 x 19MM	8PCS
G	 CSK SCREW M4 x 32MM	8PCS
H	 L-KEY M4 x 100MM	1PC
I	 L-KEY M5 x 65MM	1PC

STEP 1
Begin assembly by attaching each Headboard Leg (2) & (3) to the bottom of the Headboard Cushion (1) by aligning the hole and securing with 3 Allen Bolts (C), 3 Spring Washer (E), 3 Flat Washer (F) per leg by using L-Key (H).
(DO NOT FULLY TIGHTEN BOLTS FOR THIS STEP.)

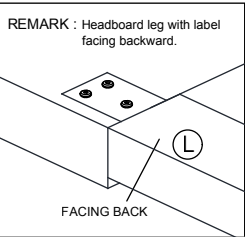


STEP 2
Attach each Footboard Leg (5) to the bottom of the Footboard Cushion (4) by inserting a Wood Dowel (D) and securing with 1 Allen Bolt (B), 1 Spring Washer (E), 1 Flat Washer (F) per leg using L-Key (H).

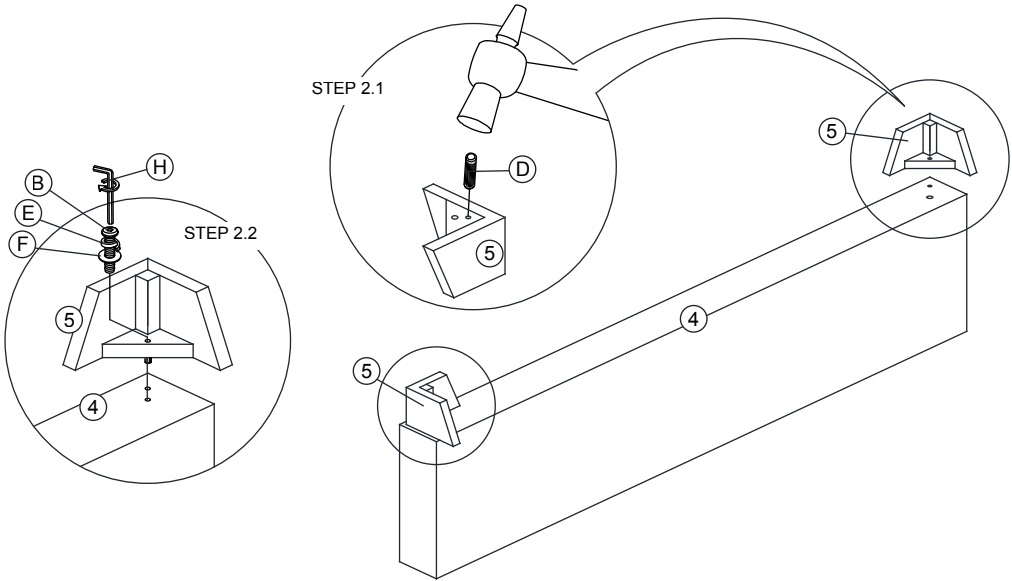

ASSEMBLY INSTRUCTION


STEP 3

Attach Support Leg (8) to Slat (7) by securing with 1 Allen Bolt (B) per Support Leg using L-Key (H). Please repeat 4 times for this step.

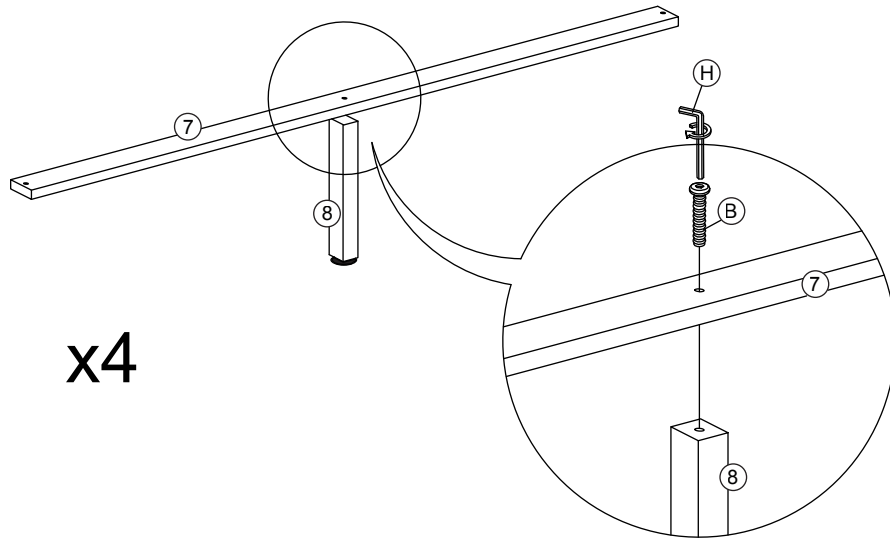


STEP 4

Attach Side Rail (6) to Headboard Leg (2) & (3) & Footboard Cushion (4). Aligning holes and securing with 2 Allen Bolts (A) per each with using L-Key (I). (DO NOT FULLY TIGHTEN BOLTS FOR THIS STEP.)

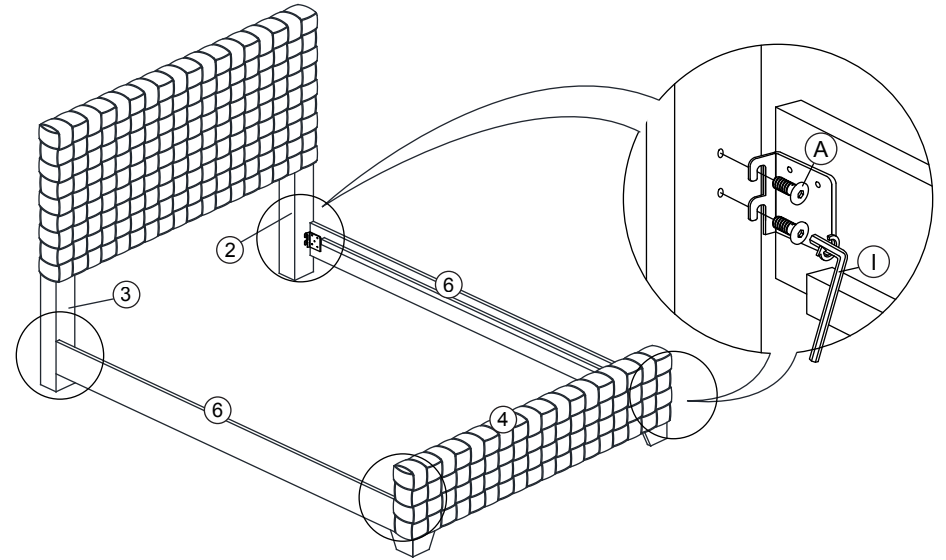


STEP 5

Attach Slat (7) to Side Rail (6) by securing with 1 Screw (G) per each side. Tighten all screws using philips head screwdriver (NOT INCULDED)

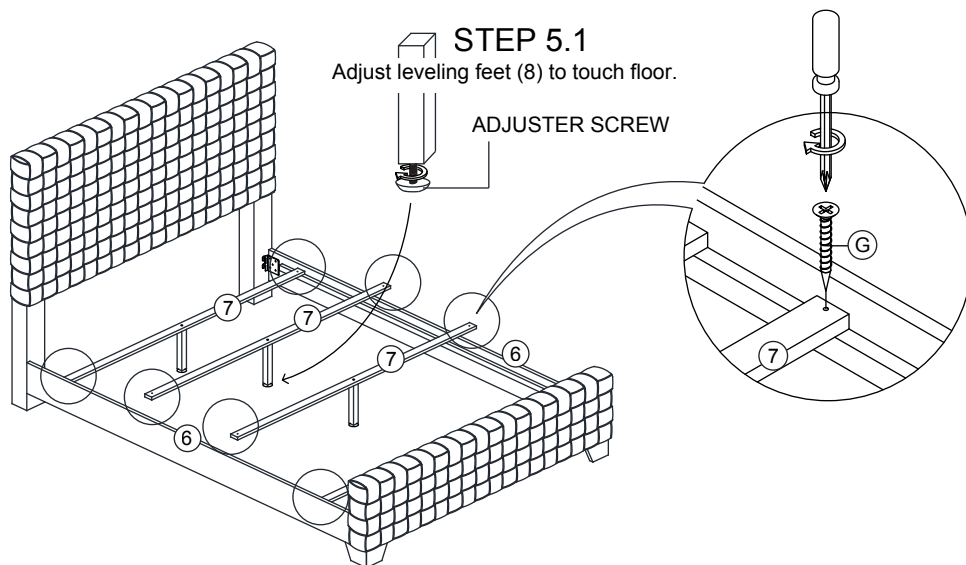

STEP 6

Tighten all the bolts from Step 1 to Step 4 and your assembly is completed.

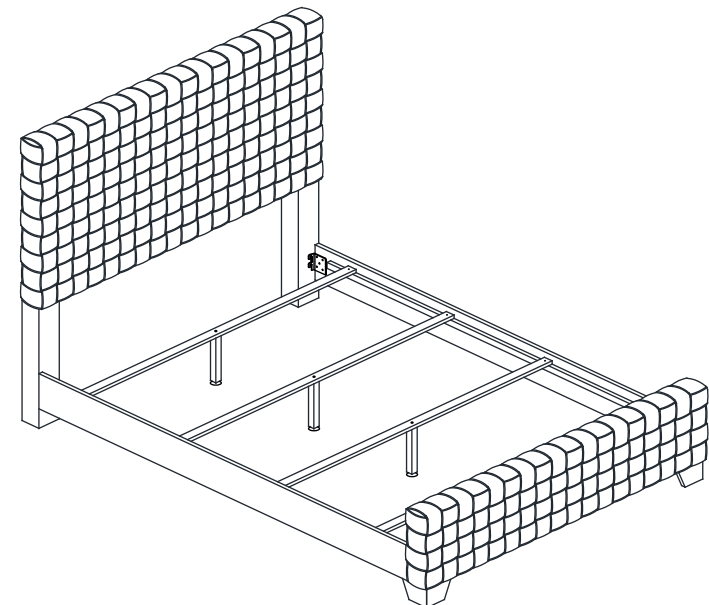

ASSEMBLY
COMPLETED