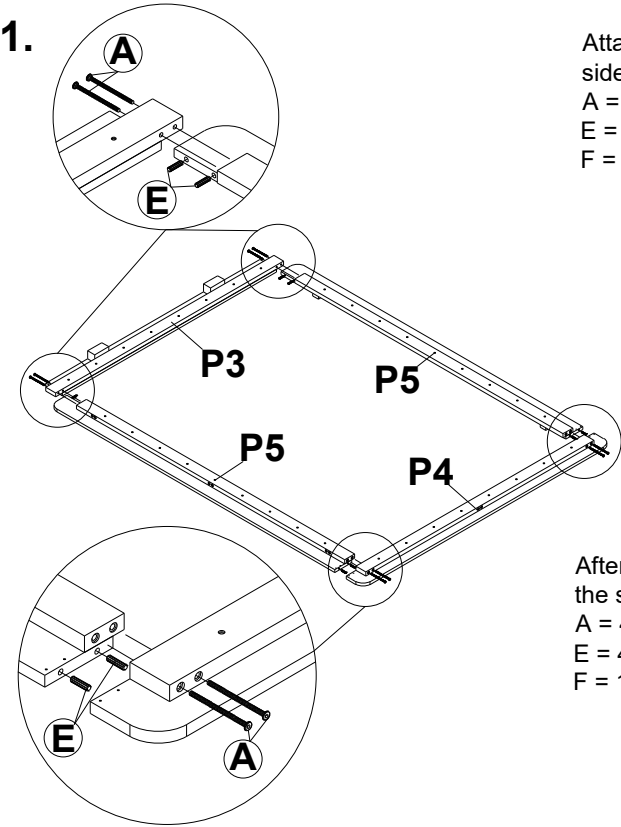


SW 8598 - Q/K

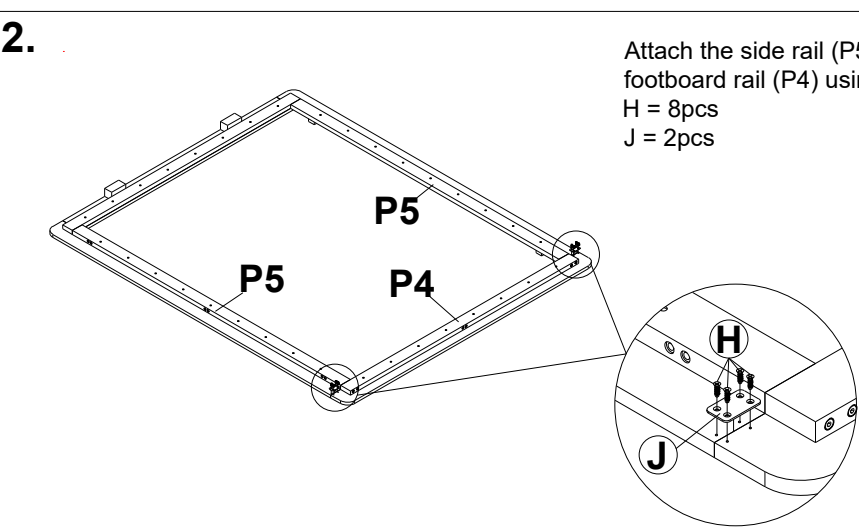
1.



Attach the headboard rail (P3) to the side rail (P5) using hardware:
A = 4pcs
E = 4pcs
F = 1pc


After, attach the footboard rail (P4) to the side rail (P5) using hardware:
A = 4pcs
E = 4pcs
F = 1pc

2.



Attach the side rail (P5) to the footboard rail (P4) using hardware:
H = 8pcs
J = 2pcs

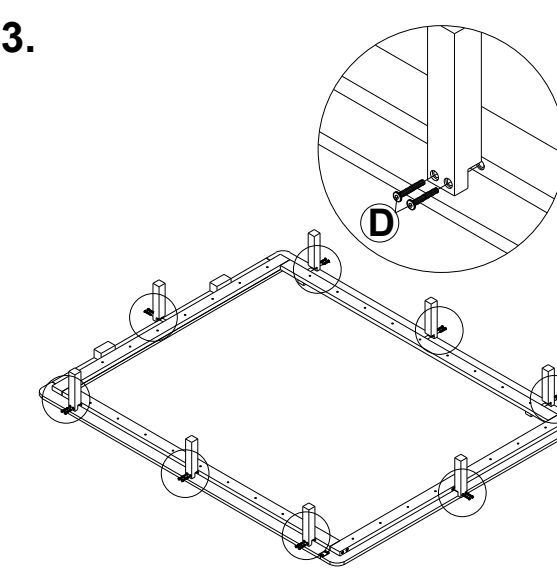3.










Attach the post (P6) to the headboard rail (P3), footboard rail (P4) and side rail (P5) using hardware:
D = 16pcs
F = 1pc

WARNING!!


- Remove hardware from box and sort by size.
- Please check to see that hardware and parts are present prior start of assembly.
- Please follow attached instruction in the same sequence numbered to ensure fast and easy assembly.
- Do not use this bed if any part is broken, torn or missing.
- The assembly of this product requires two people.
- Do not use any power tools as this may damage the frame and will invalidate any claim.

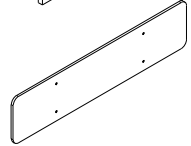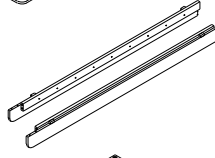PART LIST


P1		Headboard Post	=	2pcs
P2		Headboard Panel	=	1pc
P3		Headboard Rail	=	1pc
P4		Footboard Rail	=	1pc
P5		Side Rail	=	L-1pc R-1pc
P6		Post	=	8pcs
P7		Center Rail	=	2pcs
P8		Bed Slats	=	14pcs
P9		Support Leg	=	4pcs

HARDWARE LIST

A		M6 X 100MM JCBC	=	12pcs
B		M6 X 70MM JCBC	=	2pcs
C		M6 X 50MM JCBC	=	4pcs
D		M6 X 40MM JCBC	=	18pcs
E		WOOD DOWEL M8 X 30MM	=	8pcs
F		ALLEN KEY M4	=	1pc
G		M4 X 25MM SCREW	=	8pcs
H		M3.5 X 16MM SCREW	=	8pcs
I		ADJUSTER	=	4pcs
J		PLATE	=	2pcs



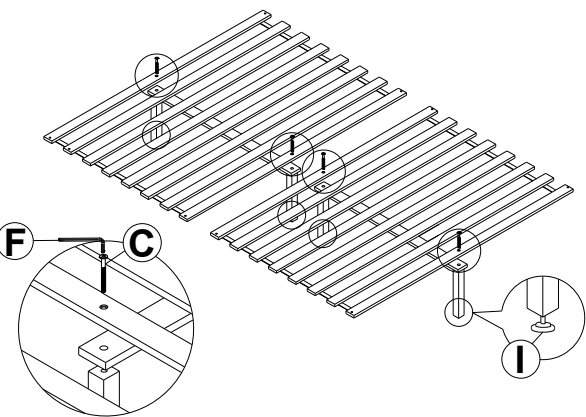
4.



Fix the adjuster (I) to the support leg (P9) using hardware:
I = 4pcs

Attach the support leg (P9) to the center rail (P7) and bed slats (P8) using hardware:
C = 4pcs
F = 1pc

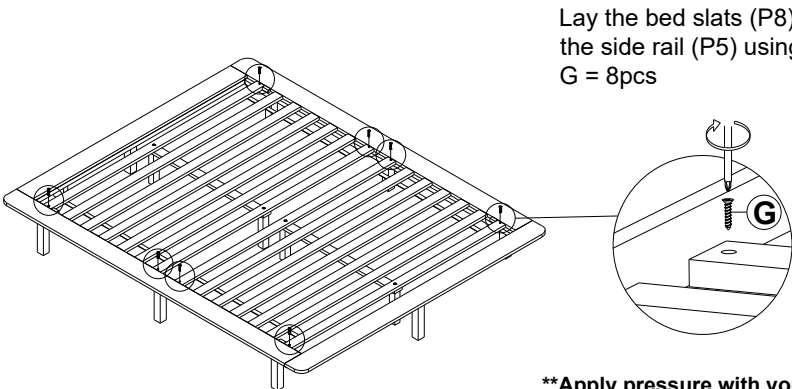
5.



Lay the bed slats (P8) between the side rail (P5) using hardware:
G = 8pcs


****Apply pressure with your knee to the side rail whilst attaching the slats to ensure that the slats are flush against the inside of side rail****

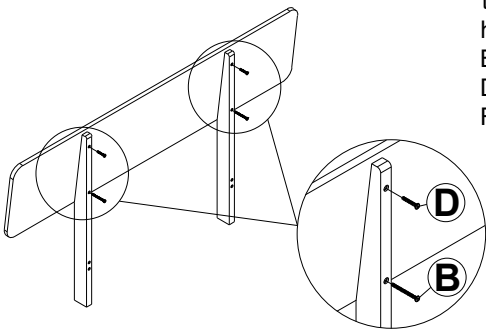6.



Attach the headboard panel (P2) to the headboard post (P1) using hardware:
B = 2pcs
D = 2pcs
F = 1pc

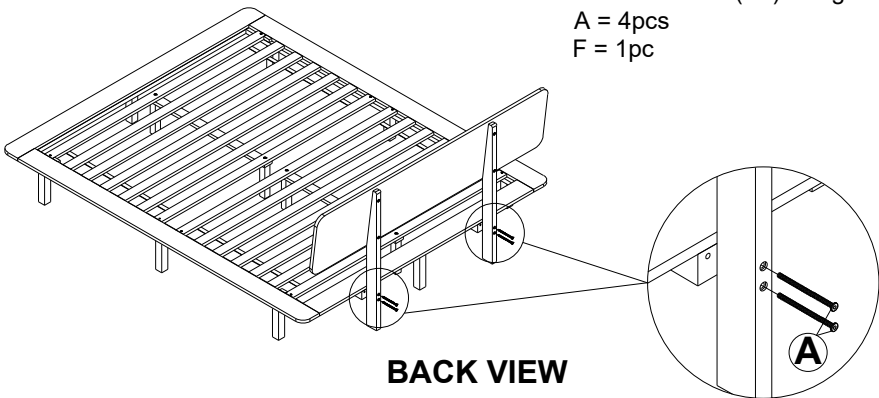7.










Attach the headboard post (P1) to the headboard rail (P3) using hardware:
A = 4pcs
F = 1pc

BACK VIEW

WARNING!!

- Remove hardware from box and sort by size.
- Please check to see that hardware and parts are present prior start of assembly.
- Please follow attached instruction in the same sequence numbered to ensure fast and easy assembly.
- Do not use this bed if any part is broken, torn or missing.
- The assembly of this product requires two people.
- Do not use any power tools as this may damage the frame and will invalidate any claim.

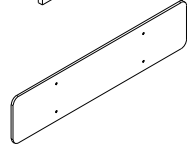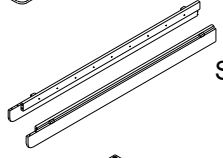PART LIST

P1		Headboard Post	=	2pcs
P2		Headboard Panel	=	1pc
P3		Headboard Rail	=	1pc
P4		Footboard Rail	=	1pc
P5		Side Rail	=	L-1pc R-1pc
P6		Post	=	8pcs
P7		Center Rail	=	2pcs
P8		Bed Slats	=	14pcs
P9		Support Leg	=	4pcs

HARDWARE LIST


A		M6 X 100MM JCBC	=	12pcs
B		M6 X 70MM JCBC	=	2pcs
C		M6 X 50MM JCBC	=	4pcs
D		M6 X 40MM JCBC	=	18pcs
E		WOOD DOWEL M8 X 30MM	=	8pcs
F		ALLEN KEY M4	=	1pc
G		M4 X 25MM SCREW	=	8pcs
H		M3.5 X 16MM SCREW	=	8pcs
I		ADJUSTER	=	4pcs
J		PLATE	=	2pcs



ASSEMBLY INSTRUCTION

SW 8000-86D6D














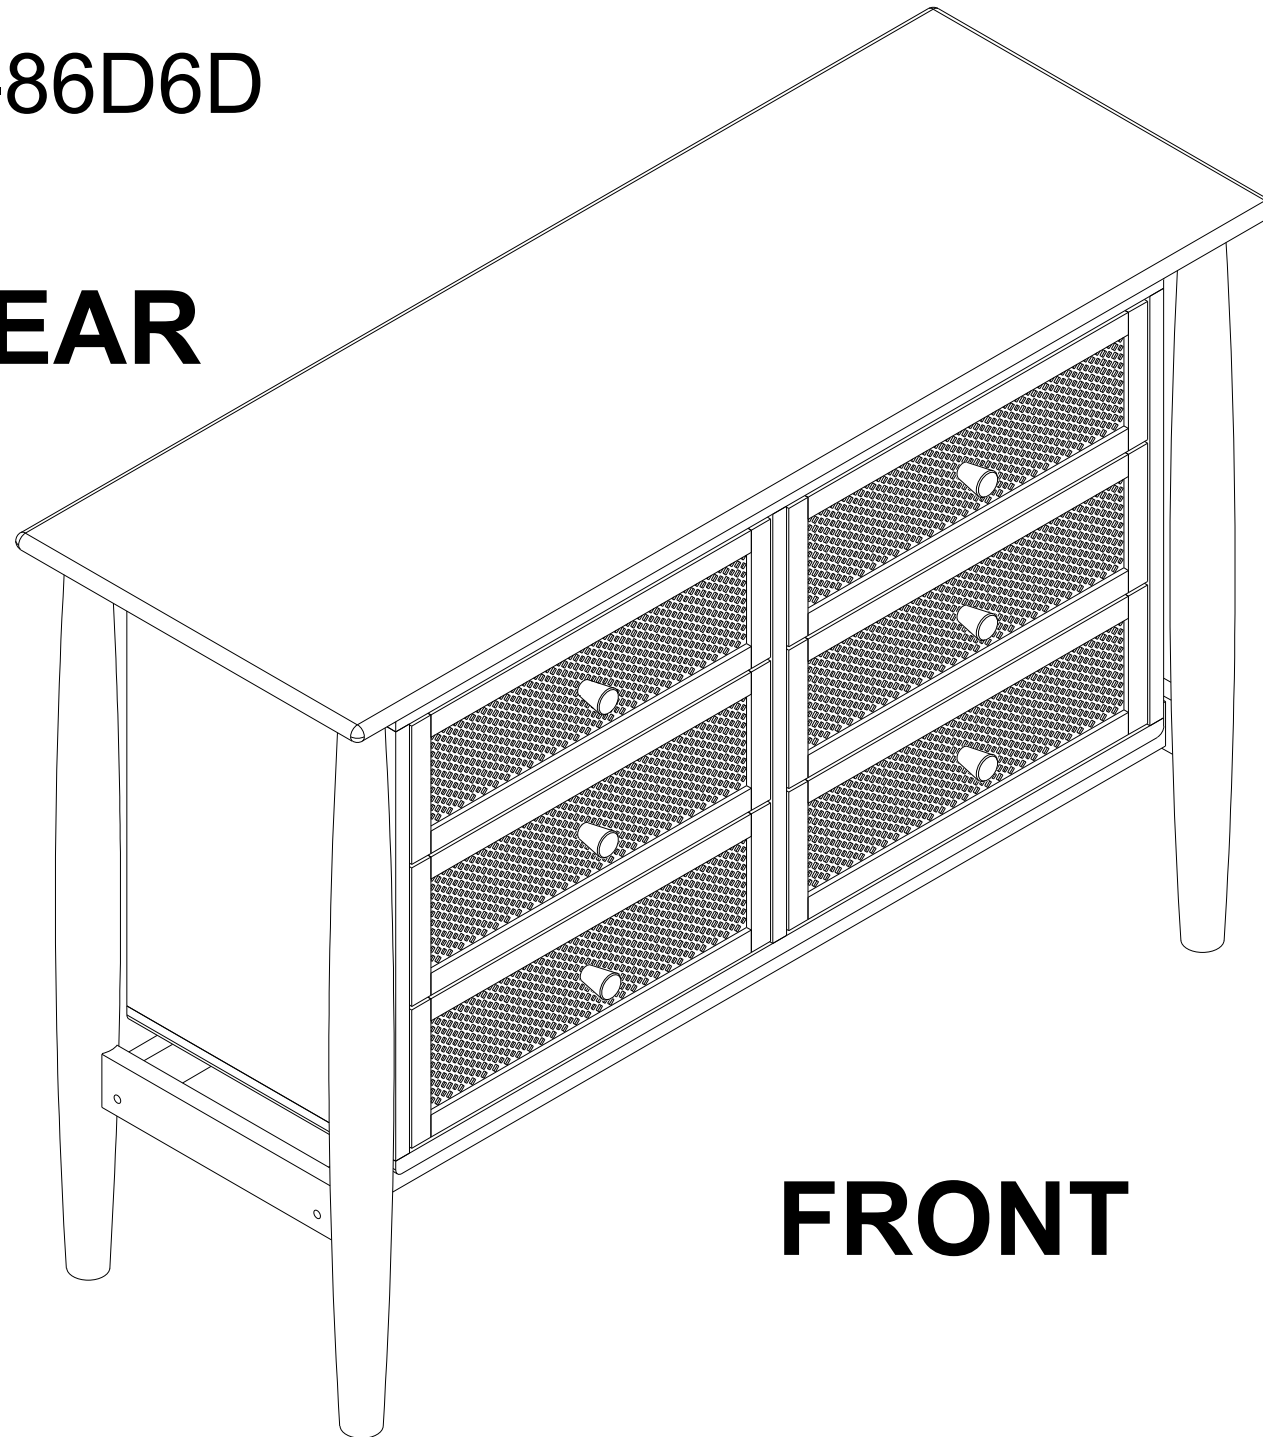
REAR












FRONT



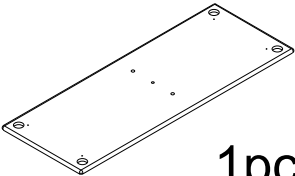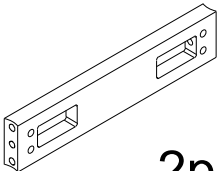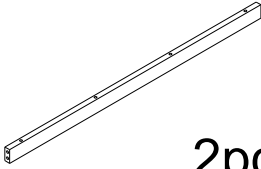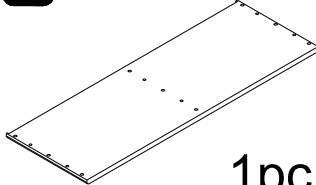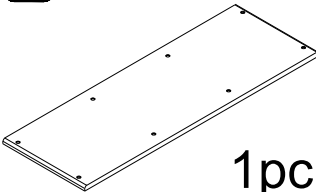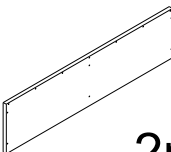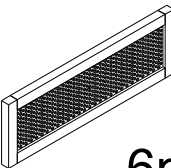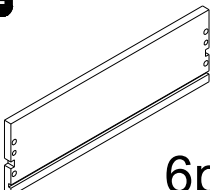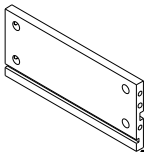
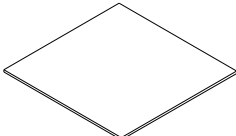
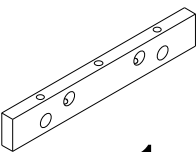
PART LIST

1 Table Top  1pc	2 Post  4pcs	3 Support Rail  2pcs	4 Bottom Rail  2pcs	5 Upper panel (Box)  1pc	6 Bottom Panel (Box)  1pc
7 Side Panel (Left)  1pc	8 Side Panel (Right)  1pc	9 Division  1pc	10 Back Panel  2pcs	11 Drawer Front Panel  6pcs	12 Drawer Back Panel  6pcs
13 Drawer Side Panel  12pcs	14 Drawer Base Panel  6pcs	15 Top Panel Support  1pc			

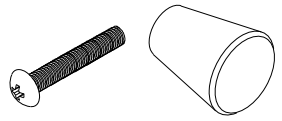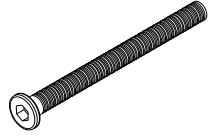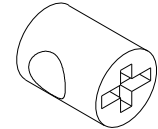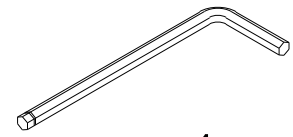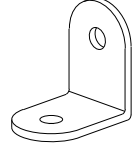

HARDWARE LIST

A MINI FIX SPREADING BOLT 24MM  70pcs	B MINIFIX HOUSING Ø15*12MM  18pcs	C MINIFIX HOUSING Ø15*10MM  52pcs	D WOOD DOWEL M8*30MM  49pcs	E PAN HEAD M3.5*30MM  26pcs	F CSK SCREW M3.5*16MM  8pcs
G SHELF SUPPORT  12pcs	H HANDLE  6sets	I JCBC M6X50MM  16pcs	J Barrel Nut  4pcs	K M4 ALLEN KEY WITH BALL  1pc	L L bracket  4pcs
M U WASHER  4pcs					

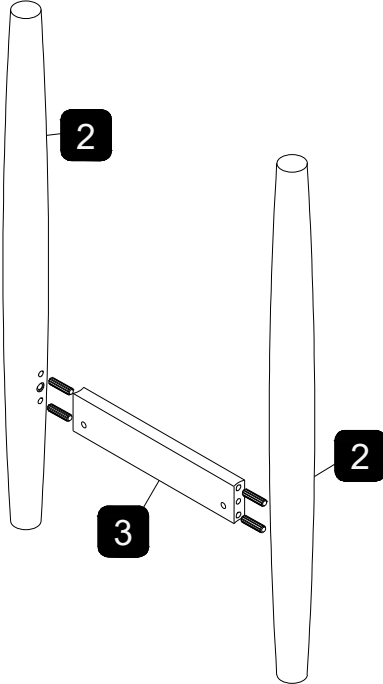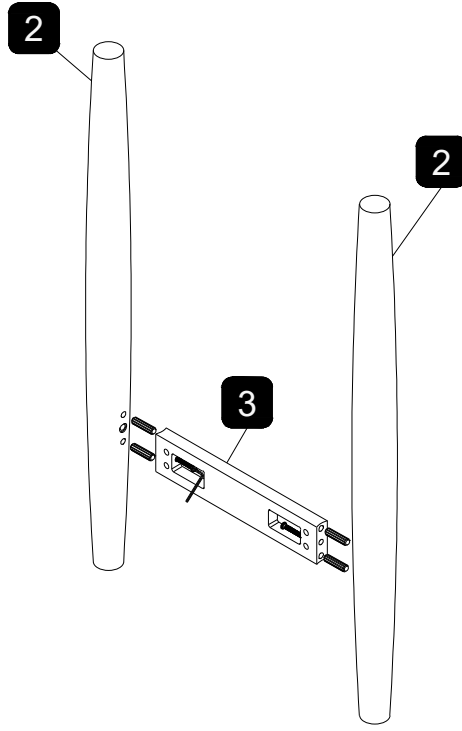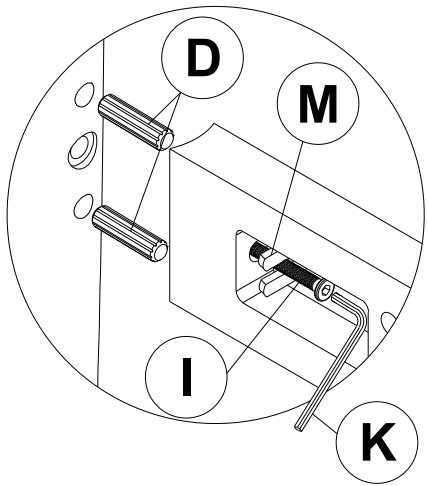STEP 1







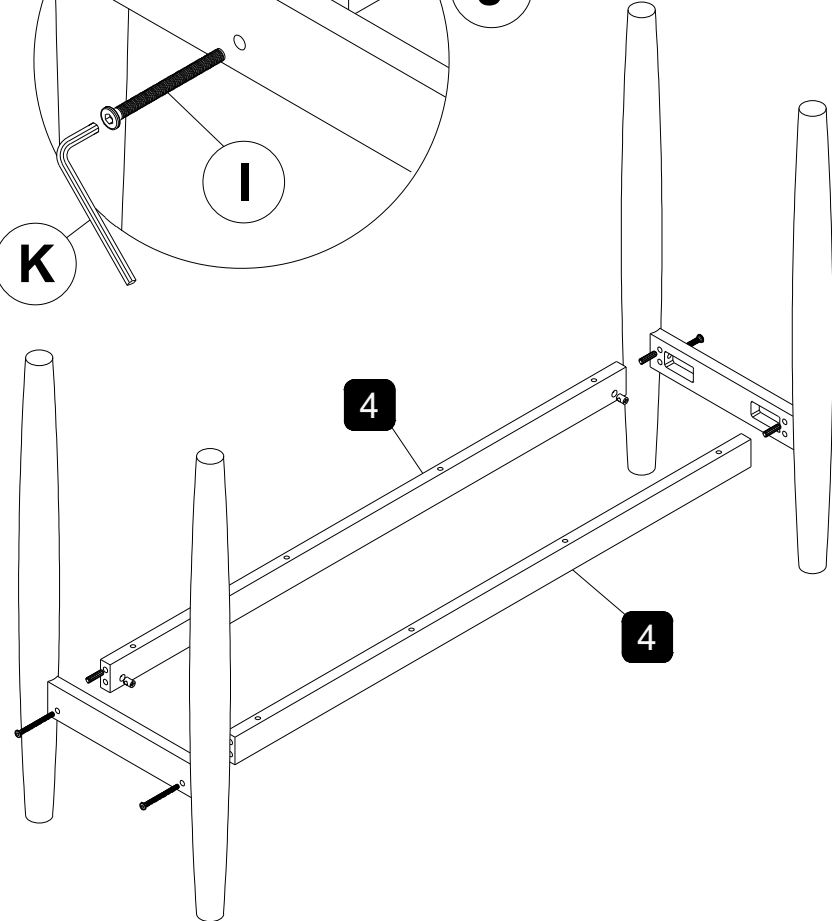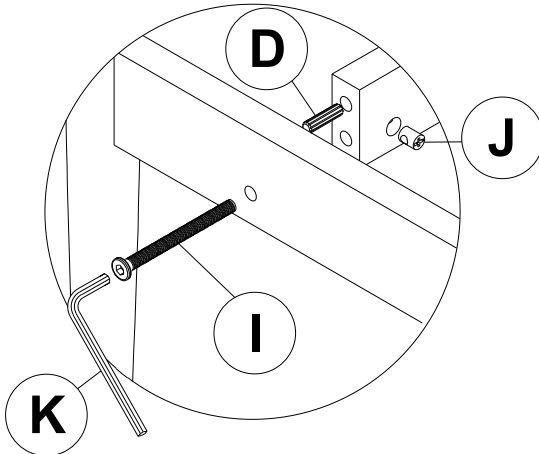STEP 2




							
D X 8pcs	I X 4pcs	K X 1pc	M X 4pcs	D X 4pcs	I X 4pcs	J X 4pcs	K X 1pc

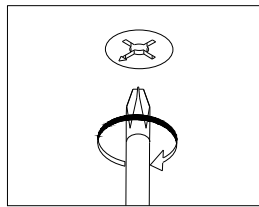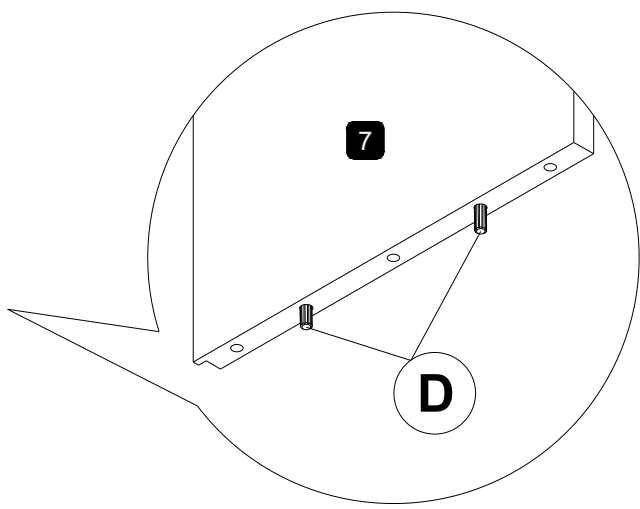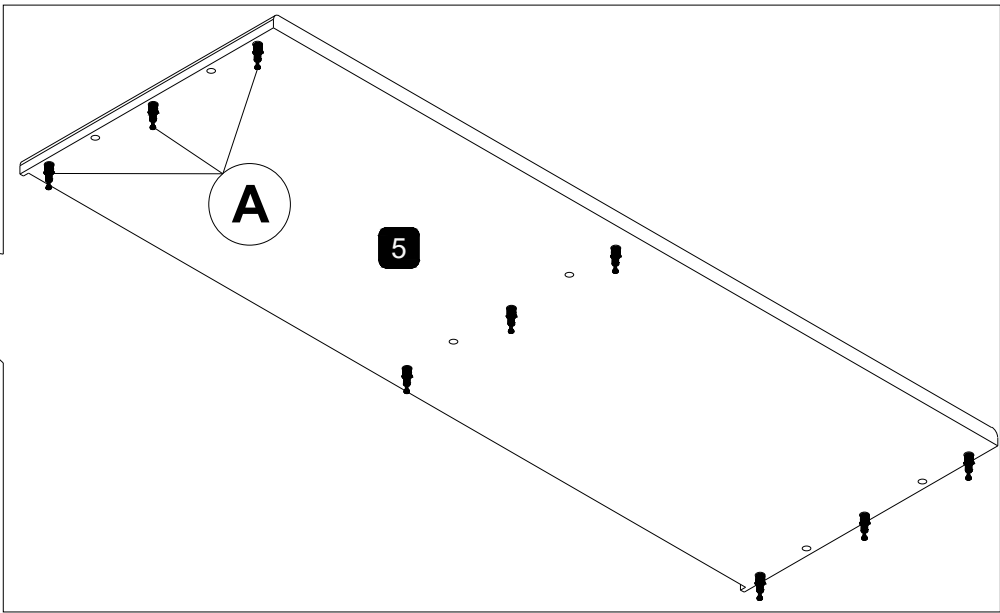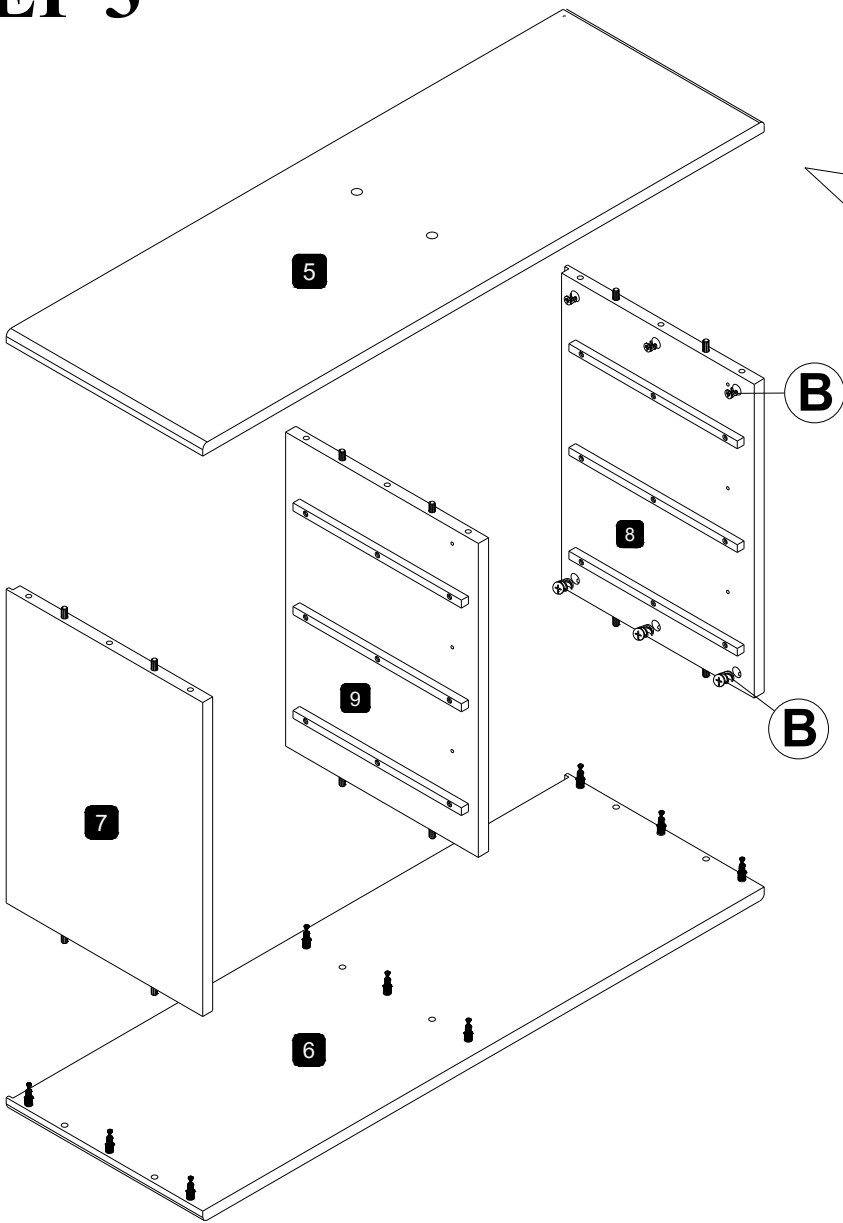STEP 3




							
A X 18pcs	B X 18pcs	D X 12pcs					

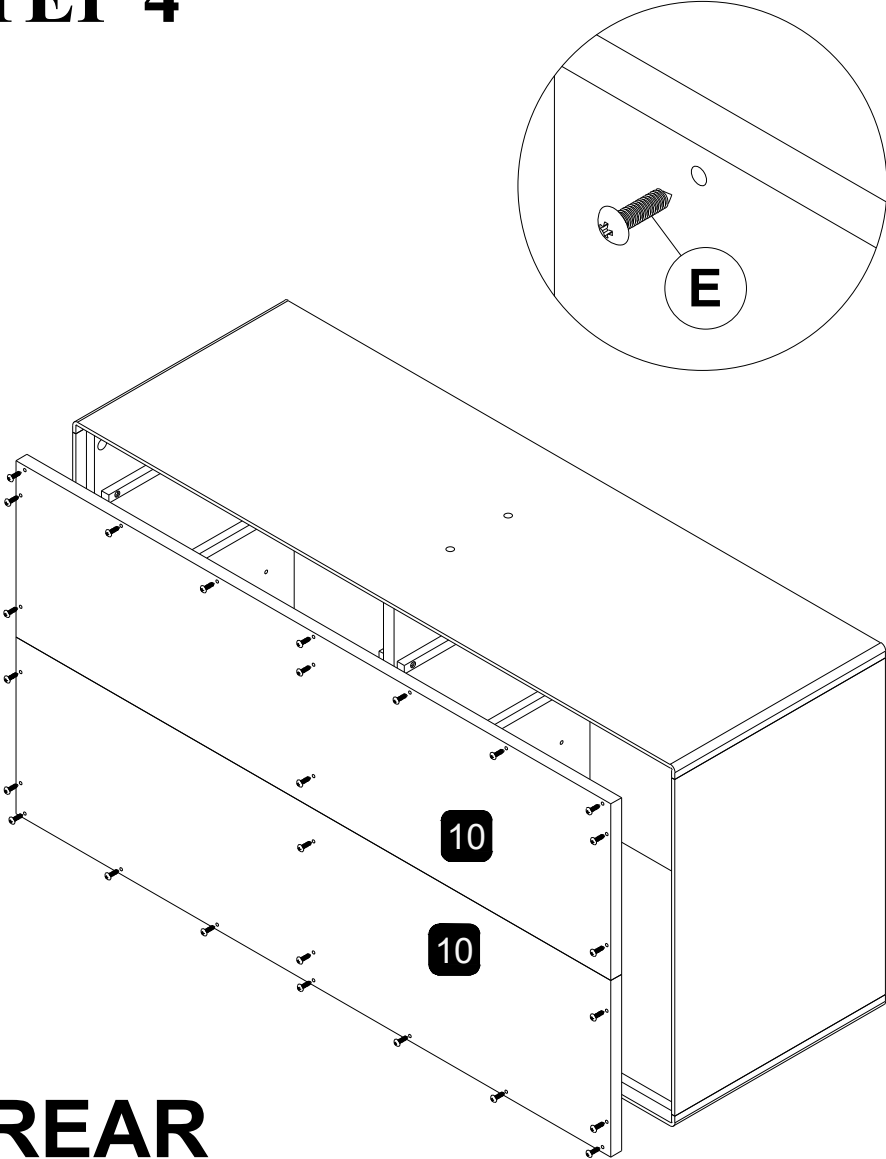STEP 4




REAR

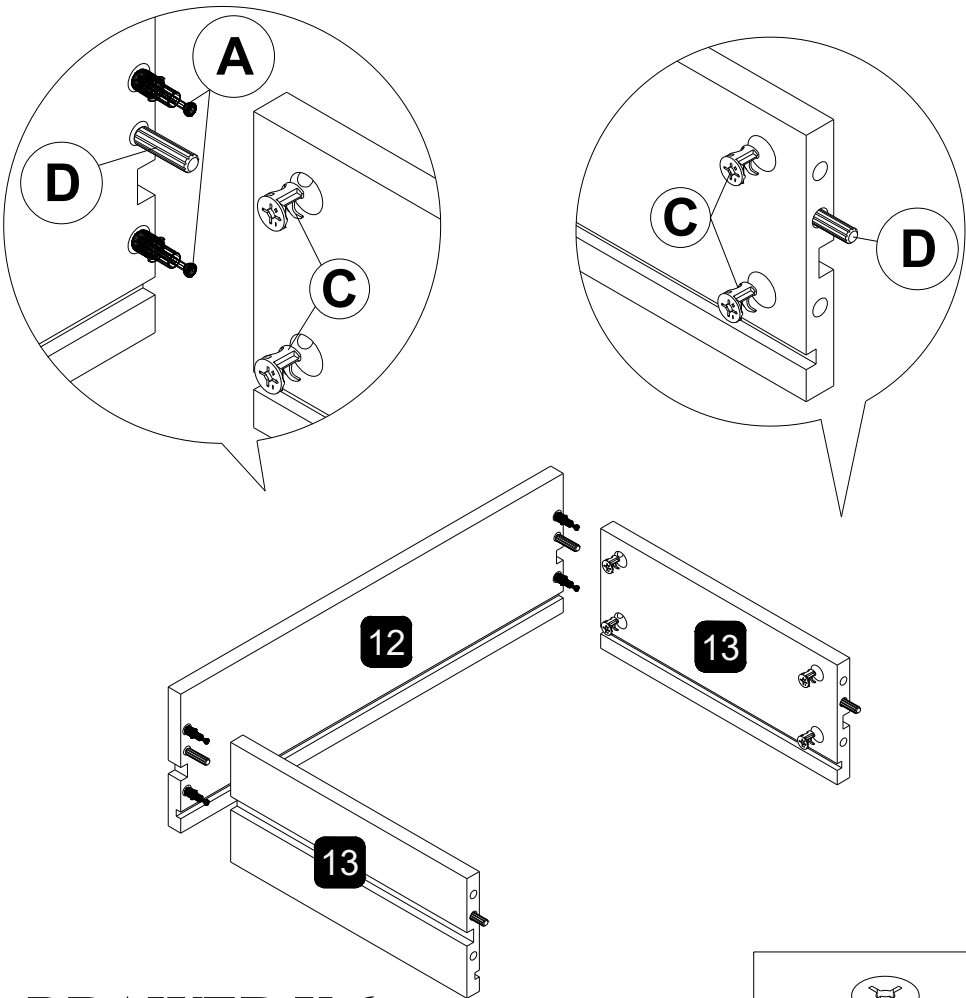STEP 5



DRAWER X 6

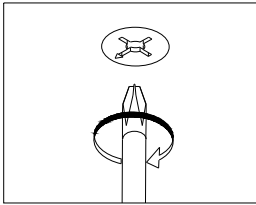

 E X 26pcs

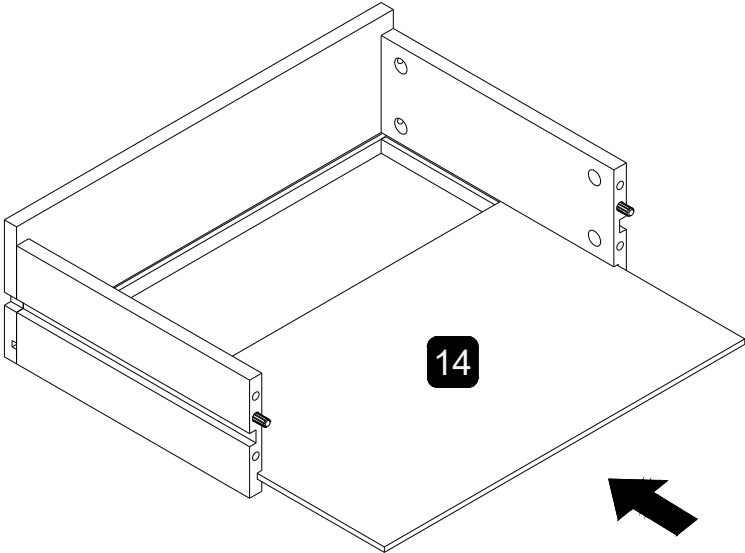
 A X 24pcs

 C X 48pcs

 D X 24pcs






STEP 6

DRAWER X 6



STEP 7

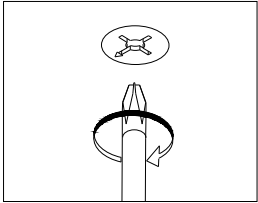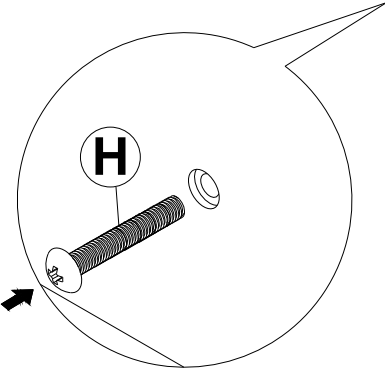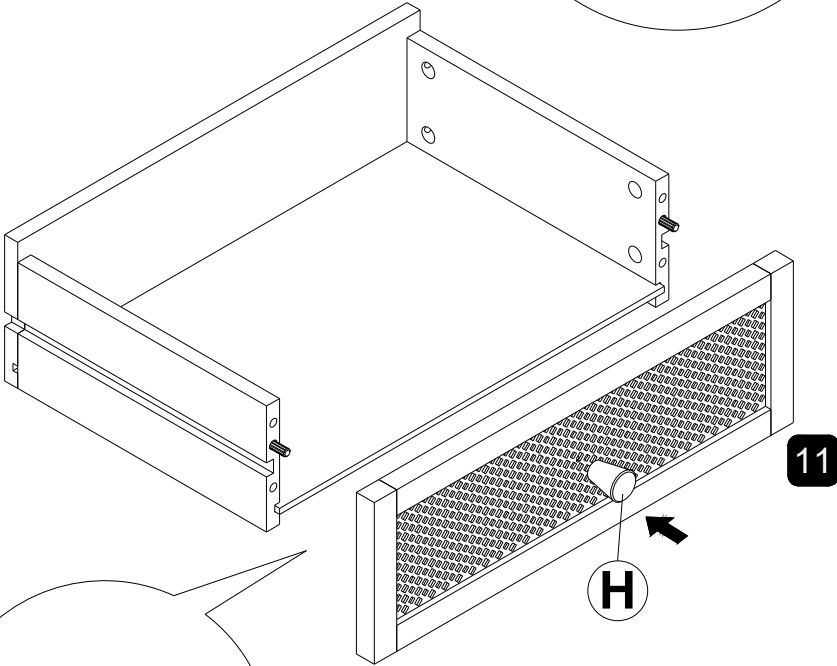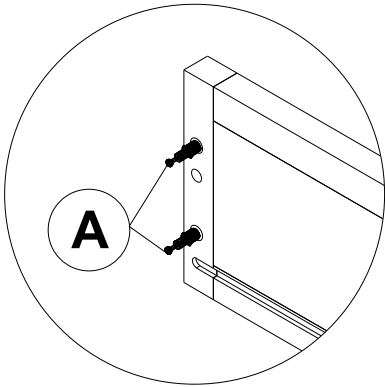DRAWER X 6




A X 24pcs




H X 6sets

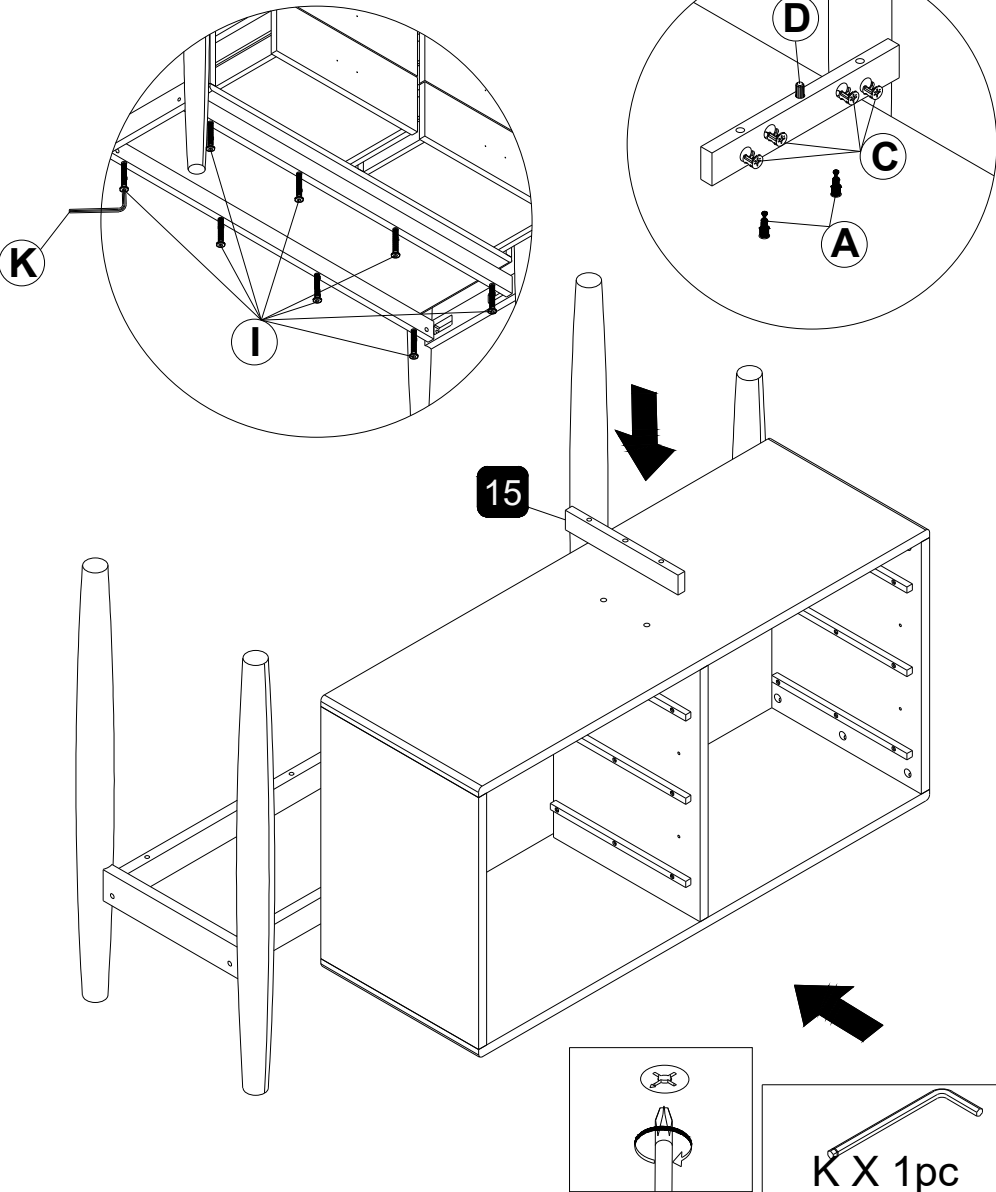STEP 8




- | | | | |
|---|---|--|--|
| 
A X 2pcs | 
C X 4pcs | 
D X 1pc | 
I X 8pcs |
|---|---|--|--|

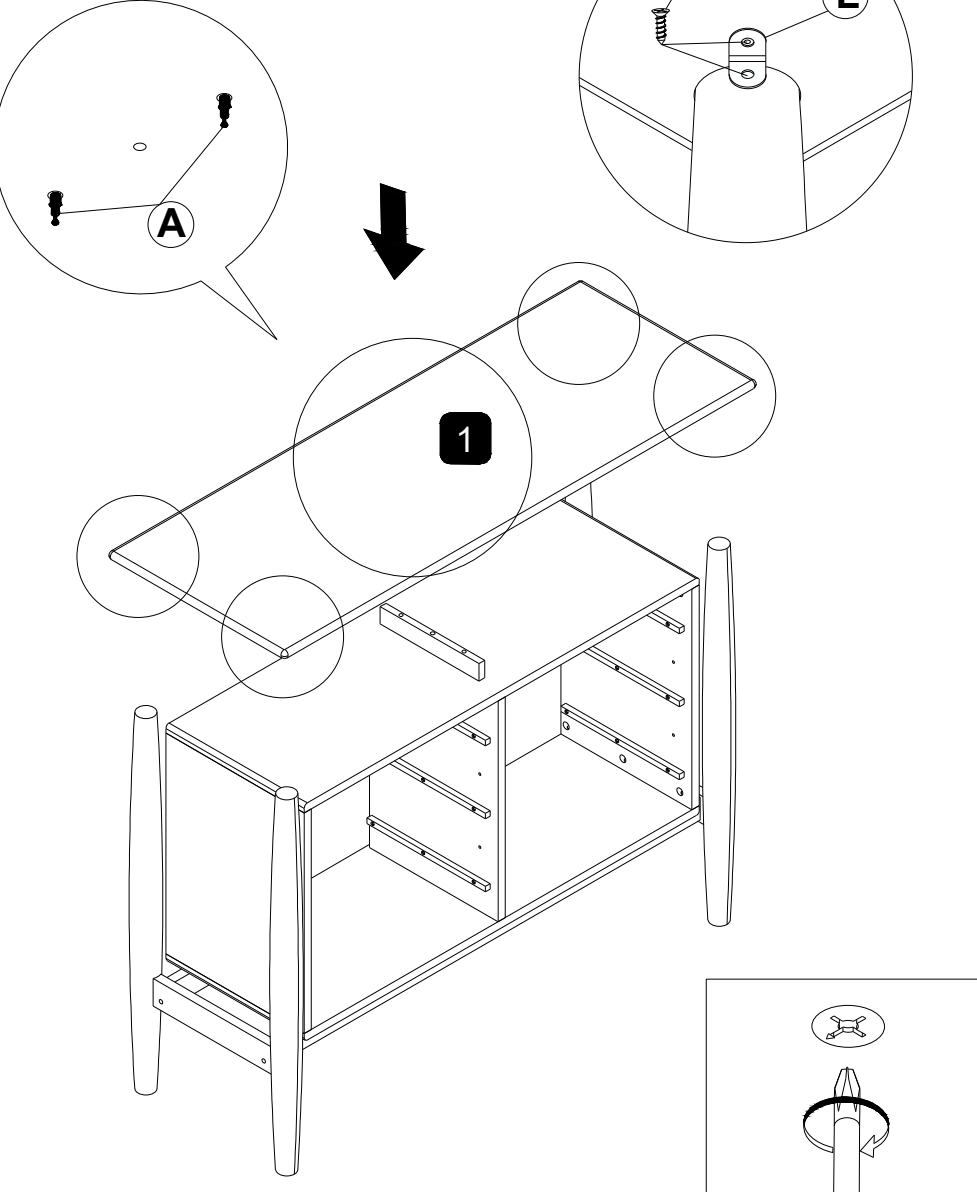STEP 9





- | | | | |
|---|---|---|---|
| 
A X 2pcs | 
L X 4pcs | 
F X 8pcs |  |
|---|---|---|---|

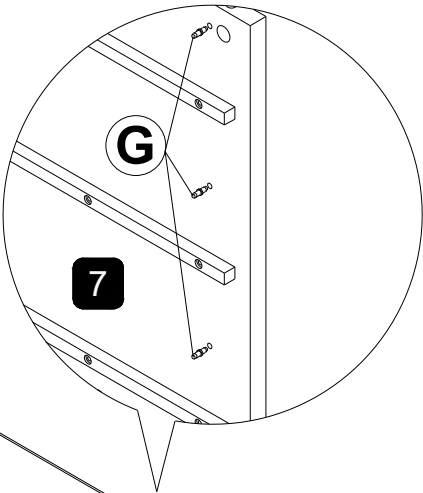
STEP 10



ASSEMBLY COMPLETE

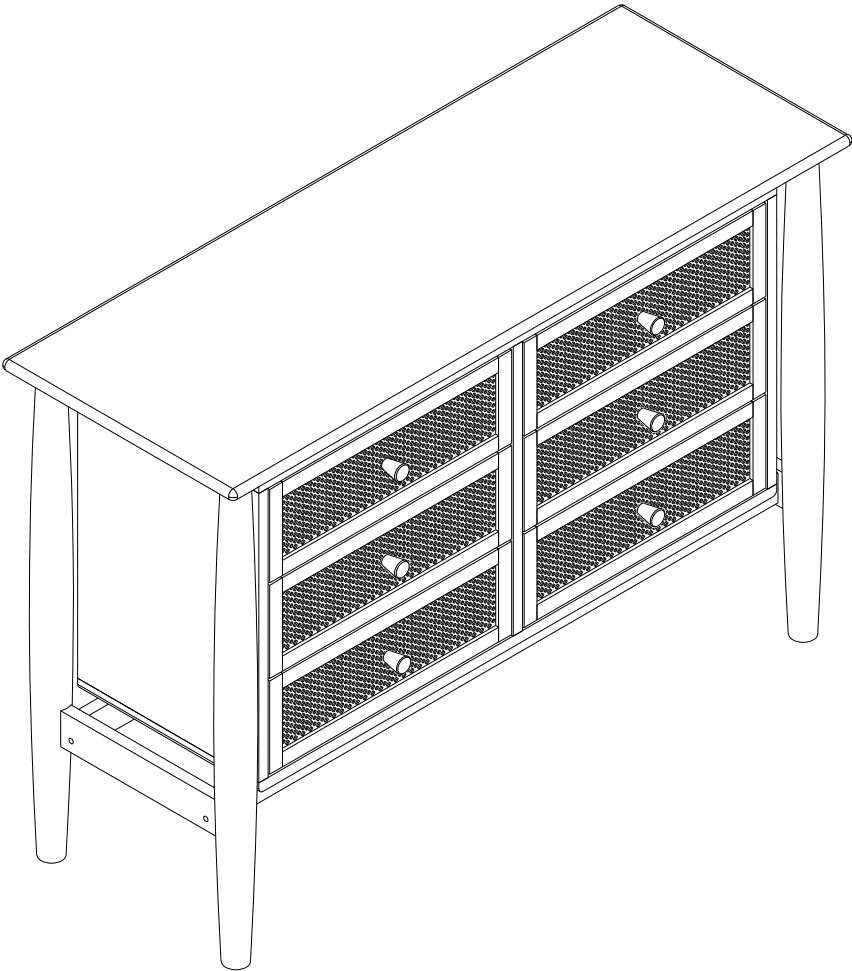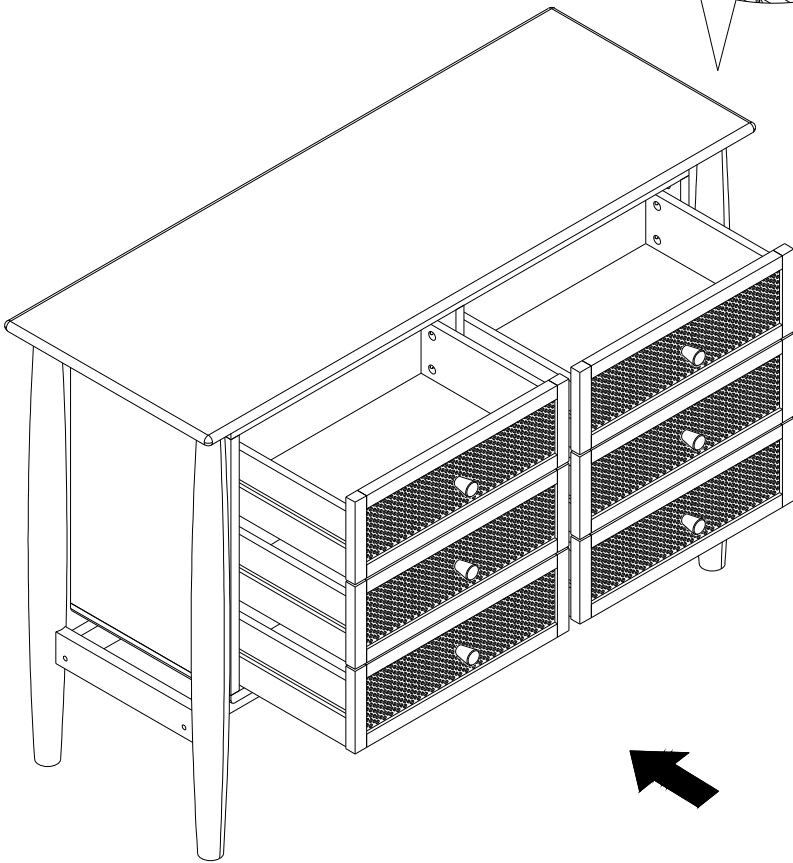CONTINUE TO ASSEMBLY
ANTI TIPPING KITS





G X 12pcs

ANTI TIP KIT

WARNING : Tipping furniture can cause serious injury or death. Please ensure you install the Anti Tipping Kit supplied with this furniture to prevent tipping. If you are unsure how to install, please refer to a qualified professional for installation advice. PLEASE EDUCATE YOUR CHILDREN THAT CLIMBING ON DRAWERS OR PULLING ALL DRAWERS OUT SIMULTANEOUSLY IS **DANGEROUS** AND MAY INJURE THEM.

WARNING!! When drilling a wall, ensure that there are no hidden electrical, water or gas pipes.

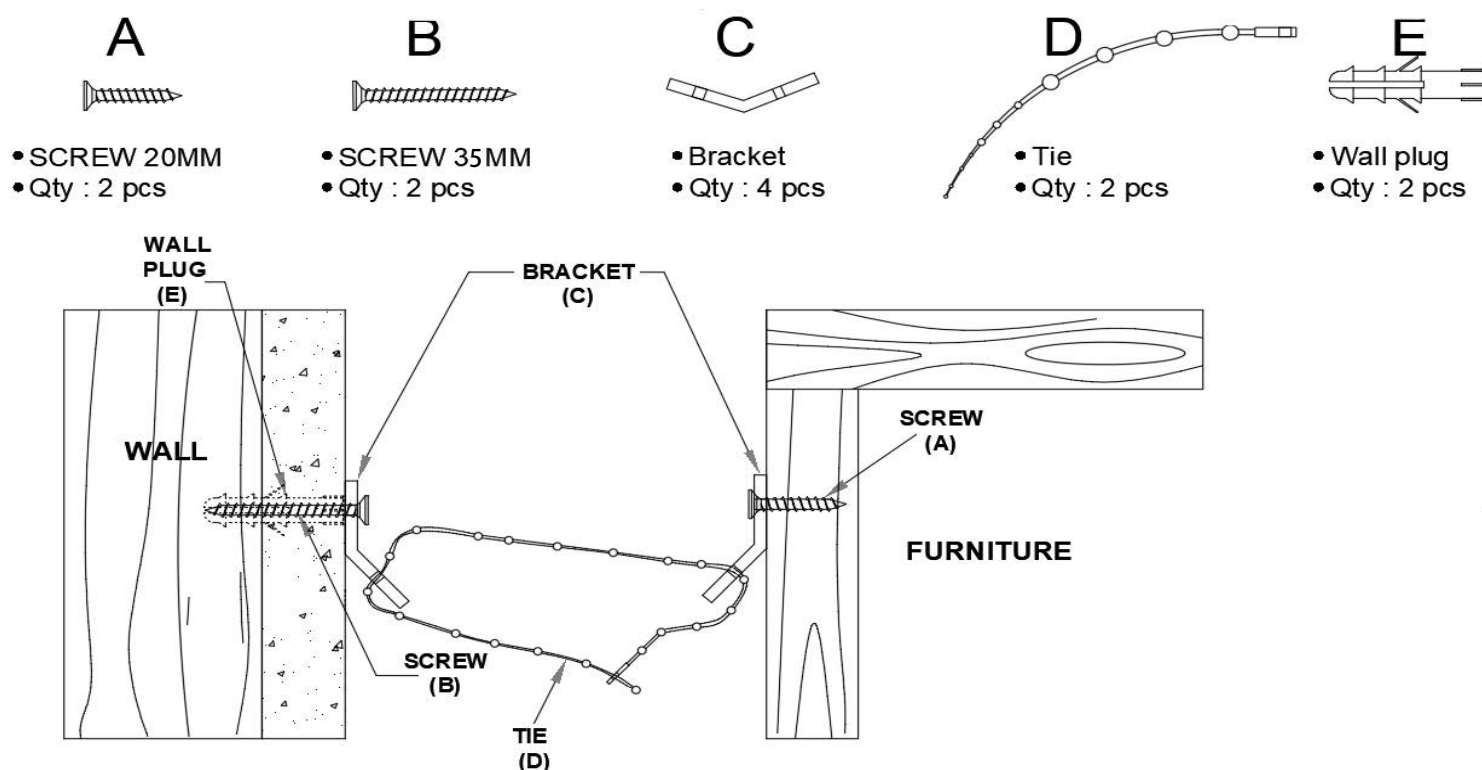Please keep this document for future reference.



INSTRUCTIONS

STEP 1

Decide the location you want to position your furniture

STEP 2

Determine the material the wall is constructed of. Ideally find a wall stud in order to attach a bracket. If this is not possible and you need to secure the bracket into plasterboard or concrete/brick, YOU MUST GO TO A HARDWARE STORE AND SEEK ADVICE TO WHAT FIXTURES YOU REQUIRE TO SECURE THE BRACKET EFFECTIVELY. Without the proper anchor hardware this Anti Tip kit will be ineffective.

ANTI TIP KIT

STEP 3

Attach one of the BRACKETS(C) to selected position on the wall using SCREW(B) and WALL PLUGS(E) **OR** appropriate hardware that will securely anchor the bracket to the wall. Make sure you accurately measure the position of the wall bracket so it will marry up with the position of the second bracket that will be attached to the rear of the furniture piece.

STEP 4

Attach the second BRACKET(C) to the rear of your furniture using SCREW(A). Ensure you attach bracket into a solid piece of timber and not backing board as this will not provide a strong anchor point and may damage your furniture. The bracket should be positioned approximately in the center of the furniture and slightly lower than the top to avoid seeing the tie.

STEP 5

Once both brackets are securely installed, position your furniture as close to the wall as possible and thread the NYLON TIE(D) through both brackets as shown and tighten until snug. Do not over tighten.

Installation is now complete

PLEASE CHECK REGULARLY THAT THE ANTI TIP HARDWARE IS INSTALLED PROPERLY.


PLEASE NOTE WARRANTY DOES NOT COVER DAMAGE CAUSED TO FURNITURE BY ANTI TIP INSTALLATION. IF YOU ARE NOT CONFIDENT INSTALLING THIS ANTI TIP KIT YOU SHOULD ENGAGE A PROFESSIONAL TRADESMAN WHO IS QUALIFIED TO CARRY OUT THE WORK.

IF ANY COMPONENTS OF THIS KIT ARE MISSING OR DAMAGED PLEASE DO NOT COMMENCE INSTALLATION AND CONTACT SELLER IMMEDIATELY FOR SPARE PARTS

ASSEMBLY INSTRUCTION

SW 8000-86NS












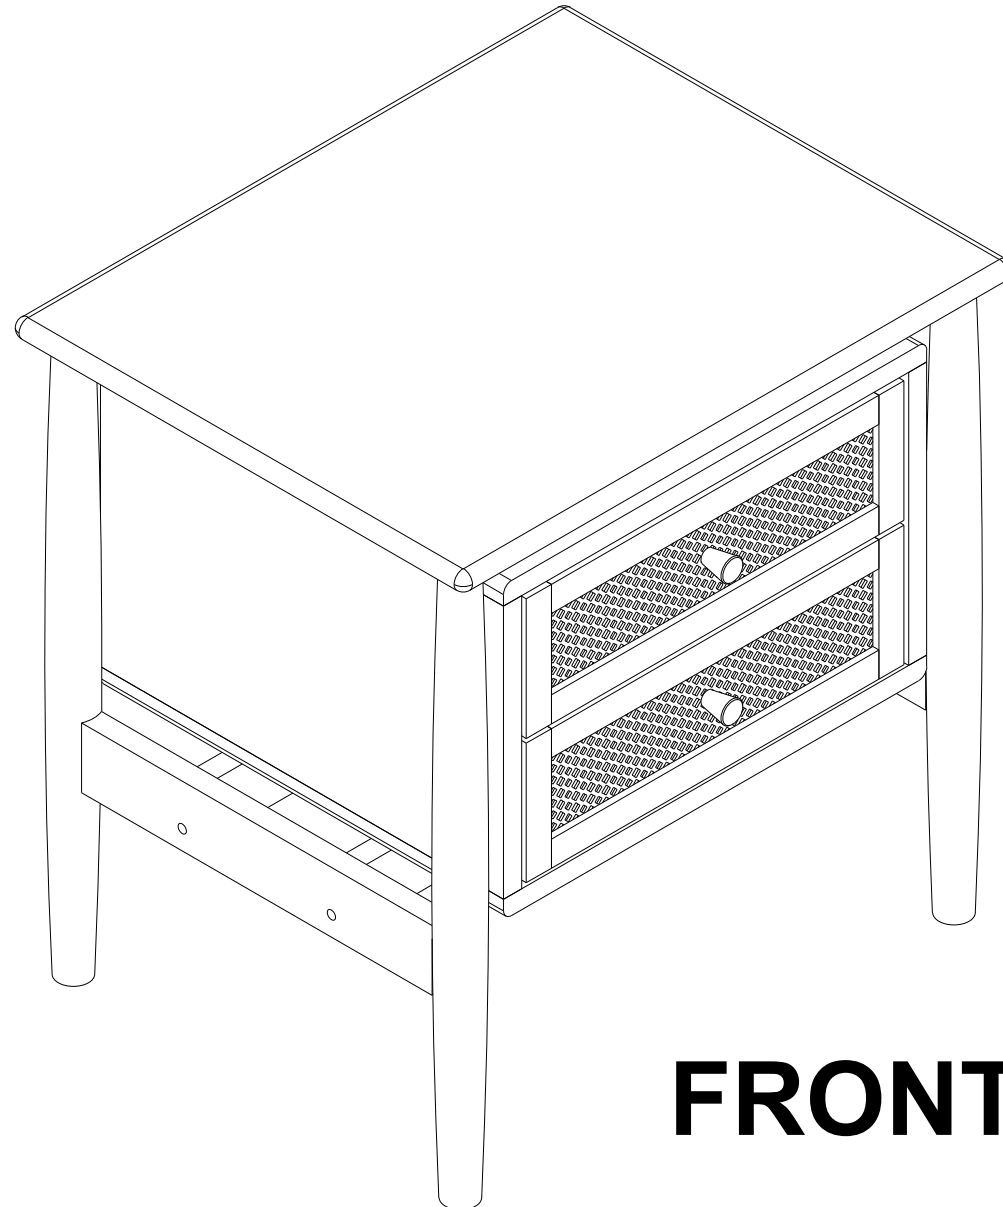
REAR












FRONT



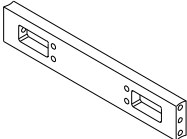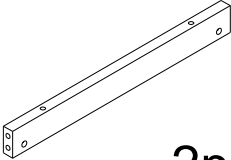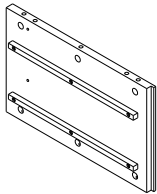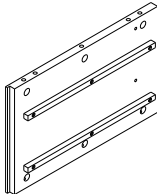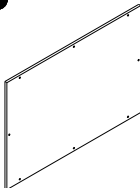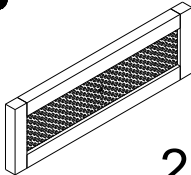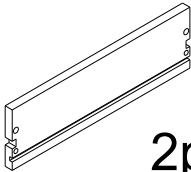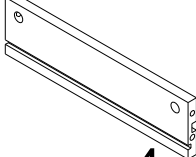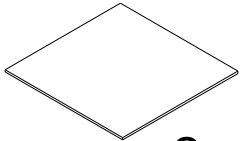
PART LIST

1 Table Top  1pc	2 Post  4pcs	3 Support Rail  2pcs	4 Bottom Rail  2pcs	5 Upper panel (Box)  1pc	6 Bottom Panel (Box)  1pc
7 Side Panel (Left)  1pc	8 Side Panel (Right)  1pc	9 Back Panel  1pc	10 Drawer Front Panel  2pcs	11 Drawer Back Panel  2pcs	12 Drawer Side Panel  4pcs
13 Drawer Base Panel  2pcs					

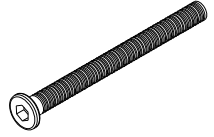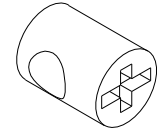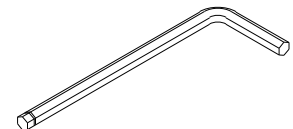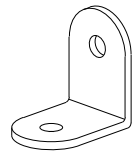
HARDWARE LIST


A MINI FIX SPREADING BOLT 24MM  20pcs	B MINIFIX HOUSING Ø15*12MM  12pcs	C MINIFIX HOUSING Ø15*10MM  8pcs	D WOOD DOWEL M8*30MM  28pcs	E PAN HEAD M3.5*16MM  8pcs	F CSK SCREW M3.5*16MM  8pcs
G SHELF SUPPORT  4pcs	H HANDLE  2sets	I JCBC M6X50MM  12pcs	J Barrel Nut  4pcs	K M4 ALLEN KEY WITH BALL  1pcs	L L bracket  4pcs
M U WASHER  4pcs					

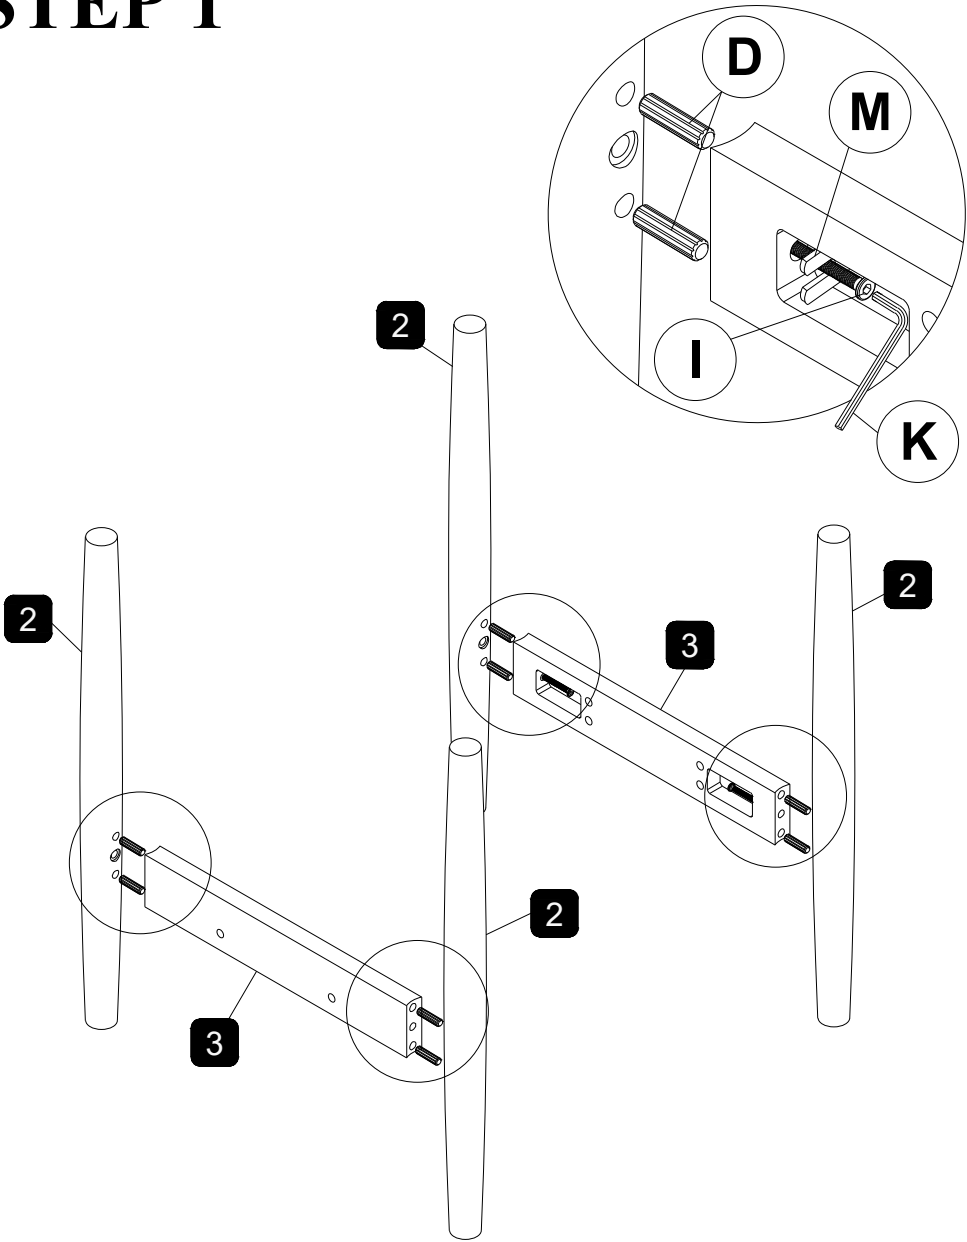STEP 1




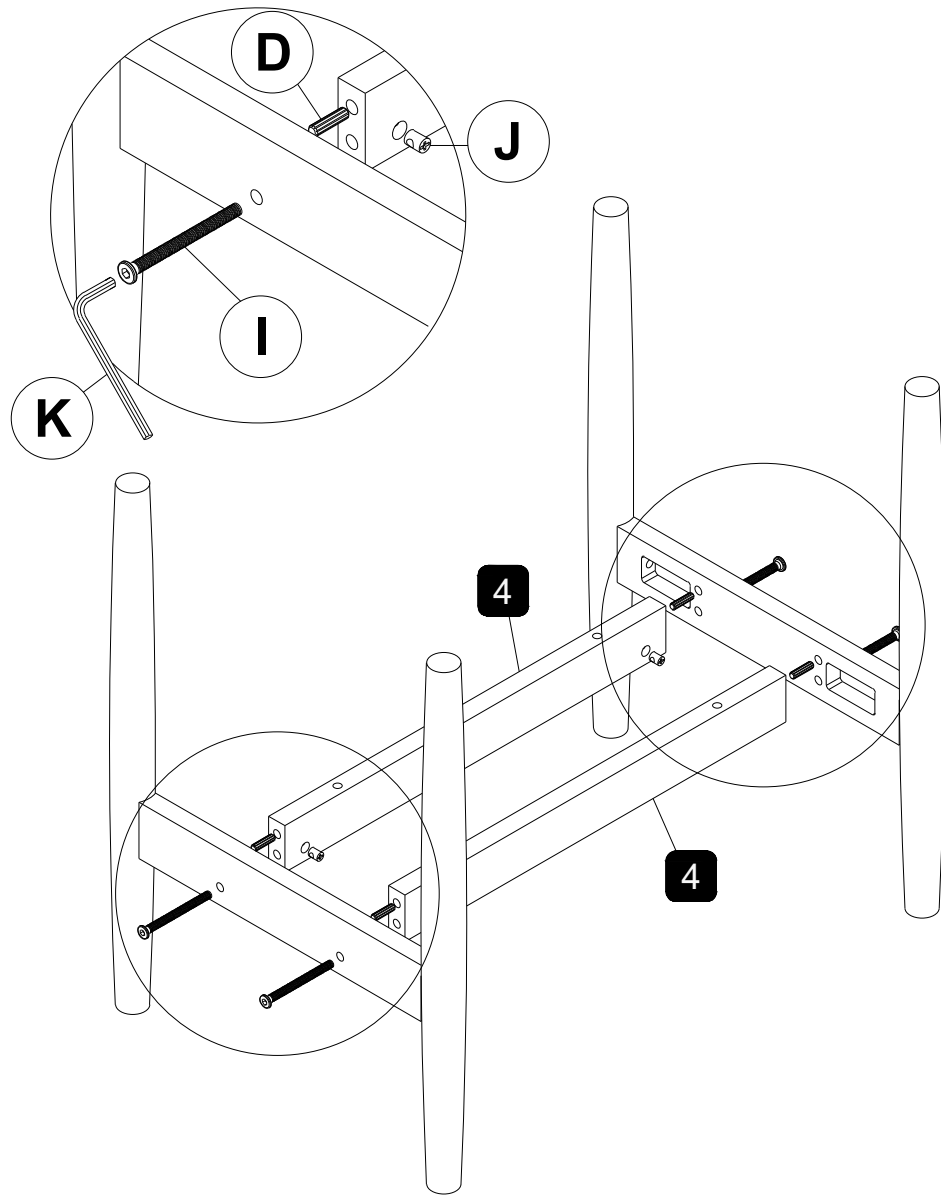STEP 2





							
D X 8pcs	I X 4pcs	K X 1pc	M X 4pcs	D X 4pcs	I X 4pcs	J X 4pcs	K X 1pc

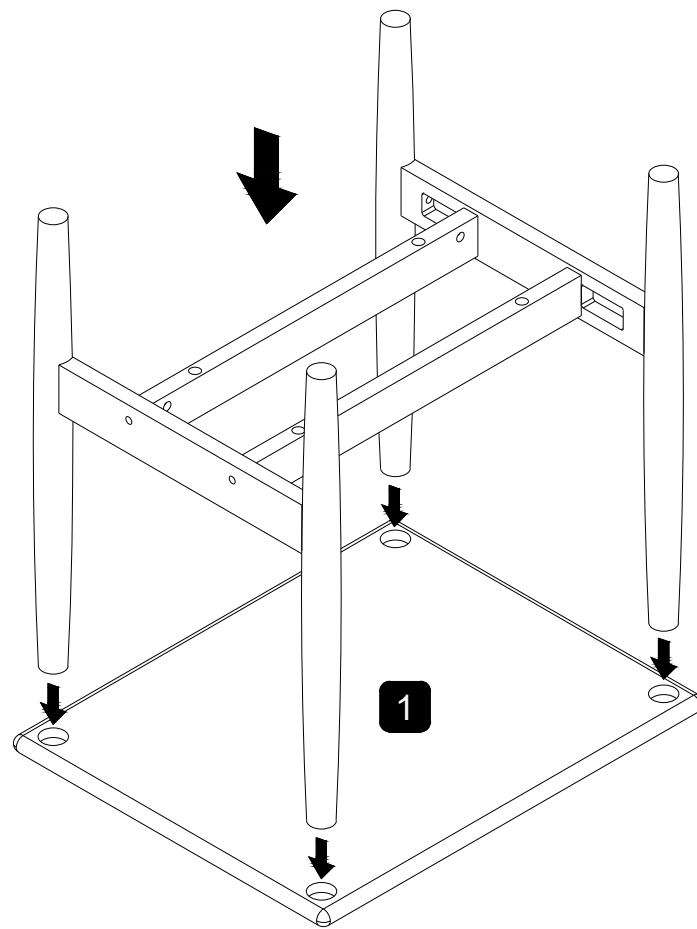STEP 3





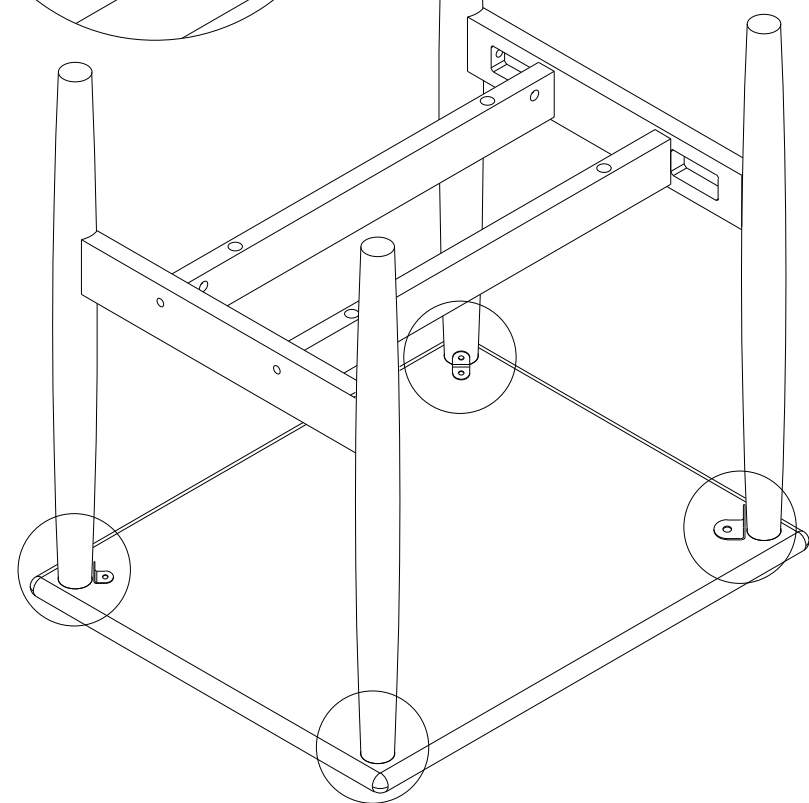
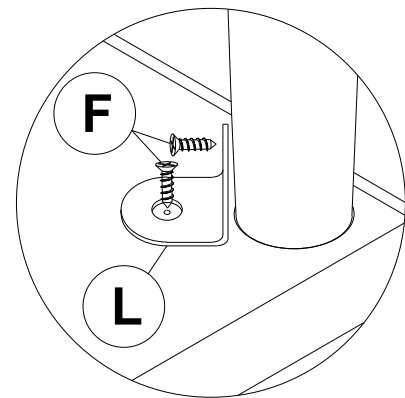
STEP 4




L X 4pcs


F X 8pcs

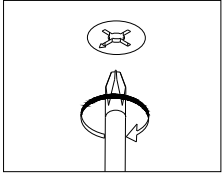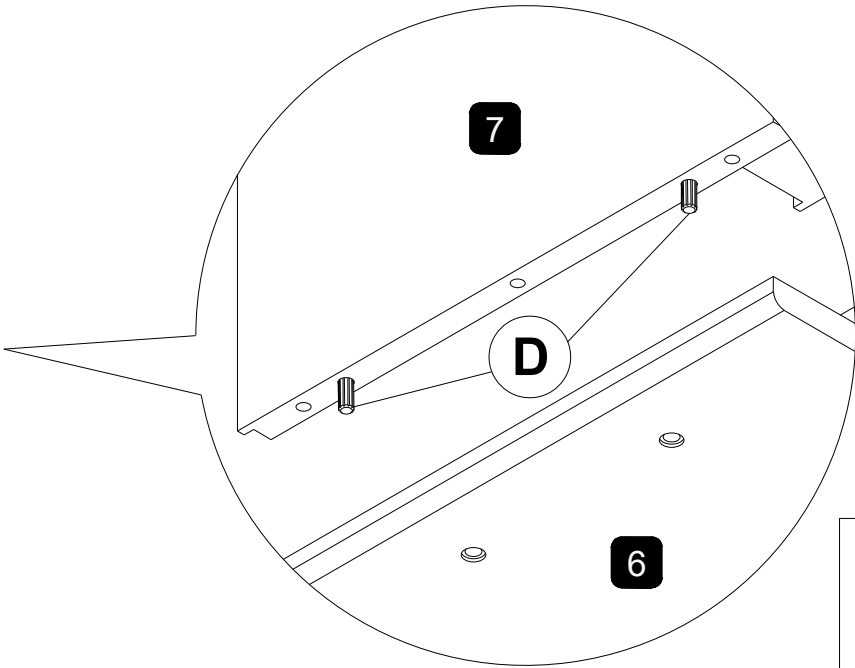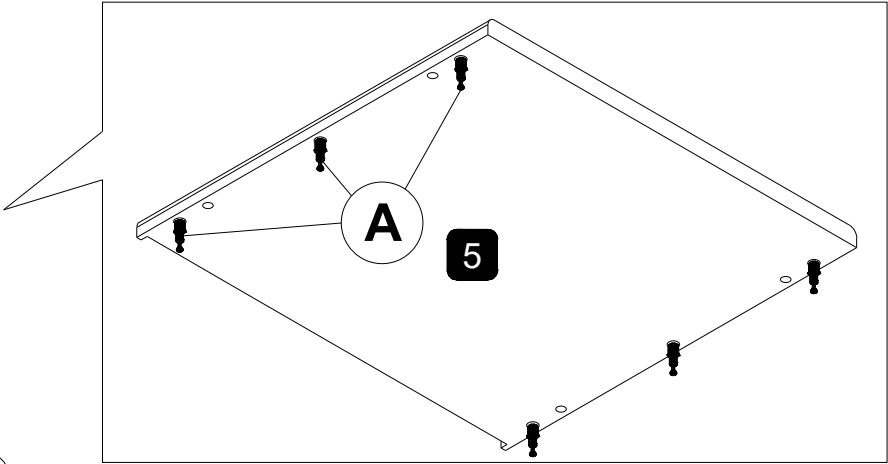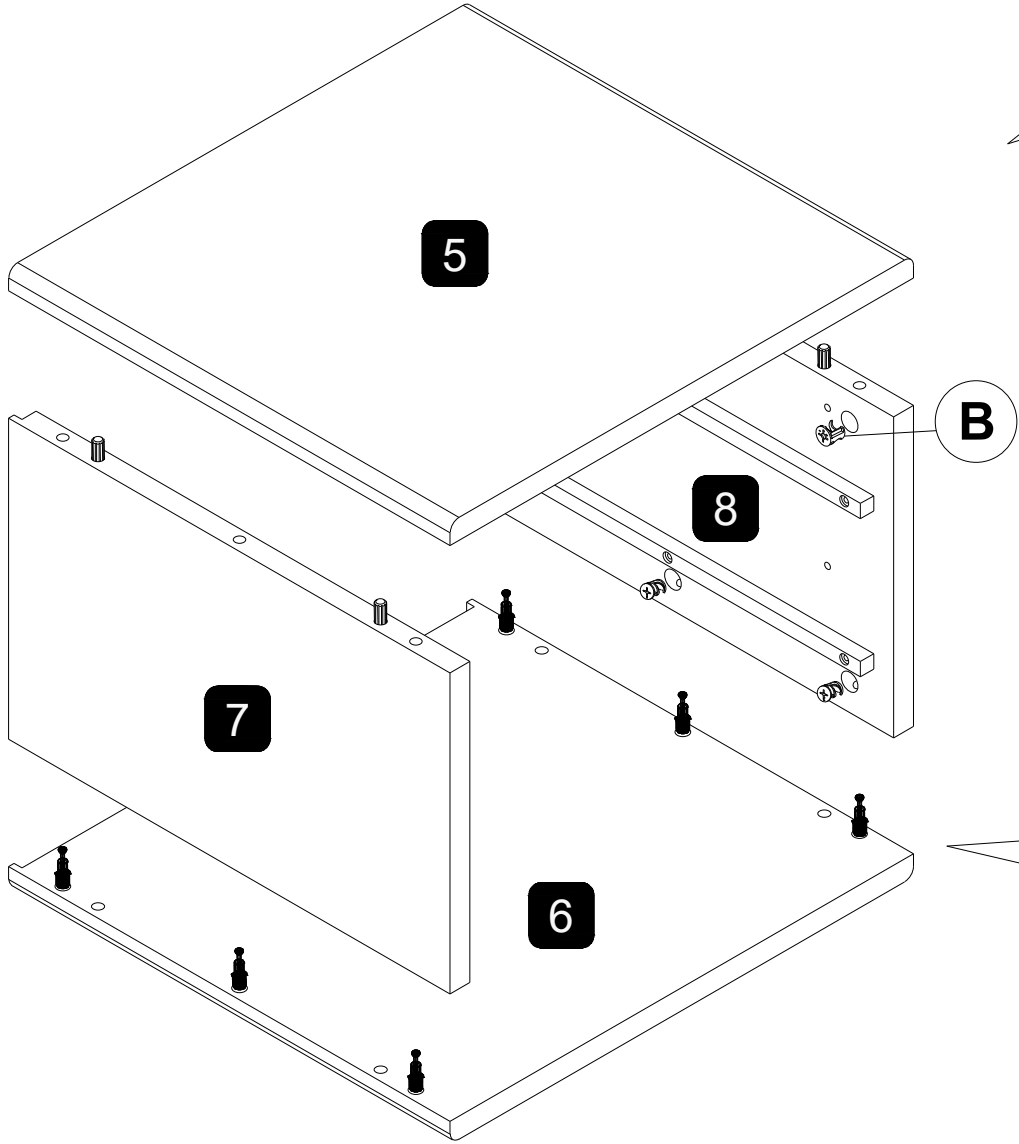STEP 5



A X 12pcs

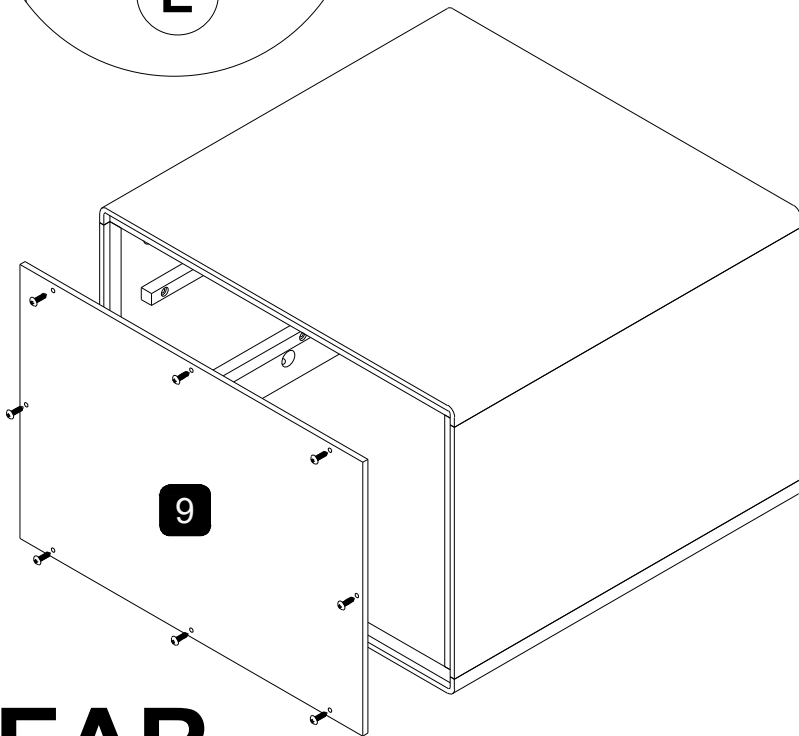
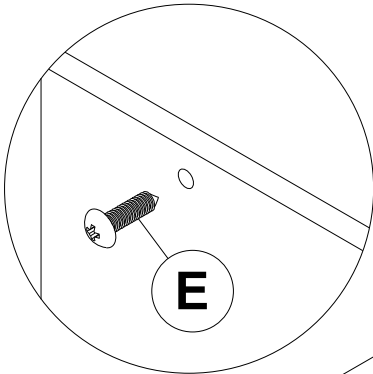


B X 12pcs



D X 8pcs




STEP 6



REAR

STEP 7

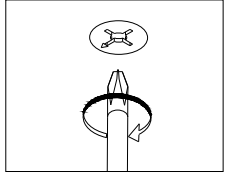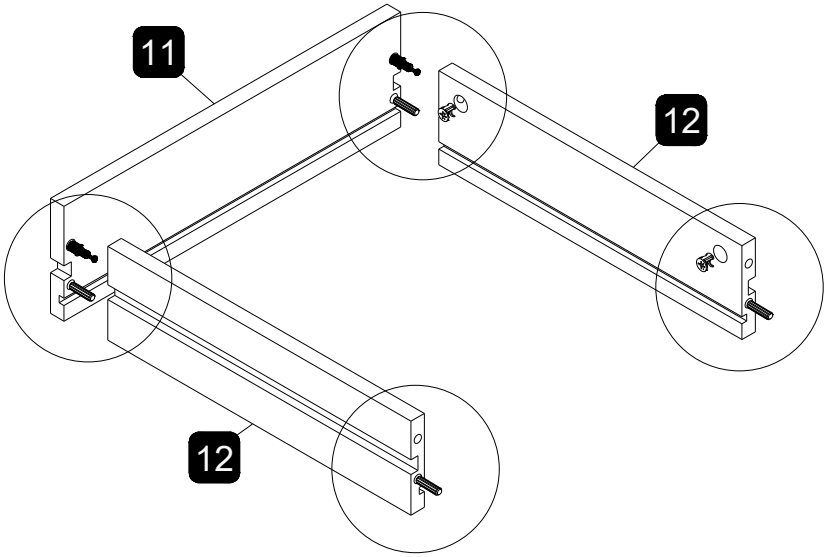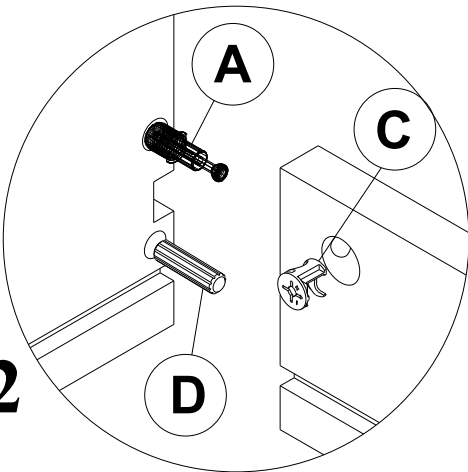
DRAWER X 2



 E X 8pcs				 A X 4pcs	 C X 8pcs	 D X 8pcs	
---	--	--	--	---	---	---	--



STEP 8

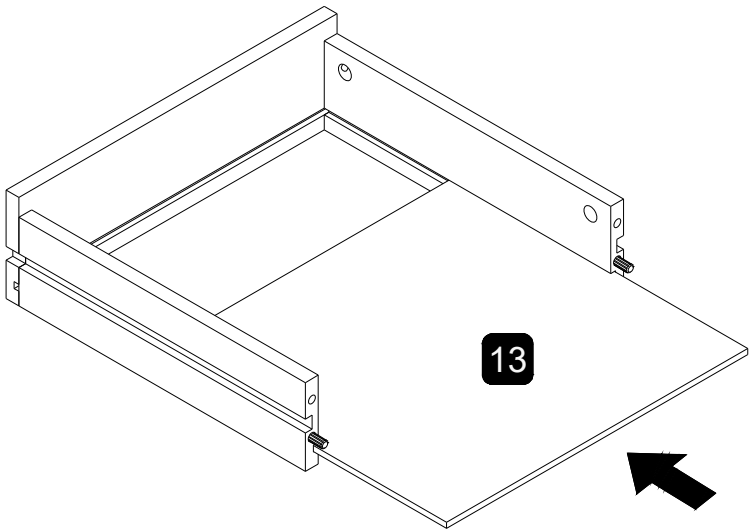DRAWER X 2



STEP 9

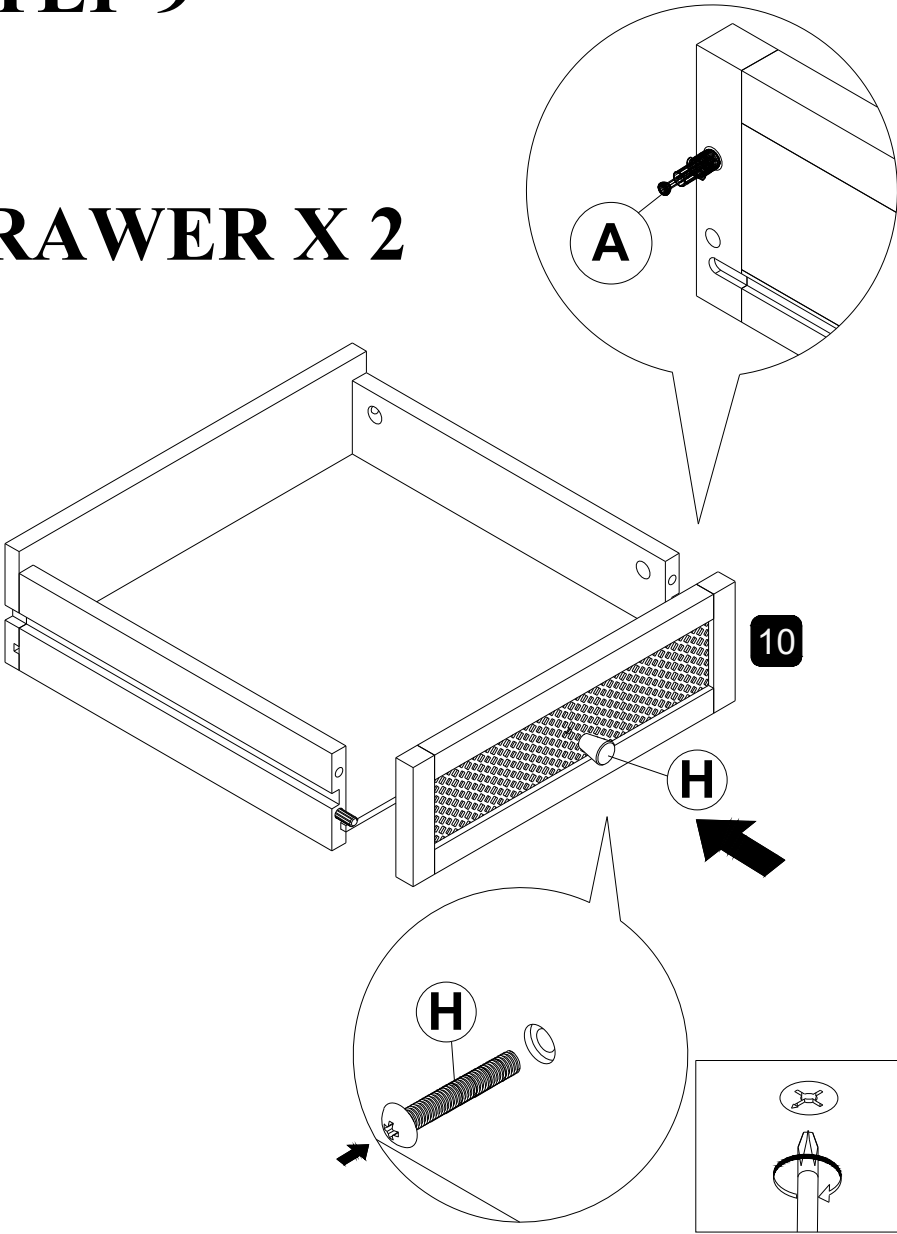DRAWER X 2





A X 4pcs





H X 2sets

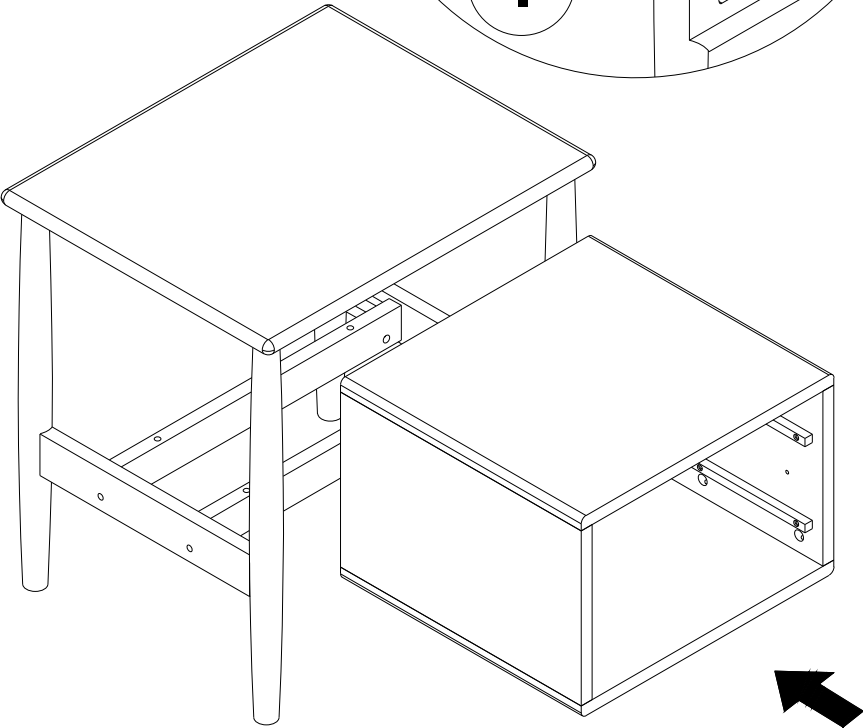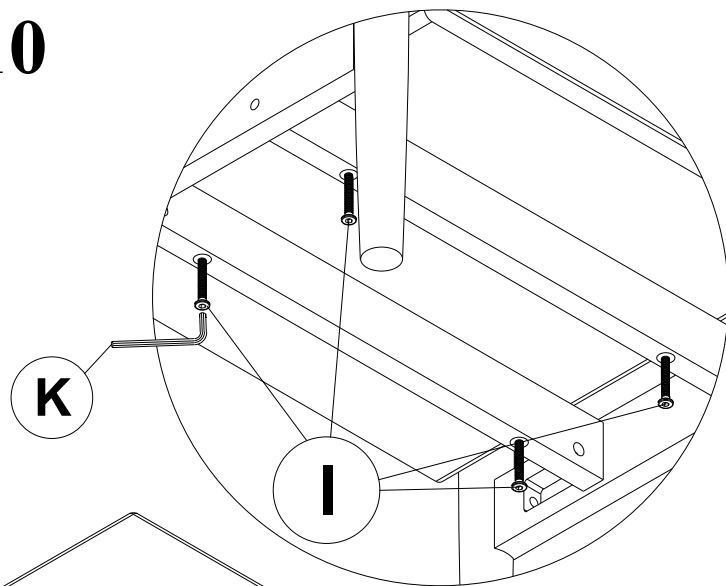STEP 10



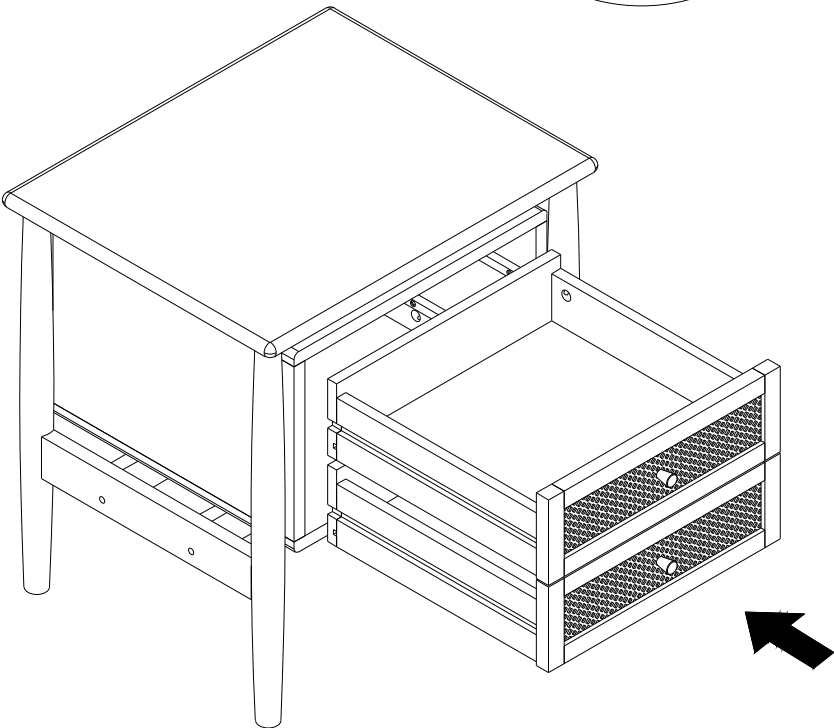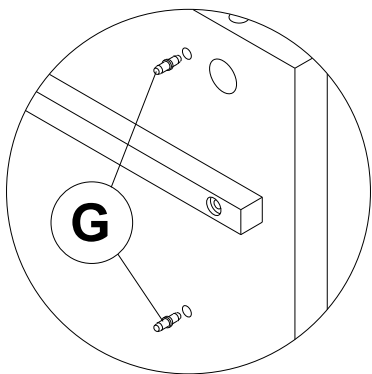STEP 11



 I X 4pcs

 K X 1pc

 G X 4pcs

ASSEMBLY COMPLETE

