
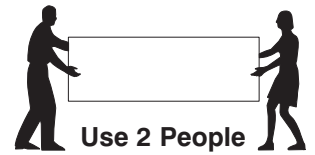


0267-1 King Bed

Assembly Instructions

WI-0326


1 Assembled View

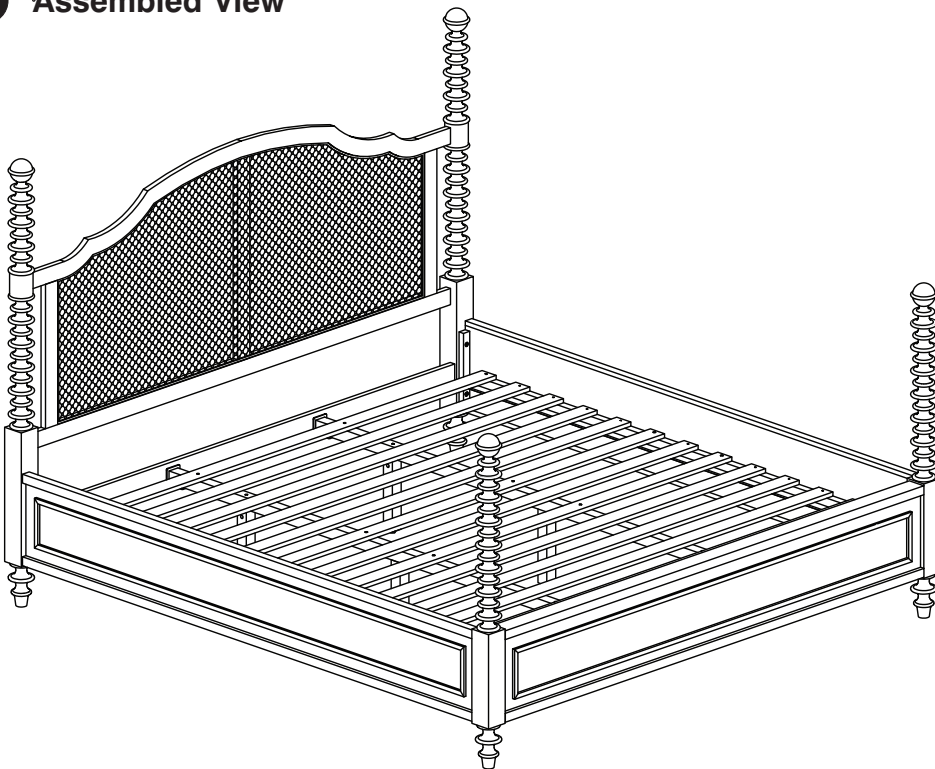

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List

Parts in Box A:

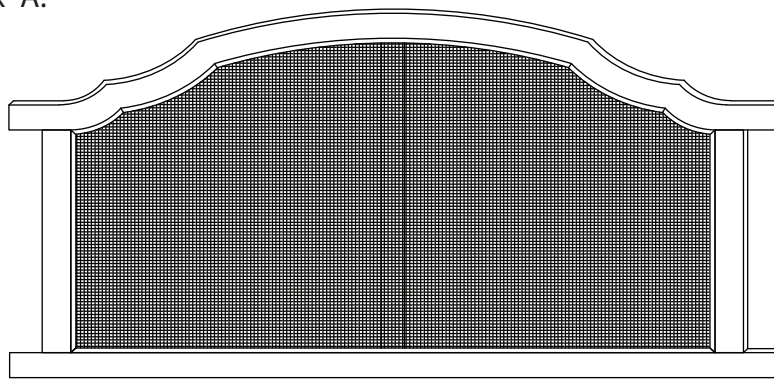

A Headboard Panel x 1



B Headboard Support x 1

0267-1 King Bed

Assembly Instructions

WI-0326

3 Parts List

Parts in Box B:



C
Headboard
Upper Post
x 2



D
Headboard
Center Post
(Left Hand)
x 1



E
Headboard
Center Post
(Right Hand)
x 1



F
Footboard
Upper Post
x 2



G
Headboard/
Footboard
Lower Post
x 4




H
Footboard
Center Post
(Left Hand)
x 1



J
Footboard
Center Post
(Right Hand)
x 1


Parts in Box C:

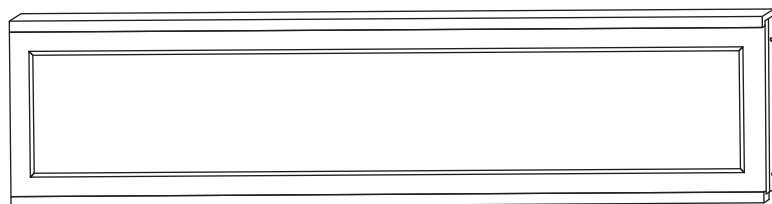

K Footboard Panel x 1




N Support
Leg x 6

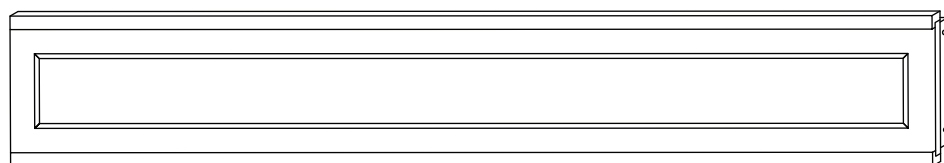

L Side Rail x 2



M Long Support x 2

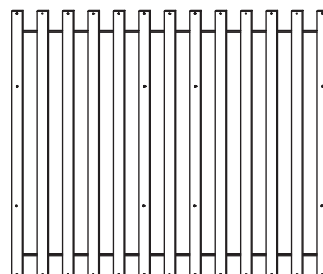



O Set of
Bed Slats x 1

0267-1 King Bed

Assembly Instructions


WI-0326

4 Hardware List

- | | | | |
|--|--|---|---|
| 
1 M6 x 15mm JCB
x 8 | 
2 M6 x 40mm JCB
x 36 | 
3 M6 x 90mm JCB
x 6 | 
4 Barrel Nut
x 6 |
| 
5 Adjustable
Foot x 6 | 
6 Center Rail
Bracket x 4 | 
7 Wood Screw
(M4 x 32mm) x 18 | 
8 Allen Key
x 1 |

5 Assemble the Support Leg (N) to the Long Support (M).

x2

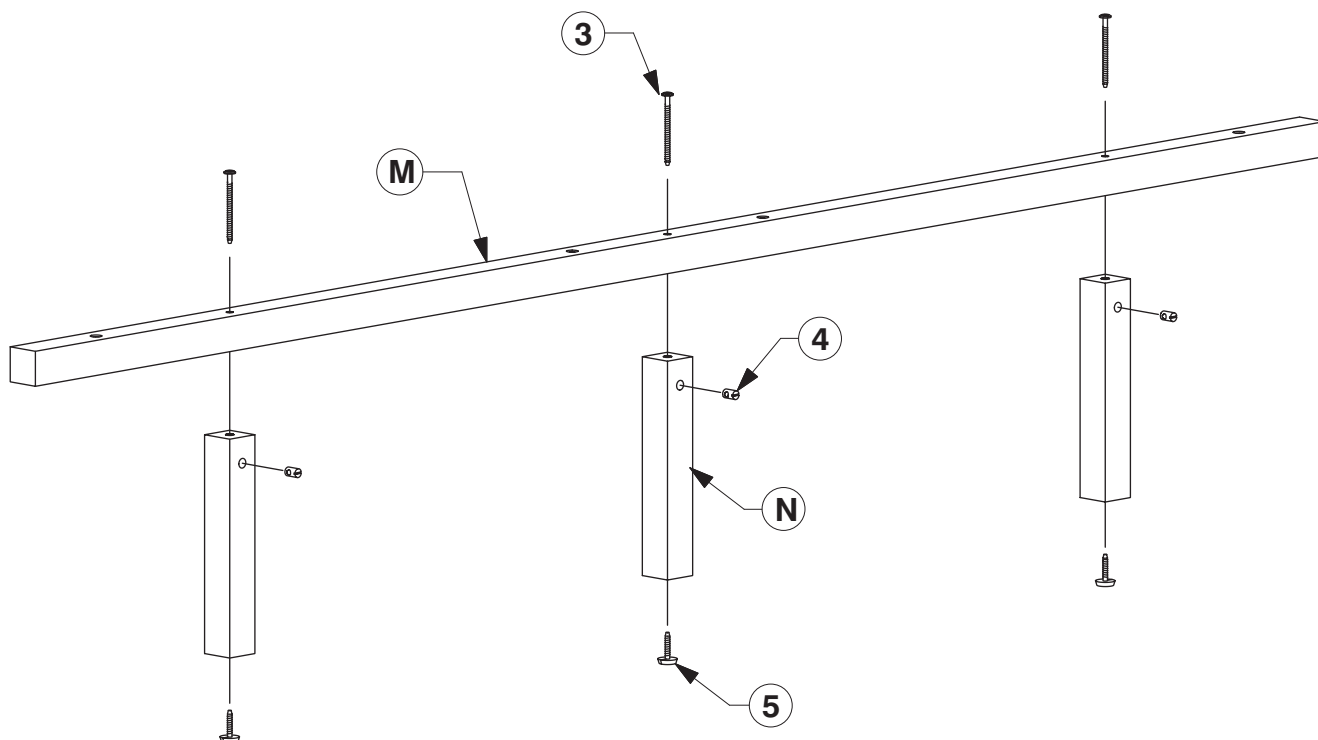


0267-1 King Bed


Assembly Instructions

WI-0226

- 6** Assemble Headboard Upper Post (C) and HB/FB Lower Post (G) to the Headboard Center Post (D & E).

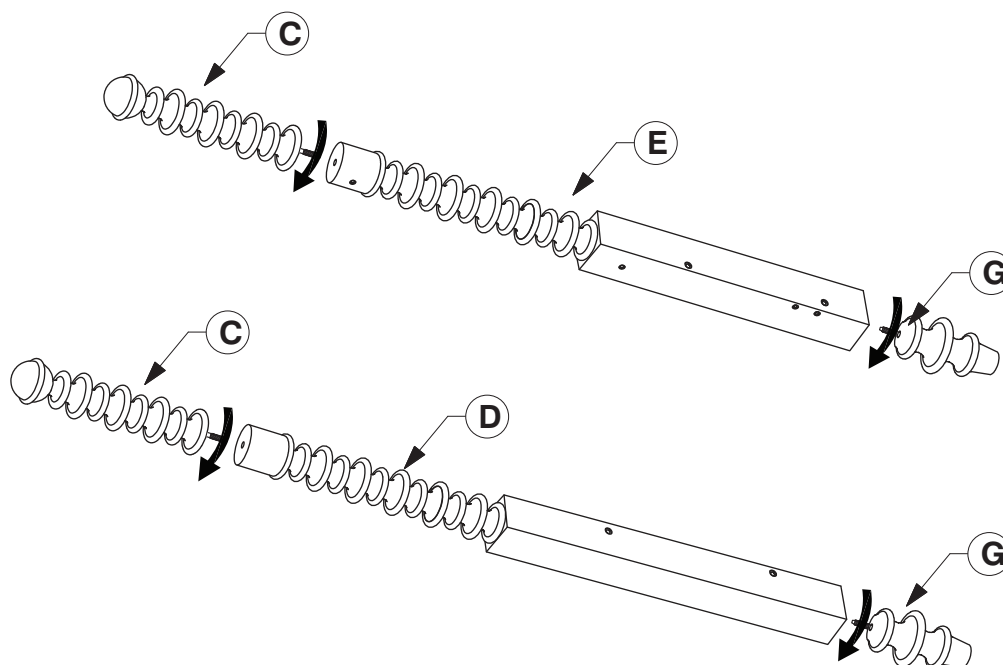

- 7** Assemble Footboard Upper Post (F) and HB/FB Lower Post (G) to the Footboard Center Post (H/J).

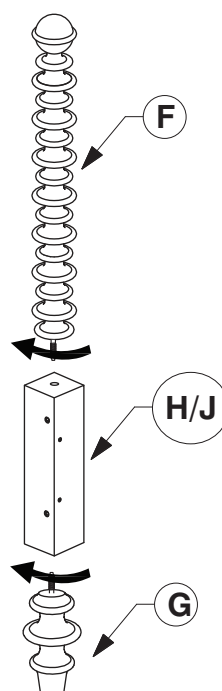


0267-1 King Bed


Assembly Instructions

WI-0226

- 8** Attach the Headboard Post (D & E) to the Headboard Panel (A) and Headboard Support (B).

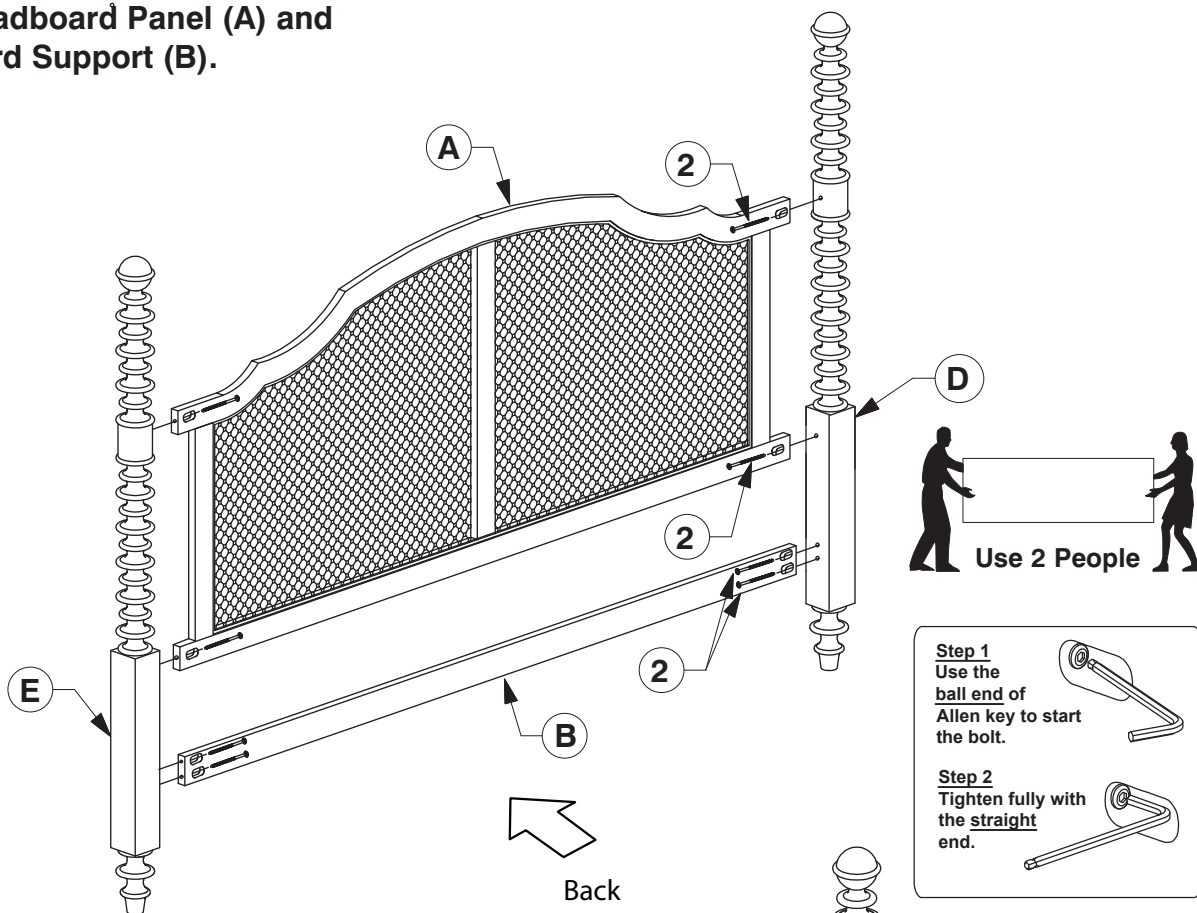

- 9** Attach the Footboard Post (H & J) to the Footboard Panel (K).

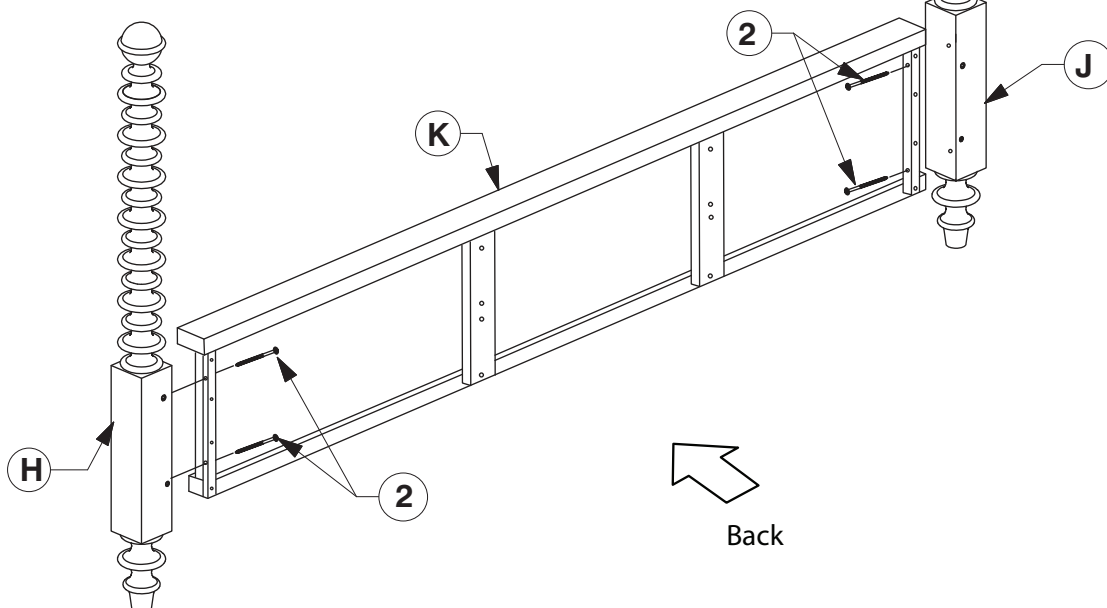


0267-1 King Bed


Assembly Instructions

WI-0326

- 10** Fit the Center Rail Bracket (6) to the Headboard Support (B).

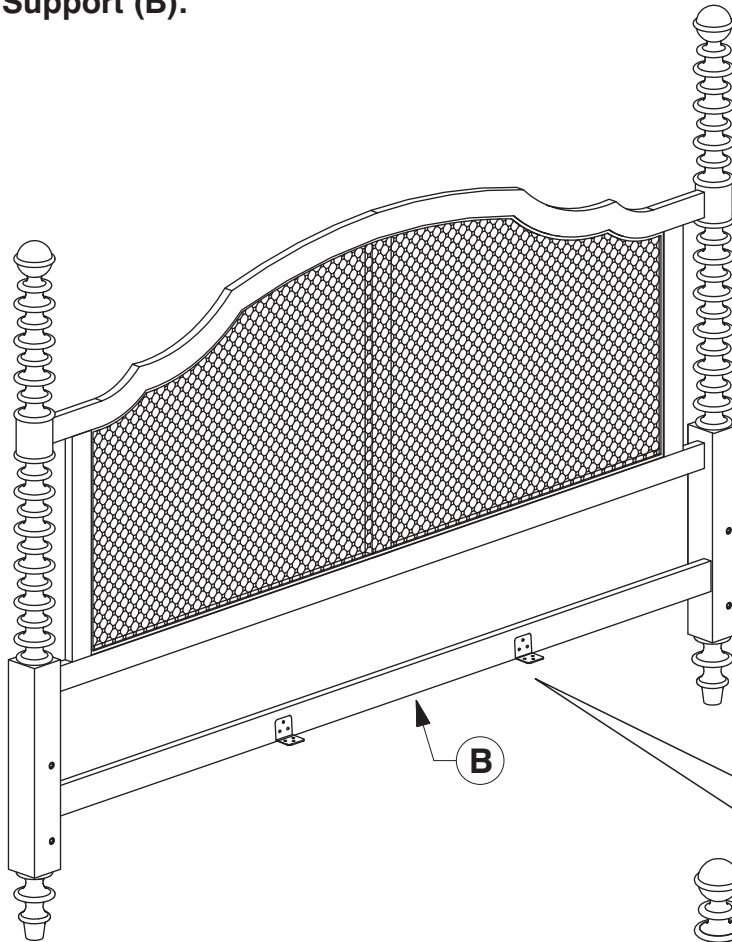

- 11** Fit the Center Rail Bracket (6) to the Footboard Panel (K).


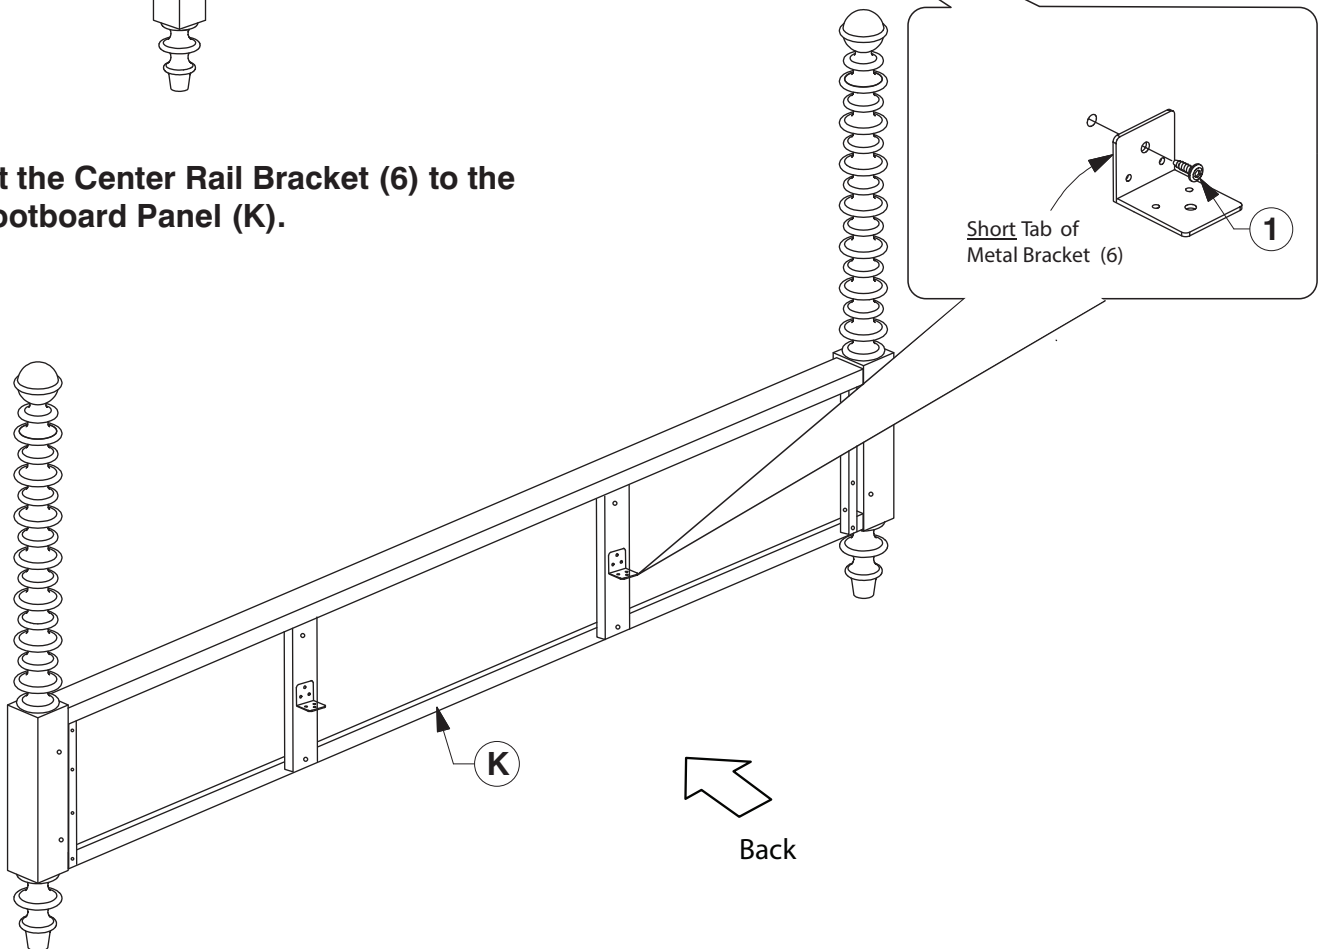


0267-1 King Bed

Assembly Instructions

WI-0326

- 12** Assemble the Side Rail (L) to the Head / Footboard.

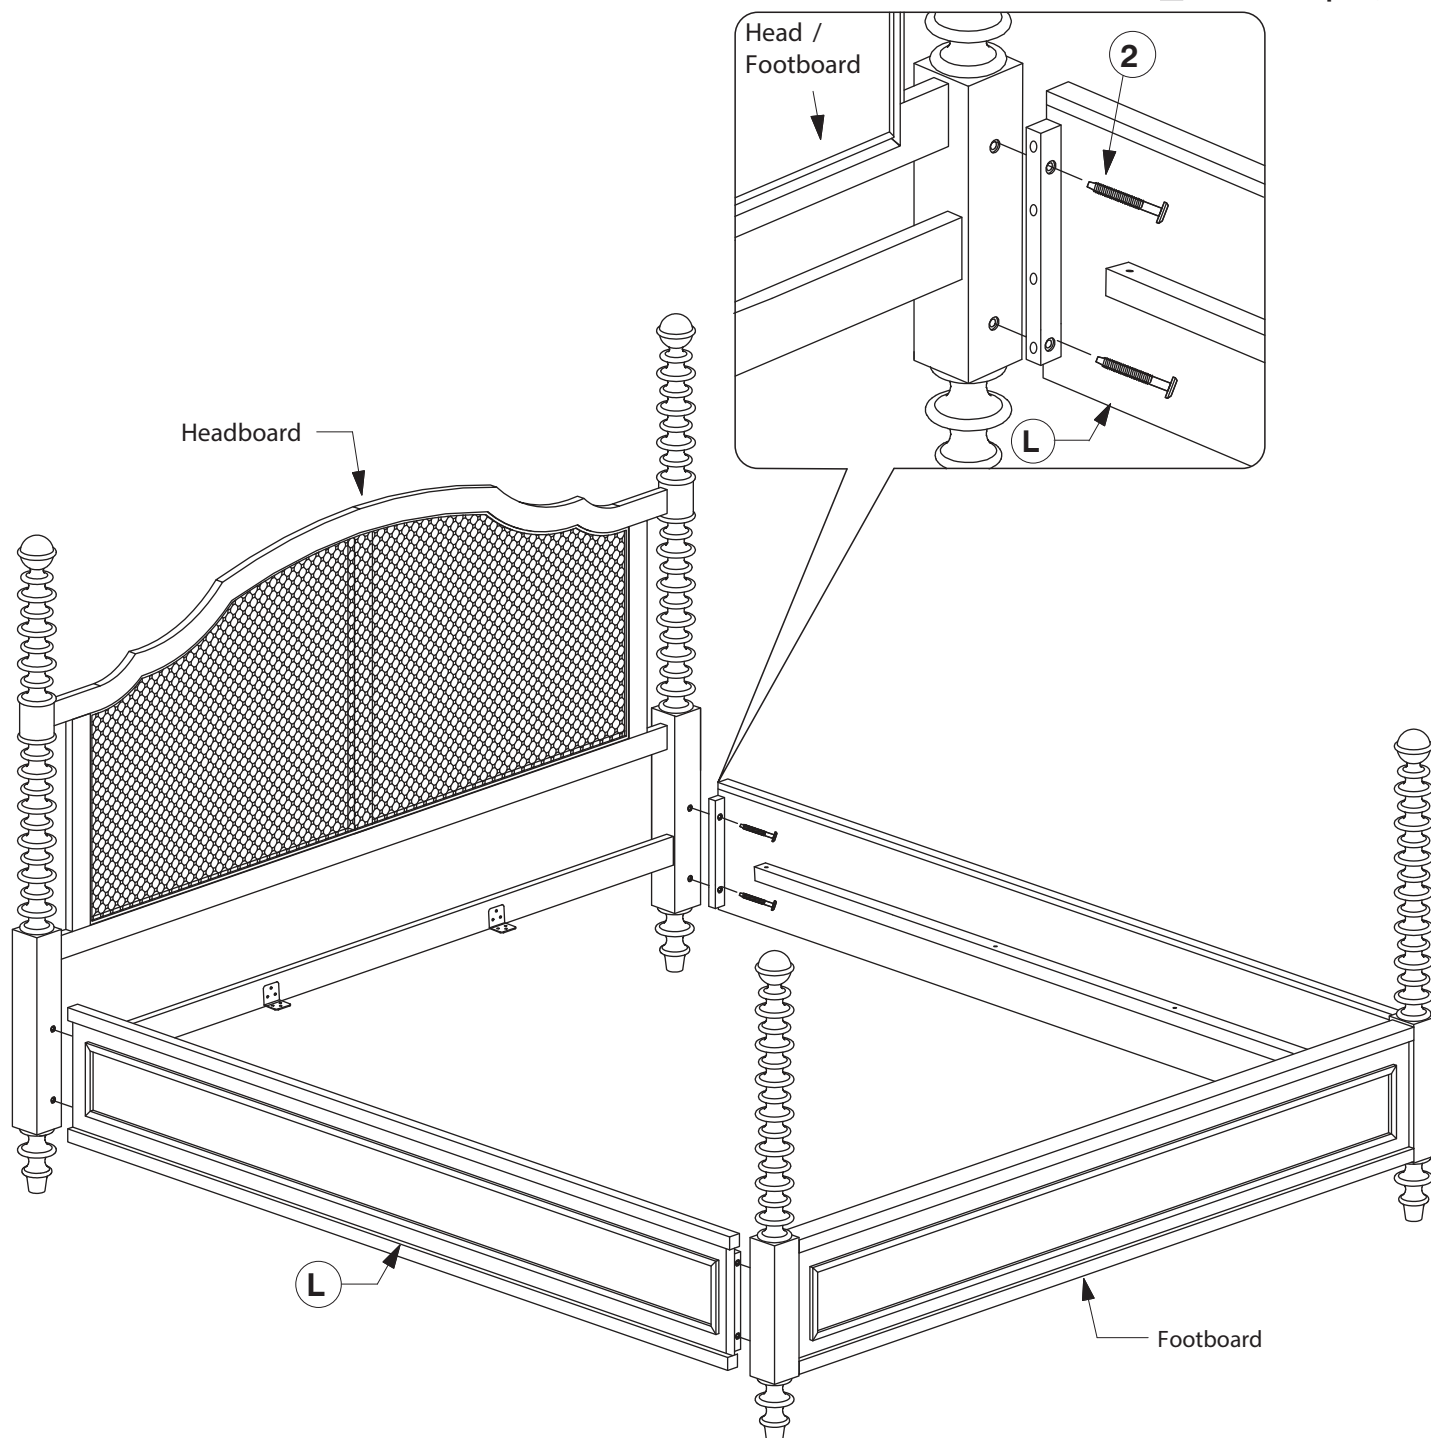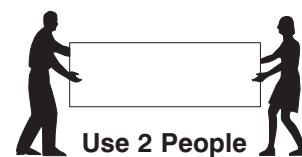


0267-1 King Bed

Assembly Instructions

WI-0326

- 13** Bolt the Long Support (M) to the Center Rail Brackets on the Headboard/Footboard.

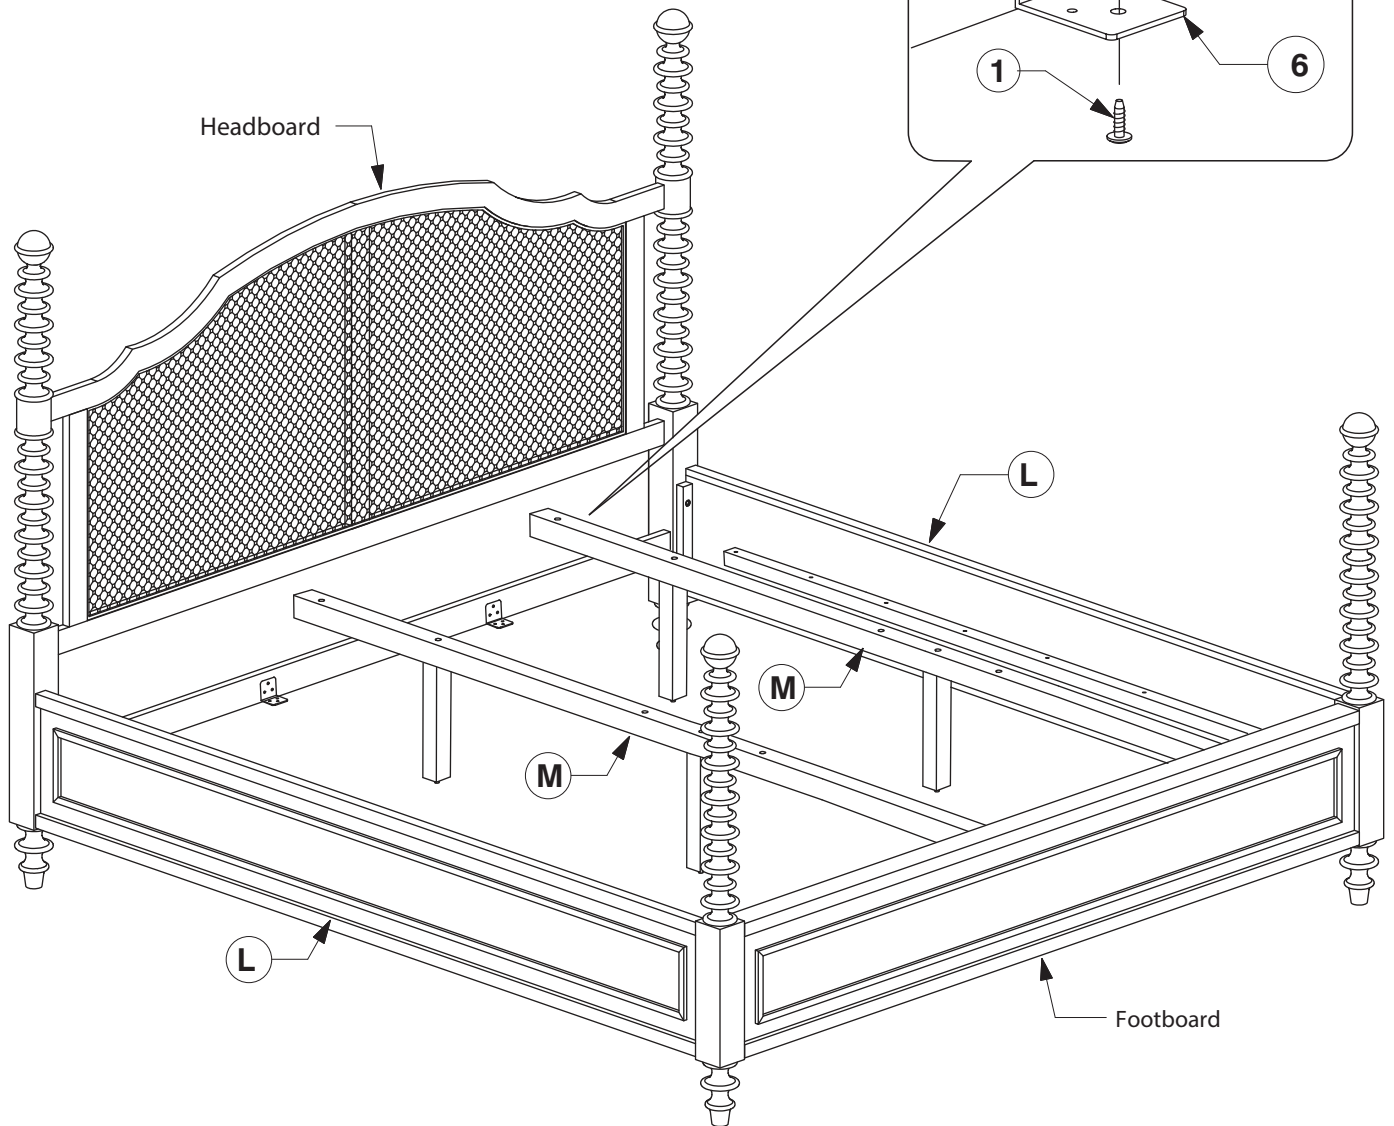


0267-1 King Bed

Assembly Instructions

WI-0326




- 14** Bolt & Screw the Bed Slats (O) to the Side Rail (L) and Long Support (M).

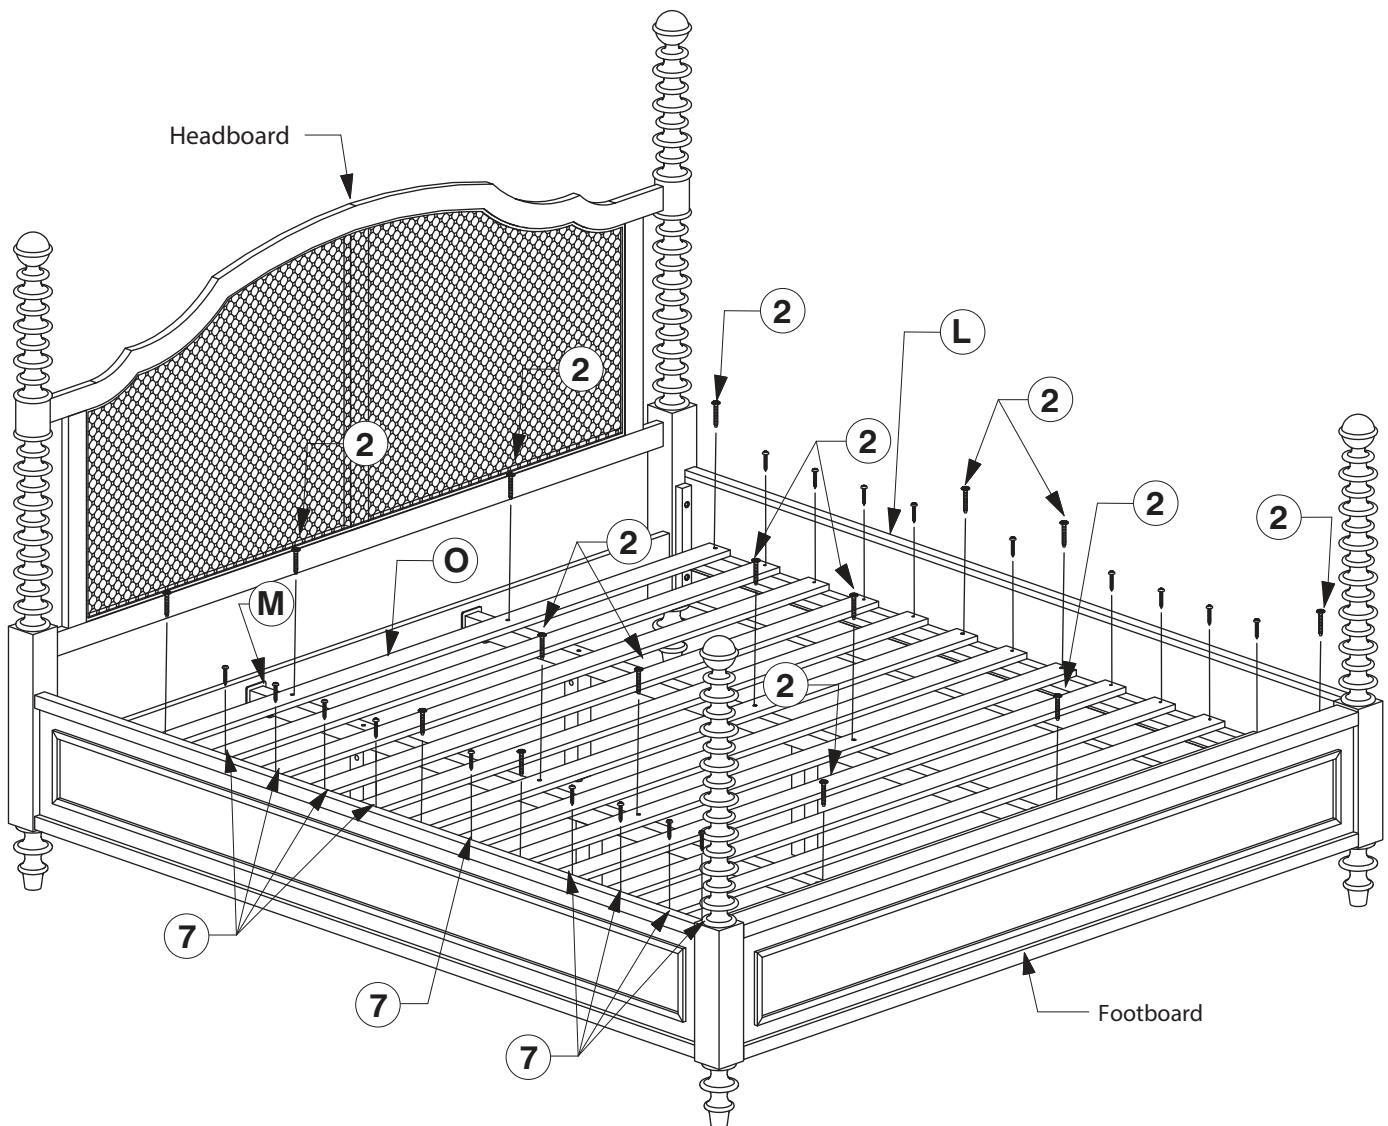

9029 1D Night Stand


Assembly Instructions

WI-0326

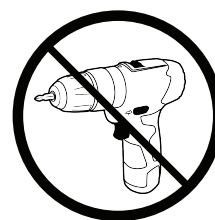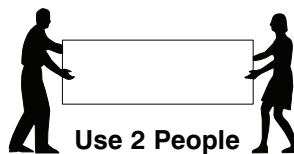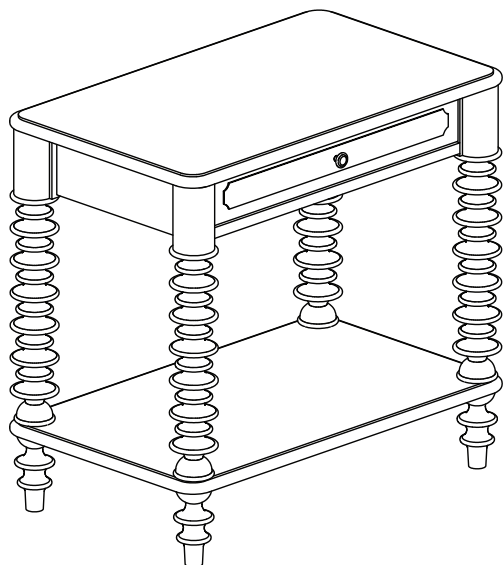

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

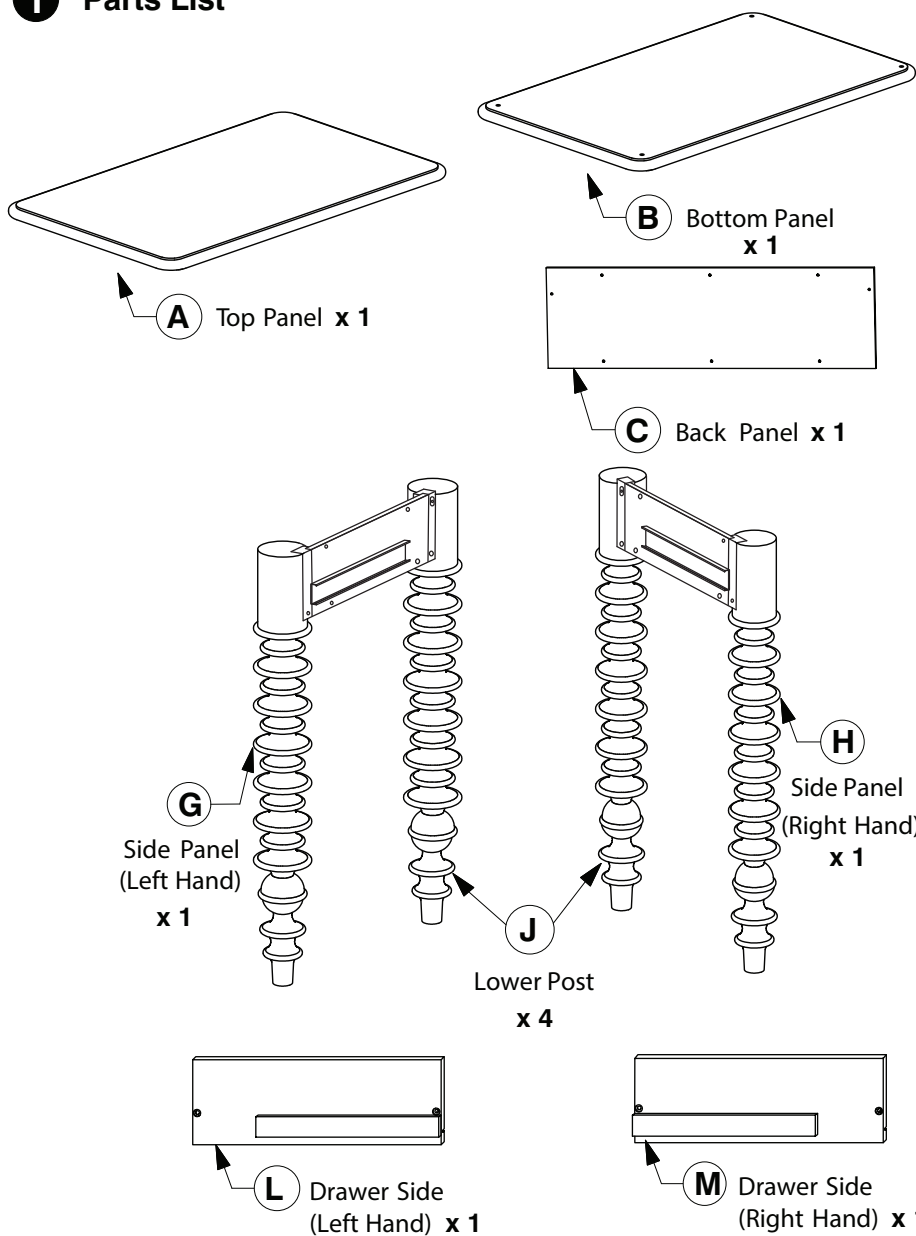


9029 1D Night Stand


Assembly Instructions

WI-0326


2 Hardware List

- | | | | | | |
|---|---|---|--|---|---|
|  |  |  |  |  |  |
| 1 M6 x 15mm JCB x 16 | 2 M6 x 40mm JCB x 2 | 3 Wood Dowel (M8 x 30mm) x 4 | 4 M6 x 25mm Wood Dowel x 4 | 5 'L' Bracket (5005-3) x 8 | 6 M4 x 16mm Wood Screw x 8 |
|  |  |  |  |  | |
| 7 M4 x 20mm Wood Screw x 4 | 8 M4 x 25mm Wood Screw x 6 | 9 Handle (9029) x 1 | 10 M4 x 22mm Wood Screw x 1 | 11 Allen Key x 1 | |

3 Assemble the Drawer Sides (L & M) & Drawer Rail (P) to the Drawer Face (K).


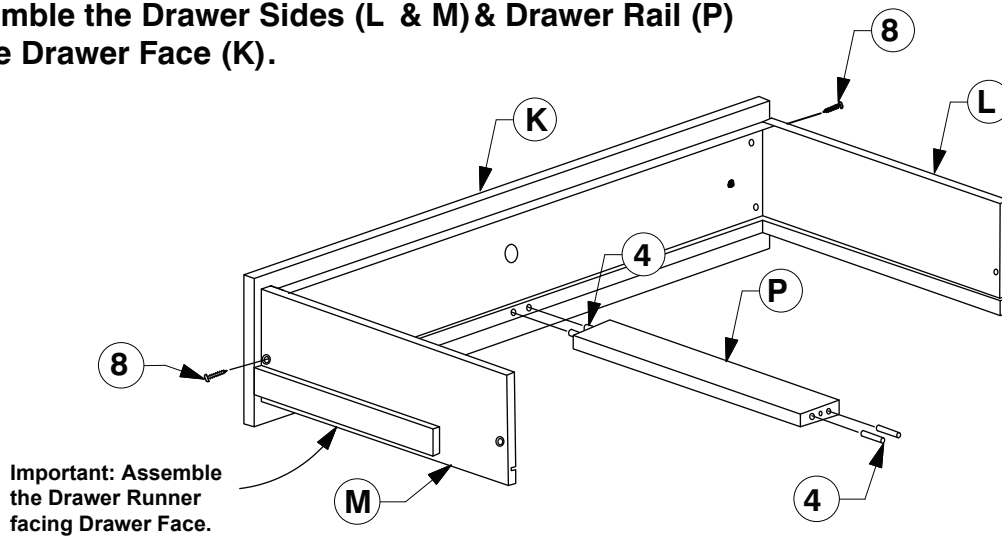


4 Slide the Drawer Bottom (N) into the groove on the Drawer Sides (L & M).

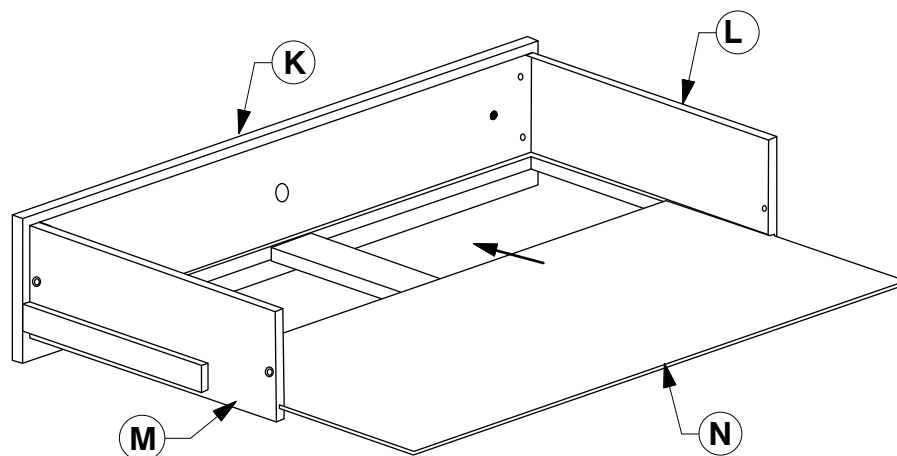

Assembly Instructions

5 Assemble the Drawer Back (F) to the Drawer Sides (L & M). Fit the Handle to the Drawer Face (K).




9029 1D Night Stand


Assembly Instructions

WI-0326

- 8** Fit the "L" Braket (5) and Wood Dowel (3) to the Support Bar Bottom (D).

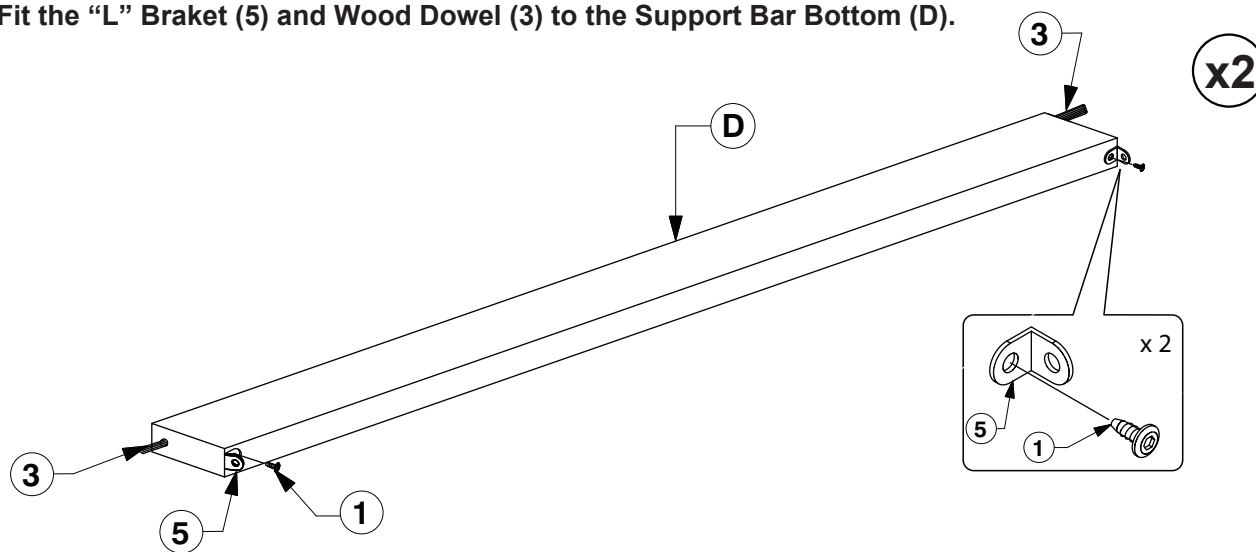

- 9** Assemble the Support Bar (Rear & Bottom) (D & E) to the Side Panel (G).

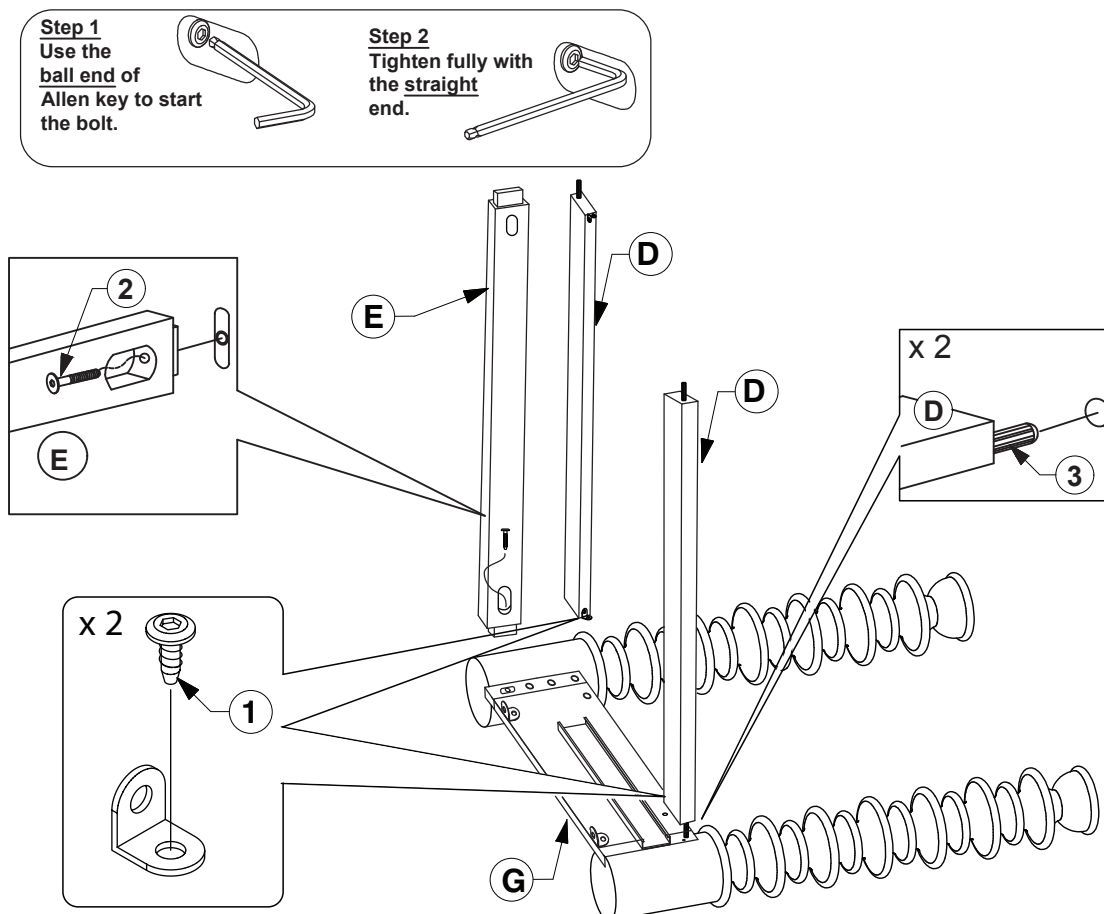


9029 1D Night Stand


Assembly Instructions

WI-0326


- 10** Fit the Support Bar Rear & Bottom (D & E) to the Side Panel (H).

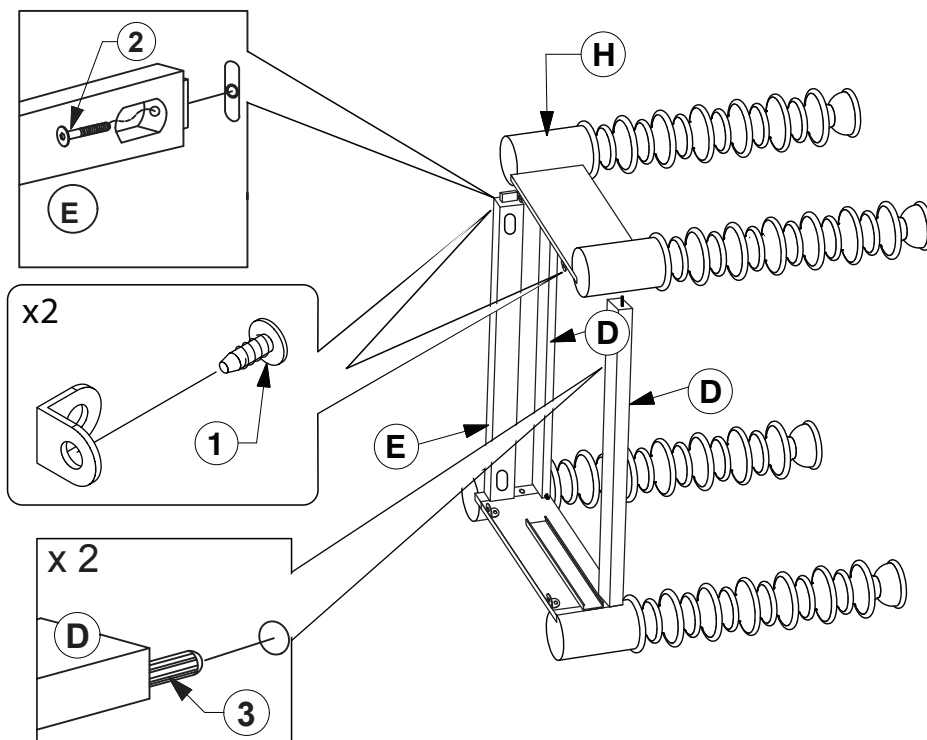


Step 1
Use the ball end of Allen key to start the bolt.

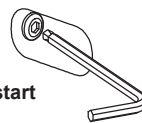

Step 2
Tighten fully with the straight end.



- 11** Assemble the Side Panel (G & H) to the Top Panel (A).

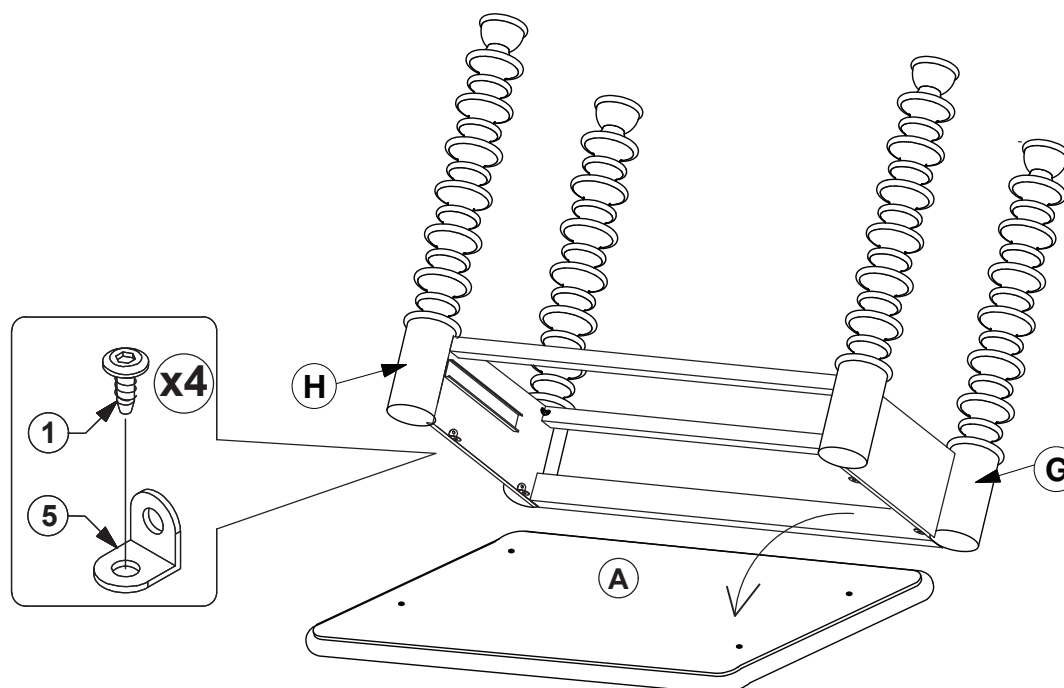


9029 1D Night Stand


Assembly Instructions

WI-0326

- 12** Use Screw to tighten the Back Panel (C) to the back of frame.

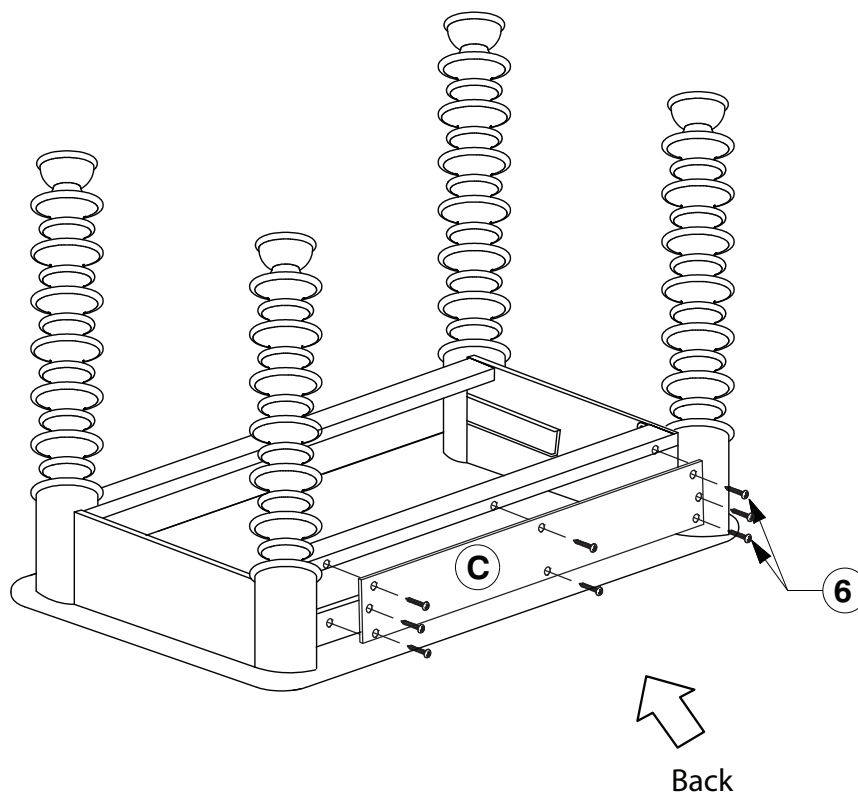

- 13** Fit the Bottom Panel (B) and Lower Post (J) to the Bottom Side Panel (G & H).

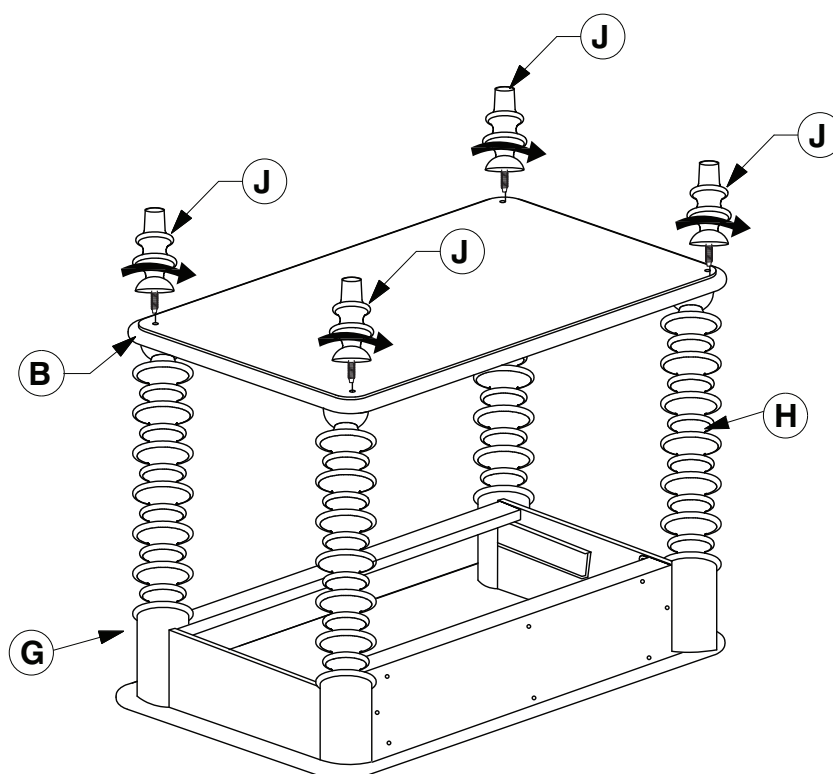


9029 1D Night Stand

Assembly Instructions


WI-0326

14 Fit the Drawer to the Casegood Body.

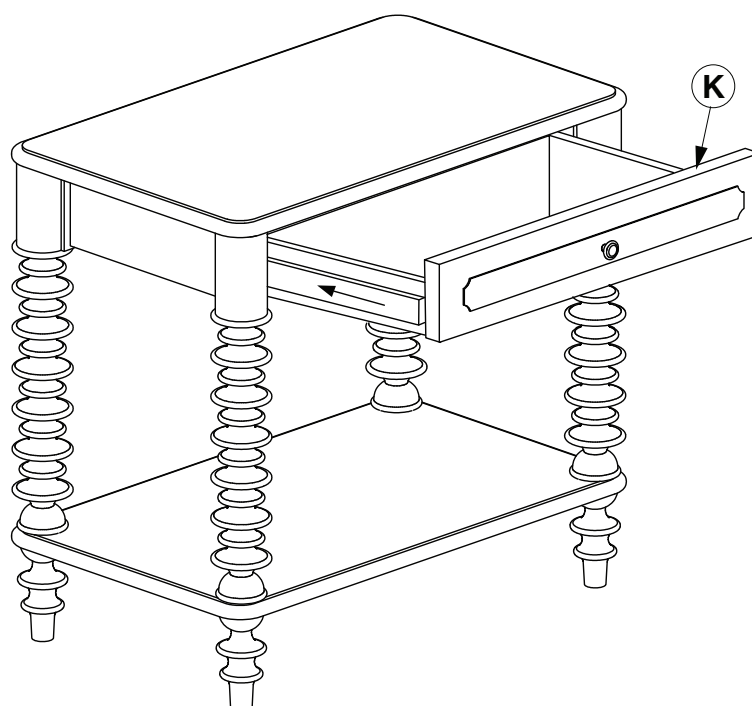

15 Fit and adjust the Drawer Face (K).

* NOTE: Before fitting the Wood Screws .
Loosen the JCBs on the Drawer Face if
the face needs alignment .

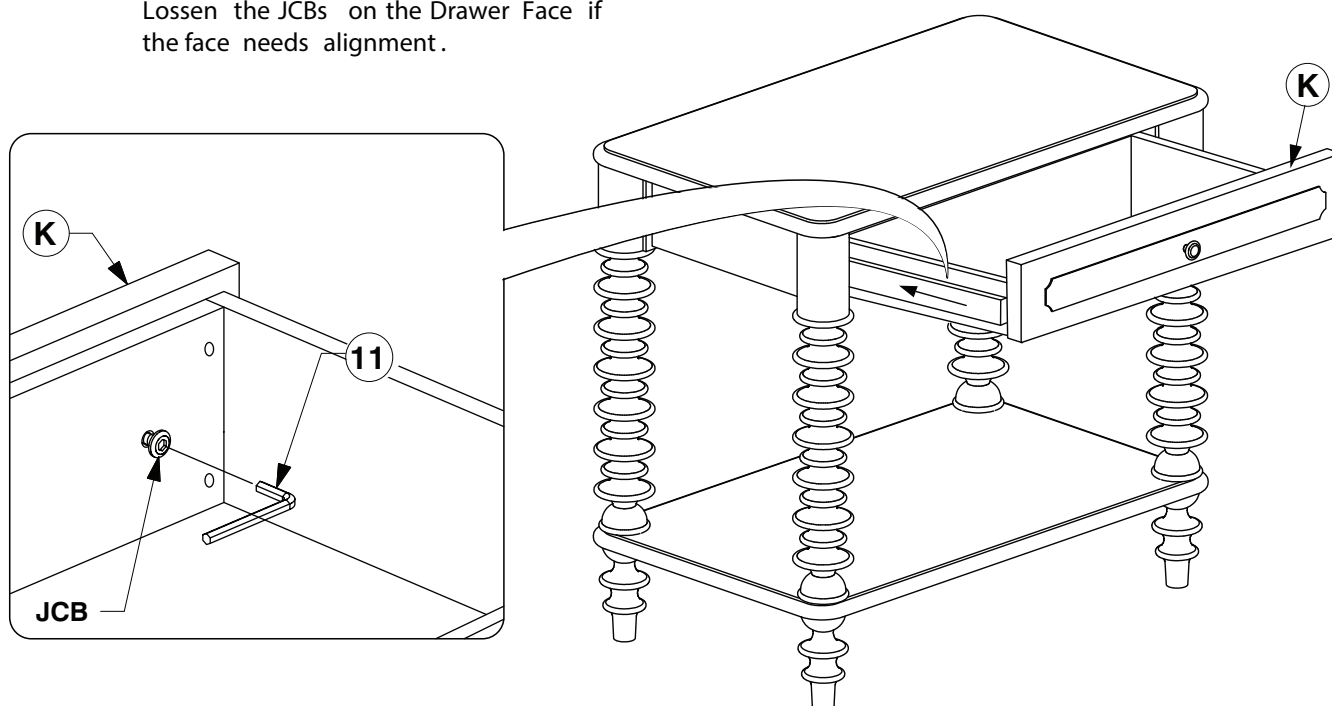


9029 1D Night Stand

Assembly Instructions

WI-0326


- 16** After the Drawer Face (K) are aligned, secure with wood screw.

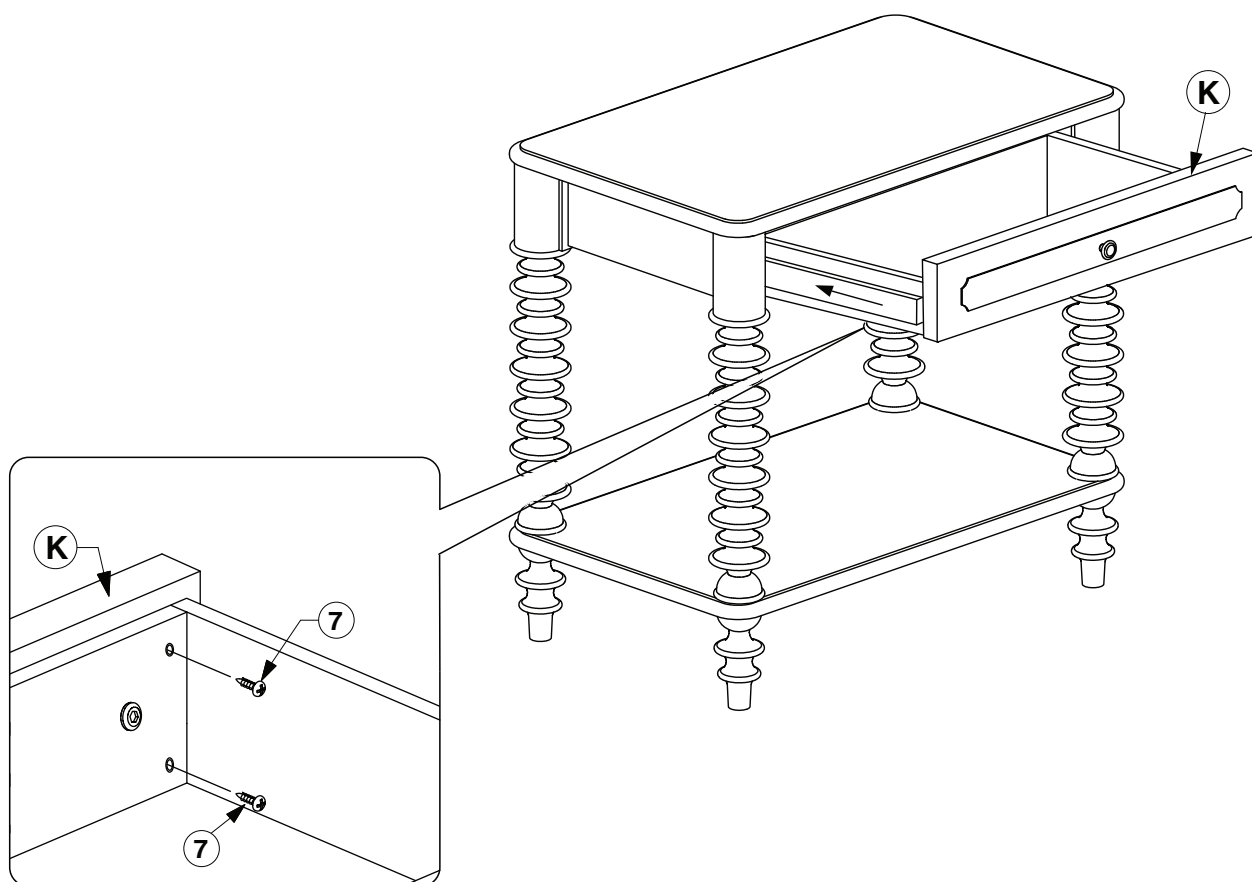

9029 7 Drawer Dresser

Assembly Instructions


WI-0426

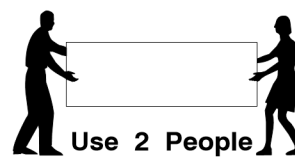

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

Parts in Box A:



A Top Panel x 1




B Front Upper Support Bar x 1



C Front Bottom Support Bar x 1



D Front Upper Drawer Support Bar x 1



E Front Bottom Drawer Support Bar x 1



F Rear Upper Support Bar x 2



G Rear Bottom Support Bar x 2




H Center Post x 1



J Back Panel x 3

Lower Drawers



N Drawer Face x 4



O Drawer Back x 4




P Drawer Bottom x 4




Q Drawer Rail x 4

Upper Drawers



K Drawer Face x 3



L Drawer Back x 3



M Drawer Bottom x 3


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

1 Parts List


Parts in Box B:

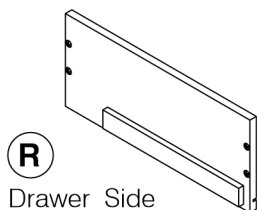


R
Drawer Side
(Left Hand) x 7

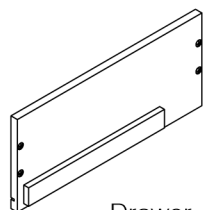


S
Drawer Side
(Right Hand) x 7

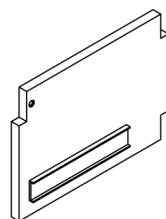


V
Center Panel
(Upper) x 2

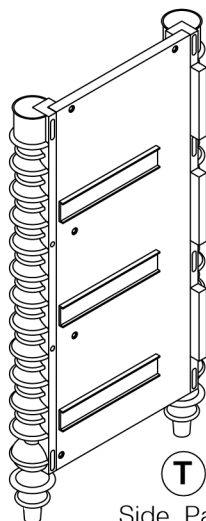

T
Side Panel
(Left Hand) x 1

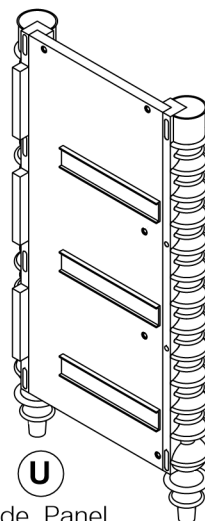

U
Side Panel
(Right Hand) x 1

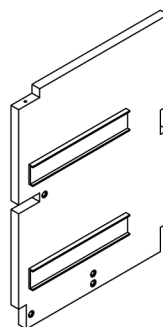

W
Center Panel
(Lower) x 1


2 Hardware List



1 M6 x
15mm JCB x 28




2 M6 x
40mm JCB x 12



3 M6 x
50mm JCB x 2



4 M6 JNC
Nut x 4




5 Adjustable
Foot x 1




6 'L' Bracket
(5005-3) x 16



7 Wood Screw
(M4 x 20mm) x 28



8 Wood Screw
(M4 x 25mm) x 64



9 M4 x 32mm
Wood Screw x 30



10 CSK Cap Wood Screw
(M6 x 60mm) x 9




11 Handle
(9029) x 7




12 M4 x 22mm
Wood Screw
x 7



13 M6 x 25mm
Wood Dowel x 16



14 M8 x 30mm
Wood Dowel x 4



15 Long Allen Key x 1


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

③ Assemble the Upper Drawers.


STEP 3.1

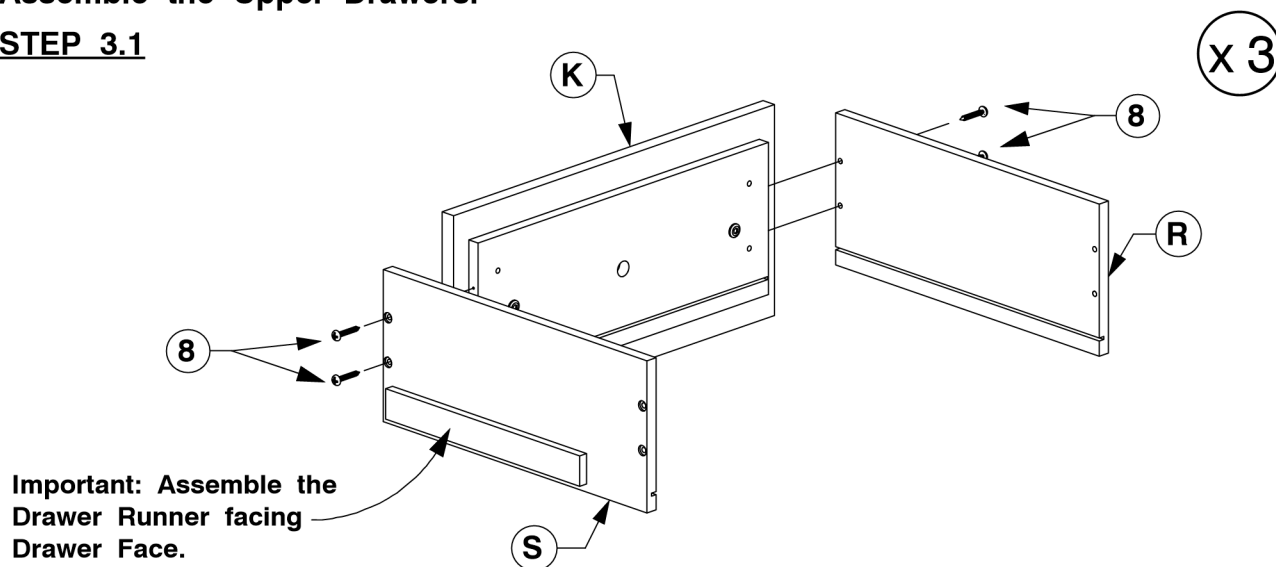

STEP 3.2

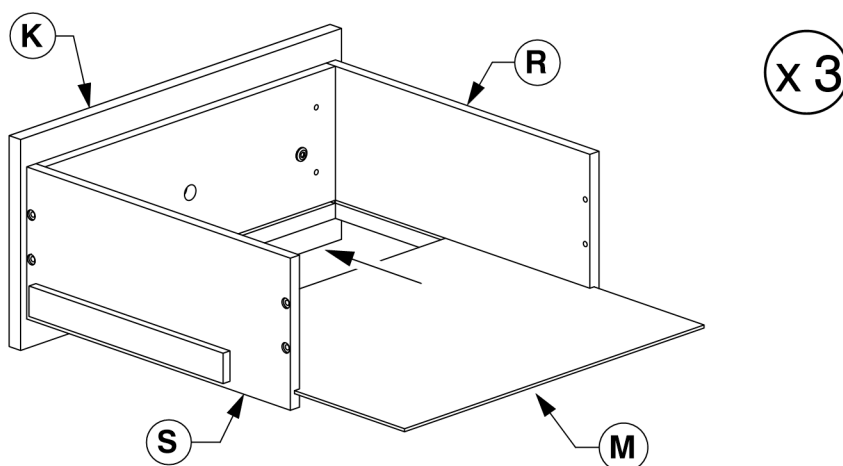

STEP 3.3

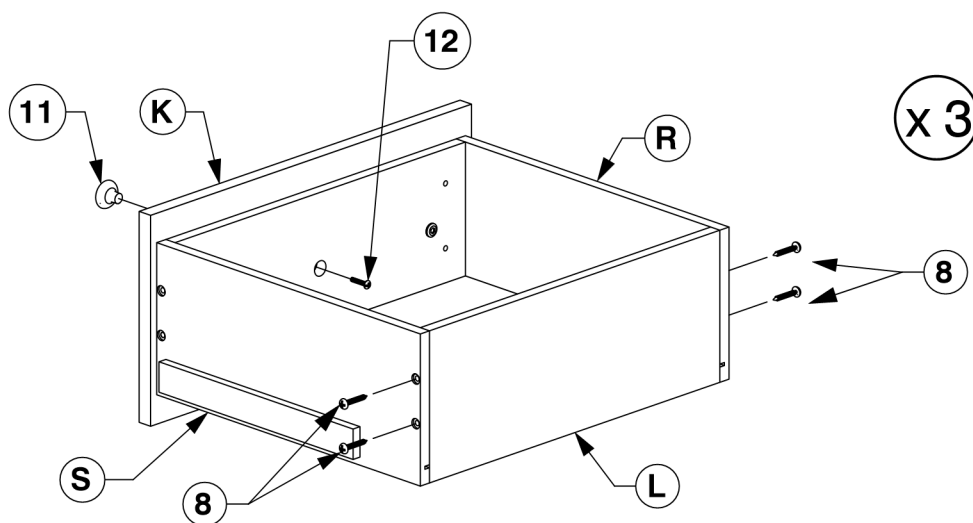


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

3 Assemble the Lower Drawers.


STEP 3.4

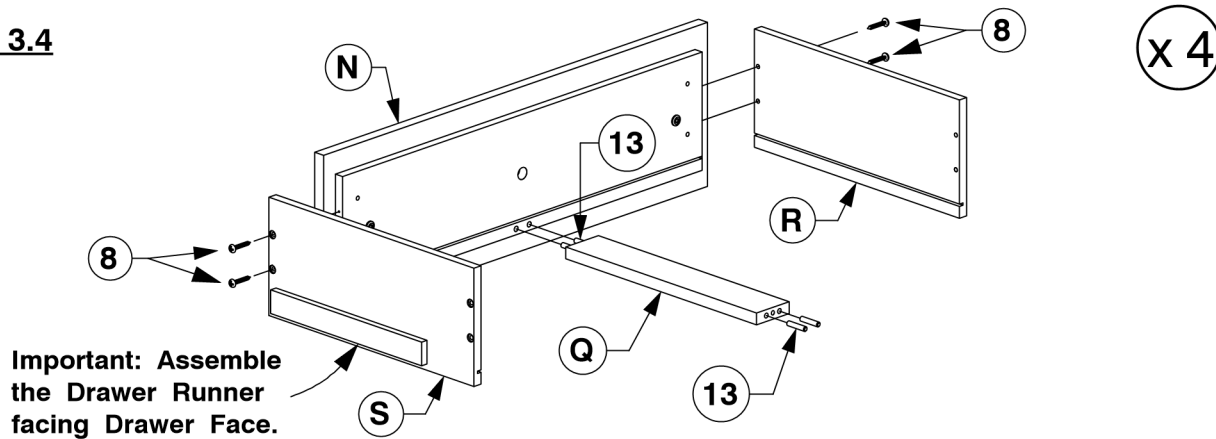


STEP 3.5

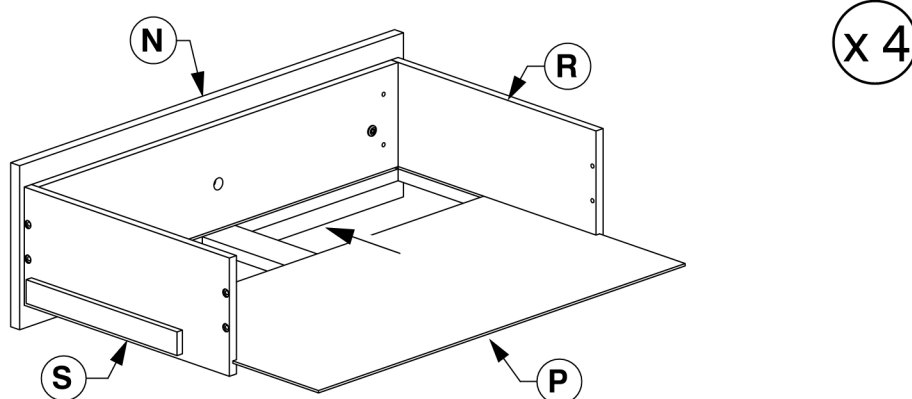

STEP 3.6

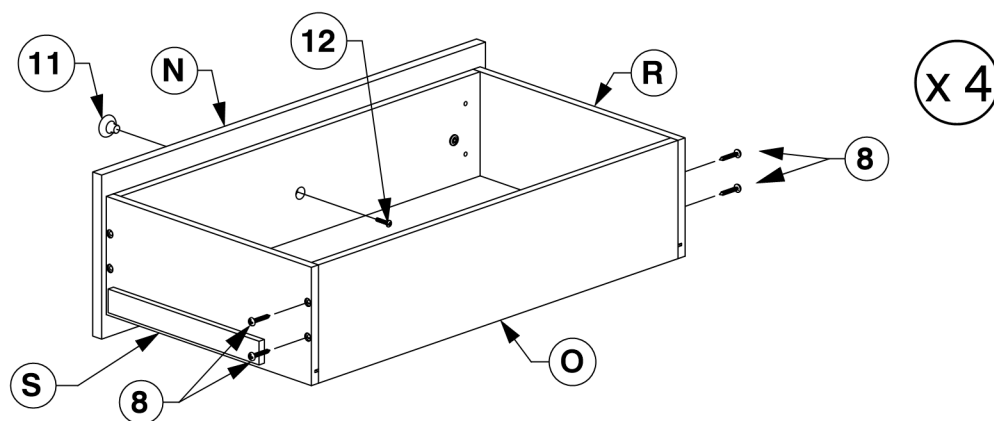

STEP 3.7

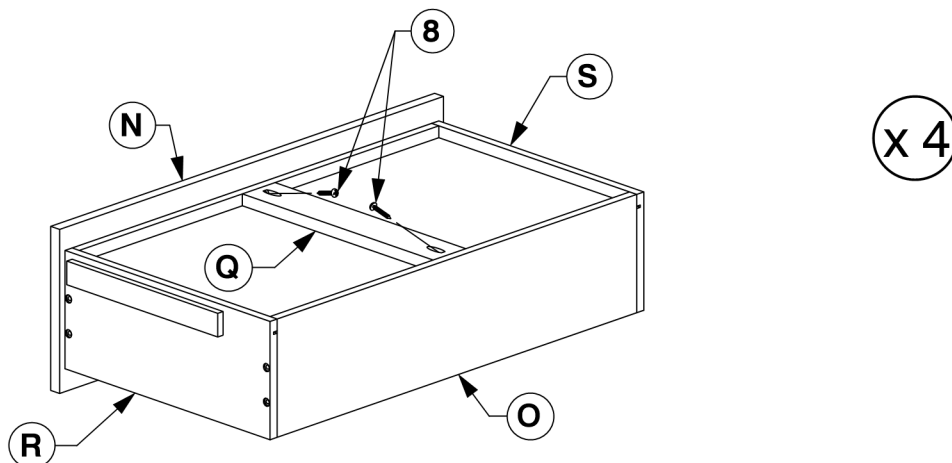


9029 7 Drawer Dresser


Assembly Instructions

WI-0426


4 Fit the 'L' Bracket to the Top Panel (A).

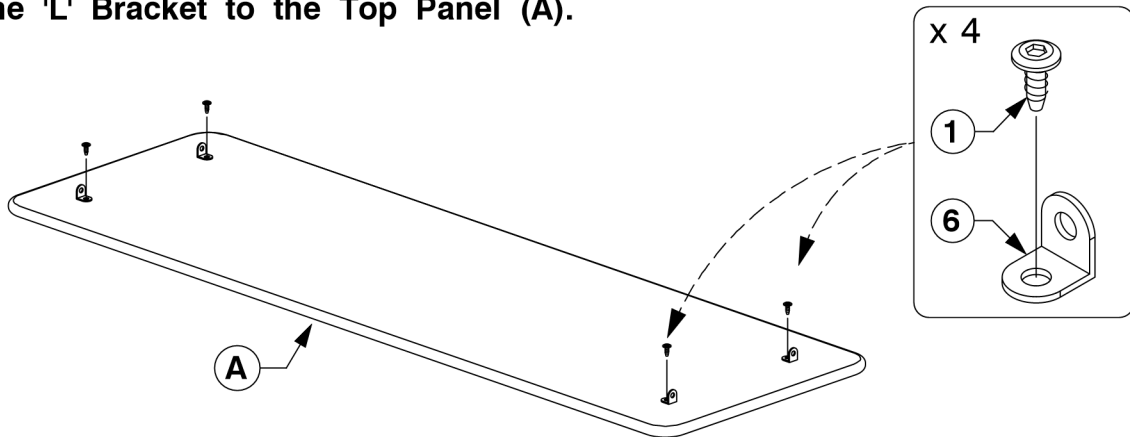

5 Attach 'L' Bracket (6) to the Upper and Lower Center Panels (V & W) using JNC (4) and Bolts (1).

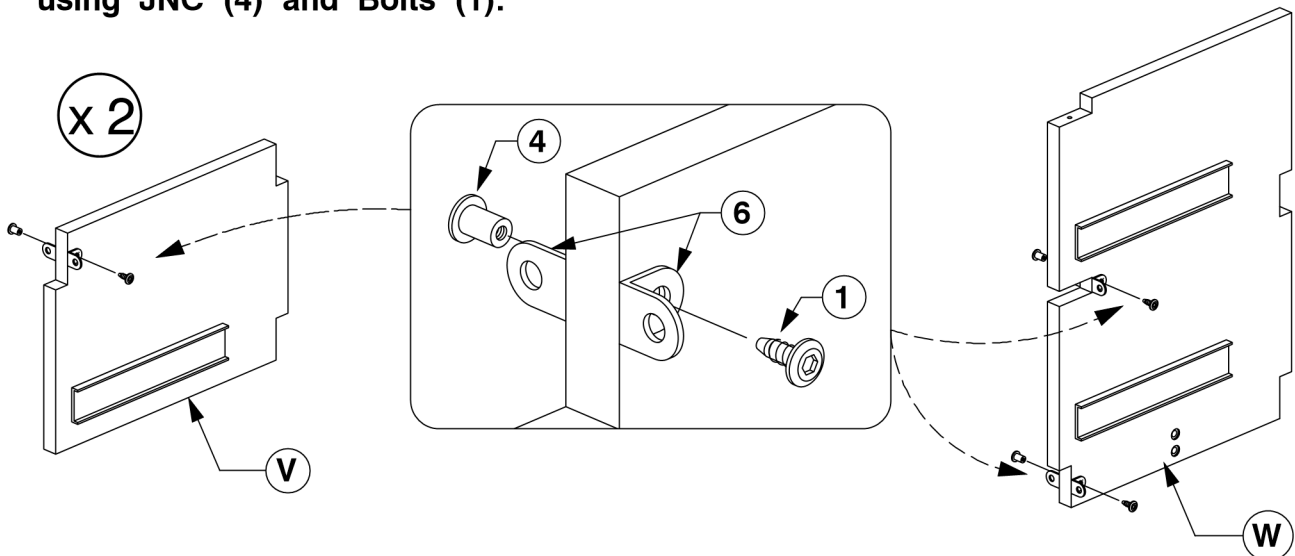

6 Insert Dowels (14) into the ends of Support Bars (D & E). Then attach Brackets (6) to the Support Bars using Bolts (1).


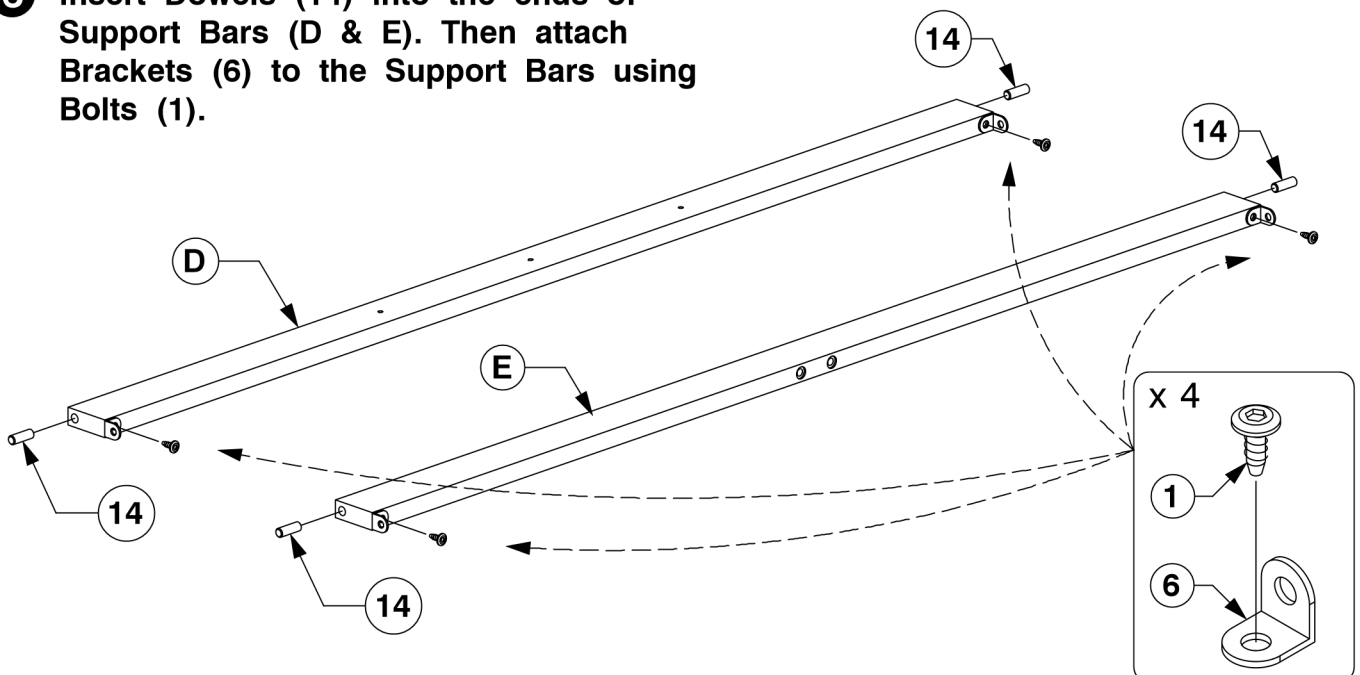


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 7** Fit the Right Side Panel (U) to the Top Panel (A).

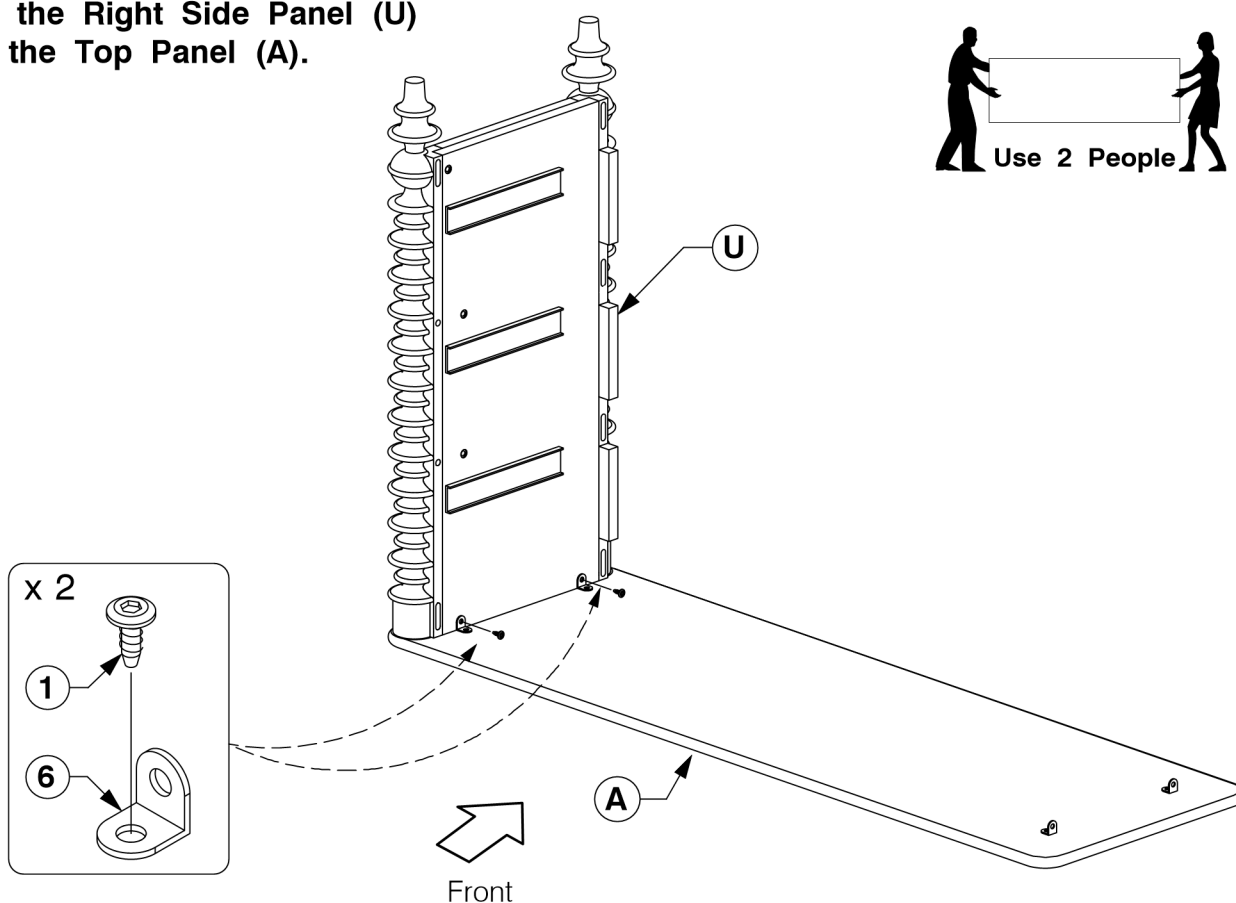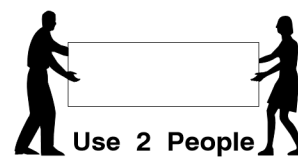


- 8** Assemble the Support Bar (B & F) to the Right Side Panel (U).

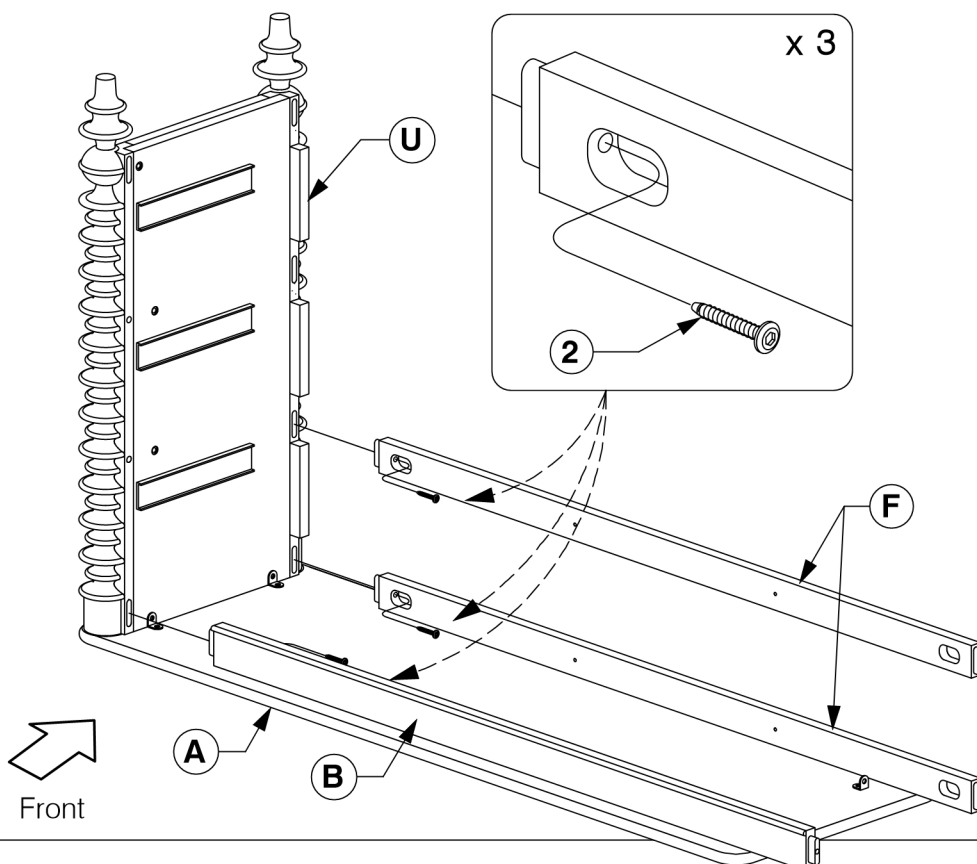


Step 1

Use the ball end of Allen key to start the bolt.

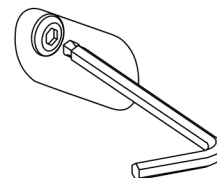

Step 2

Tighten fully with the straight end.

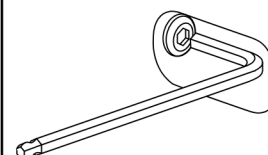


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 9** Assemble the Center Panel (V) to Support Bar (B & F).

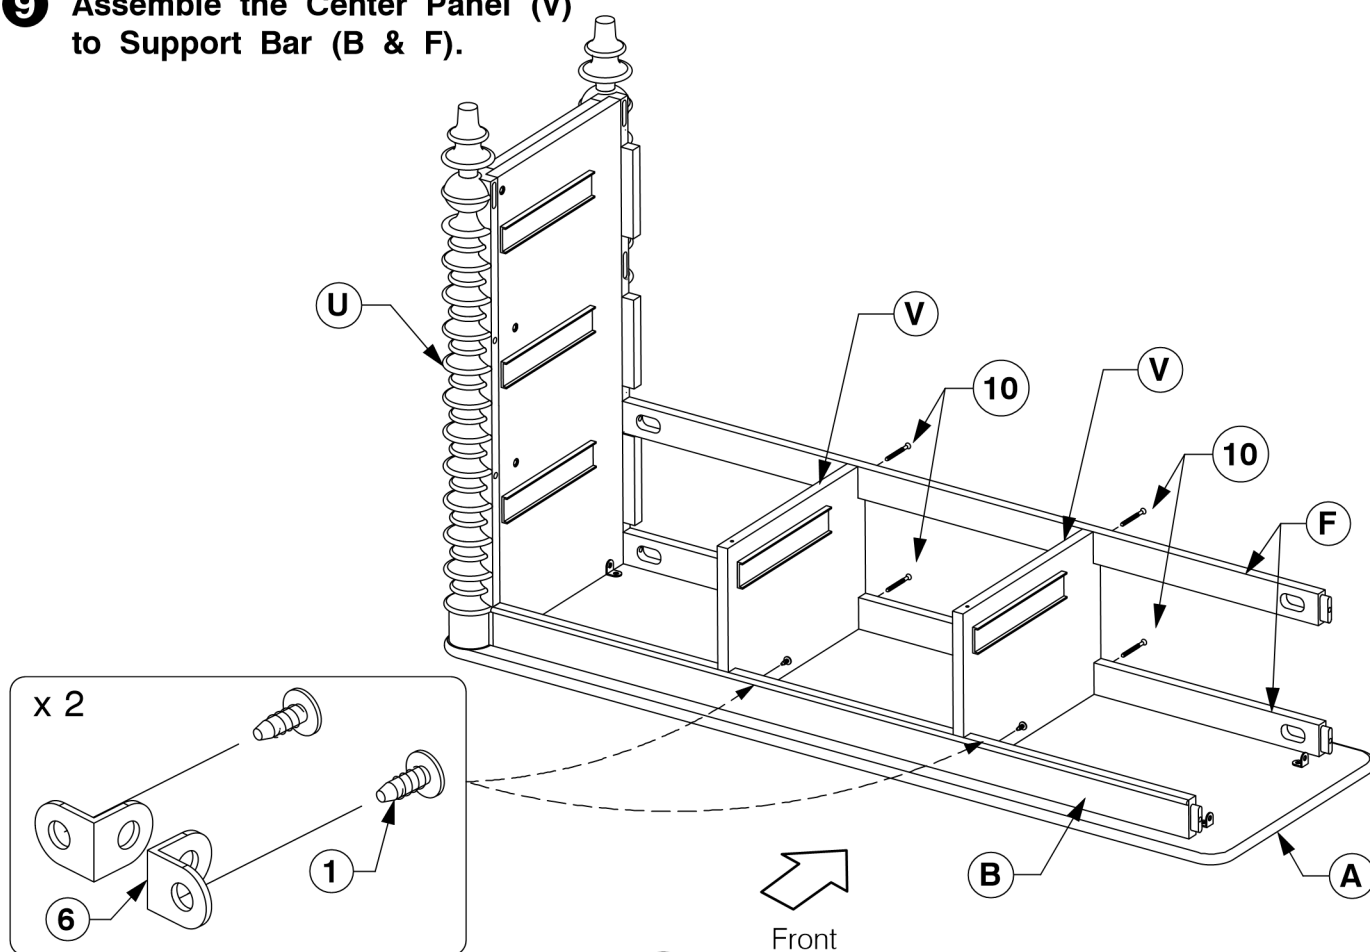

- 10** Attach Support Bars (D & E) to the Right Side Panel (U). Then tighten using Bolts.

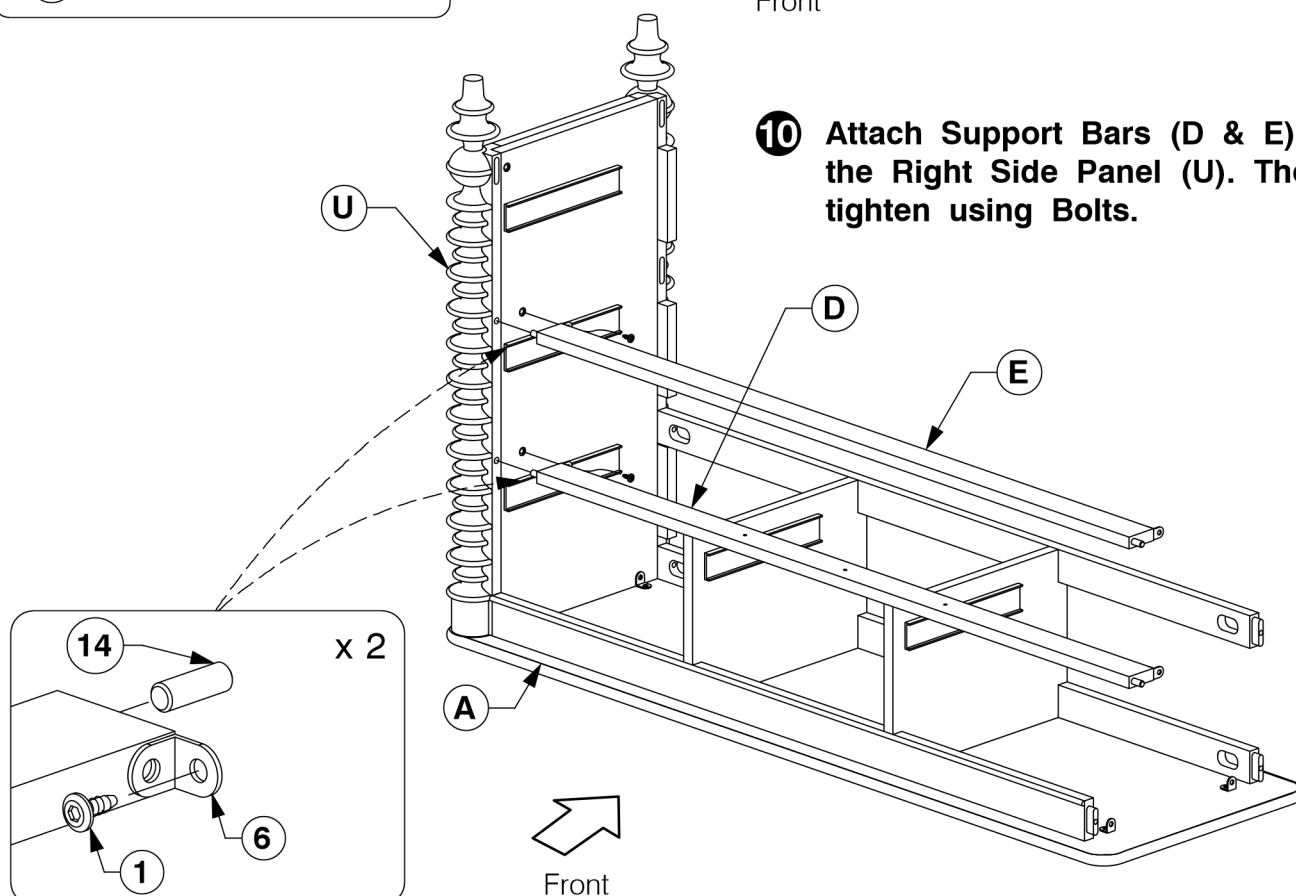


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 11** Assemble the Center Panel (W) to Support Bar (D, E, & F).

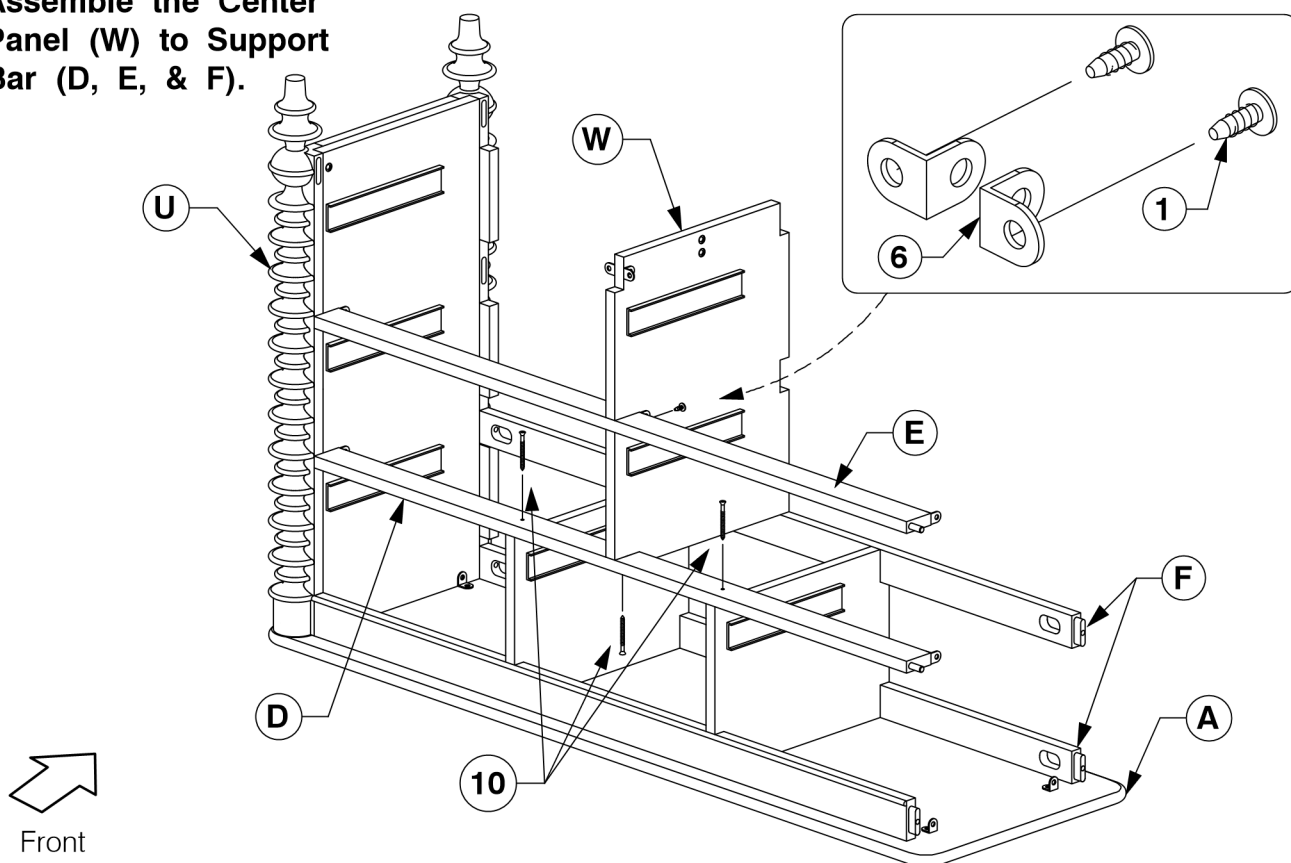


- 12** Fit the Support Bars (G) to the Center Panel (W).

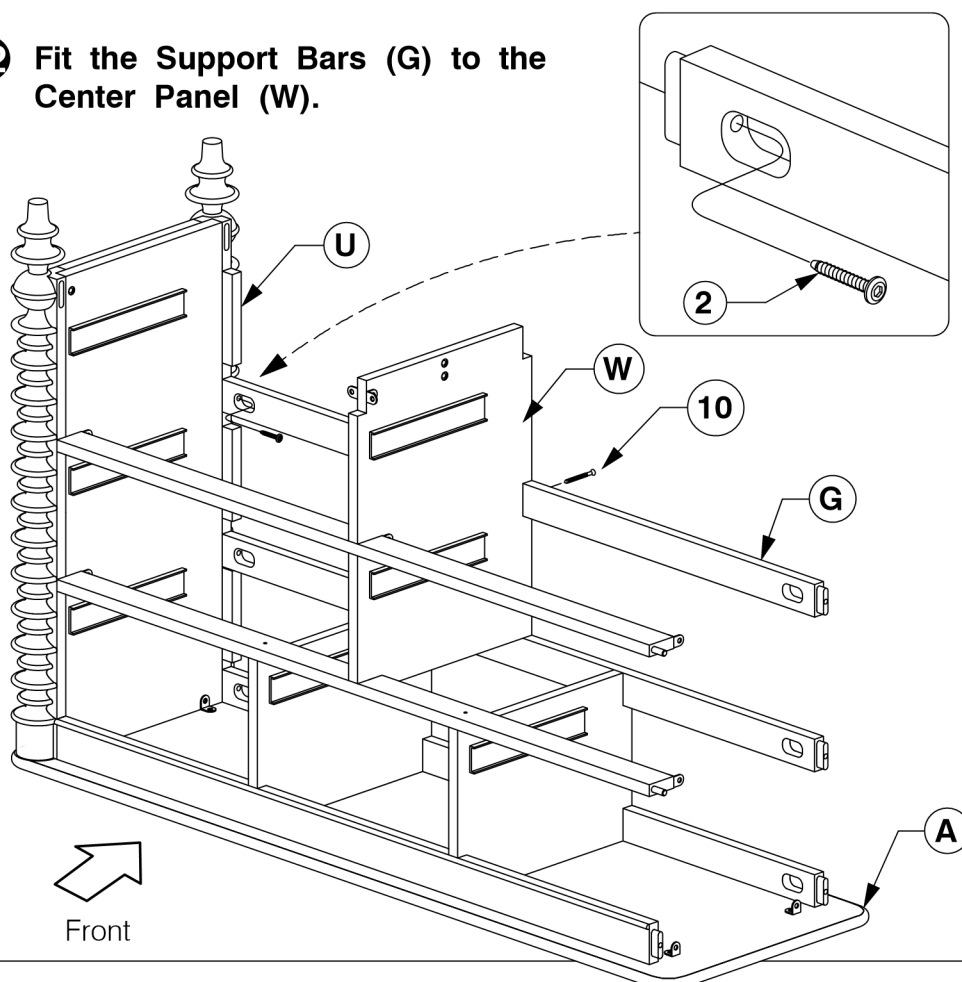


Step 1

Use the ball end of Allen key to start the bolt.

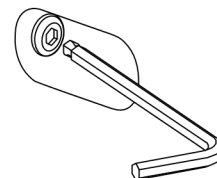

Step 2

Tighten fully with the straight end.

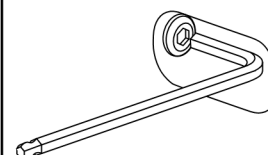


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

- 13** Attach the Support Bar (C & G) to the Right Side Panel (U) & Center Panel (W).

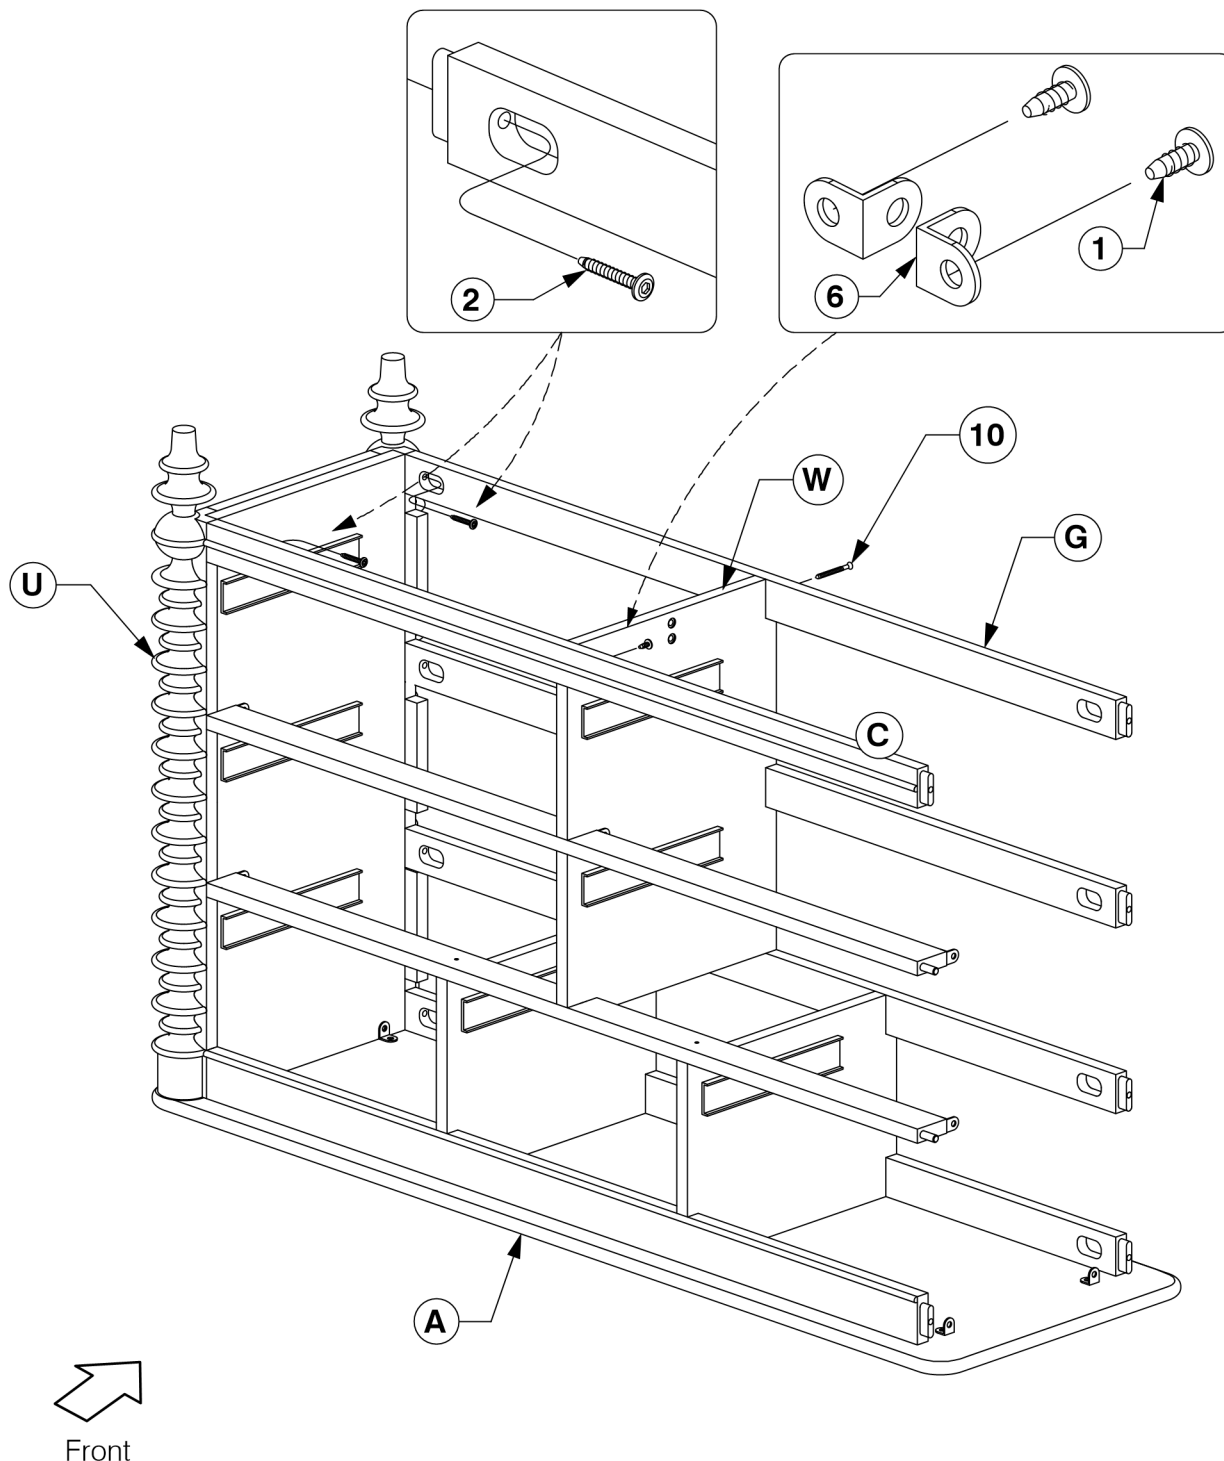


Step 1

Use the ***ball end*** of Allen key to start the bolt.

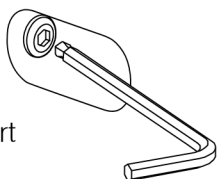

Step 2

Tighten fully with the ***straight end***.


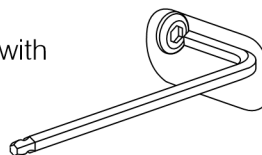


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

- 14** Assemble the Left Side Panel (T) to the Support Bars (B, C, D, E, F & G).

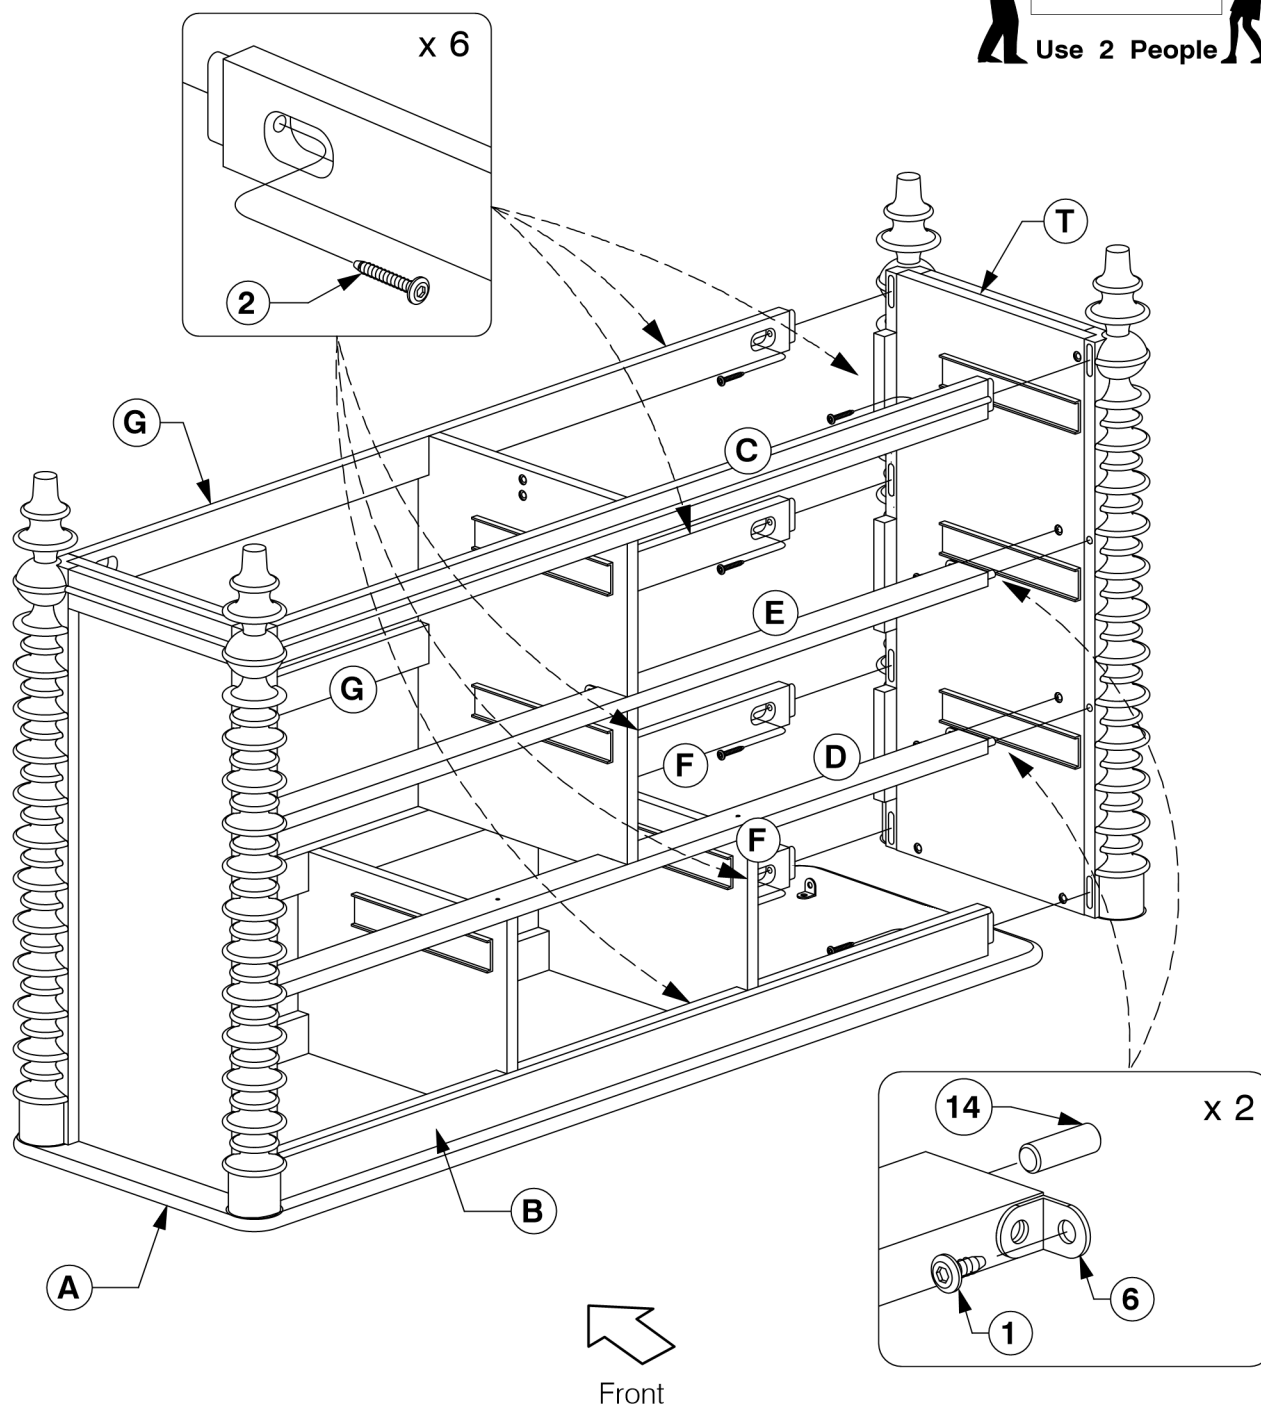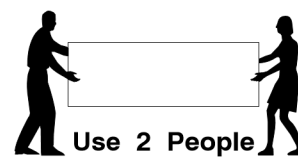


Step 1

Use the **ball end** of Allen key to start the bolt.

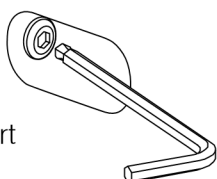

Step 2

Tighten fully with the **straight end**.

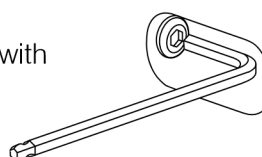


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 15** Tighten the bolts as shown.

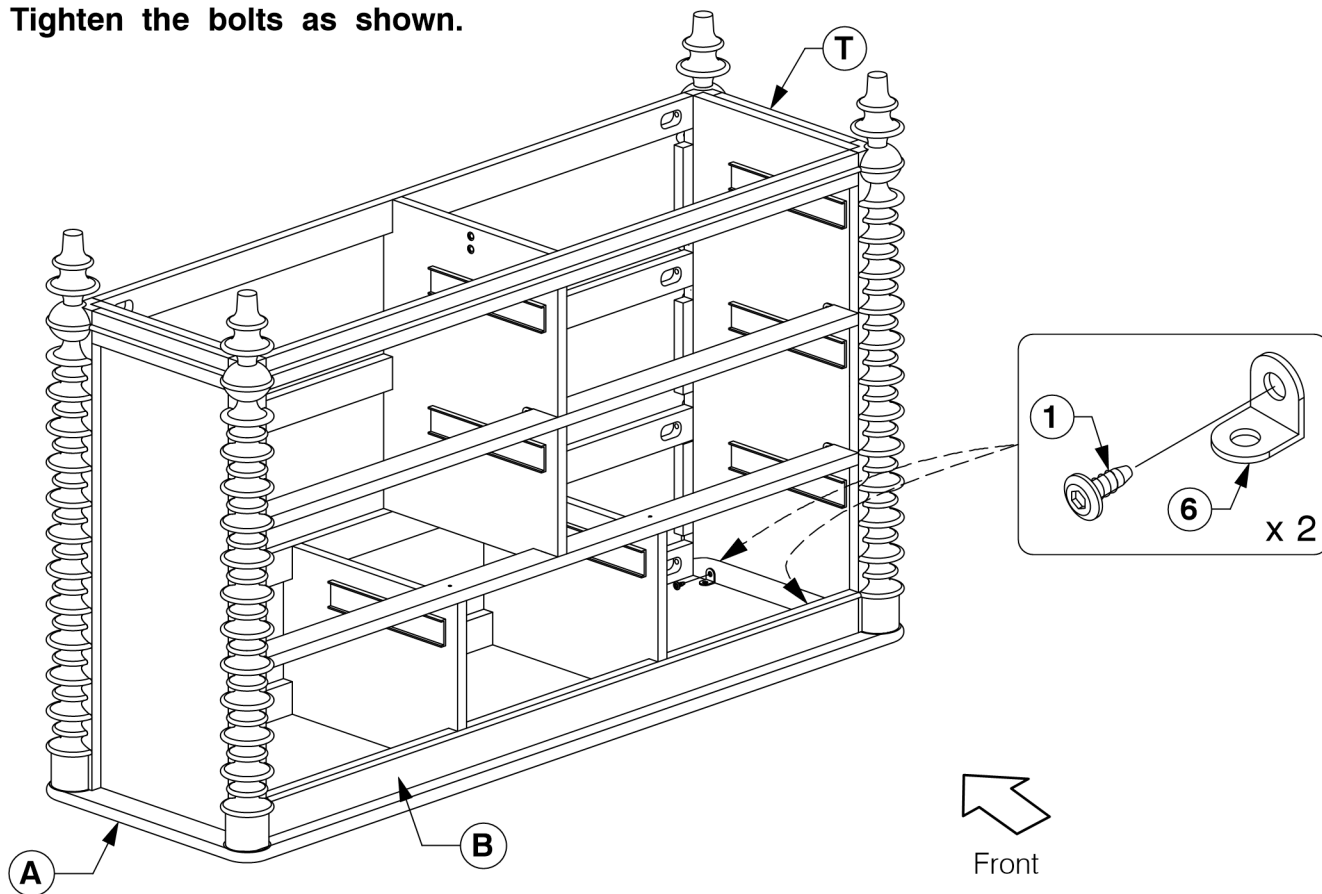

- 16** Fix the Adjustable foot to the bottom of the Center Post (H).
Fit the Center Post (H) to the Center Panel (W).

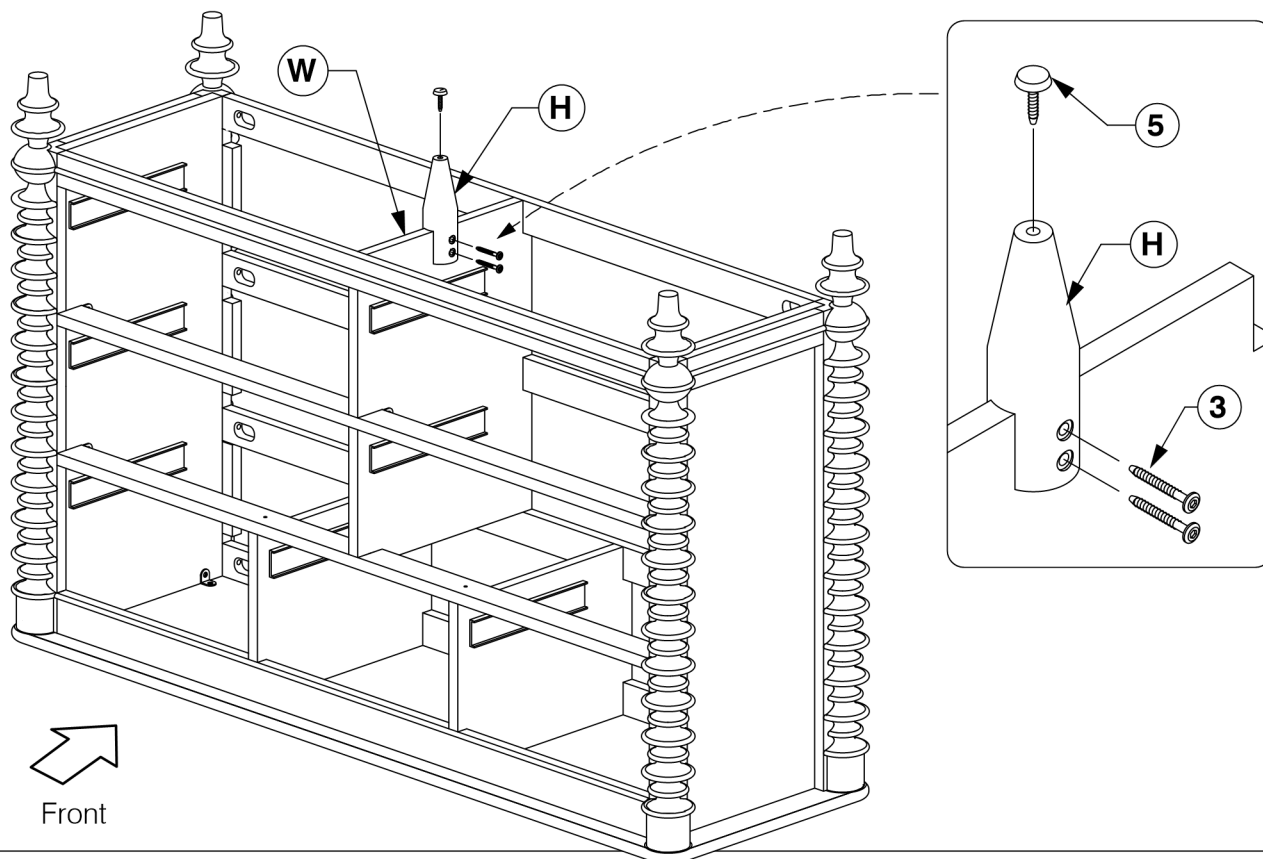


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 17** Attached the Back Panel (J) to the back of the frame.

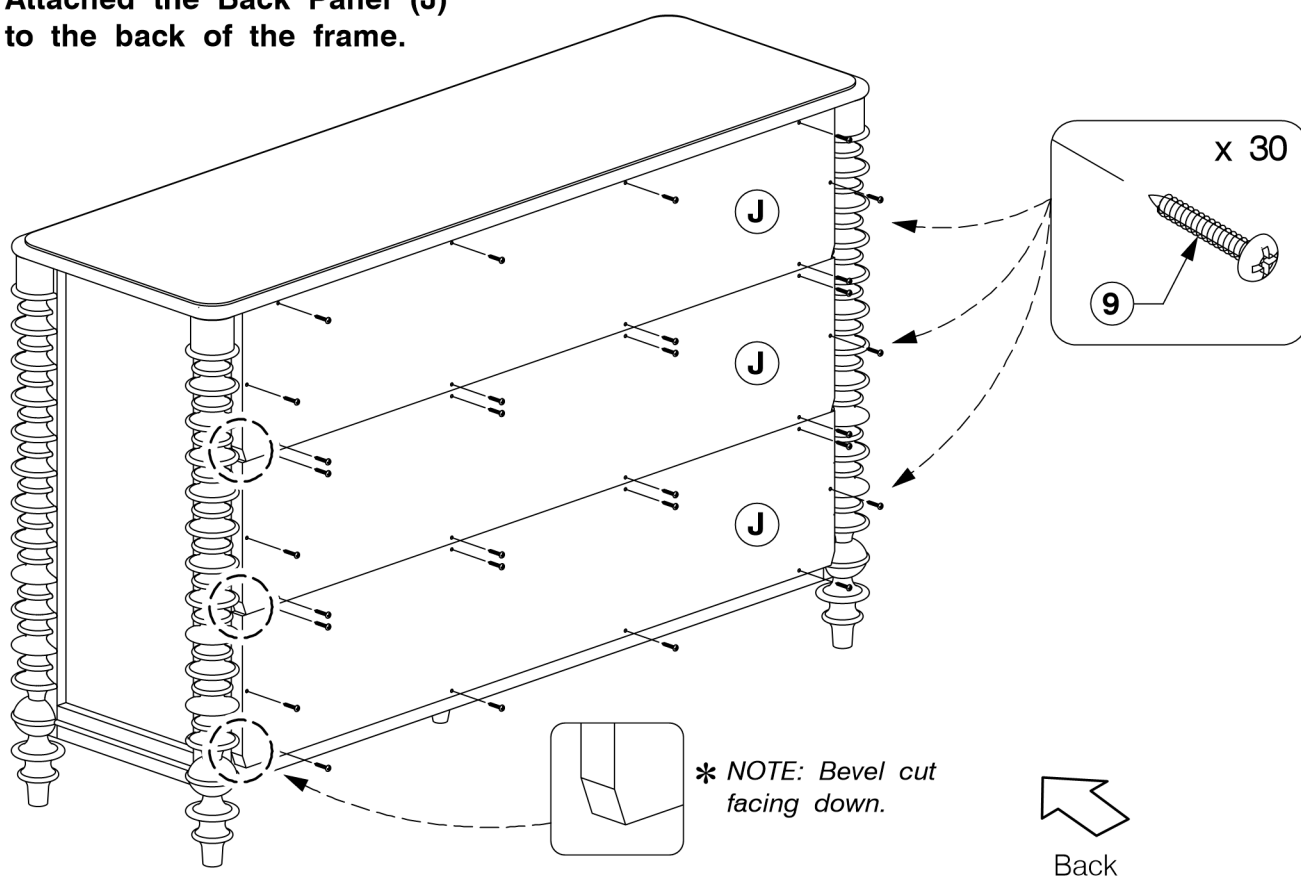

- 18** Fit the Drawer Box (K & N) to the casegood body.

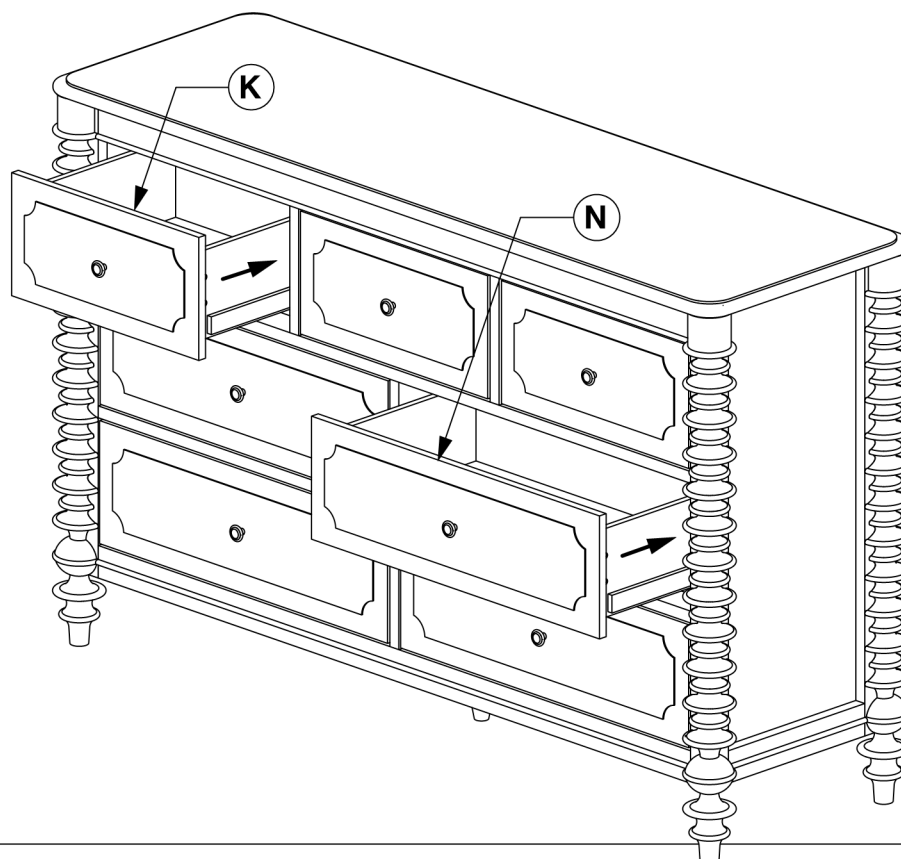


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

19 Adjust the Drawer Face (K & N).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.

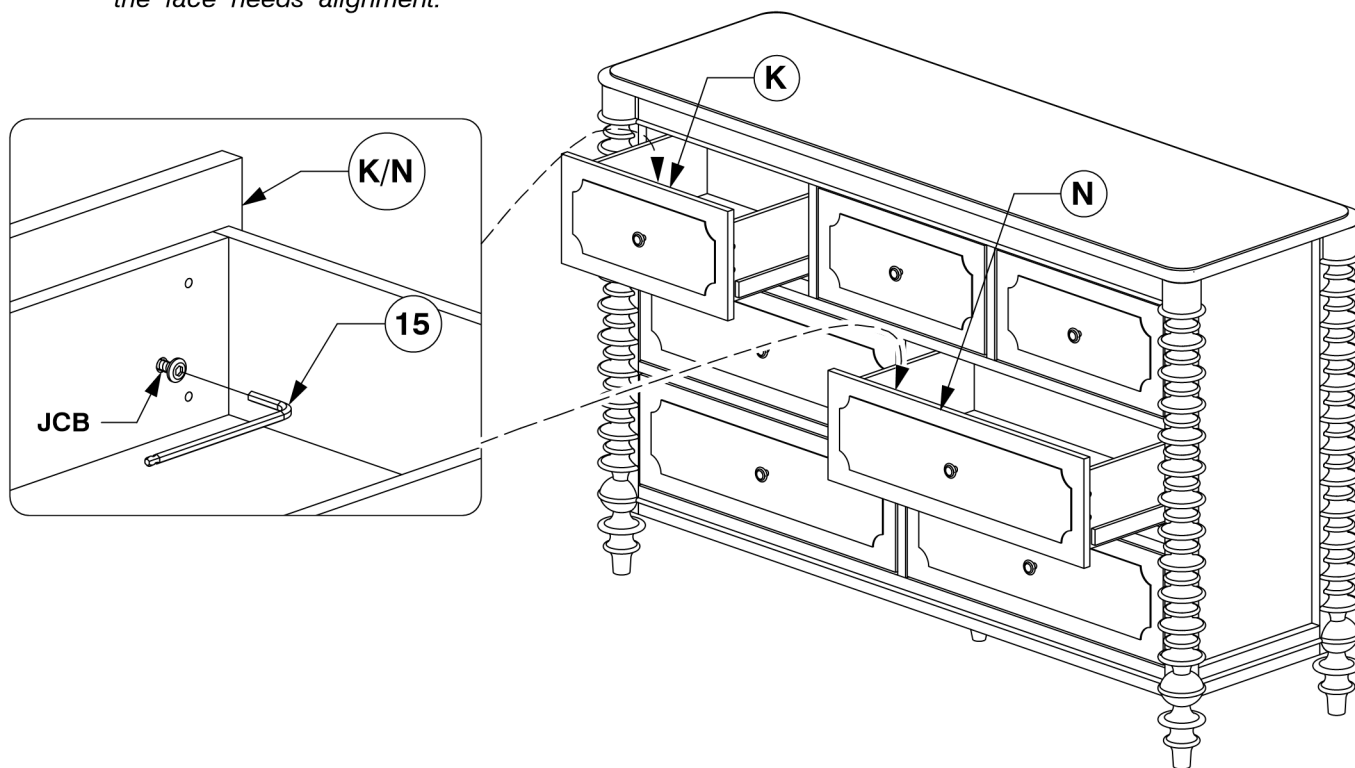



20 After the Drawer Faces (K & N) are aligned, secure with wood screws.

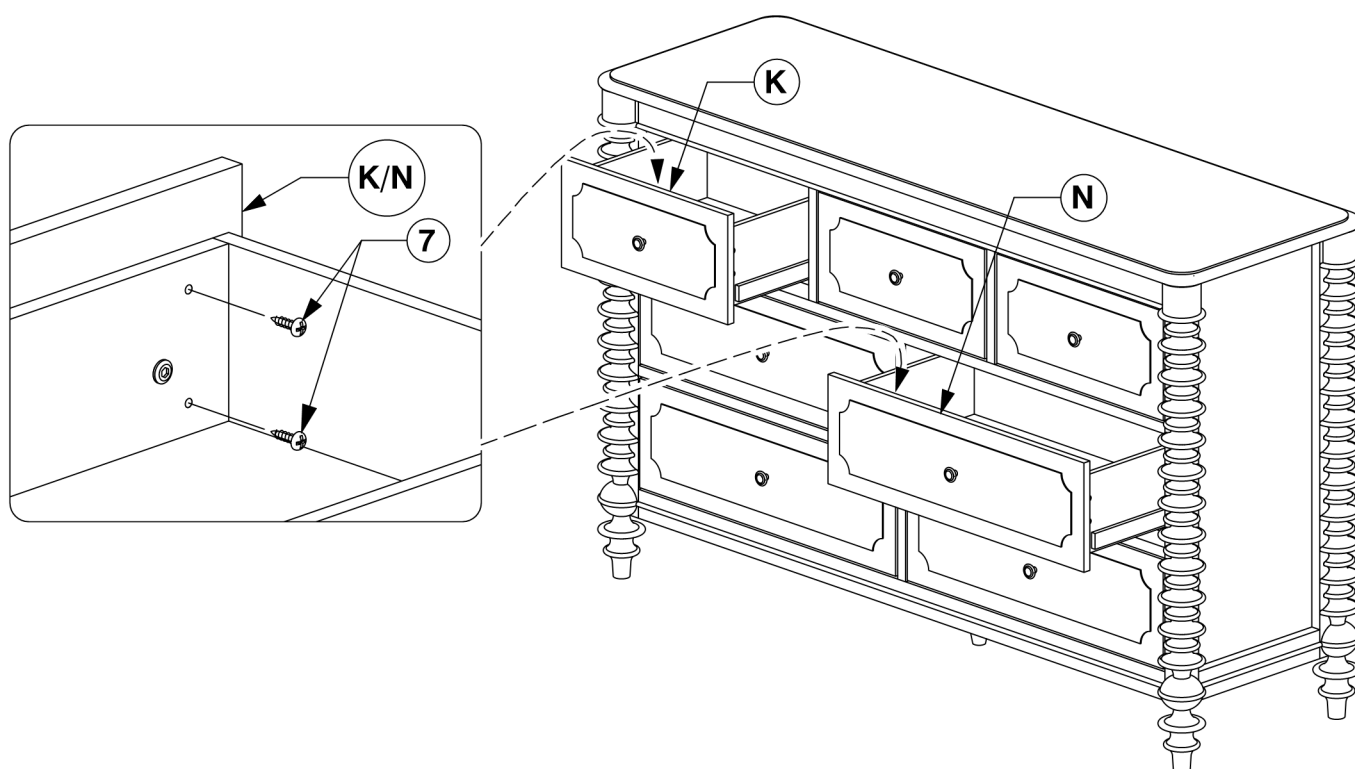

9029 3D Chest

Assembly Instructions


WI-0426

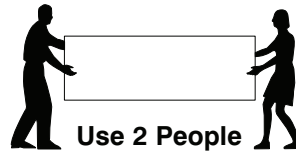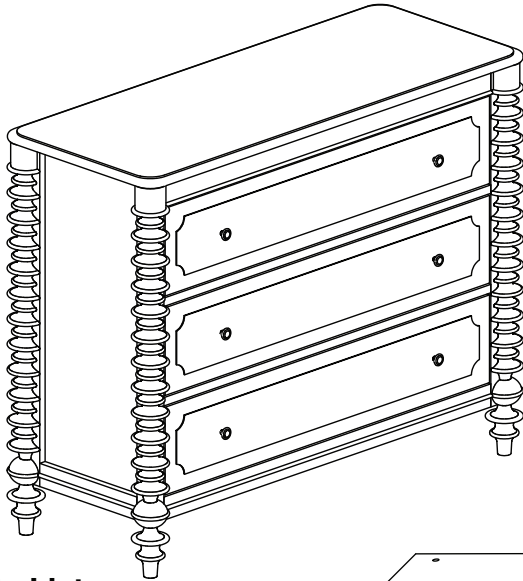


Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List


Parts in Box A:

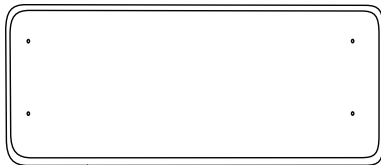


A Top Panel x 1

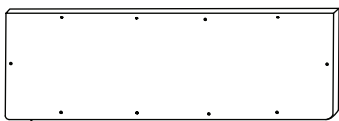


B Back Panel x 3




C Bottom Panel x 1




D Bottom Support x 4




E Front Bottom Support Bar x 1




F Front Support Bar x 2




G Front Upper Support Bar x 1




H Rear Support Bar x 3



J Rear Bottom Support Bar x 1




K Drawer Back x 3

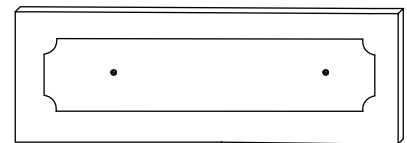

L Drawer Face x 3




M Drawer Bottom x 3




N Drawer Rail x 6


Parts in Box B:

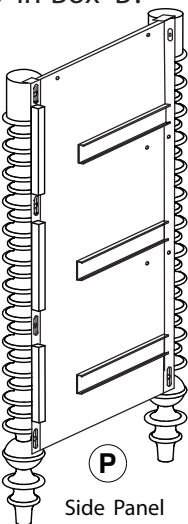


P Side Panel (Right Hand) x 1



R Drawer Side (Left Hand) x 3

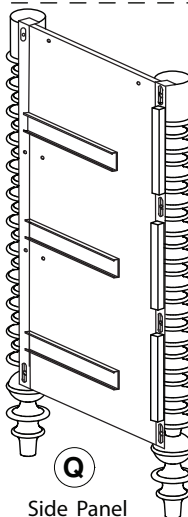

Q Side Panel (Left Hand) x 1







S Drawer Side (Right Hand) x 3

9029 3D Chest


Assembly Instructions

WI-0426

2 Hardware List

- | | | | | |
|--|---|--|---|---|
| 
1 M6 x 15mm
JCB x 16 | 
2 M6 x 40mm
JCB x 16 | 
3 M6 x 60mm JCB
x 8 | 
4 'L' Bracket
(5005-3) x 8 | 
5 M8 x 30mm
Wood Dowel
x 4 |
| 
6 M6 x 25mm
Wood Dowel
x 24 | 
7 M4 x 20mm
Wood Screw x 18 | 
8 M4 x 25mm
Wood Screw x 36 | 
9 M4 x 32mm
Wood Screw x 30 | |
| 
10 Handle
(9029) x 6 | 
11 M4 x 22mm
Wood Screw x 6 | 
12 Allen Key
x 1 | | |

3 Assemble the Drawer Sides (R & S) and Drawer Rail (N) to the Drawer Face (L).

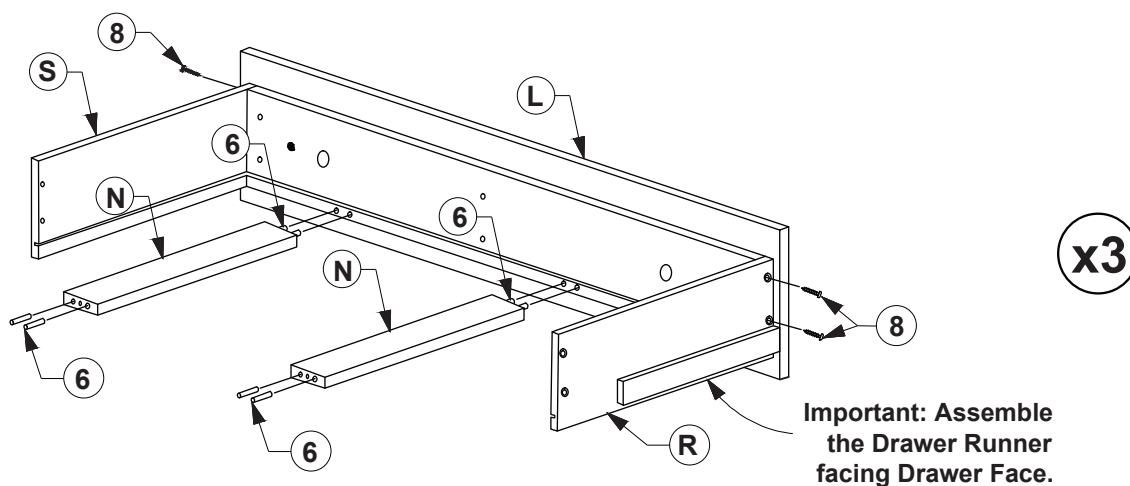


9029 3D Chest


Assembly Instructions

WI-0426


- 4** Slide the Drawer Bottom (M) into the groove on the Drawer Sides (R & S).

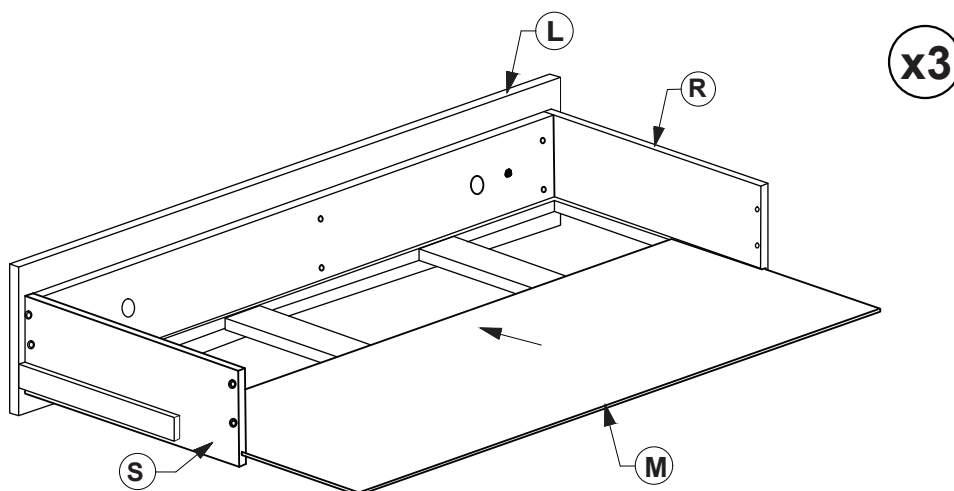

- 5** Assemble the Drawer Back (K) to the Drawer Sides (R & S). Fit the Handle to the Drawer Face (L).

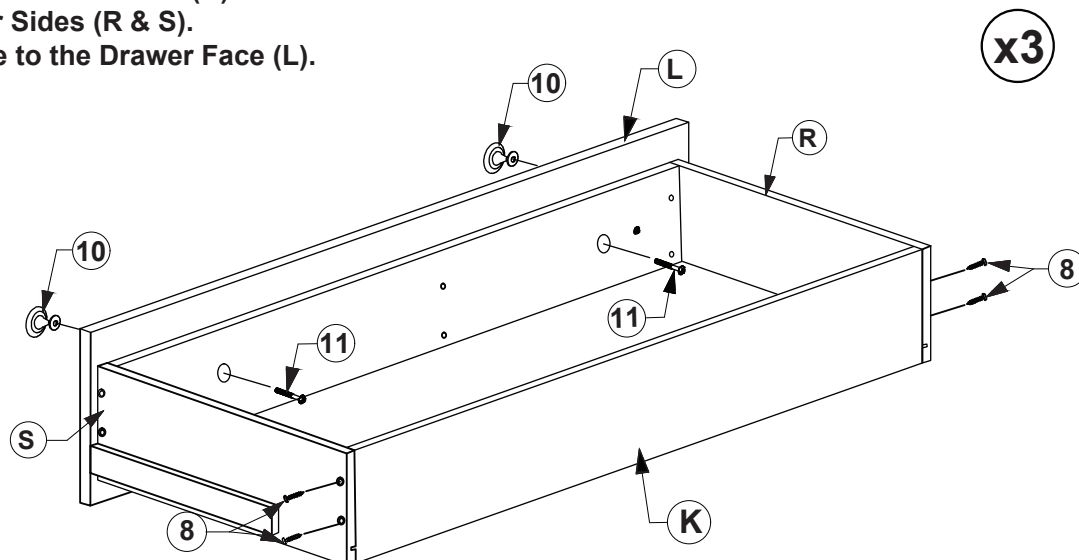

- 6** Turn the Drawer over to fit angled 25mm Wood screws (8) to the Drawer Rail (N).

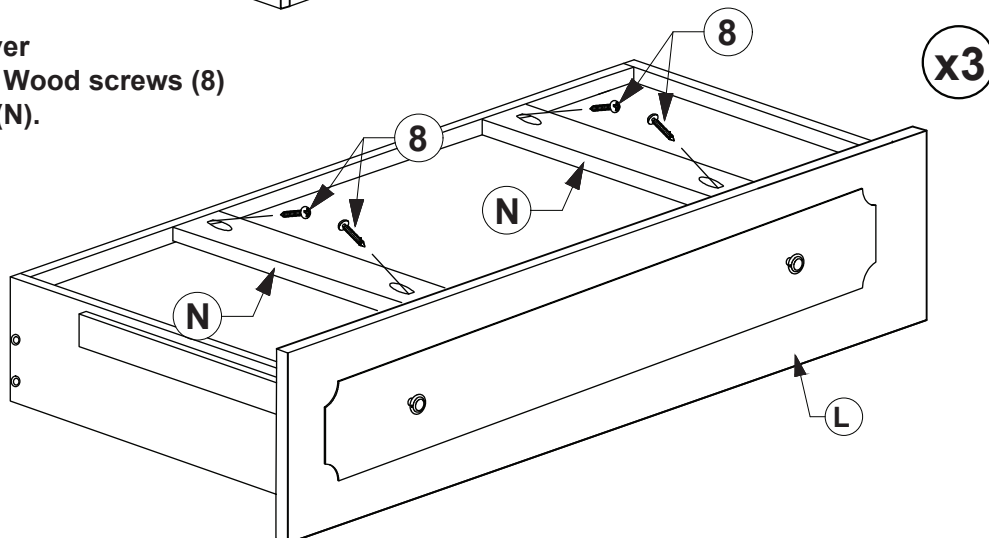


9029 3D Chest


Assembly Instructions

WI-0426

- 7** Fit the 'L' Bracket (4) to the Side Panel (P & Q).

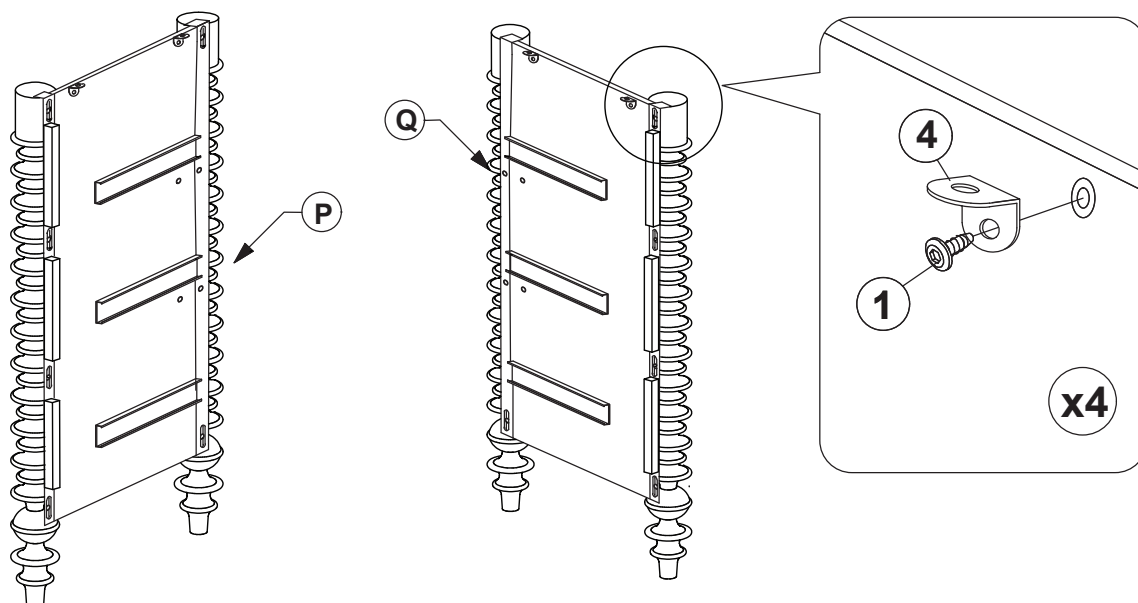

- 8** Fit the "L" Braket (4) and Wood Dowel (5) to the Front Support Bar (F).

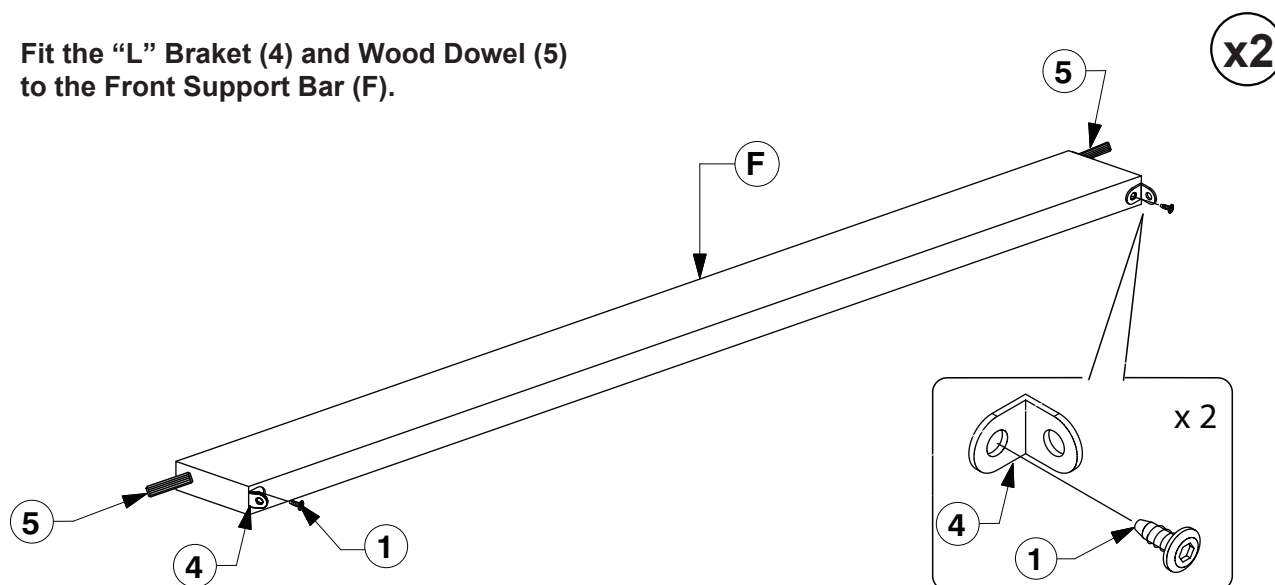


9029 3D Chest

Assembly Instructions





WI-0426

9 Assemble Support Bar (E, F, G, H & J) to the Side Panel (Q).

Step 1
Use the
ball end of
Allen key to start
the bolt.

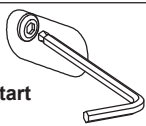


Step 2
Tighten fully with
the straight
end.


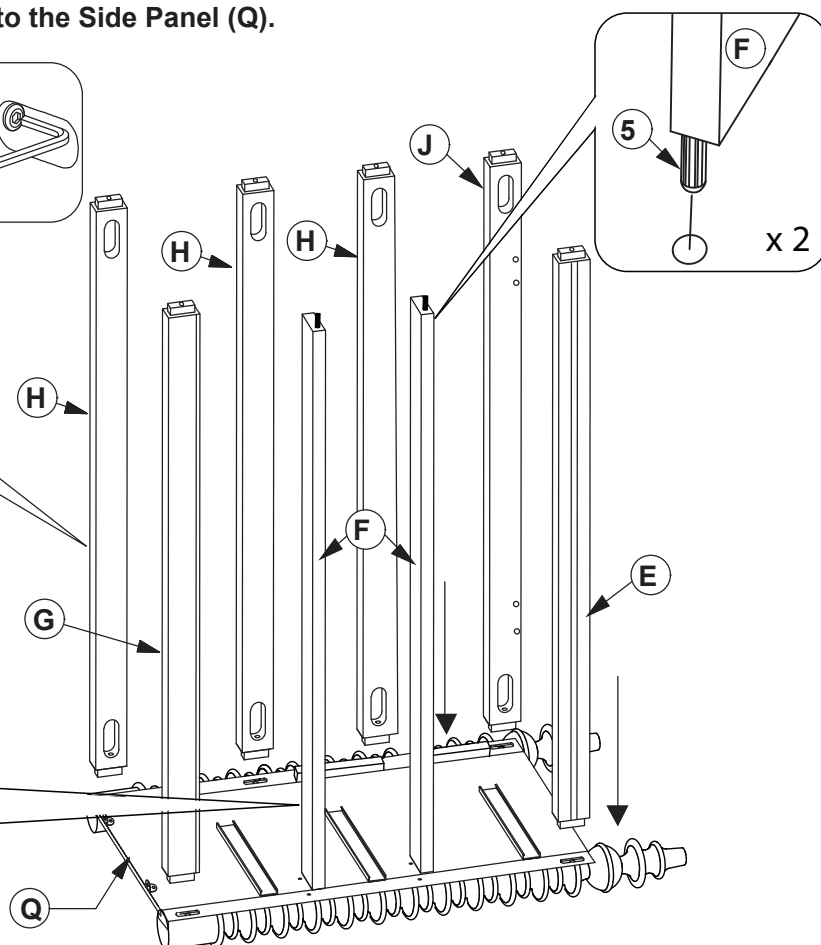
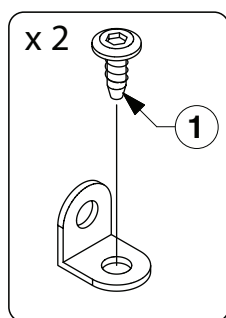
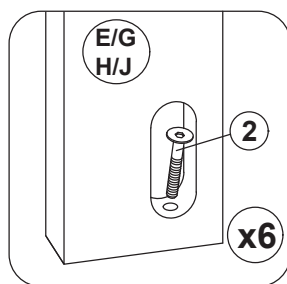



10 Fit the Side Panel (P) to the Support Bar (E, F, G, H & J).

Step 1
Use the
ball end of
Allen key to start
the bolt.

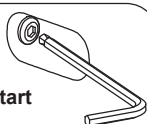

Step 2
Tighten fully with
the straight
end.

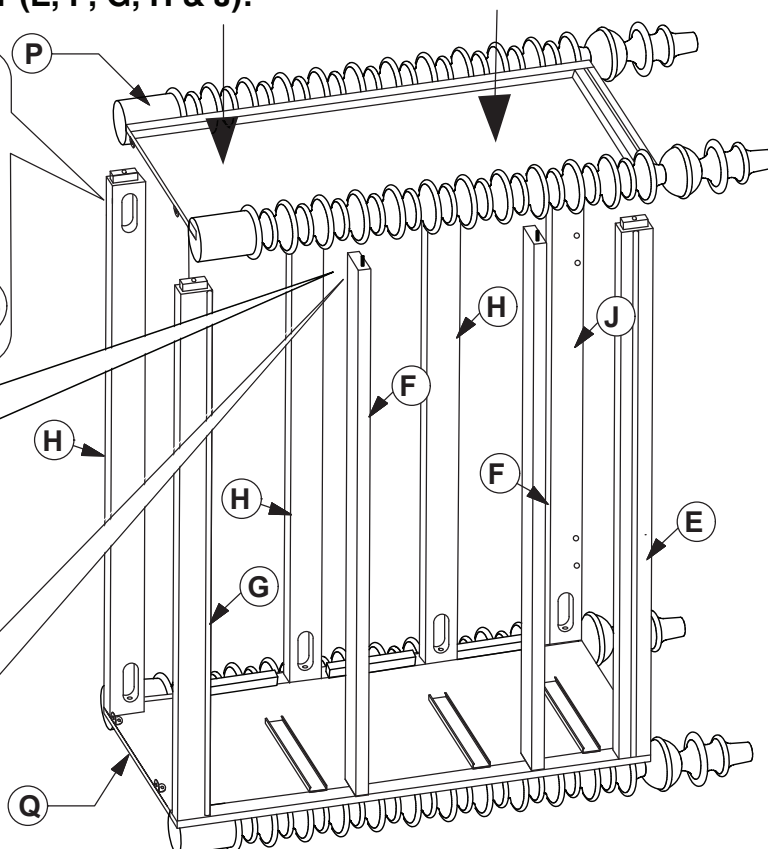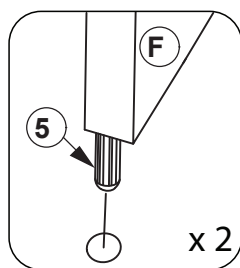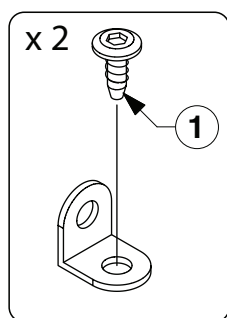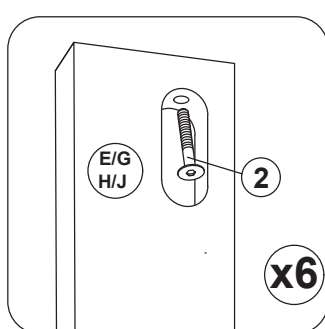


9029 3D Chest


Assembly Instructions

WI-0426

- 11** Assemble the Side Panel (P & Q) to the Top Panel (A).

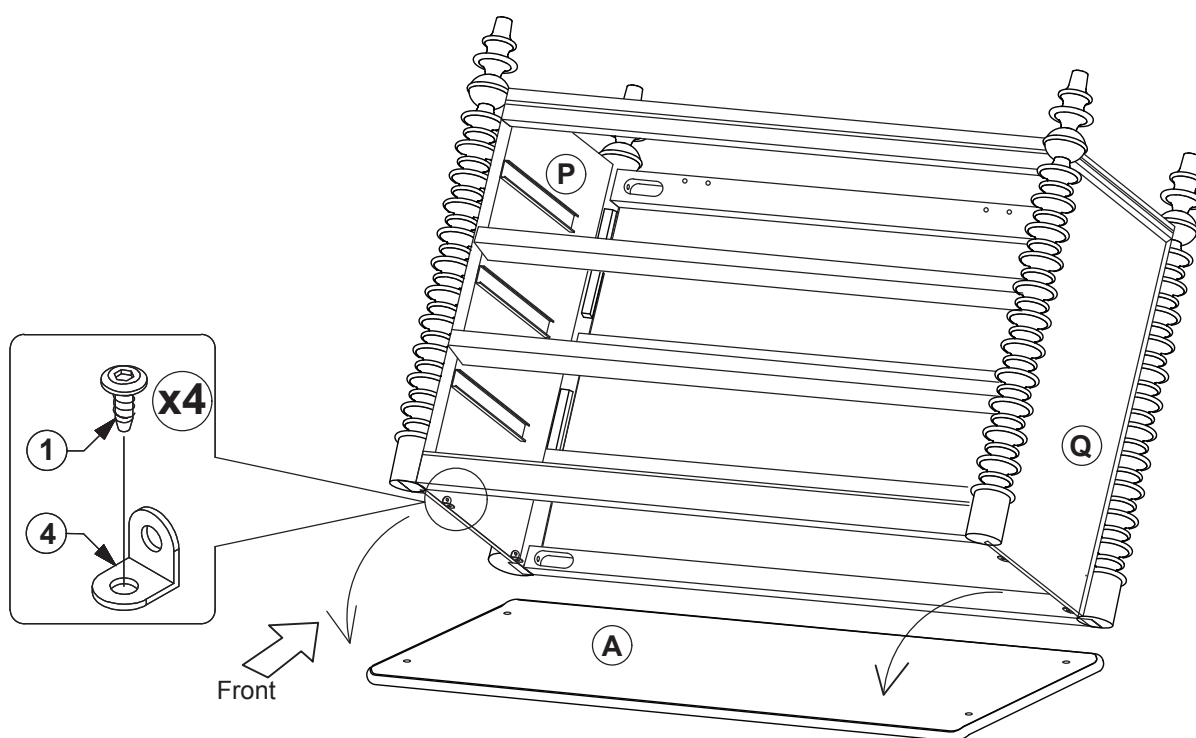

- 12** Assemble the Bottom Support (D) to the Bottom Front & Rear Support Bar (E & J) as shown.

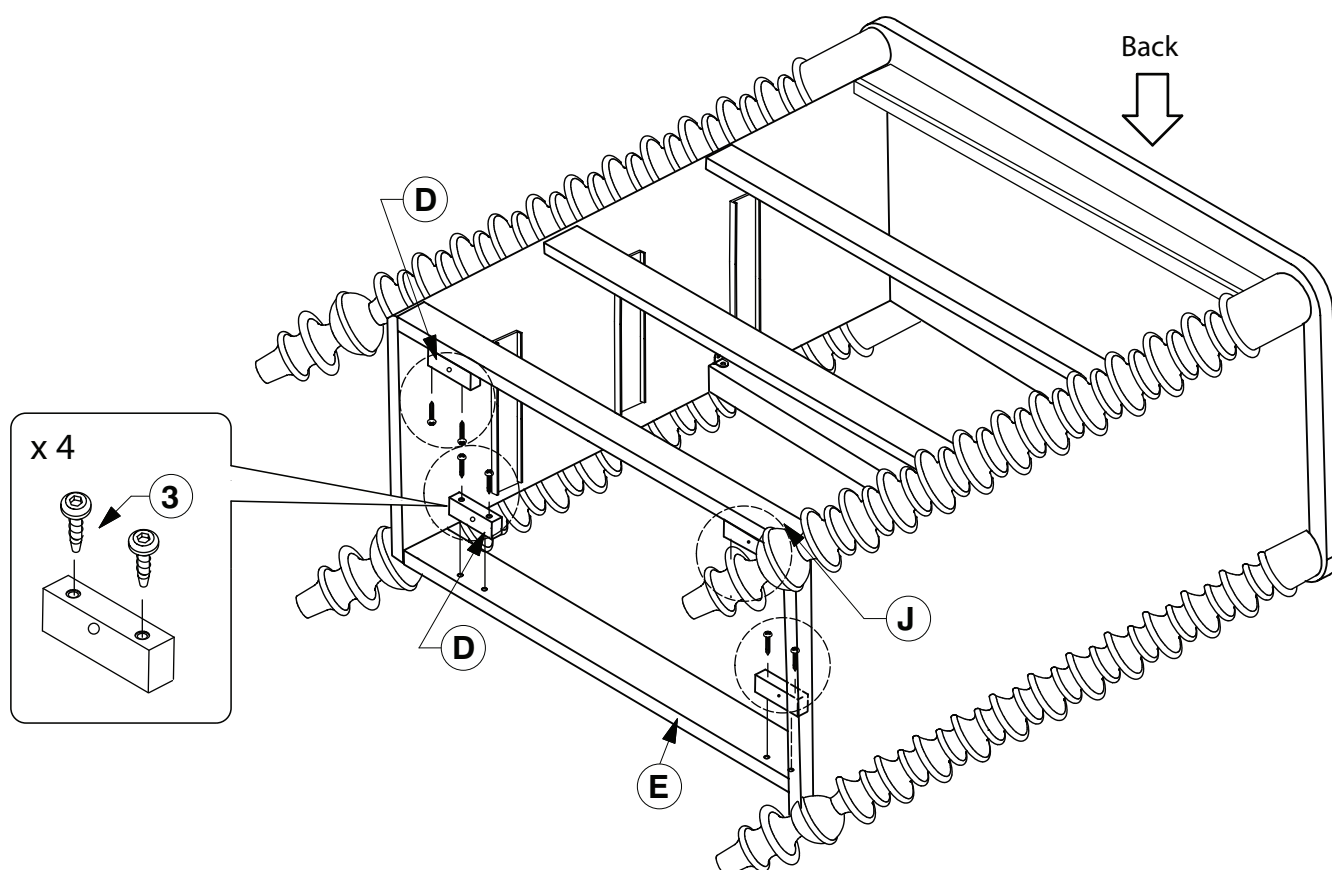

Assembly Instructions

WI-0426

-


-
- Diagram illustrating the assembly of the frame for a table. The diagram shows the table top being attached to the frame using screws (9). The frame is composed of four legs and a central support structure. The legs are attached to the frame using screws (B). A note specifies: "NOTE: The bevel angle is facing down."

9029 3D Chest

Assembly Instructions


15 Fit the Drawer Face (L) to the casegood body.

WI-0426

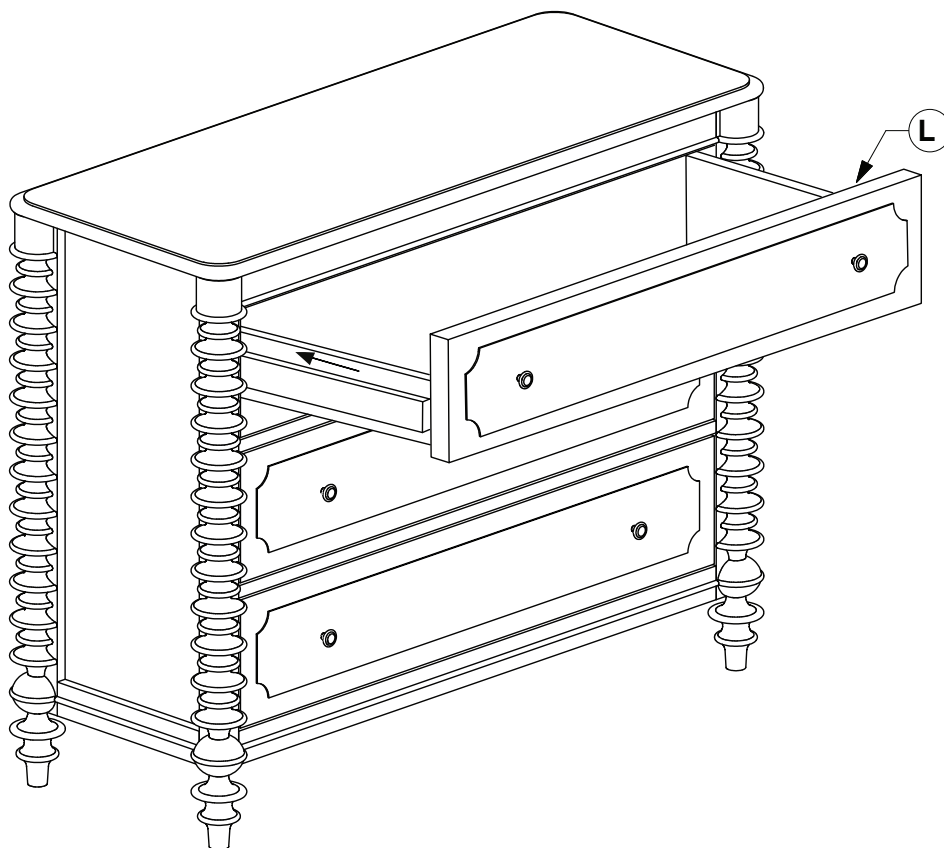

16 Adjust the Drawer Face (L) .

* NOTE: Before fitting the Wood Screws .
Loosen the JCBs on the Drawer Face if
the face needs alignment .

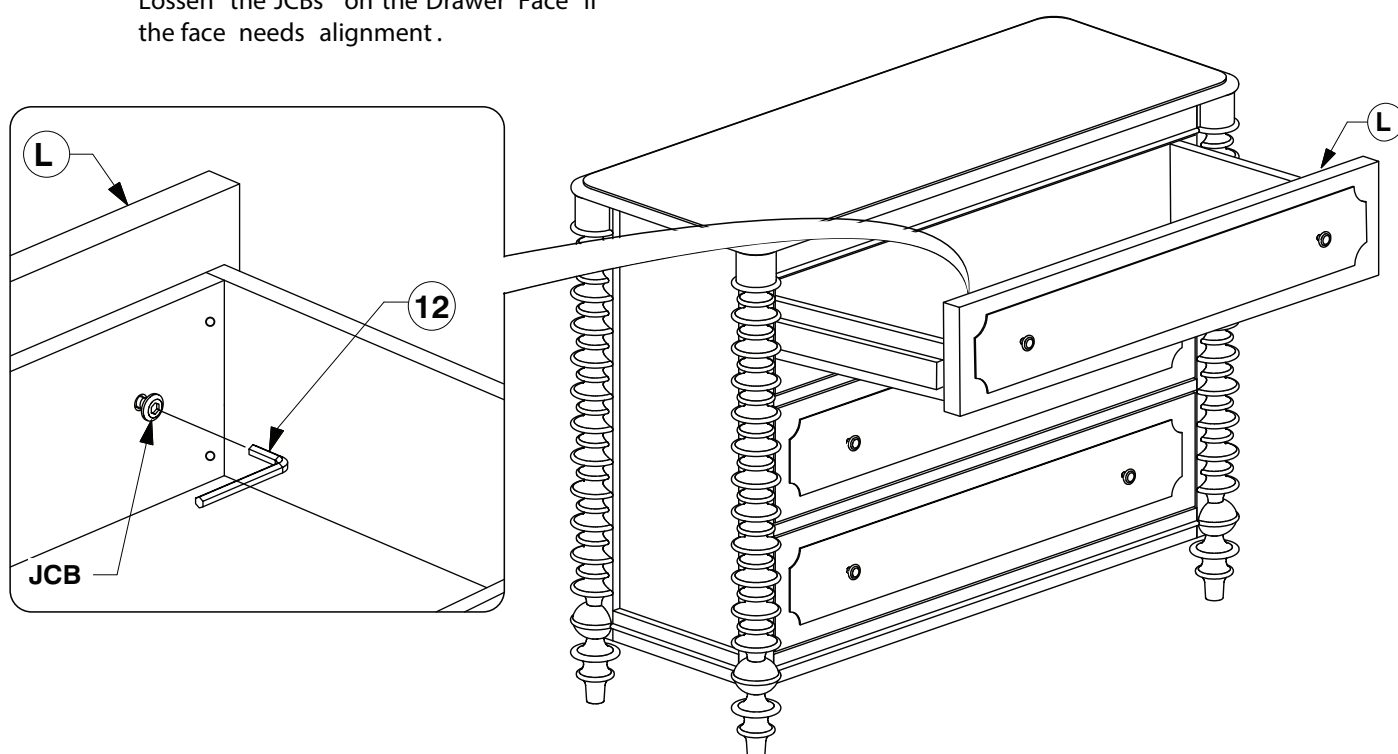

9029 3D Chest

Assembly Instructions

WI-0426

- 17** After the Drawer Faces (L) are aligned, secure with Wood Screw (7).

