
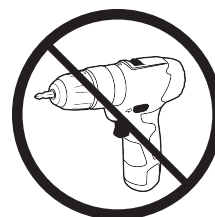
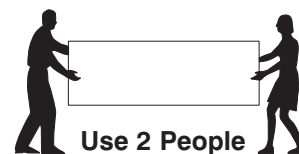


0267-1 Queen Bed

Assembly Instructions

WI-0326


1 Assembled View

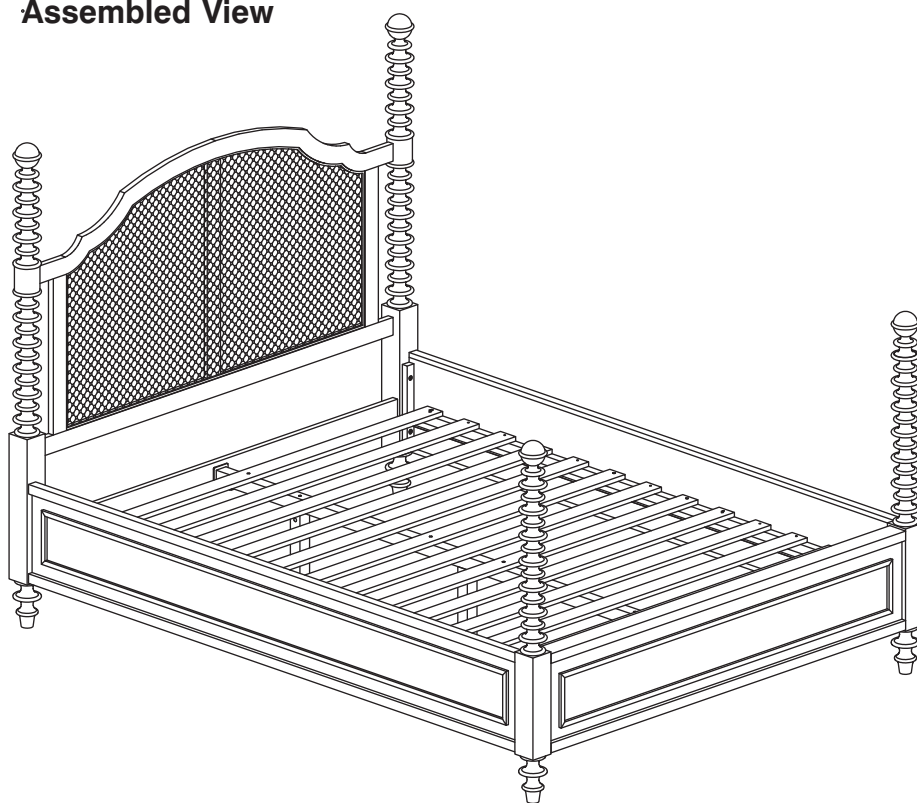

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List

Parts in Box A:

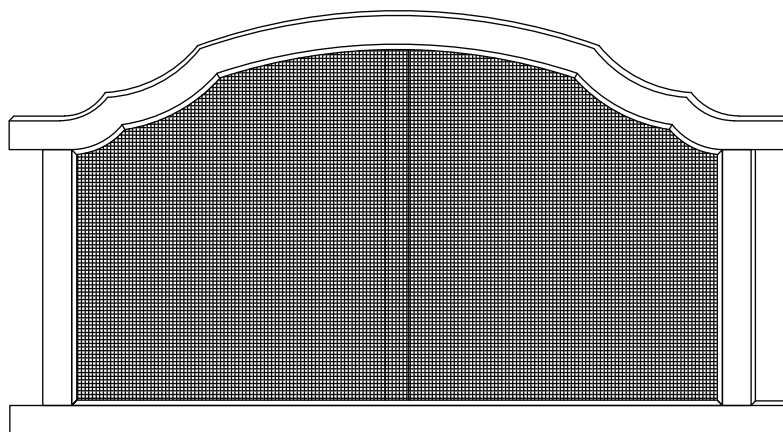

A Headboard Panel x 1



B Headboard Support x 1

0267-1 Queen Bed

Assembly Instructions

WI-0326

3 Parts List

Parts in Box B:



C
Headboard
Upper Post
x 2



D
Headboard
Center Post
(Left Hand)
x 1



E
Headboard
Center Post
(Right Hand)
x 1



F
Footboard
Upper Post
x 2



G
Headboard/
Footboard
Lower Post
x 4




H
Footboard
Center Post
(Left Hand)
x 1



J
Footboard
Center Post
(Right Hand)
x 1


Parts in Box C:

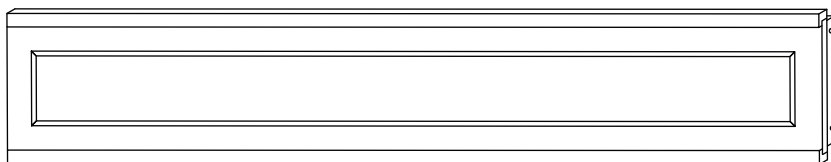

K Side Rail x 2




N Support
Leg x 3

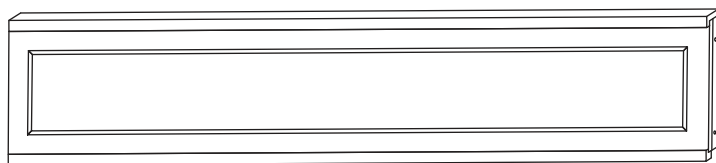

L Footboard Panel x 1



M Long Support x 1

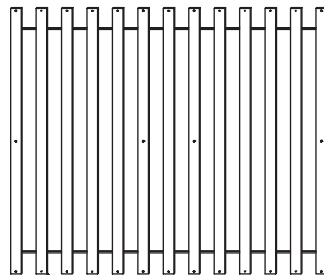



O Set of
Bed Slats x 1

0267 -1 Queen Bed


Assembly Instructions

WI-0326

4 Hardware List

- | | | | |
|--|--|---|---|
| 
1 M6 x 15mm JCB
x 4 | 
2 M6 x 40mm JCB
x 32 | 
3 M6 x 90mm JCB
x 3 | 
4 Barrel Nut
x 3 |
| 
5 Adjustable
Foot x 3 | 
6 Center Rail
Bracket x 2 | 
7 Wood Screw
(M4 x 32mm) x 18 | 
8 Allen Key
x 1 |

5 Assemble the Support Leg (N) to the Long Support (M).

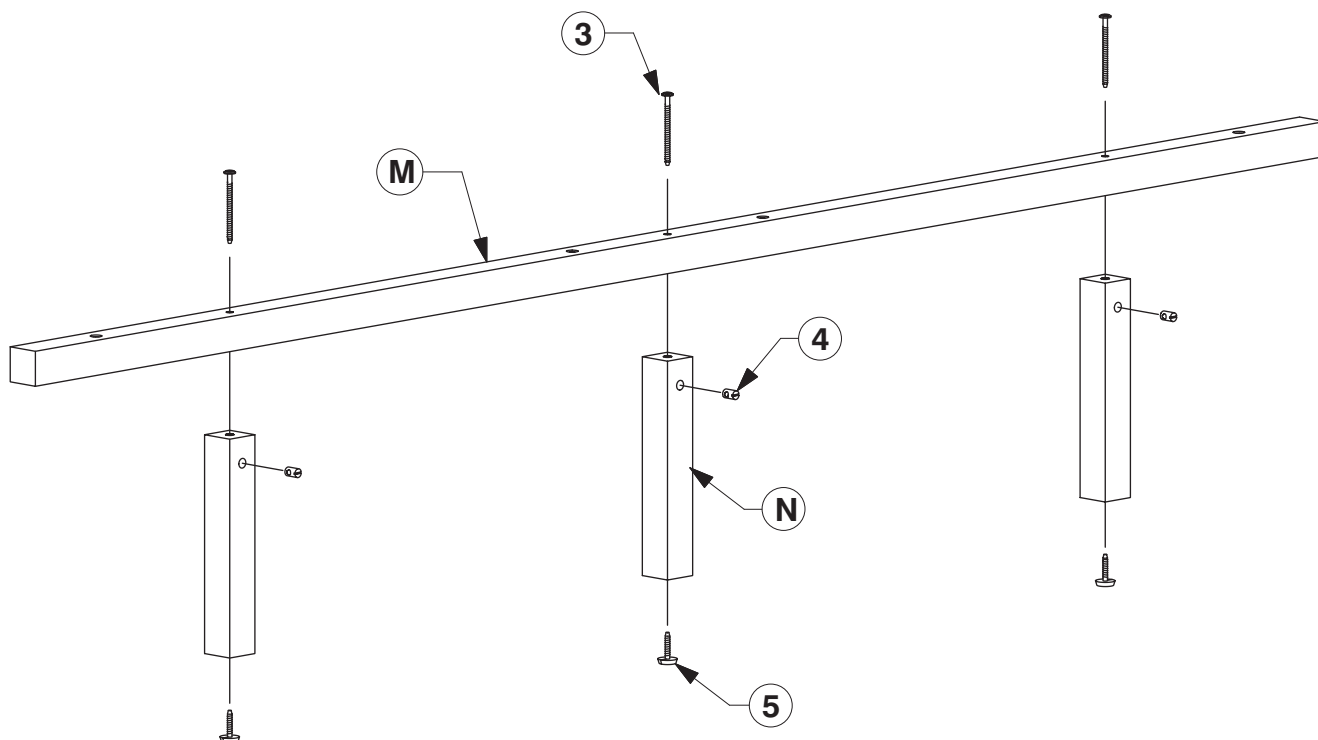


0267 -1 Queen Bed


Assembly Instructions

WI-0226

- 6** Assemble Headboard Upper Post (C) and HB/FB Lower Post (G) to the Headboard Center Post (D & E).

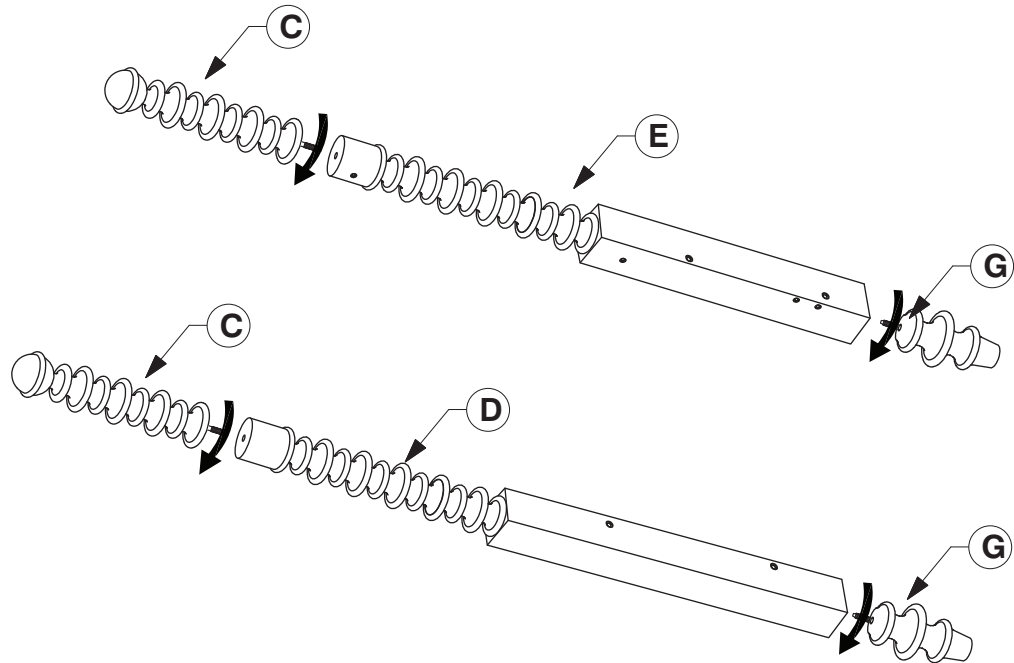

- 7** Assemble Footboard Upper Post (F) and HB/F Lower Post (G) to the Footboard Center Post (H/J) .

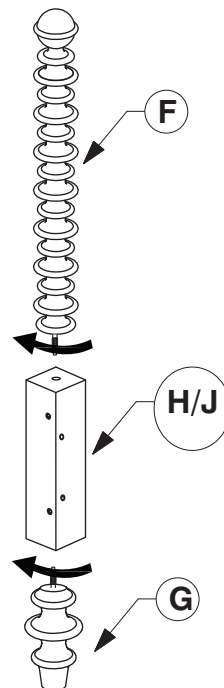


0267 -1 Queen Bed


Assembly Instructions

WI-0226

- 8** Attach the Headboard Post (D & E) to the Headboard Panel (A) and Headboard Support (B).

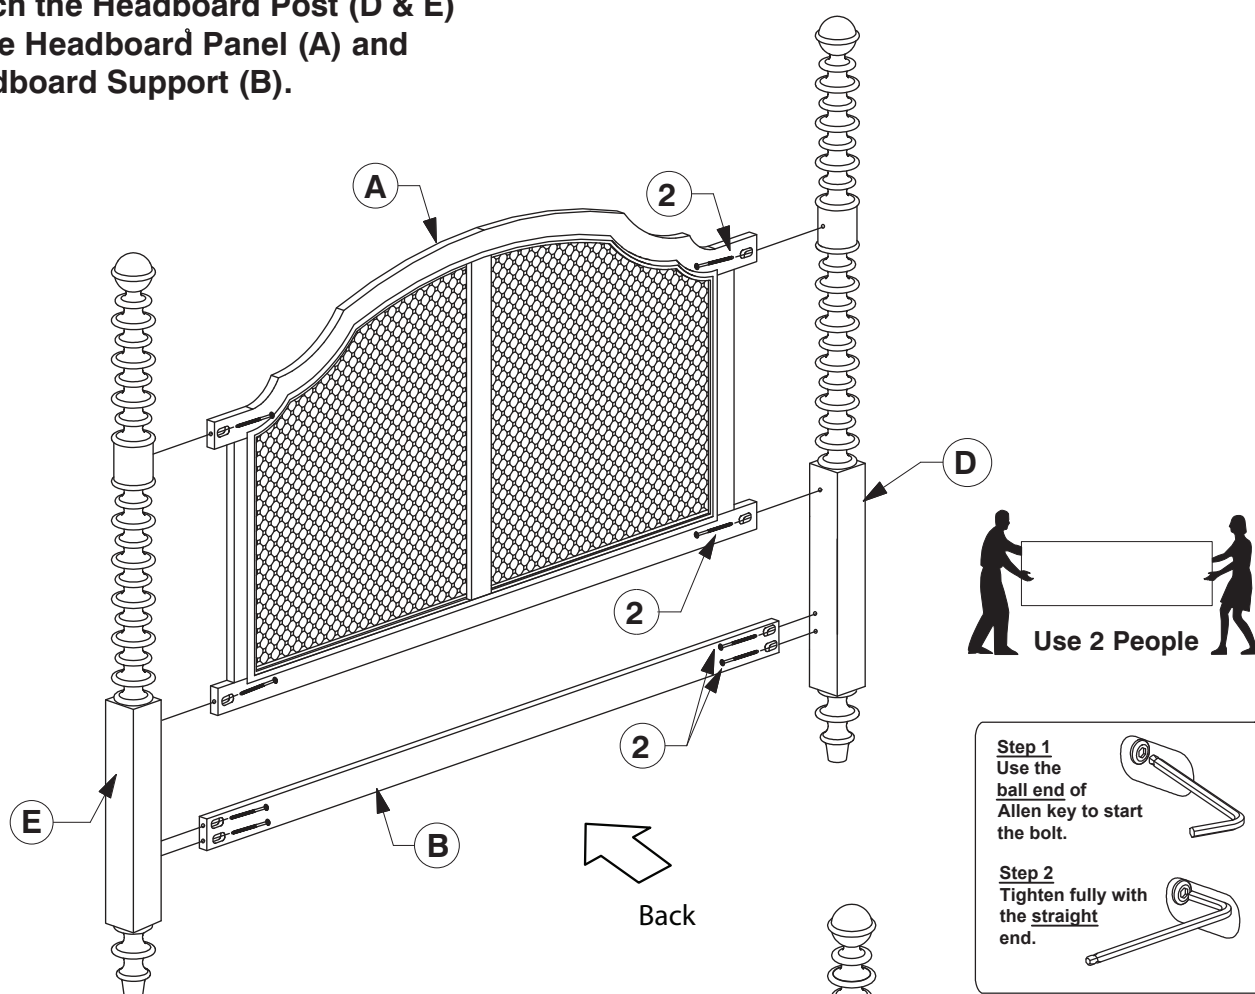

- 9** Attach the Footboard Post (H & J) to the Footboard Panel (L).

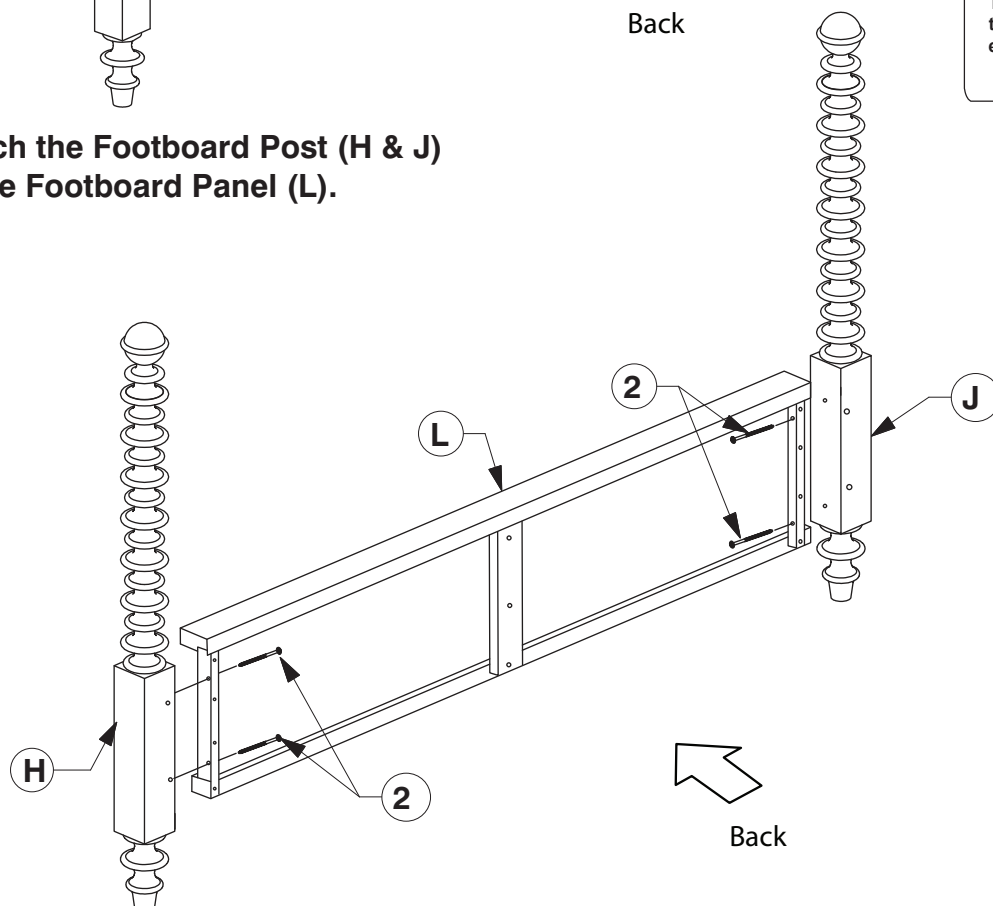


0267 -1 Queen Bed


Assembly Instructions

WI-0326

- 10** Fit the Center Rail Bracket (6) to the Headboard Support (B).

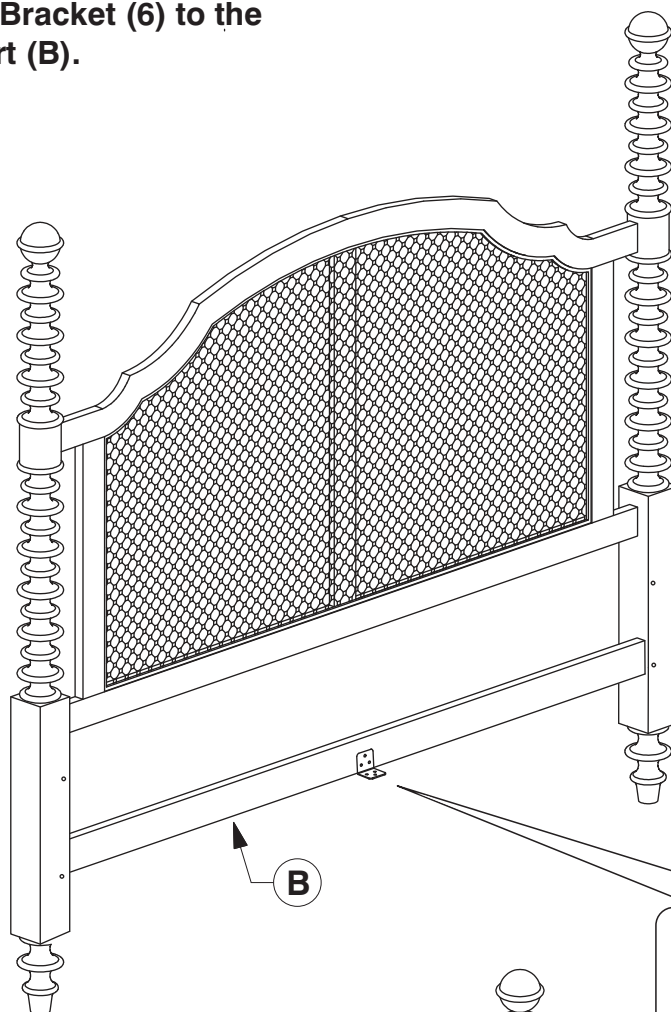

- 11** Fit the Center Rail Bracket (6) to the Footboard Panel (L).

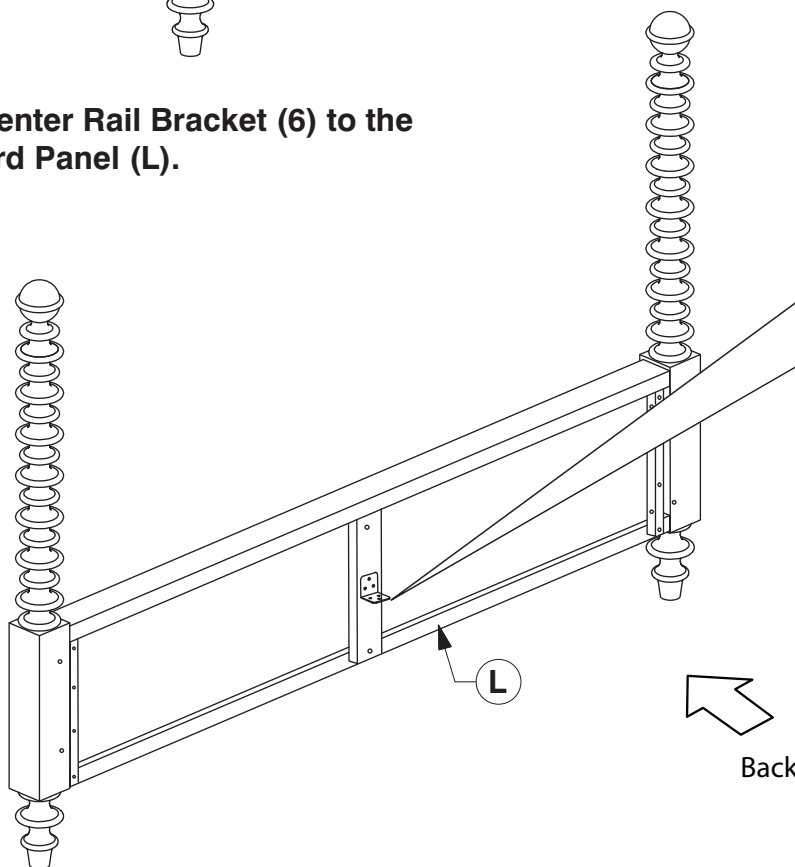

Short Tab of
Metal Bracket (6)



1

0267 -1 Queen Bed

Assembly Instructions

WI-0326

- 12** Assemble the Side Rail (K) to the Head / Footboard.

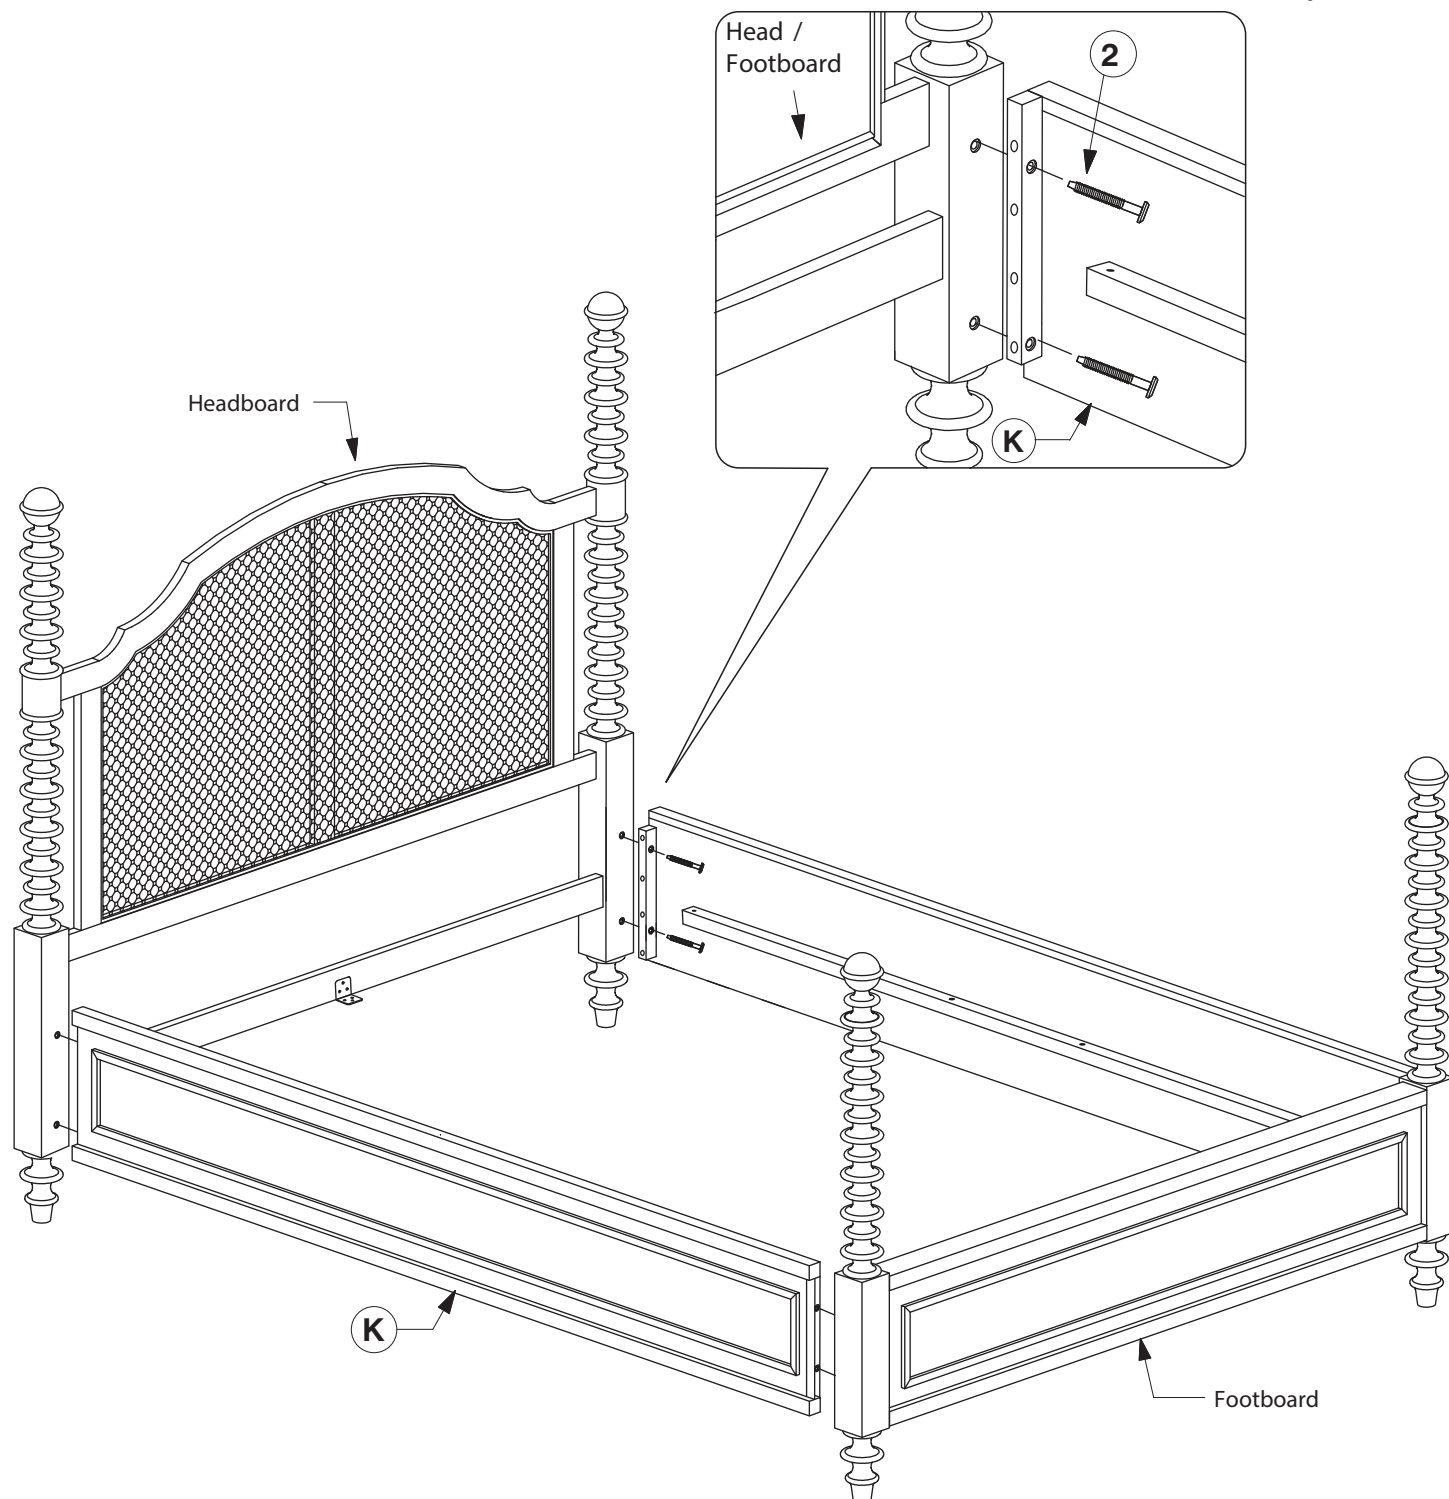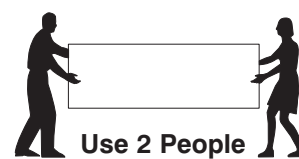


0267 -1 Queen Bed

Assembly Instructions

WI-0326

- 13** Bolt the Long Support (M) to the Center Rail Brackets on the Headboard/Footboard.

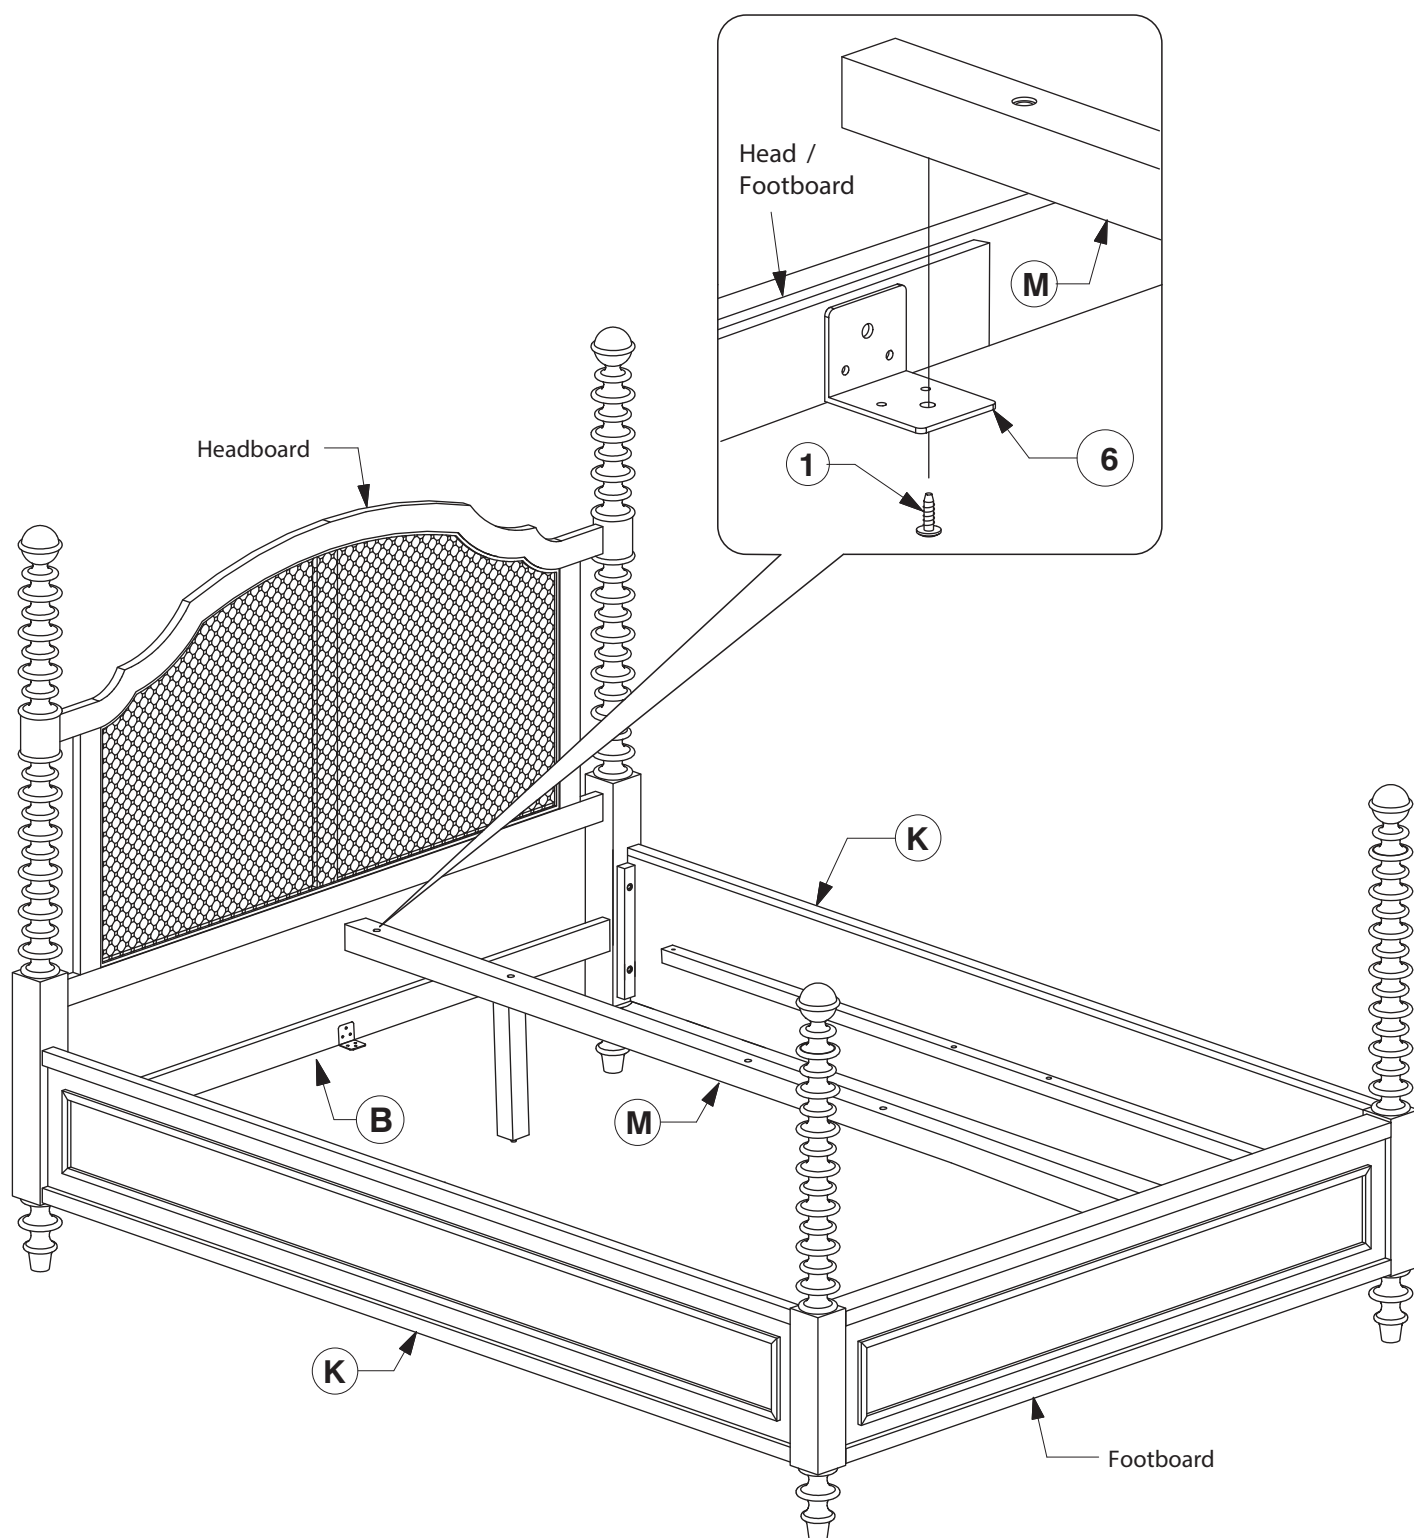


0267 -1 Queen Bed

Assembly Instructions

WI-0326




- 14** Bolt & Screw the Bed Slats (O) to the Side Rail (K) and Long Support (M).

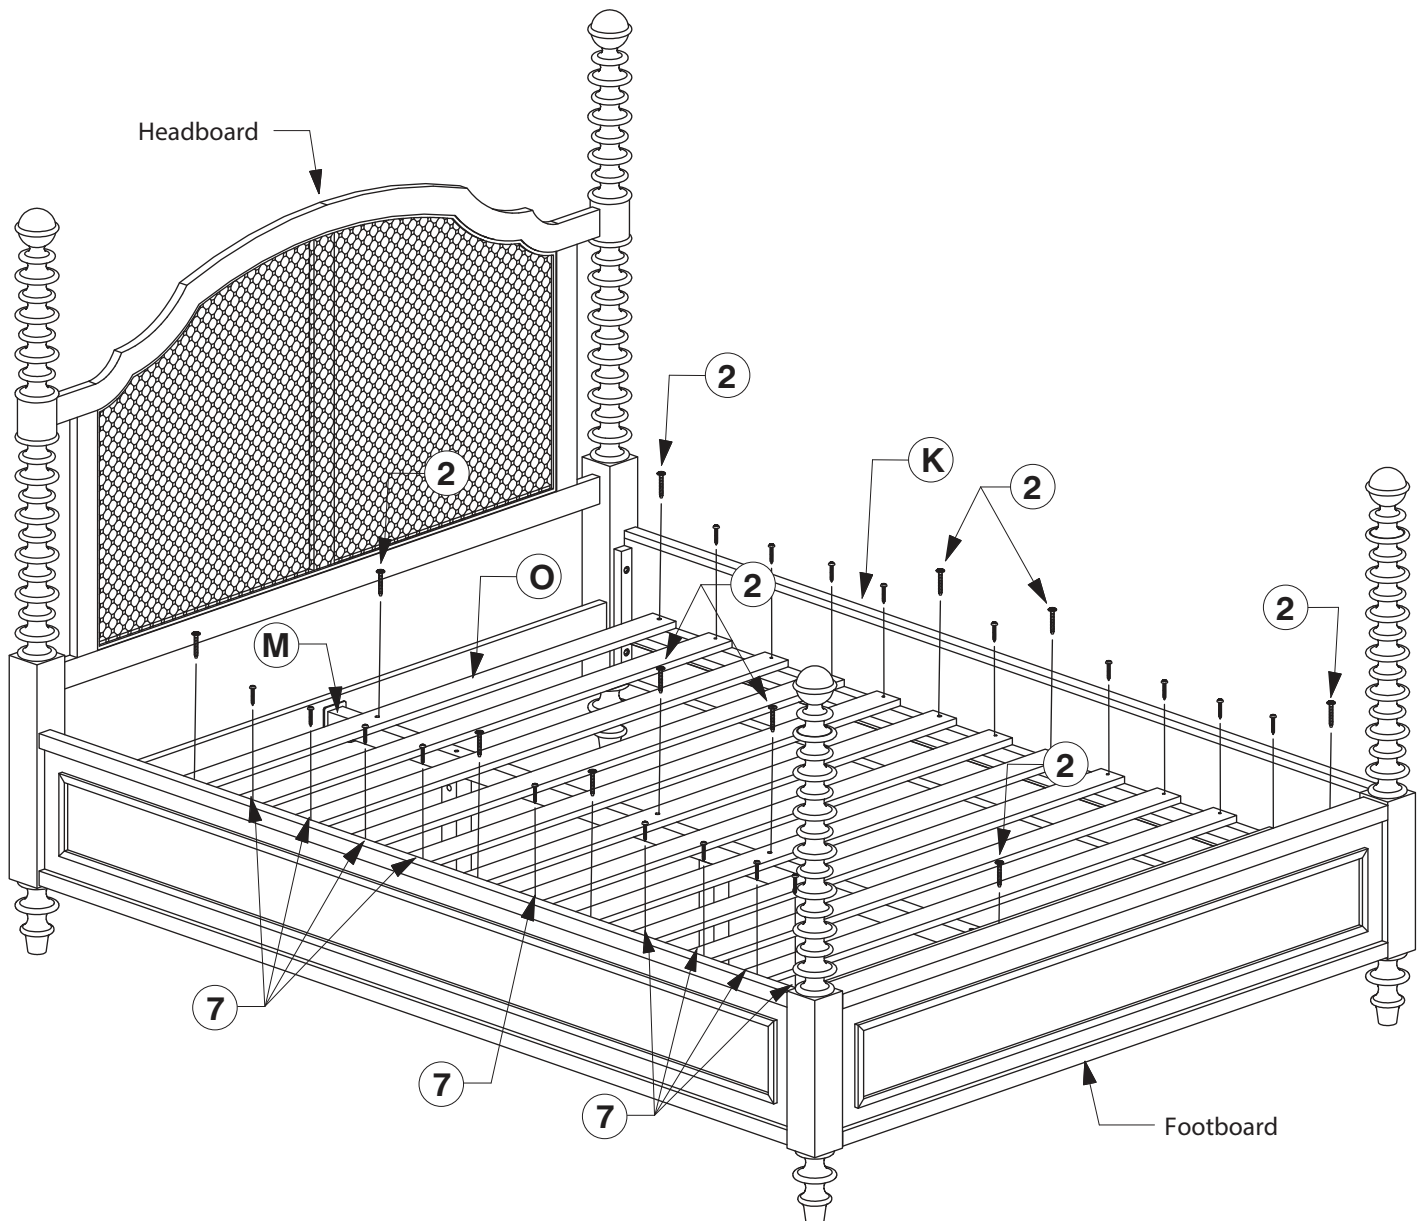

9029 1D Night Stand



Assembly Instructions

WI-0326

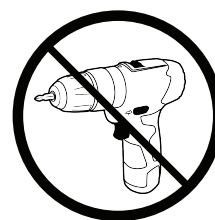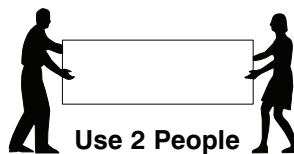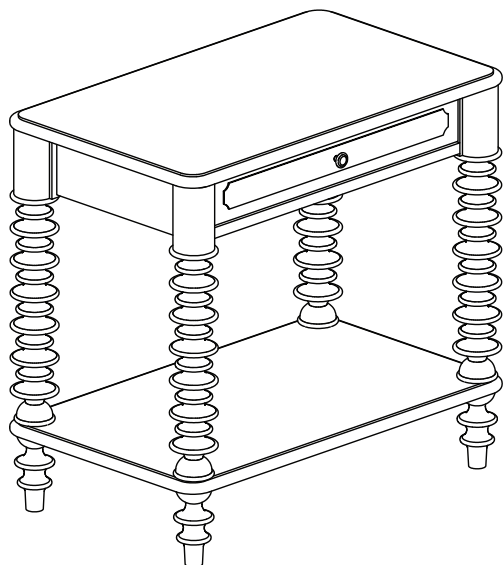

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

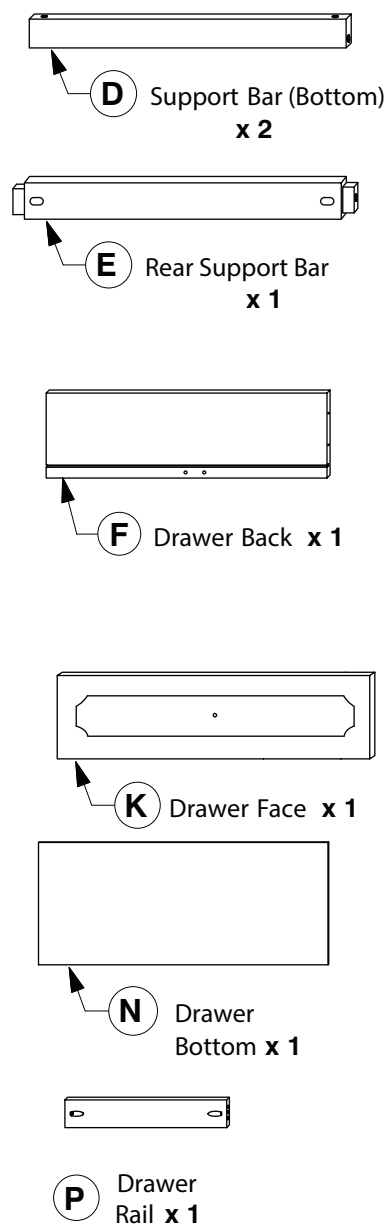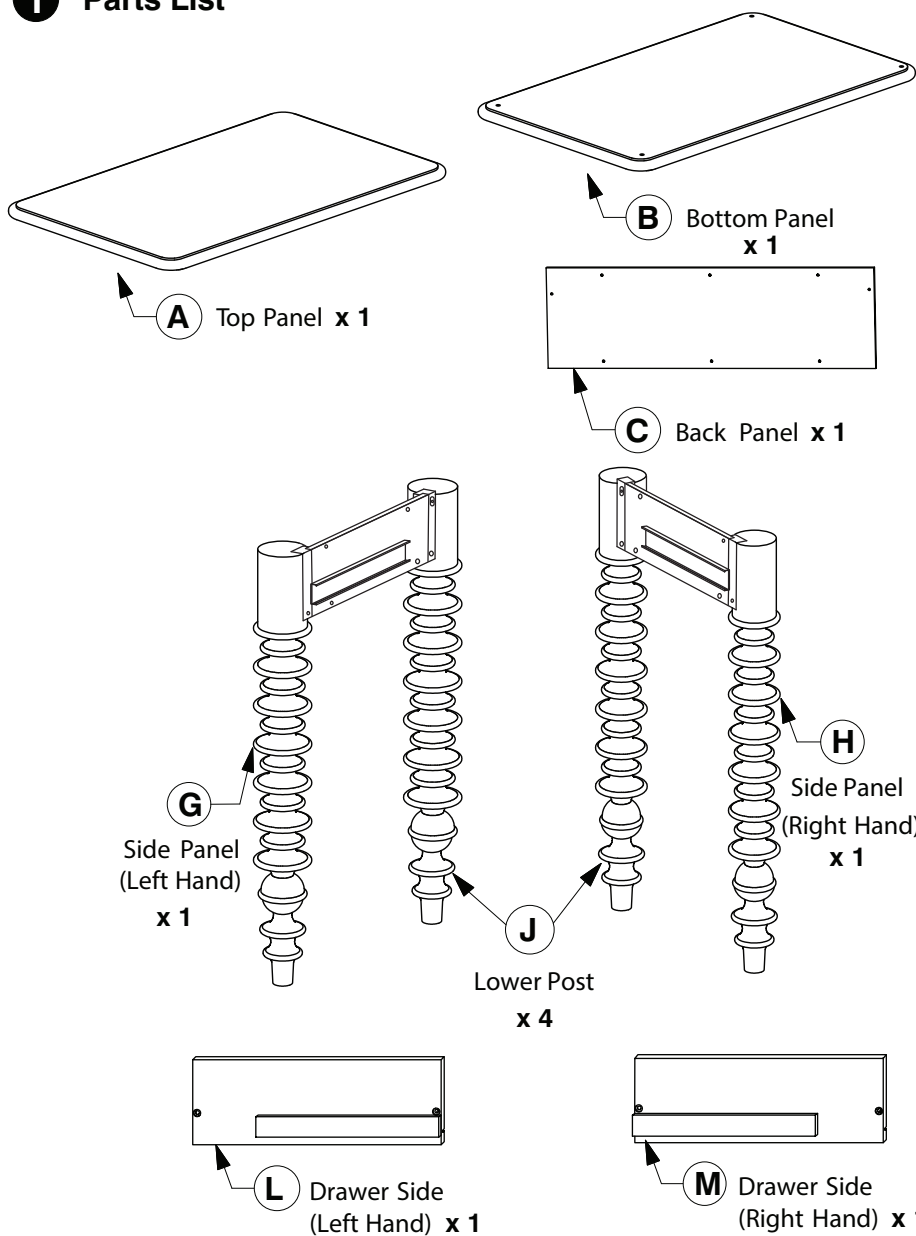


9029 1D Night Stand


Assembly Instructions

WI-0326


2 Hardware List

- | | | | | | |
|---|---|---|--|---|---|
|  |  |  |  |  |  |
| 1 M6 x 15mm JCB x 16 | 2 M6 x 40mm JCB x 2 | 3 Wood Dowel (M8 x 30mm) x 4 | 4 M6 x 25mm Wood Dowel x 4 | 5 'L' Bracket (5005-3) x 8 | 6 M4 x 16mm Wood Screw x 8 |
|  |  |  |  |  | |
| 7 M4 x 20mm Wood Screw x 4 | 8 M4 x 25mm Wood Screw x 6 | 9 Handle (9029) x 1 | 10 M4 x 22mm Wood Screw x 1 | 11 Allen Key x 1 | |

3 Assemble the Drawer Sides (L & M) & Drawer Rail (P) to the Drawer Face (K).


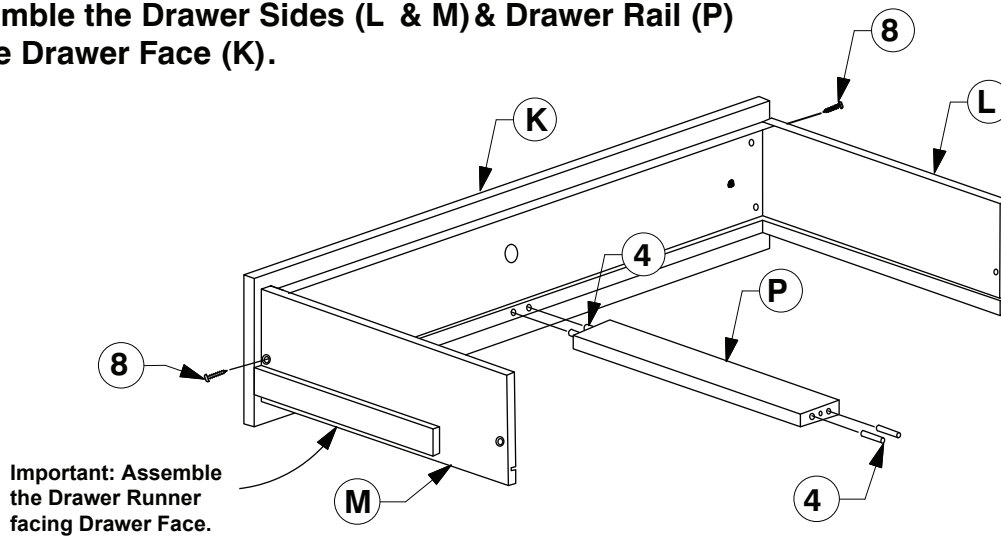


4 Slide the Drawer Bottom (N) into the groove on the Drawer Sides (L & M).

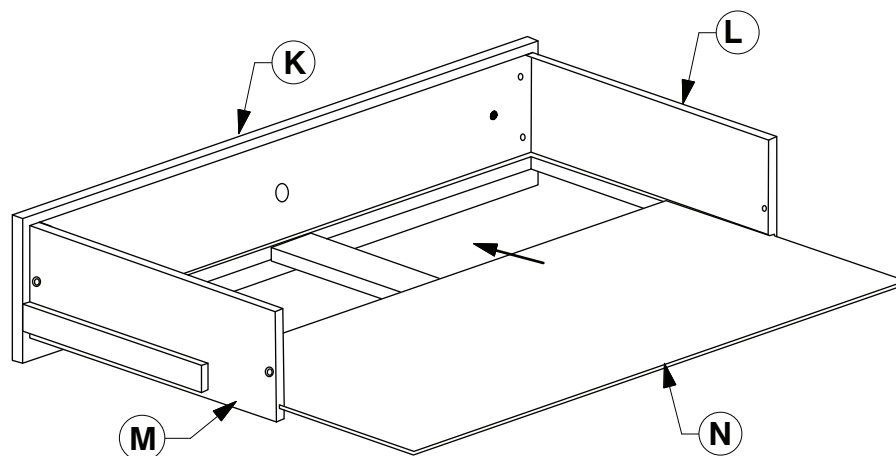

Assembly Instructions

5 Assemble the Drawer Back (F) to the Drawer Sides (L & M). Fit the Handle to the Drawer Face (K).




9029 1D Night Stand


Assembly Instructions

WI-0326

- 8** Fit the "L" Braket (5) and Wood Dowel (3) to the Support Bar Bottom (D).

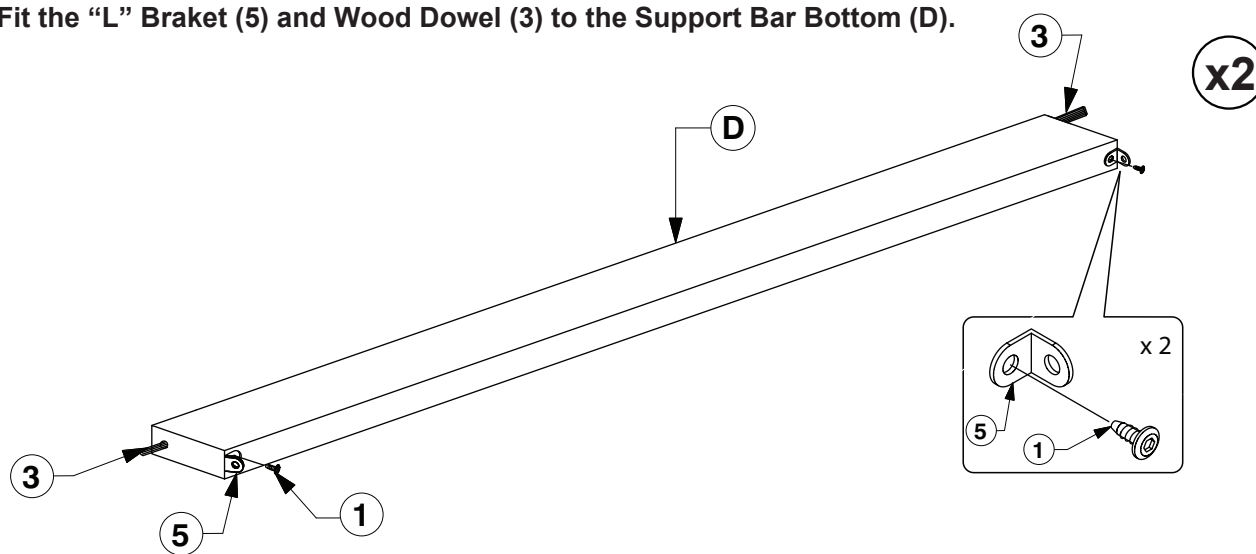

- 9** Assemble the Support Bar (Rear & Bottom) (D & E) to the Side Panel (G).

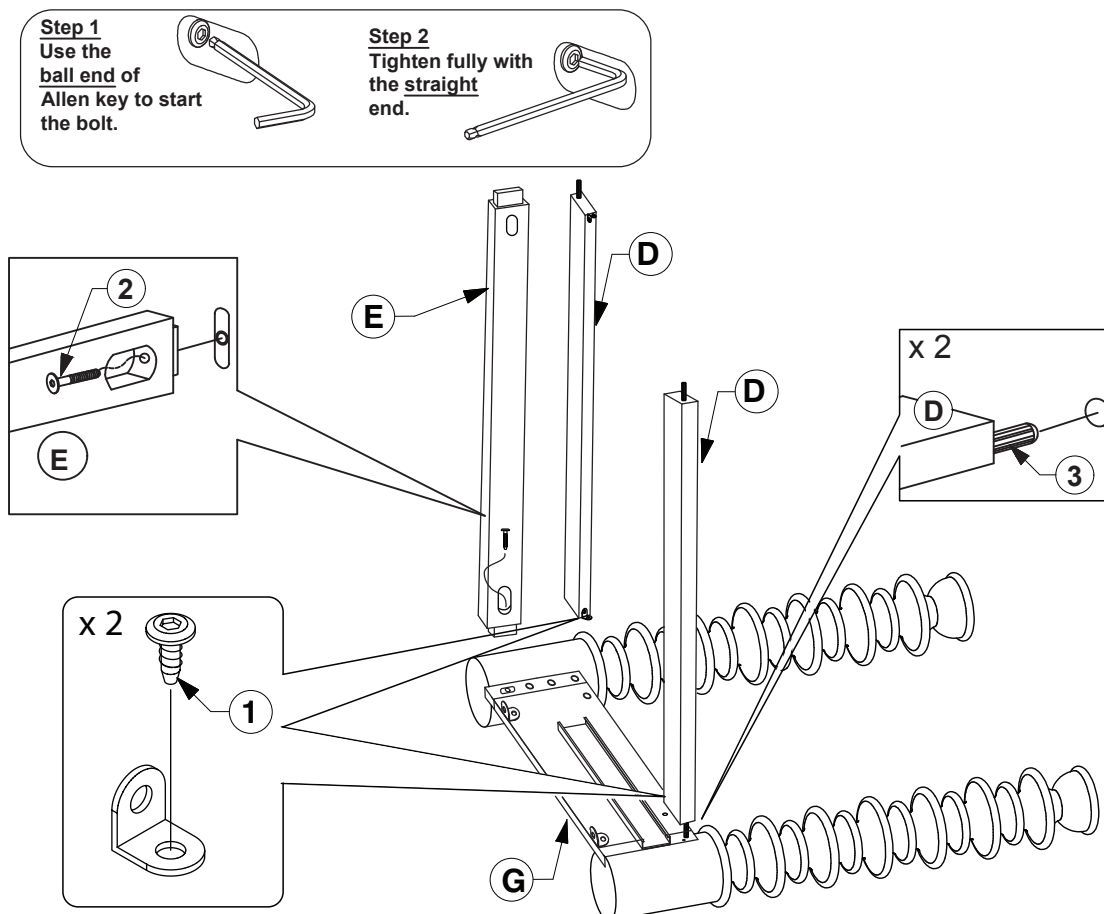


9029 1D Night Stand


Assembly Instructions

WI-0326


- 10** Fit the Support Bar Rear & Bottom (D & E) to the Side Panel (H).

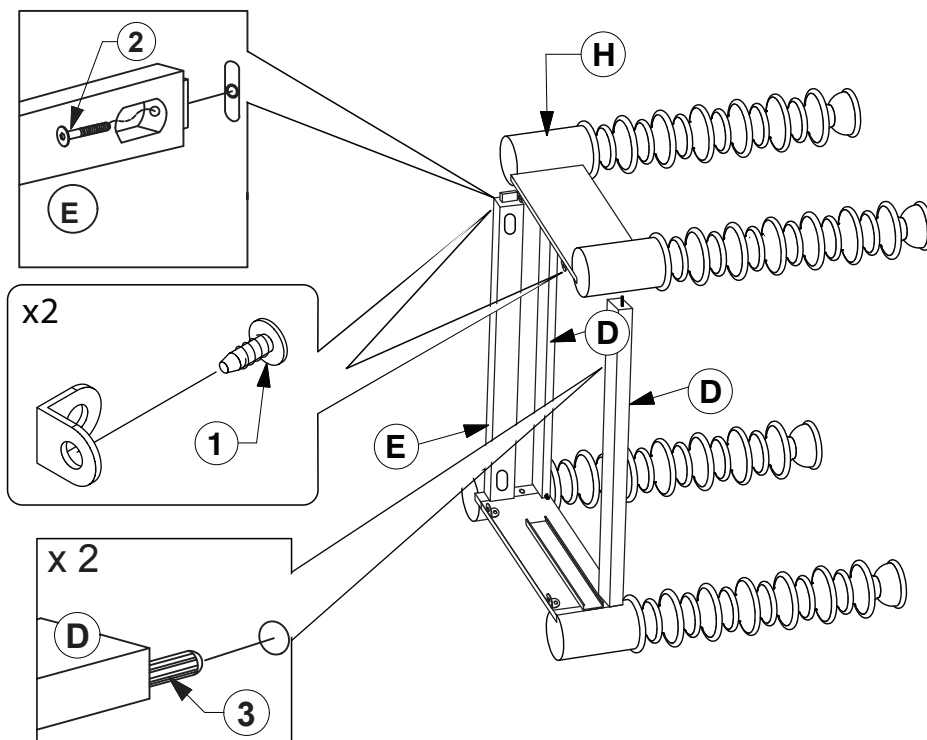


Step 1
Use the ball end of Allen key to start the bolt.

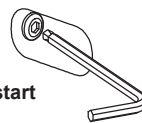

Step 2
Tighten fully with the straight end.



- 11** Assemble the Side Panel (G & H) to the Top Panel (A).

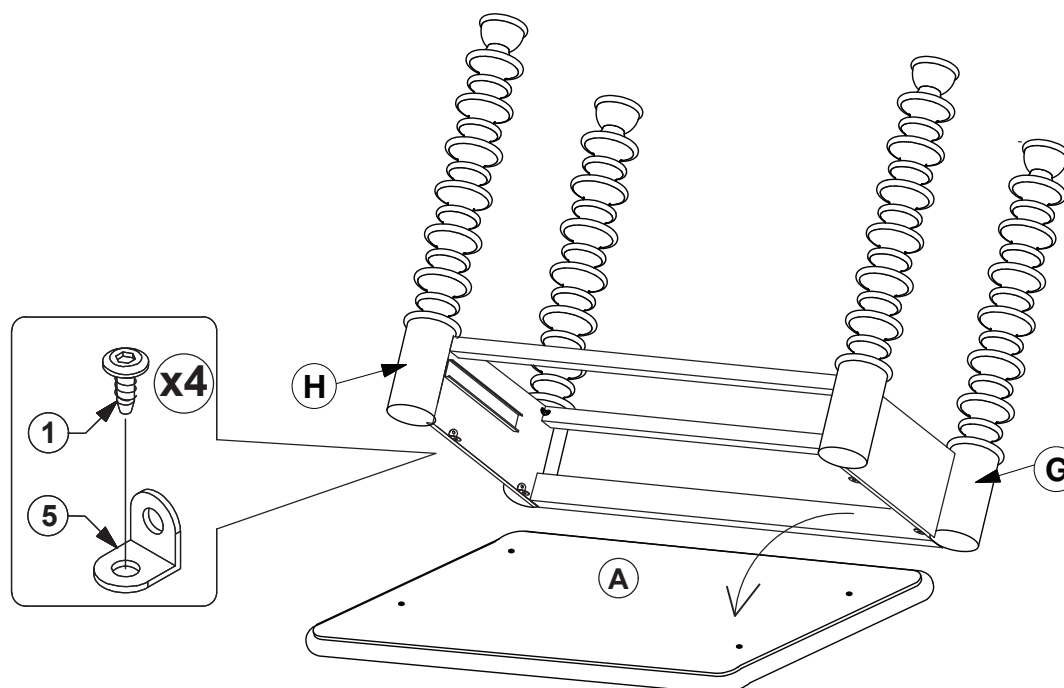


9029 1D Night Stand


Assembly Instructions

WI-0326

- 12** Use Screw to tighten the Back Panel (C) to the back of frame.

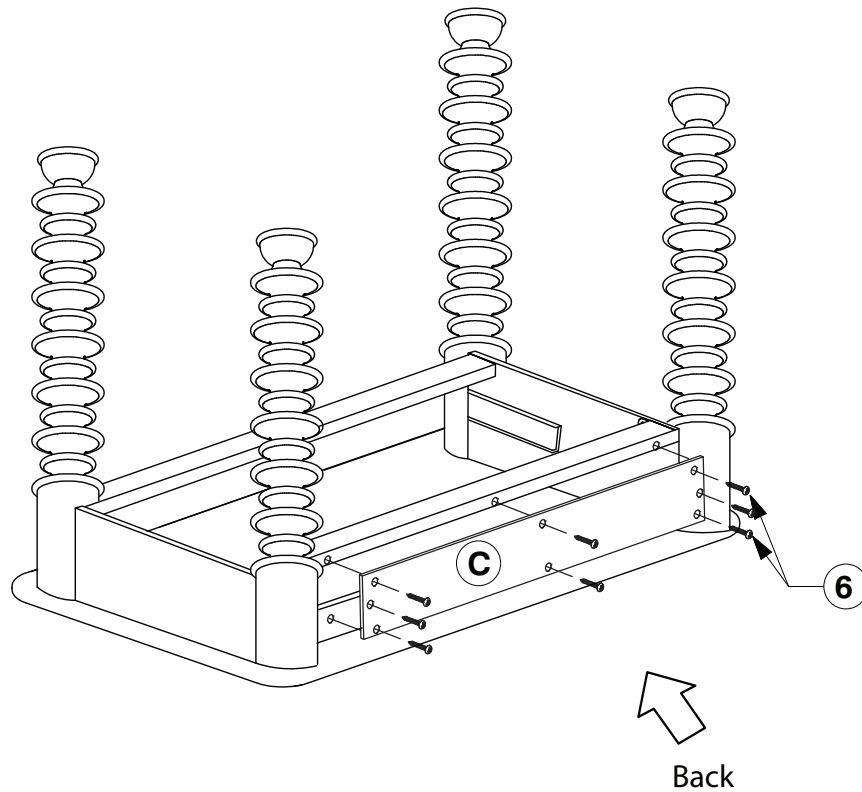

- 13** Fit the Bottom Panel (B) and Lower Post (J) to the Bottom Side Panel (G & H).

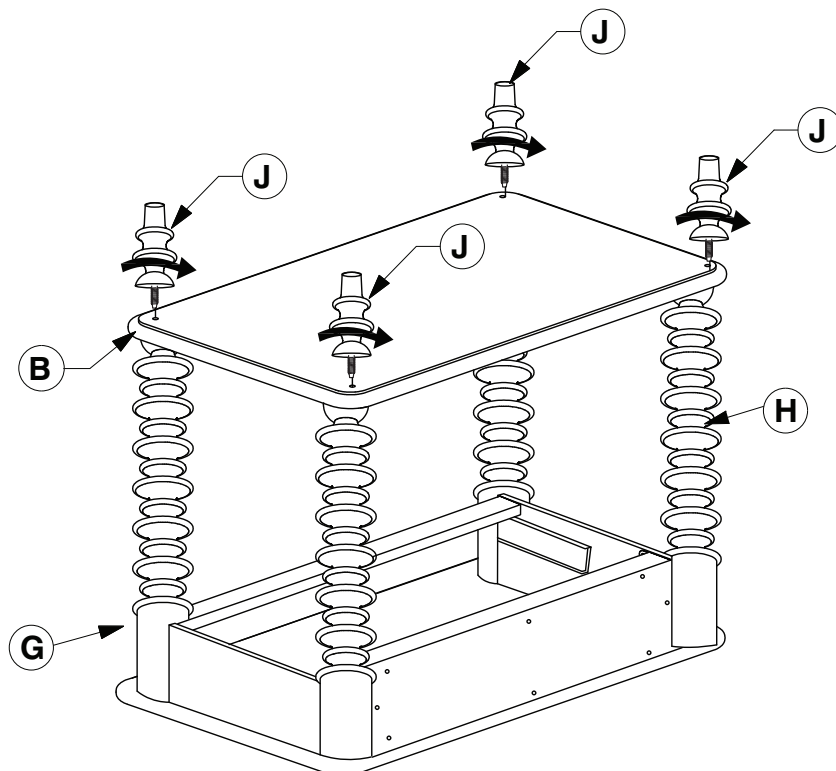


9029 1D Night Stand

Assembly Instructions


WI-0326

14 Fit the Drawer to the Casegood Body.

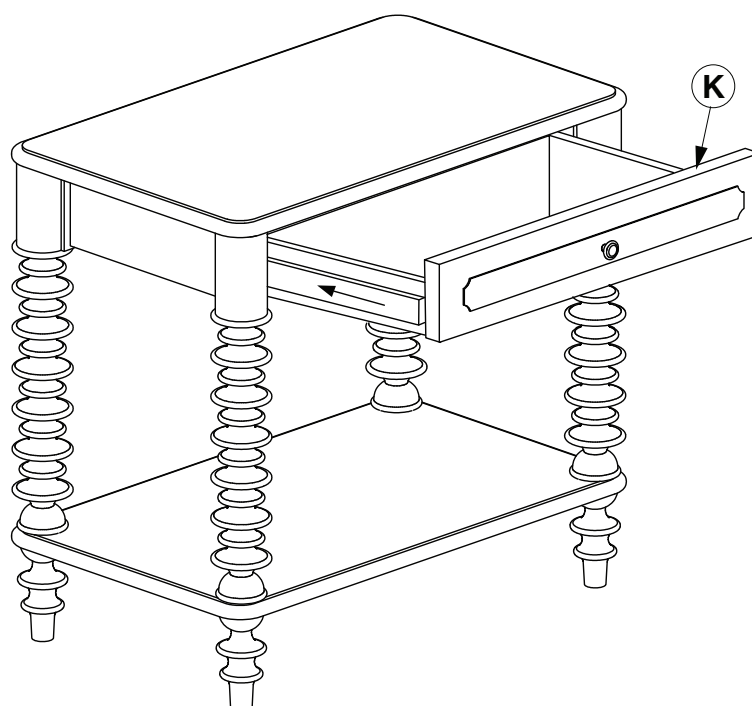

15 Fit and adjust the Drawer Face (K).

* NOTE: Before fitting the Wood Screws .
Loosen the JCBs on the Drawer Face if
the face needs alignment .

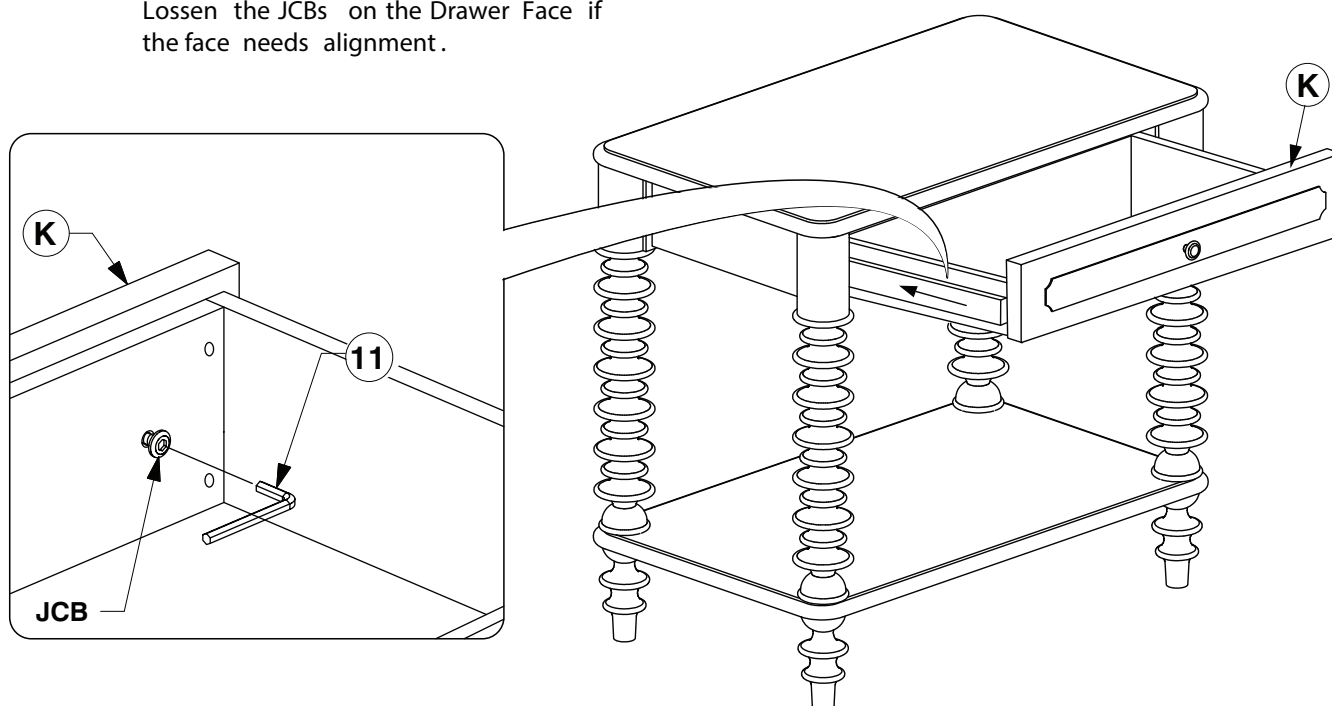


9029 1D Night Stand

Assembly Instructions

WI-0326


- 16** After the Drawer Face (K) are aligned, secure with wood screw.

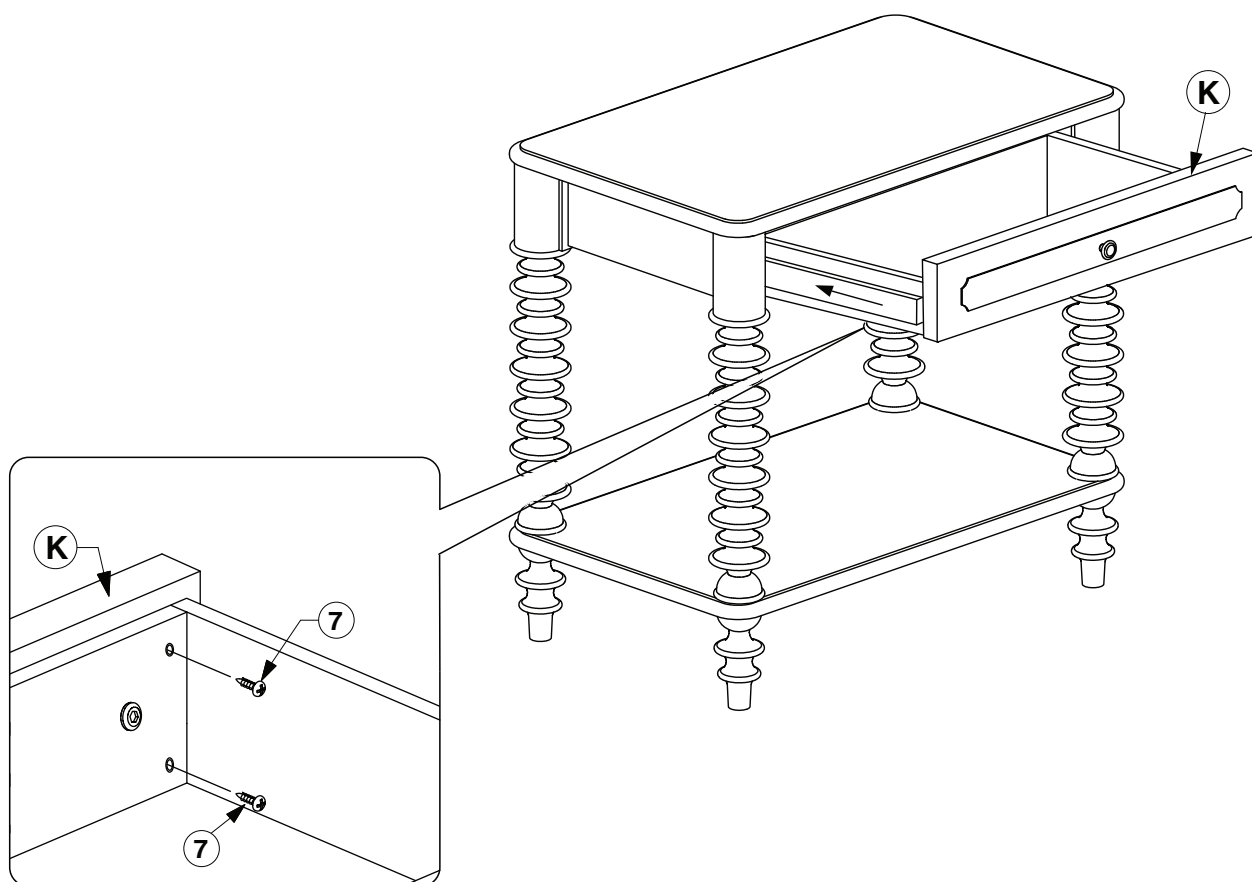

9029 7 Drawer Dresser

Assembly Instructions


WI-0426

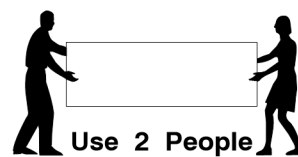

Note: Do not assemble
using power tools.
This can cause the bolts
to be overtightened

1 Parts List

Parts in Box A:



A Top Panel x 1




B Front Upper Support Bar x 1



C Front Bottom Support Bar x 1



D Front Upper Drawer Support Bar x 1



E Front Bottom Drawer Support Bar x 1



F Rear Upper Support Bar x 2



G Rear Bottom Support Bar x 2




H Center Post x 1




J Back Panel x 3

Upper Drawers



K Drawer Face x 3




L Drawer Back x 3




M Drawer Bottom x 3

Lower Drawers



N Drawer Face x 4



O Drawer Back x 4



P Drawer Bottom x 4



Q Drawer Rail x 4


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

1 Parts List


Parts in Box B:

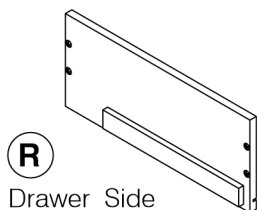


R
Drawer Side
(Left Hand) x 7

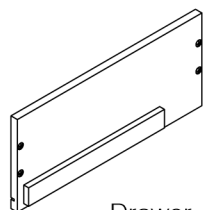


S
Drawer Side
(Right Hand) x 7

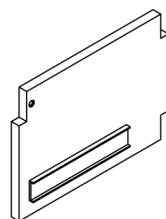


V
Center Panel
(Upper) x 2

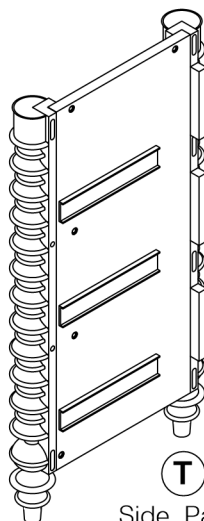

T
Side Panel
(Left Hand) x 1

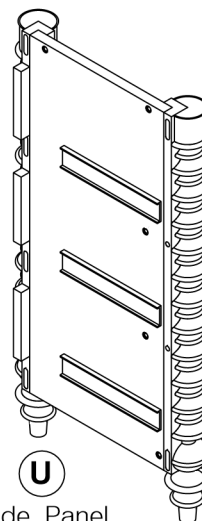

U
Side Panel
(Right Hand) x 1

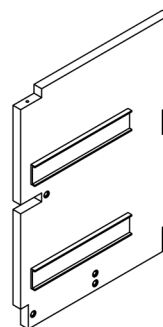

W
Center Panel
(Lower) x 1


2 Hardware List



1 M6 x
15mm JCB x 28




2 M6 x
40mm JCB x 12



3 M6 x
50mm JCB x 2



4 M6 JNC
Nut x 4




5 Adjustable
Foot x 1




6 'L' Bracket
(5005-3) x 16



7 Wood Screw
(M4 x 20mm) x 28



8 Wood Screw
(M4 x 25mm) x 64



9 M4 x 32mm
Wood Screw x 30



10 CSK Cap Wood Screw
(M6 x 60mm) x 9




11 Handle
(9029) x 7



12 M4 x 22mm
Wood Screw
x 7



13 M6 x 25mm
Wood Dowel x 16



14 M8 x 30mm
Wood Dowel x 4



15 Long Allen Key x 1


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

③ Assemble the Upper Drawers.


STEP 3.1

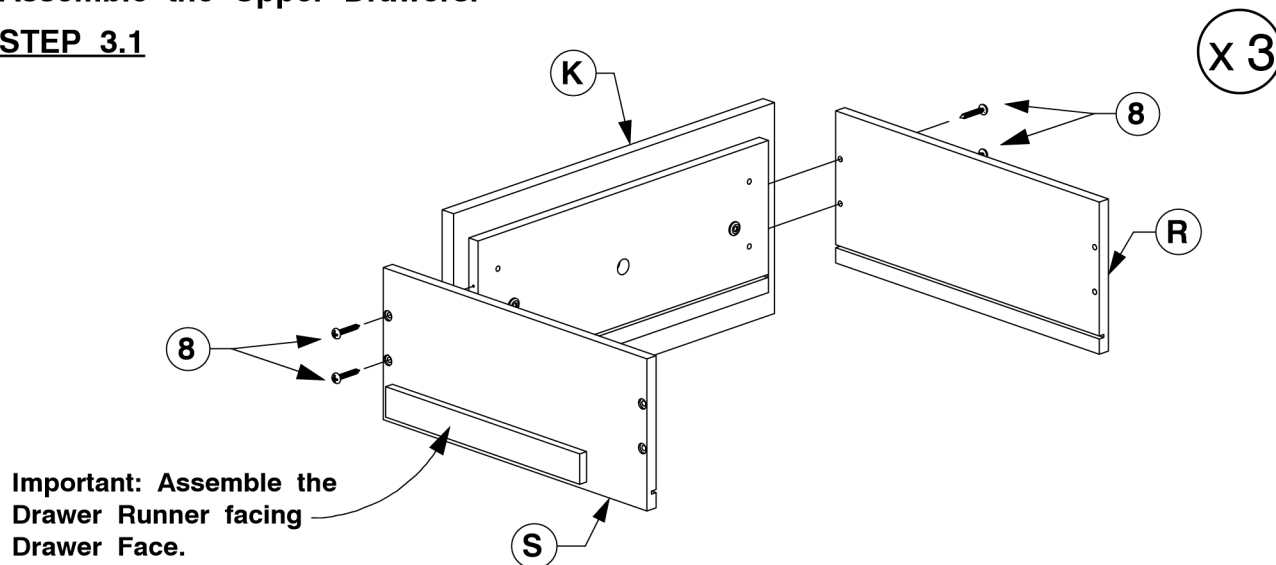

STEP 3.2

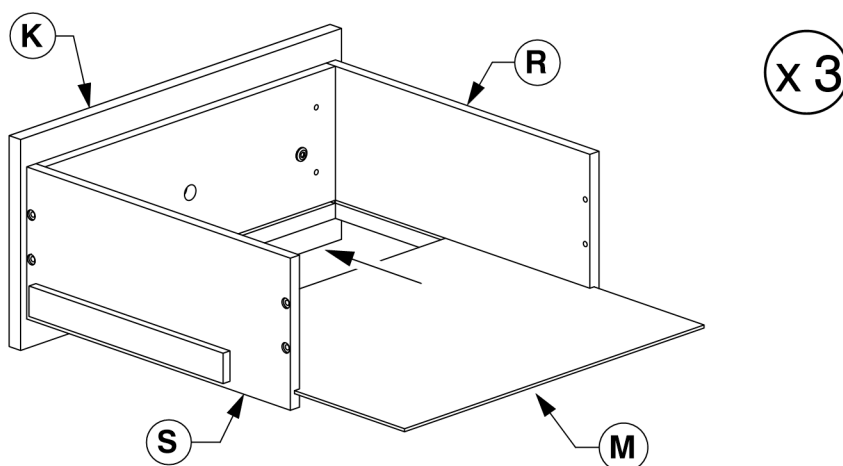

STEP 3.3

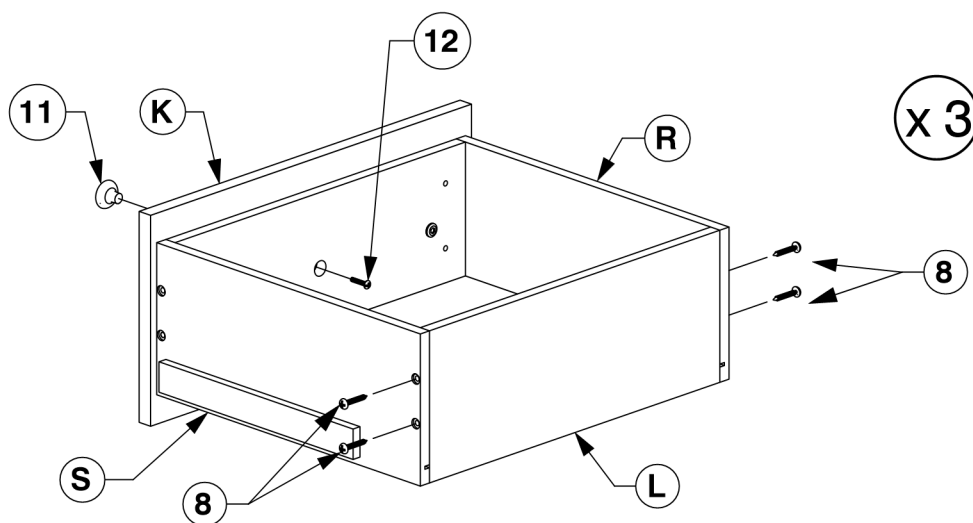


Assembly Instructions


WI-0426

STEP 3.4


STEP 3.5

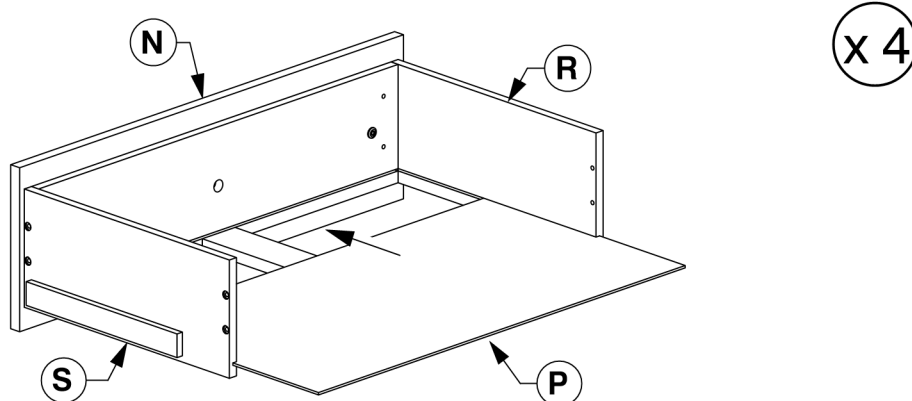

STEP 3.6

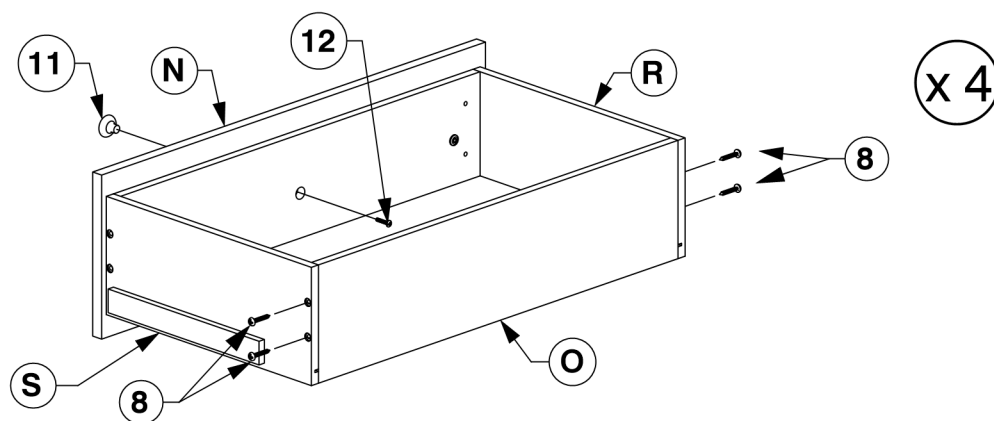

STEP 3.7

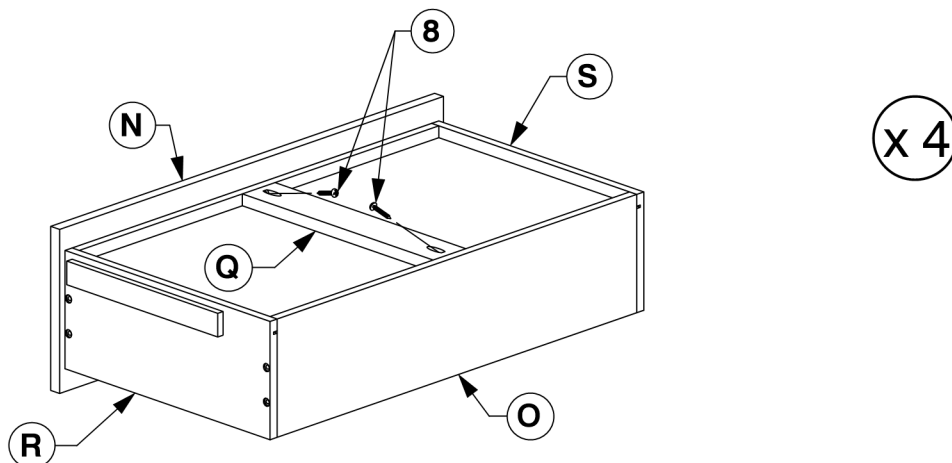


9029 7 Drawer Dresser


Assembly Instructions

WI-0426


4 Fit the 'L' Bracket to the Top Panel (A).

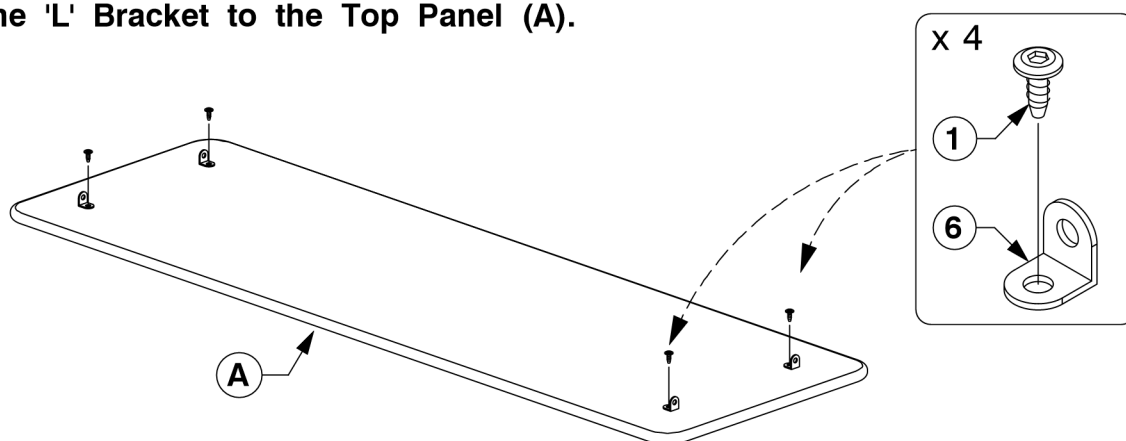

5 Attach 'L' Bracket (6) to the Upper and Lower Center Panels (V & W) using JNC (4) and Bolts (1).

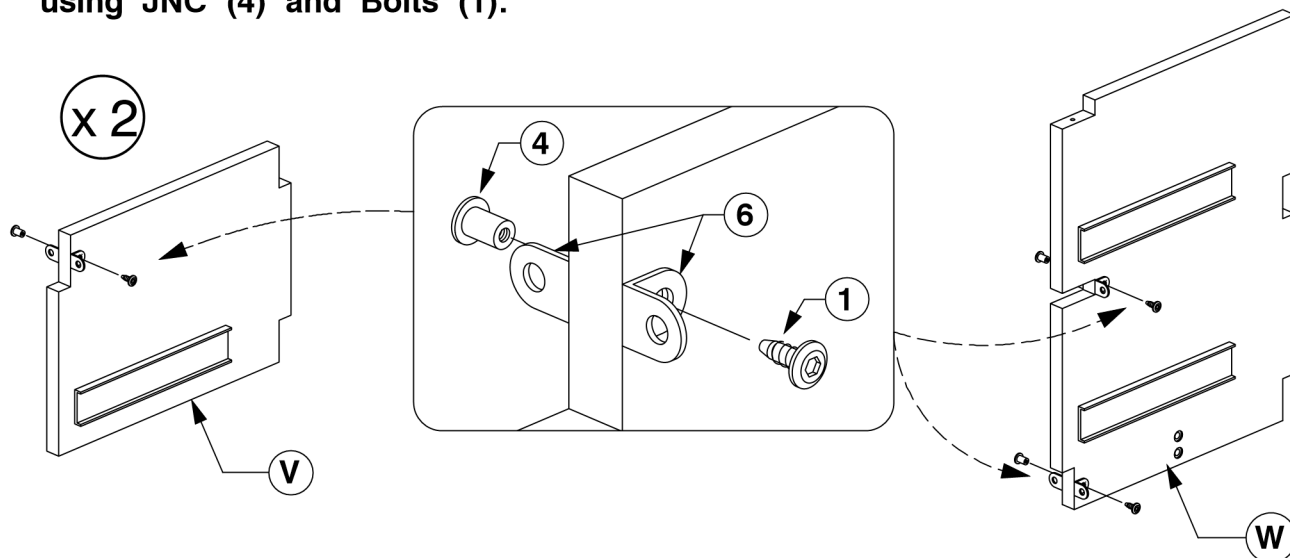

6 Insert Dowels (14) into the ends of Support Bars (D & E). Then attach Brackets (6) to the Support Bars using Bolts (1).


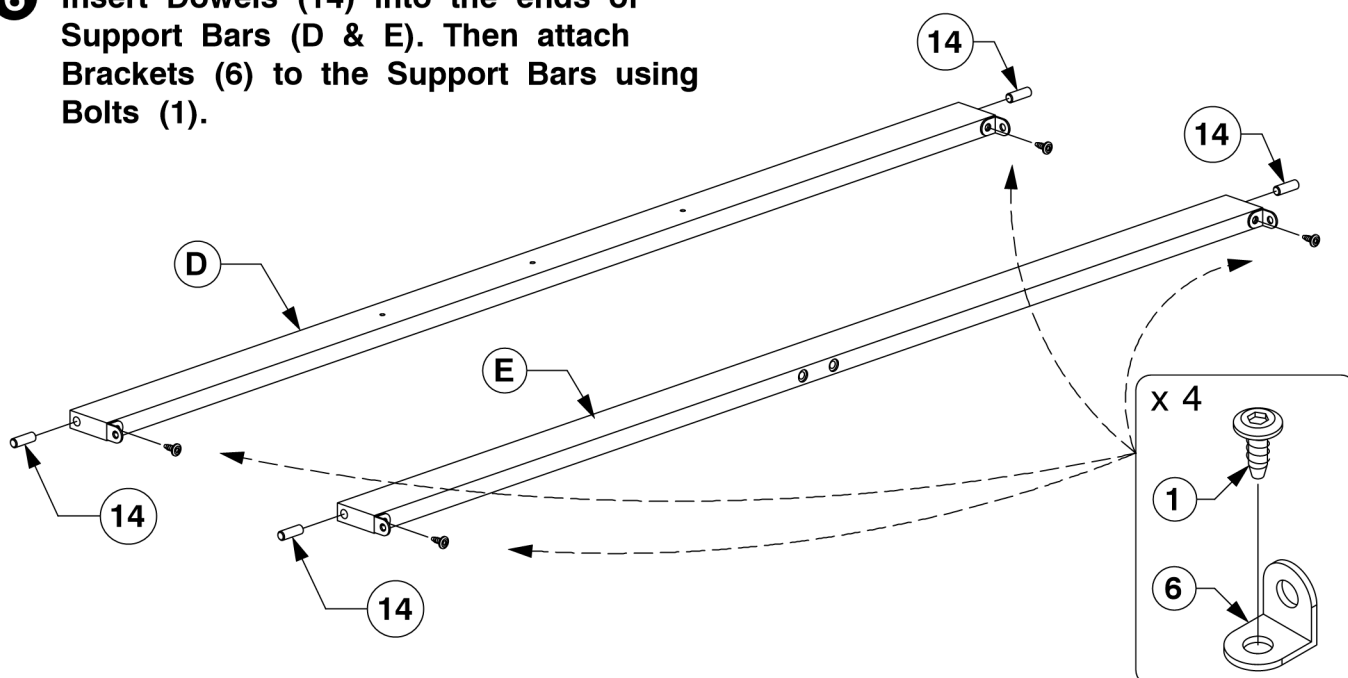


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 7** Fit the Right Side Panel (U) to the Top Panel (A).

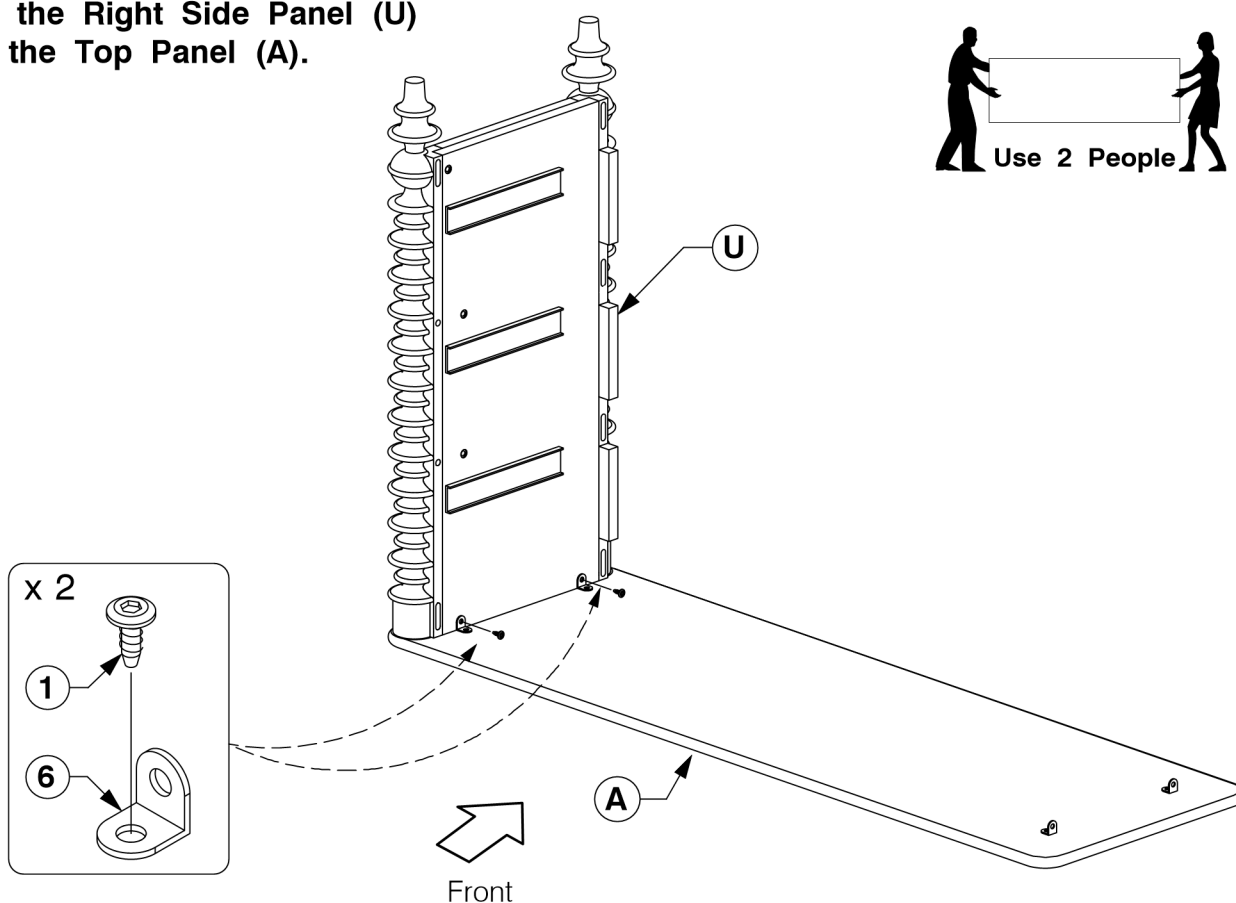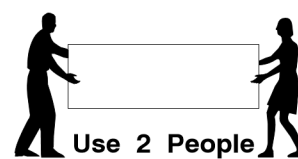


- 8** Assemble the Support Bar (B & F) to the Right Side Panel (U).

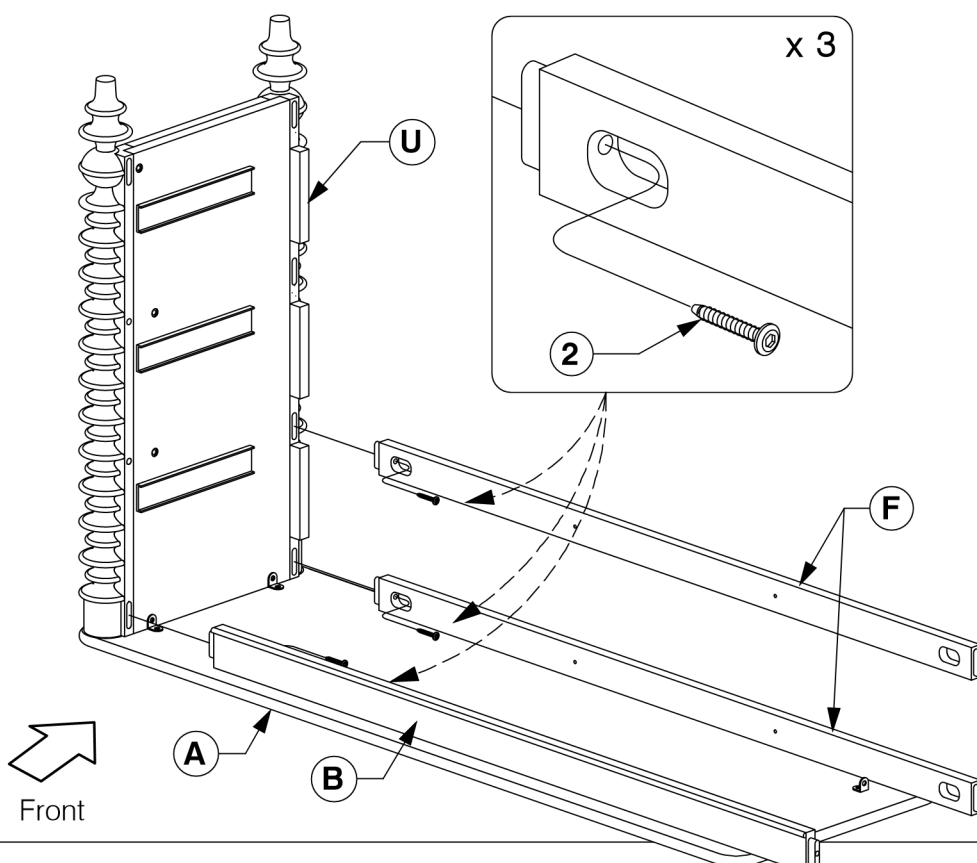


Step 1

Use the ball end of Allen key to start the bolt.

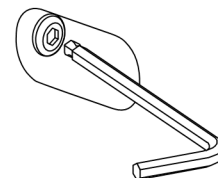

Step 2

Tighten fully with the straight end.

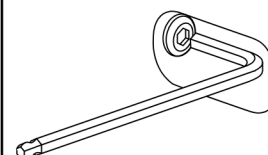


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 9** Assemble the Center Panel (V) to Support Bar (B & F).

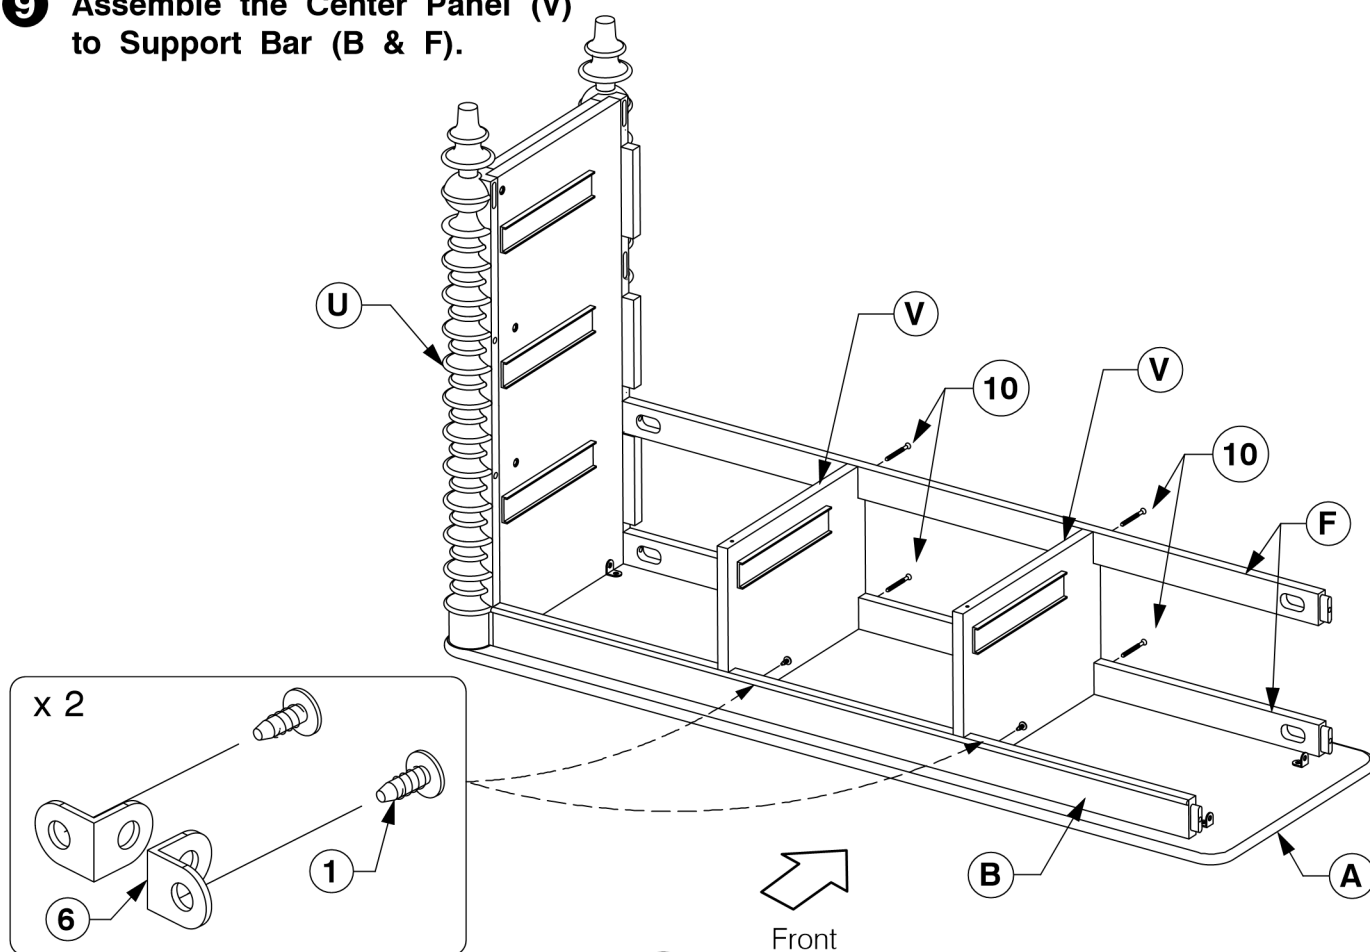

- 10** Attach Support Bars (D & E) to the Right Side Panel (U). Then tighten using Bolts.

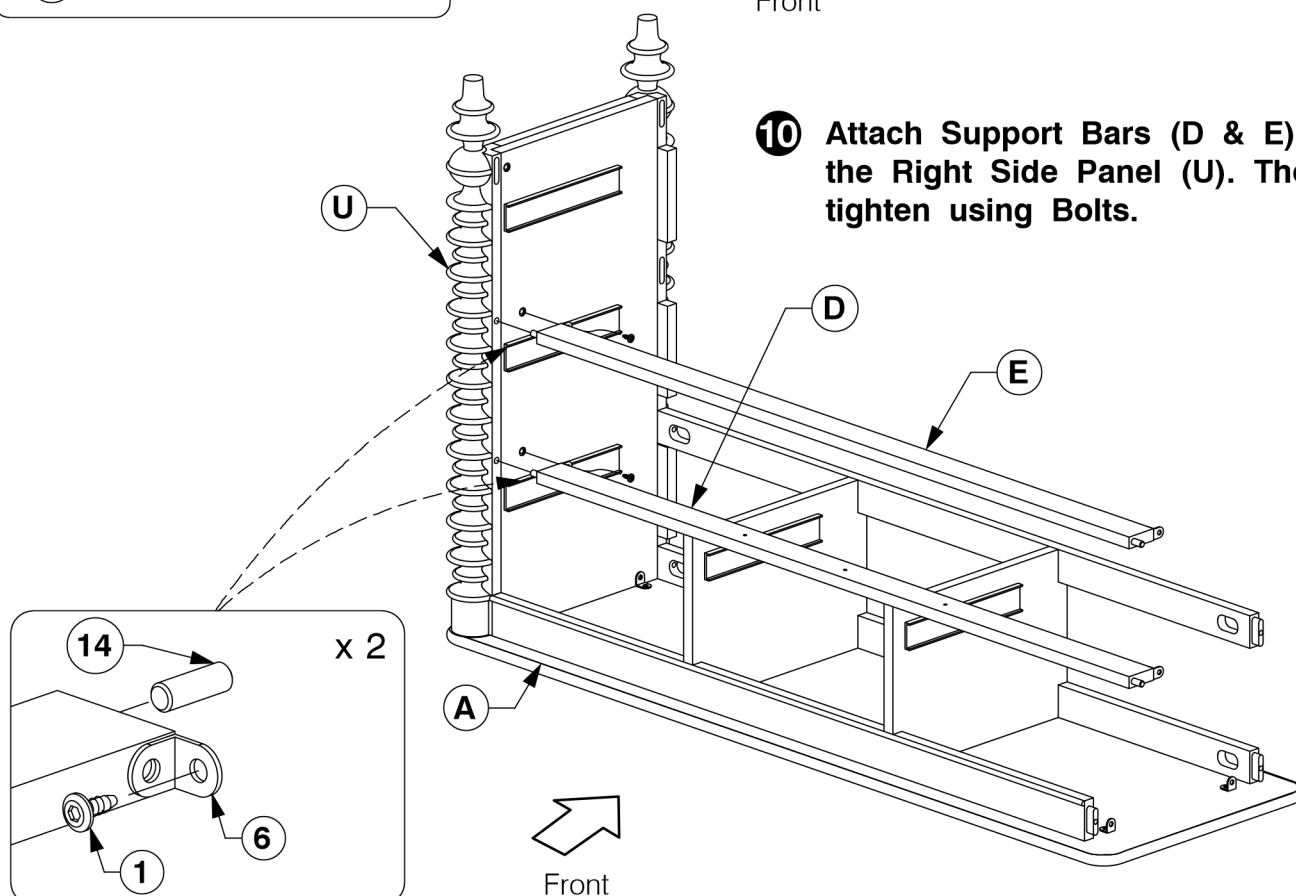


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 11** Assemble the Center Panel (W) to Support Bar (D, E, & F).

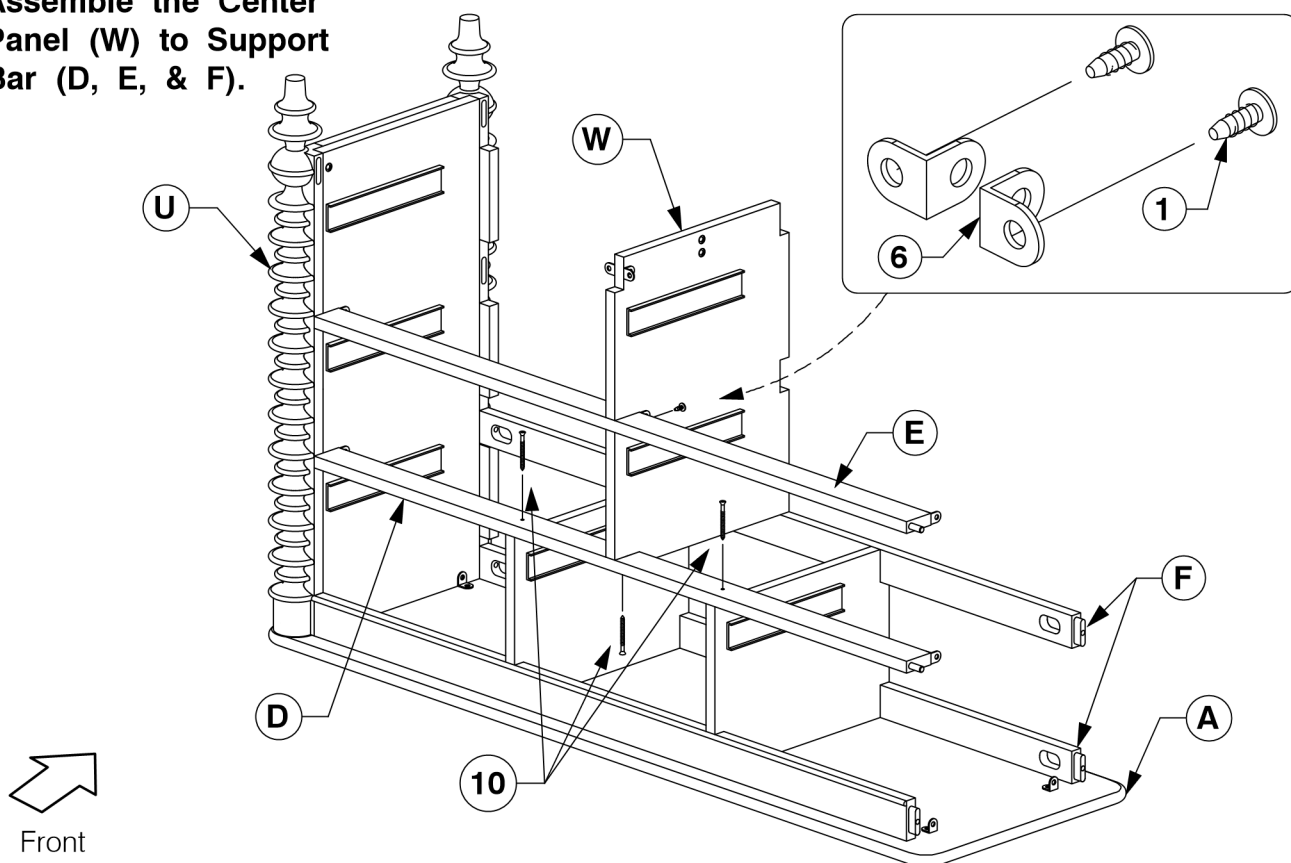


- 12** Fit the Support Bars (G) to the Center Panel (W).

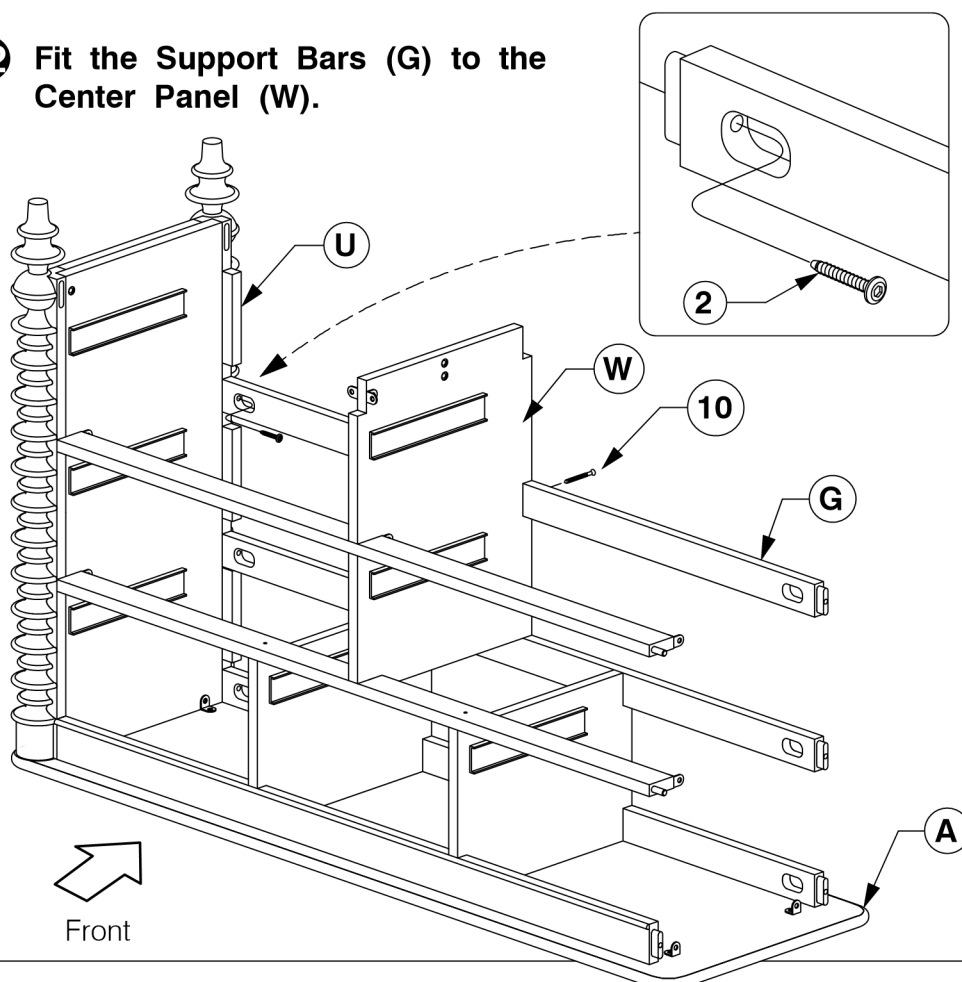


Step 1

Use the ball end of Allen key to start the bolt.

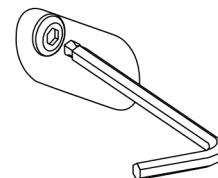

Step 2

Tighten fully with the straight end.

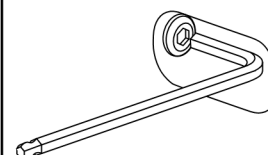


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

- 13** Attach the Support Bar (C & G) to the Right Side Panel (U) & Center Panel (W).

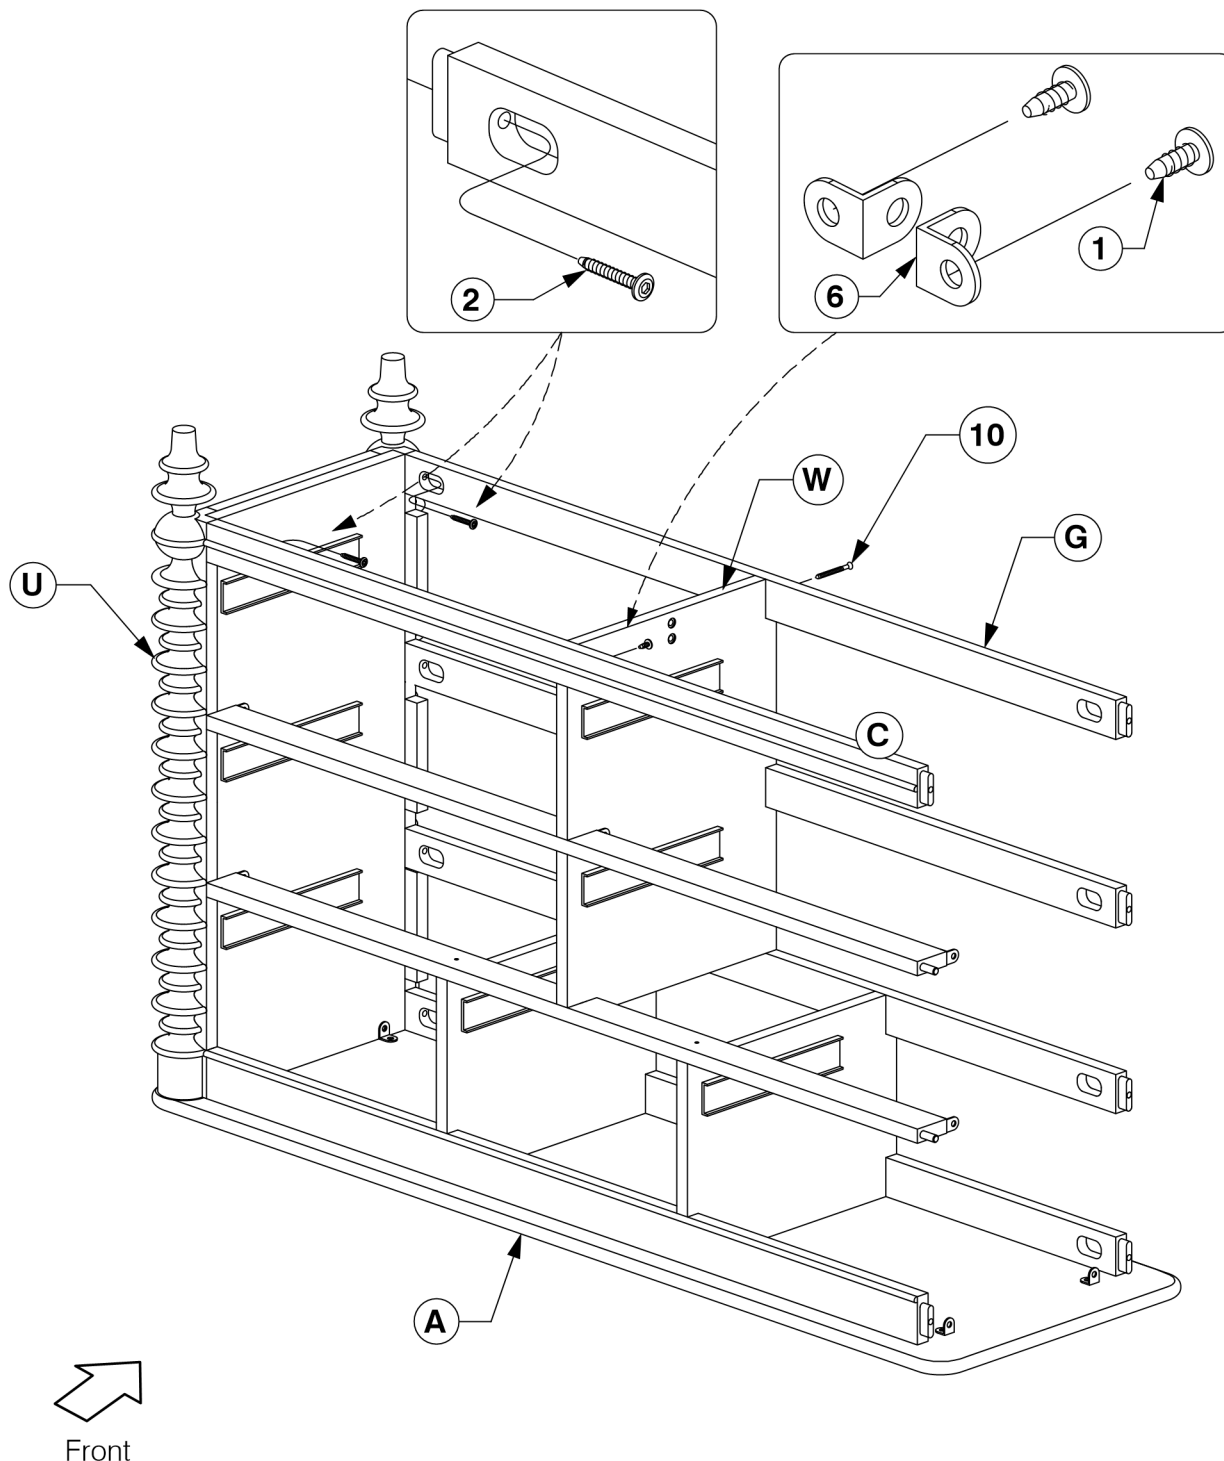


Step 1

Use the **ball end** of Allen key to start the bolt.

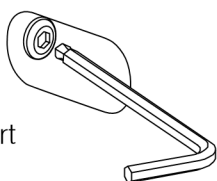

Step 2

Tighten fully with the **straight end**.


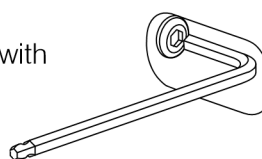


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

- 14** Assemble the Left Side Panel (T) to the Support Bars (B, C, D, E, F & G).

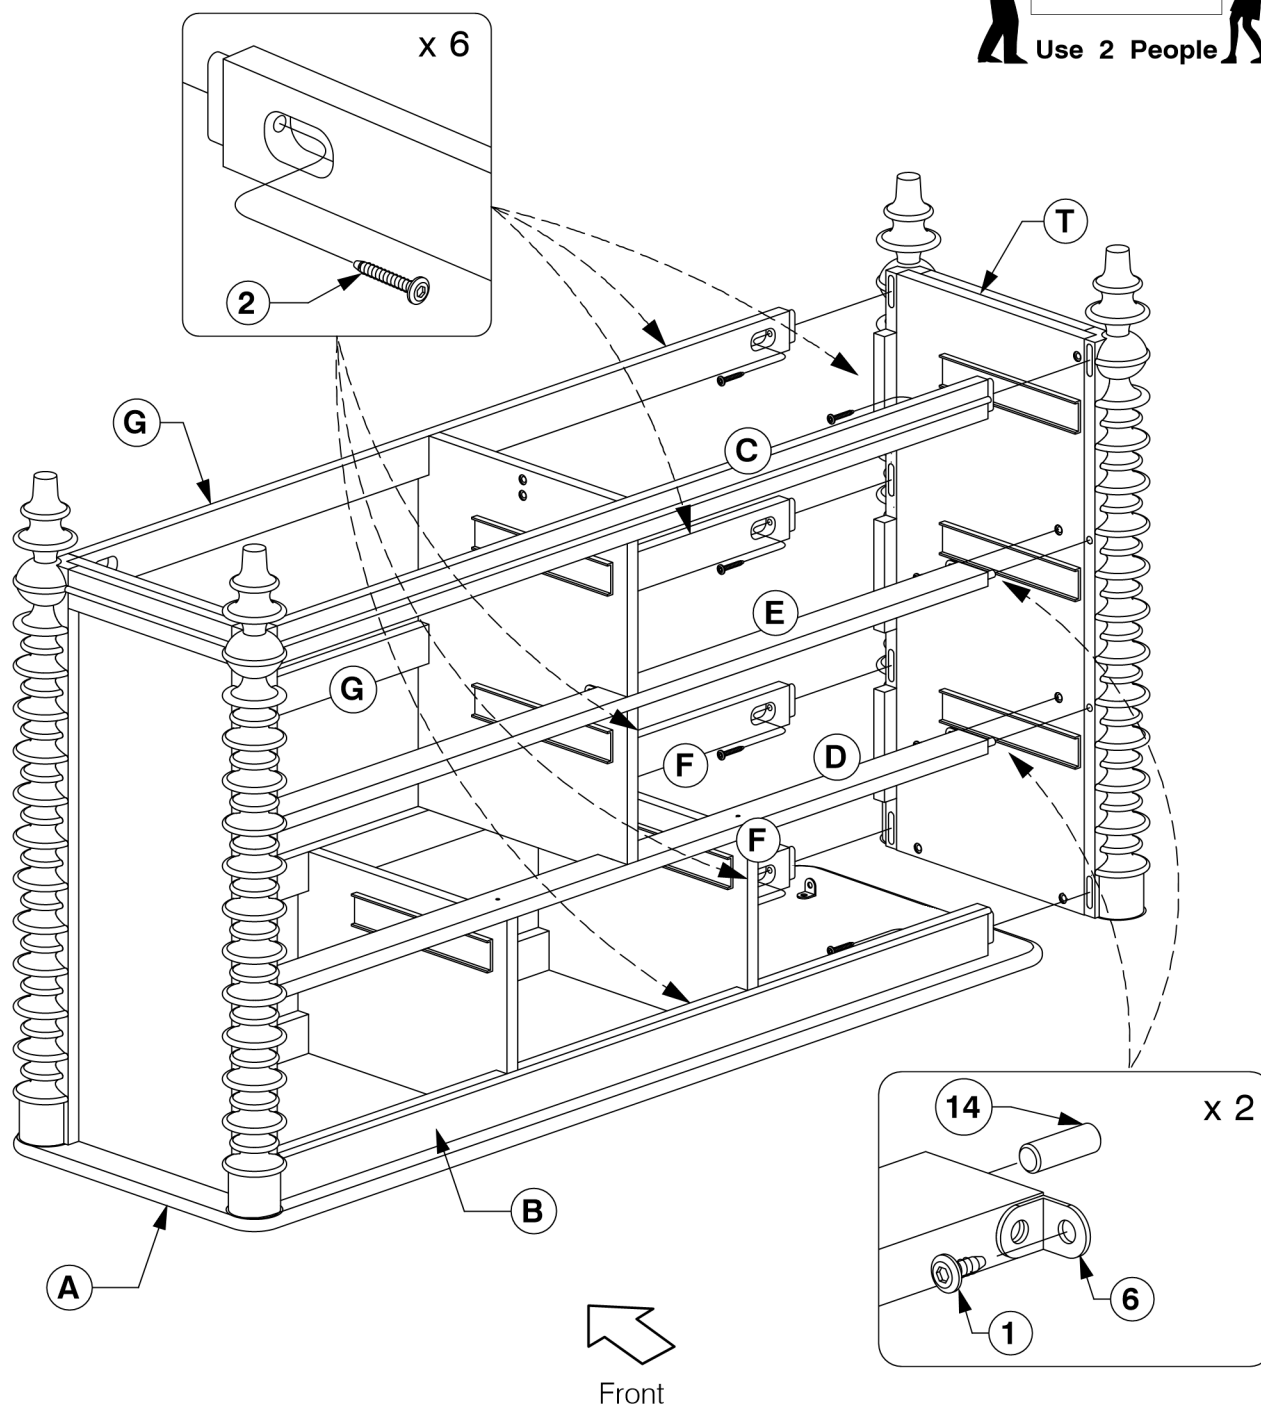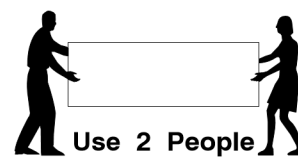


Step 1

Use the **ball end** of Allen key to start the bolt.

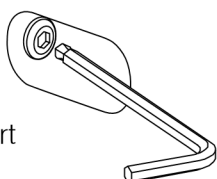

Step 2

Tighten fully with the **straight end**.

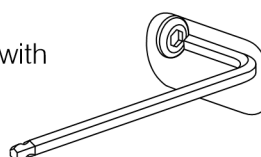


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 15** Tighten the bolts as shown.

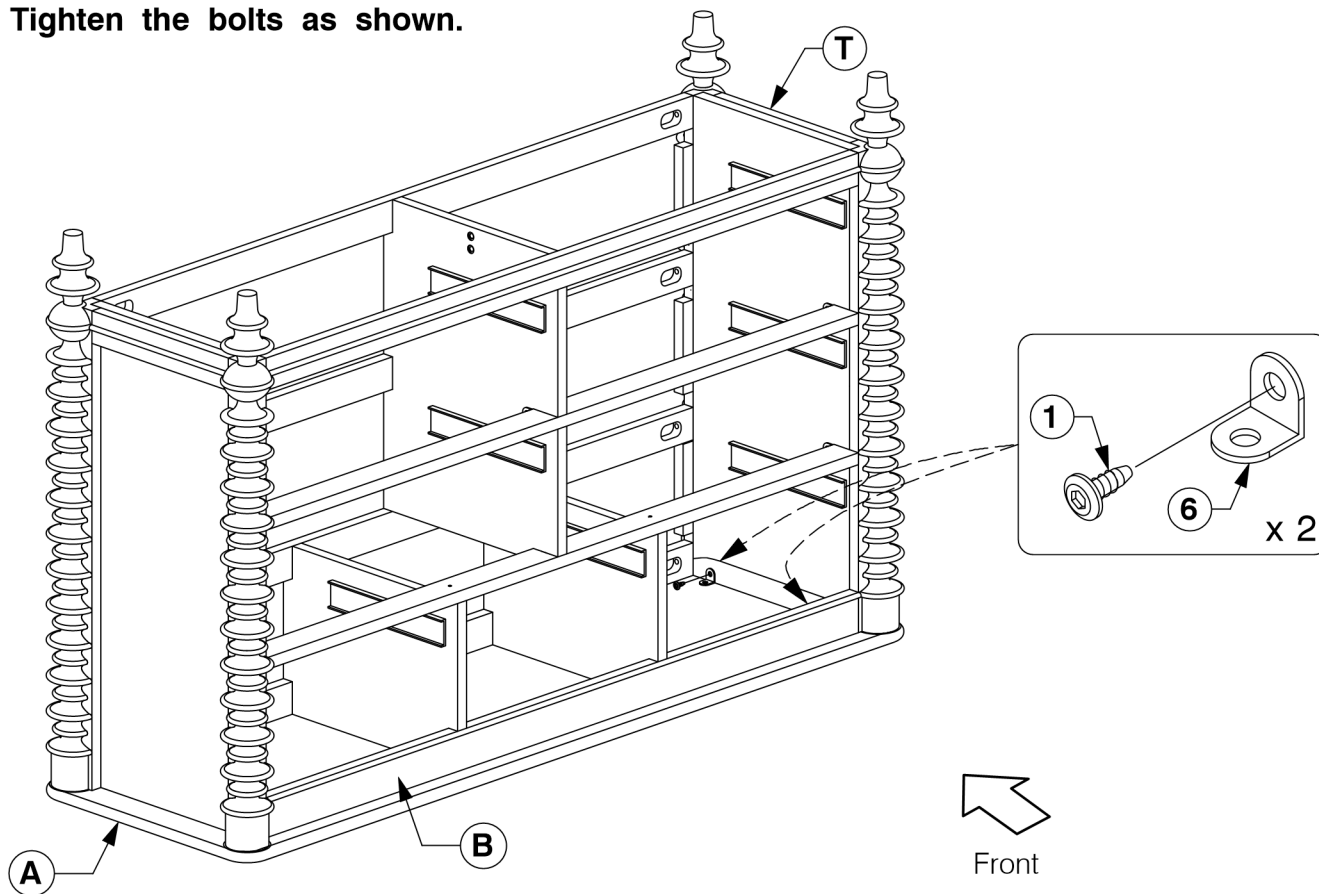

- 16** Fix the Adjustable foot to the bottom of the Center Post (H).
Fit the Center Post (H) to the Center Panel (W).

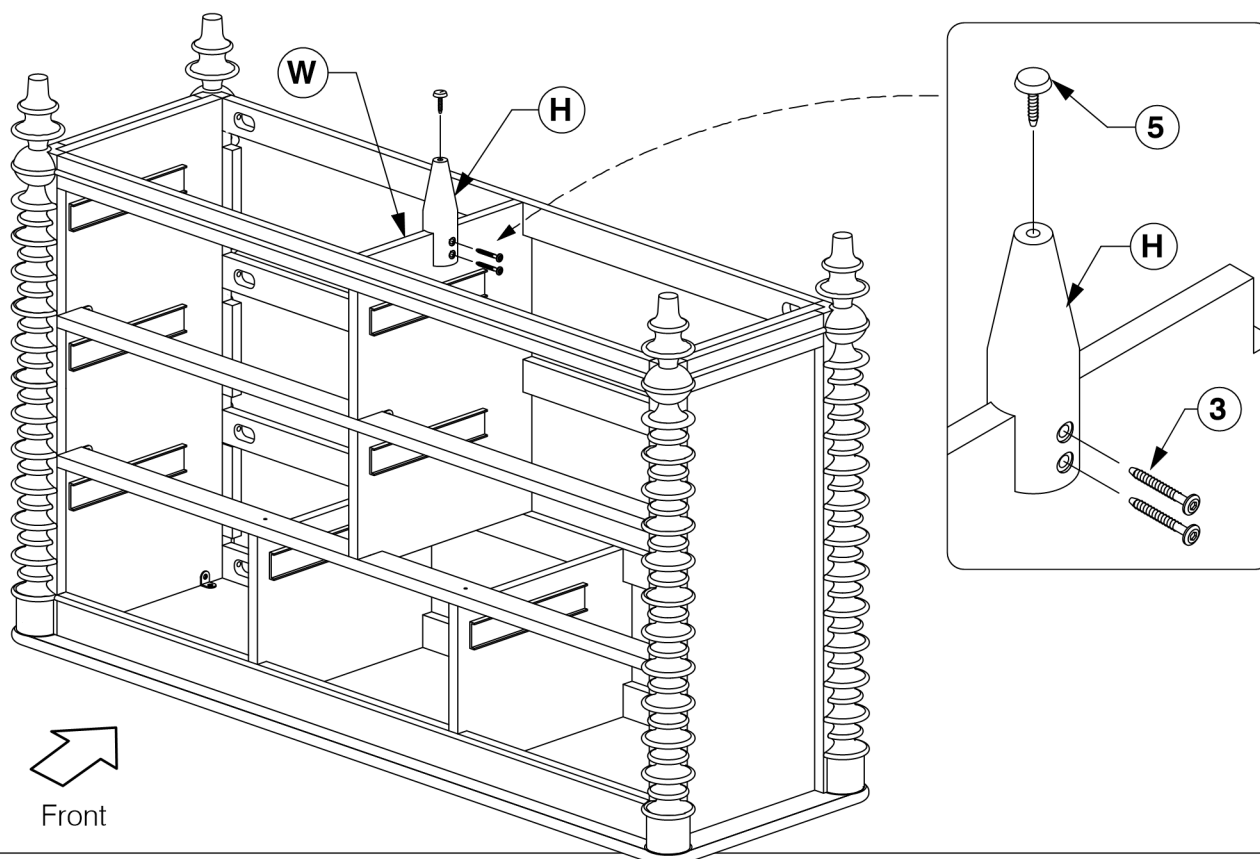


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 17** Attached the Back Panel (J) to the back of the frame.

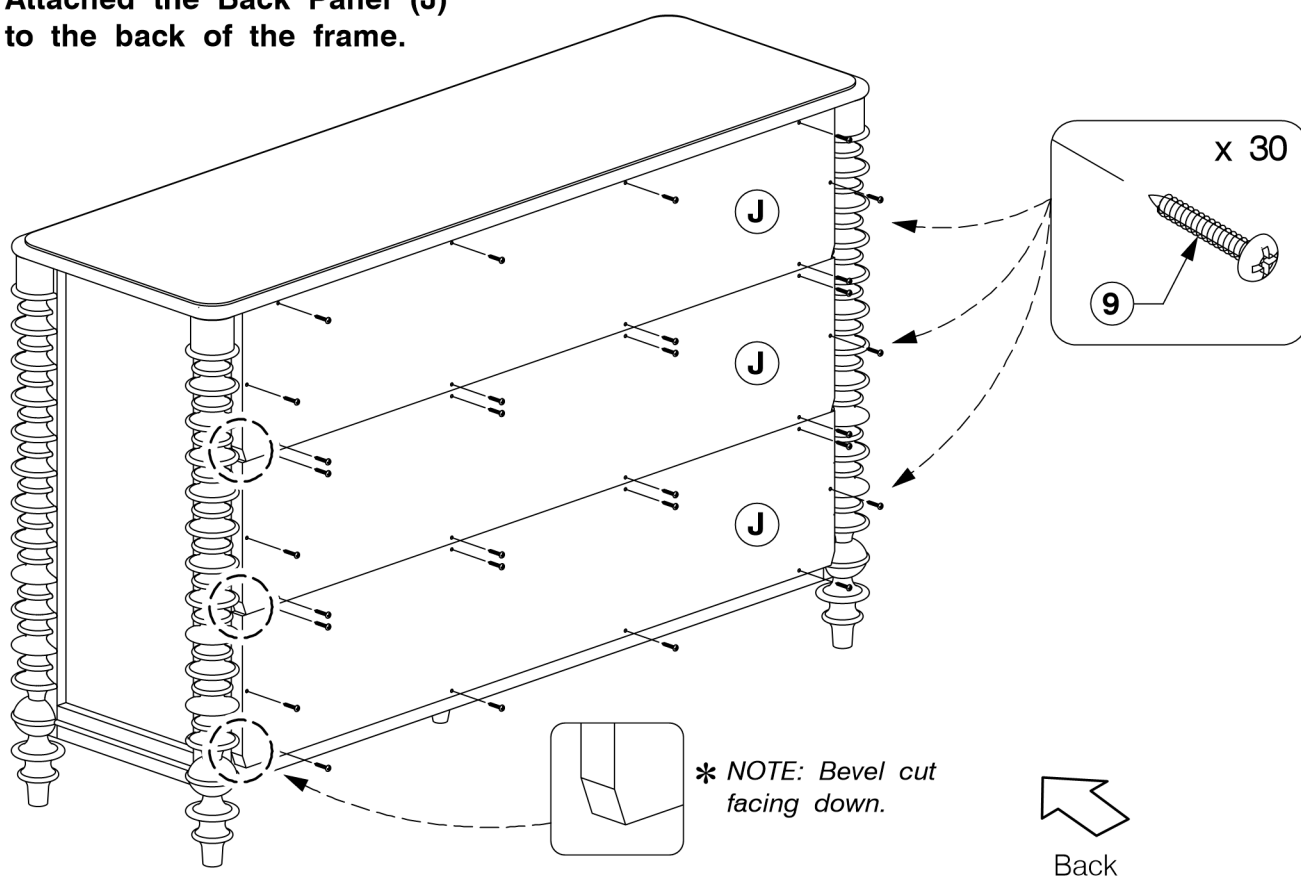

- 18** Fit the Drawer Box (K & N) to the casegood body.

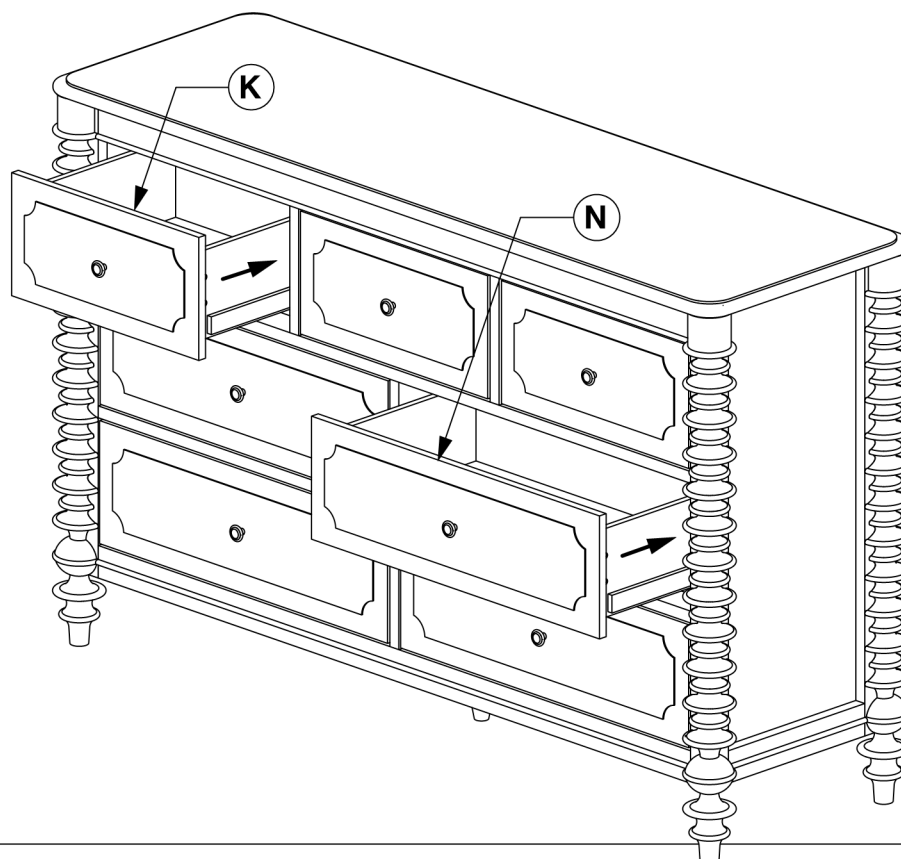


9029 7 Drawer Dresser

Assembly Instructions

WI-0426

19 Adjust the Drawer Face (K & N).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.

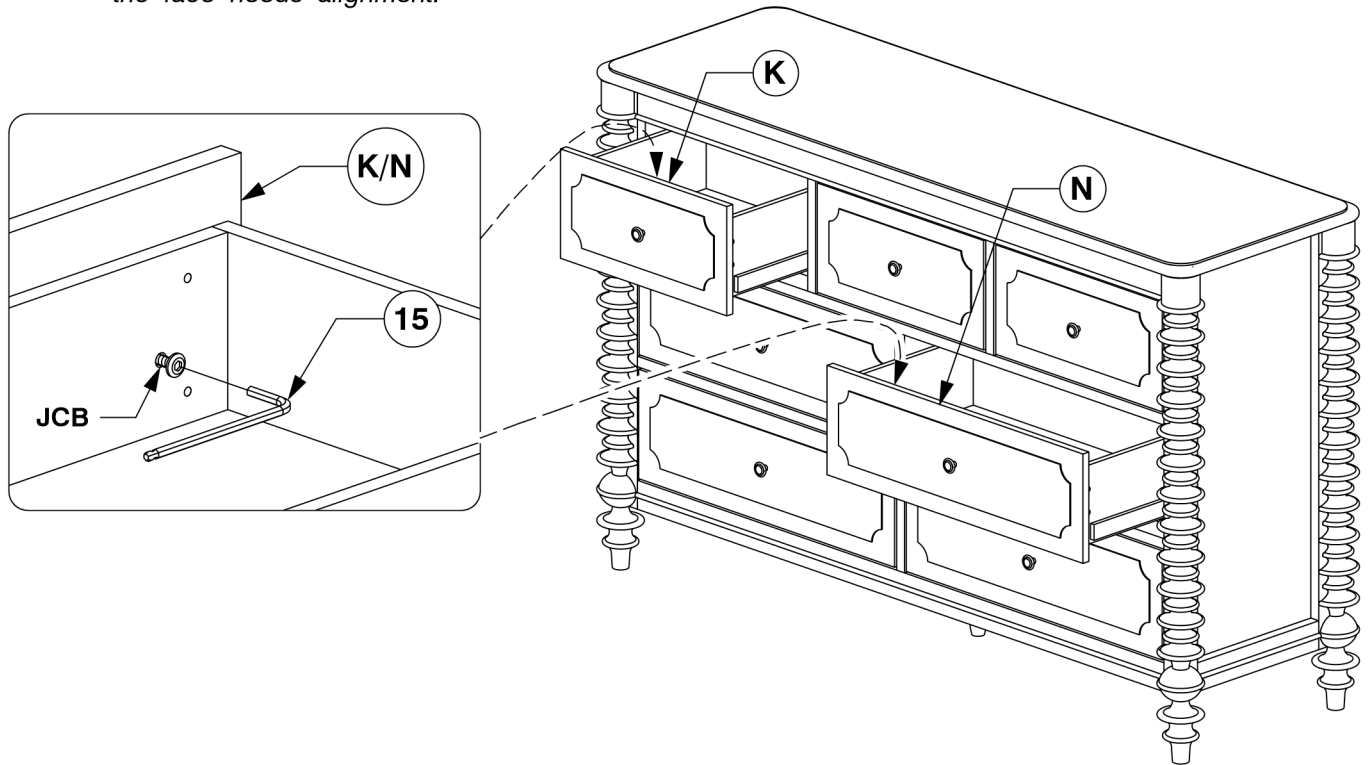

20 After the Drawer Faces (K & N) are aligned, secure with wood screws.

