
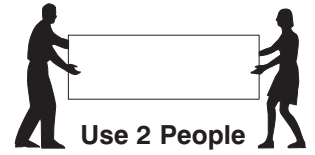


0267-1 King Bed

Assembly Instructions

WI-0326


1 Assembled View

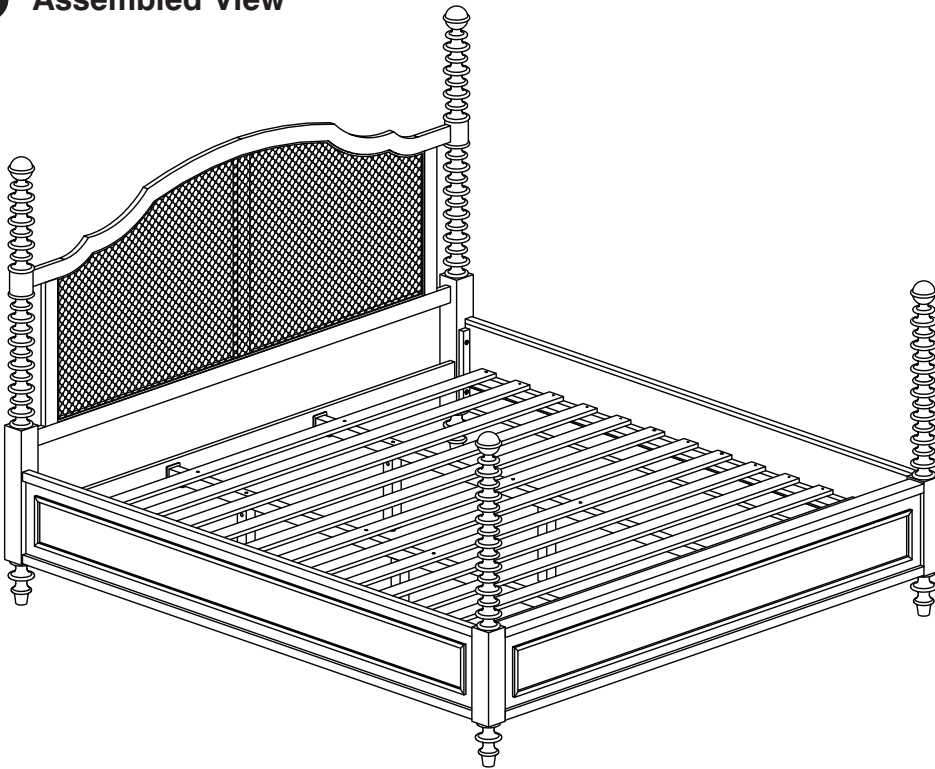

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List

Parts in Box A:

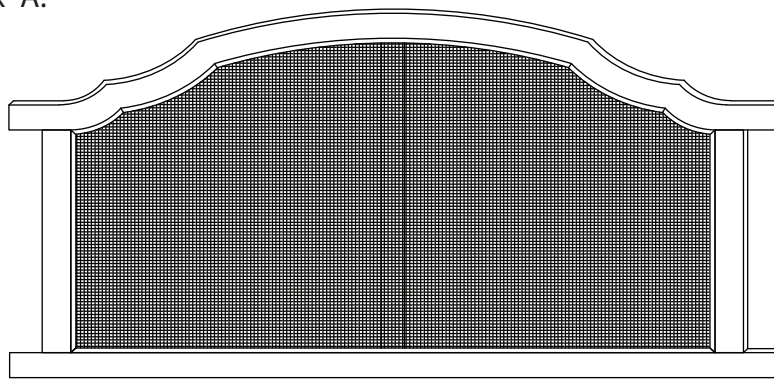

A Headboard Panel x 1



B Headboard Support x 1

0267-1 King Bed

Assembly Instructions

WI-0326

3 Parts List

Parts in Box B:



C
Headboard
Upper Post
x 2



D
Headboard
Center Post
(Left Hand)
x 1



E
Headboard
Center Post
(Right Hand)
x 1




F
Footboard
Upper Post
x 2



G
Headboard/
Footboard
Lower Post
x 4




H
Footboard
Center Post
(Left Hand)
x 1



J
Footboard
Center Post
(Right Hand)
x 1


Parts in Box C:

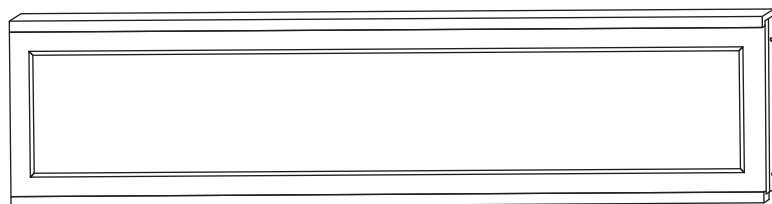

K Footboard Panel x 1




N Support
Leg x 6

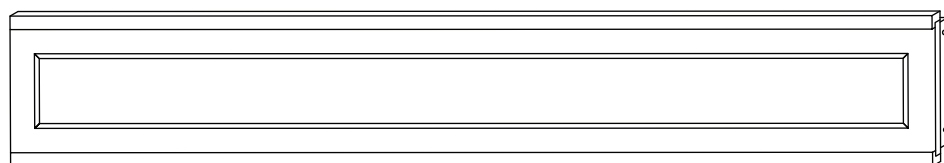

L Side Rail x 2



M Long Support x 2

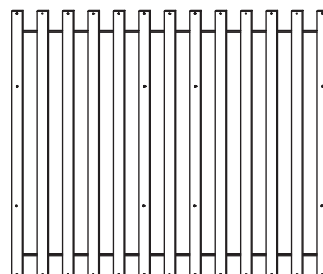



O Set of
Bed Slats x 1

0267-1 King Bed

Assembly Instructions


WI-0326

4 Hardware List

- | | | | |
|--|--|---|---|
| 
1 M6 x 15mm JCB
x 8 | 
2 M6 x 40mm JCB
x 36 | 
3 M6 x 90mm JCB
x 6 | 
4 Barrel Nut
x 6 |
| 
5 Adjustable
Foot x 6 | 
6 Center Rail
Bracket x 4 | 
7 Wood Screw
(M4 x 32mm) x 18 | 
8 Allen Key
x 1 |

5 Assemble the Support Leg (N) to the Long Support (M).

x2

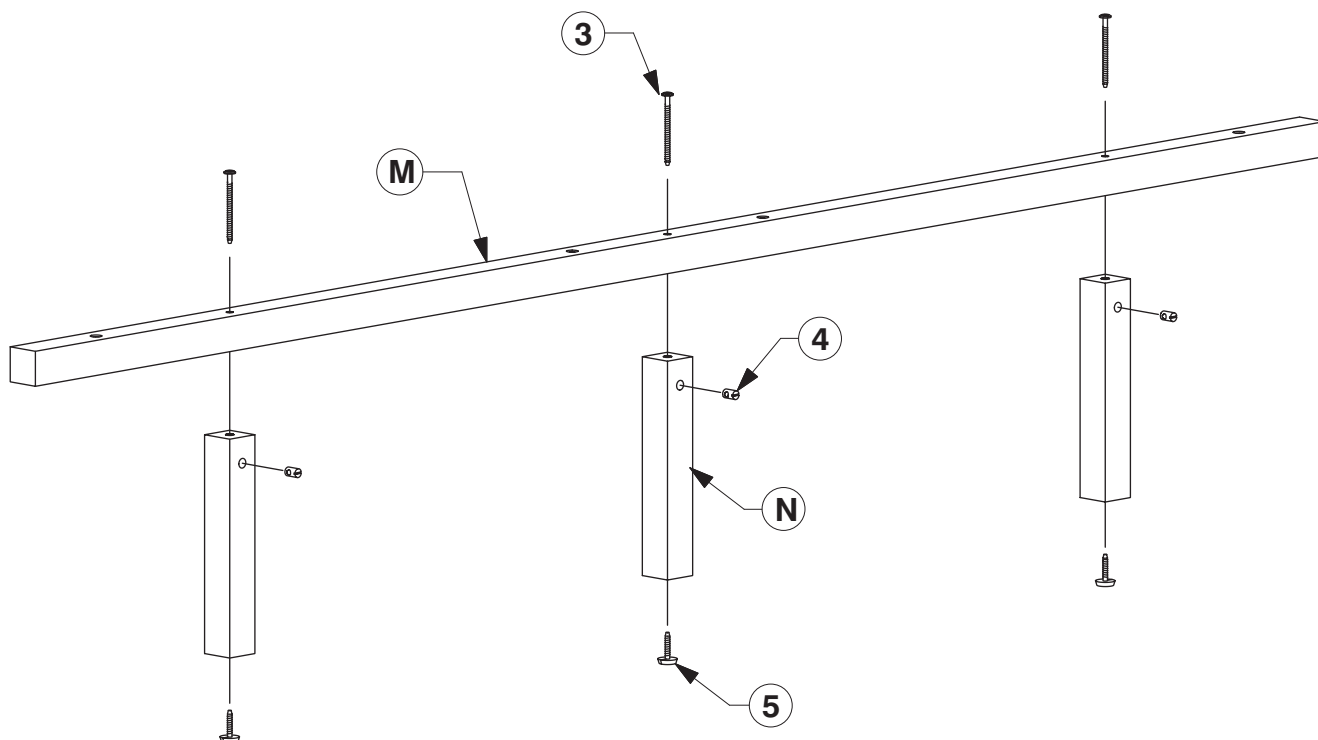


0267-1 King Bed


Assembly Instructions

WI-0226

- 6** Assemble Headboard Upper Post (C) and HB/FB Lower Post (G) to the Headboard Center Post (D & E).

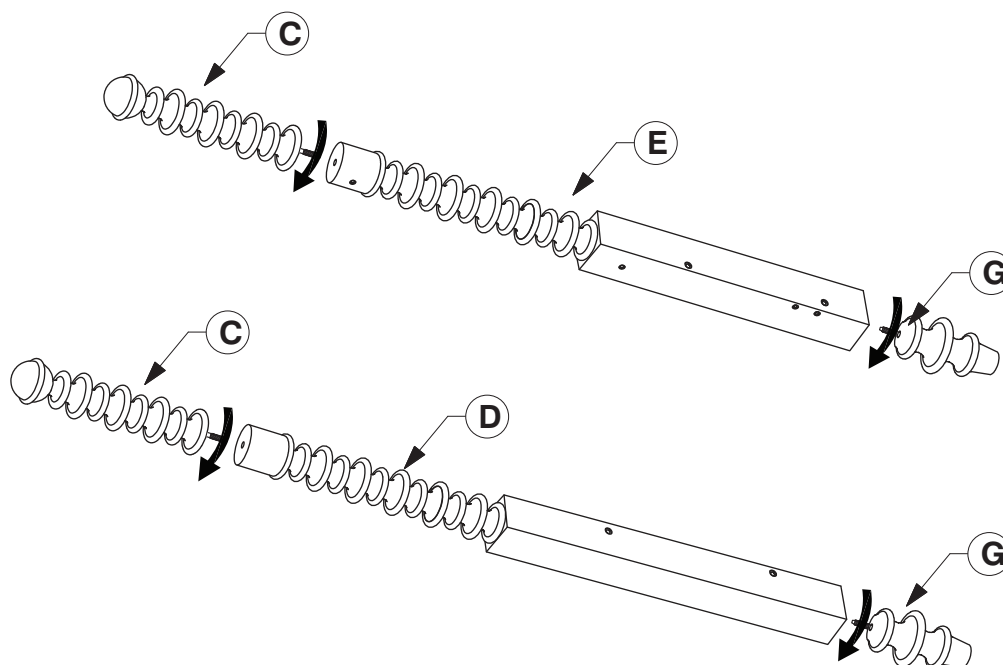

- 7** Assemble Footboard Upper Post (F) and HB/FB Lower Post (G) to the Footboard Center Post (H/J).

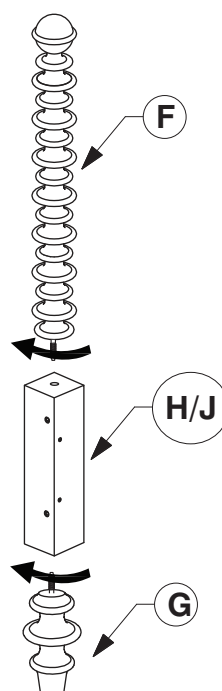


0267-1 King Bed


Assembly Instructions

WI-0226

- 8** Attach the Headboard Post (D & E) to the Headboard Panel (A) and Headboard Support (B).

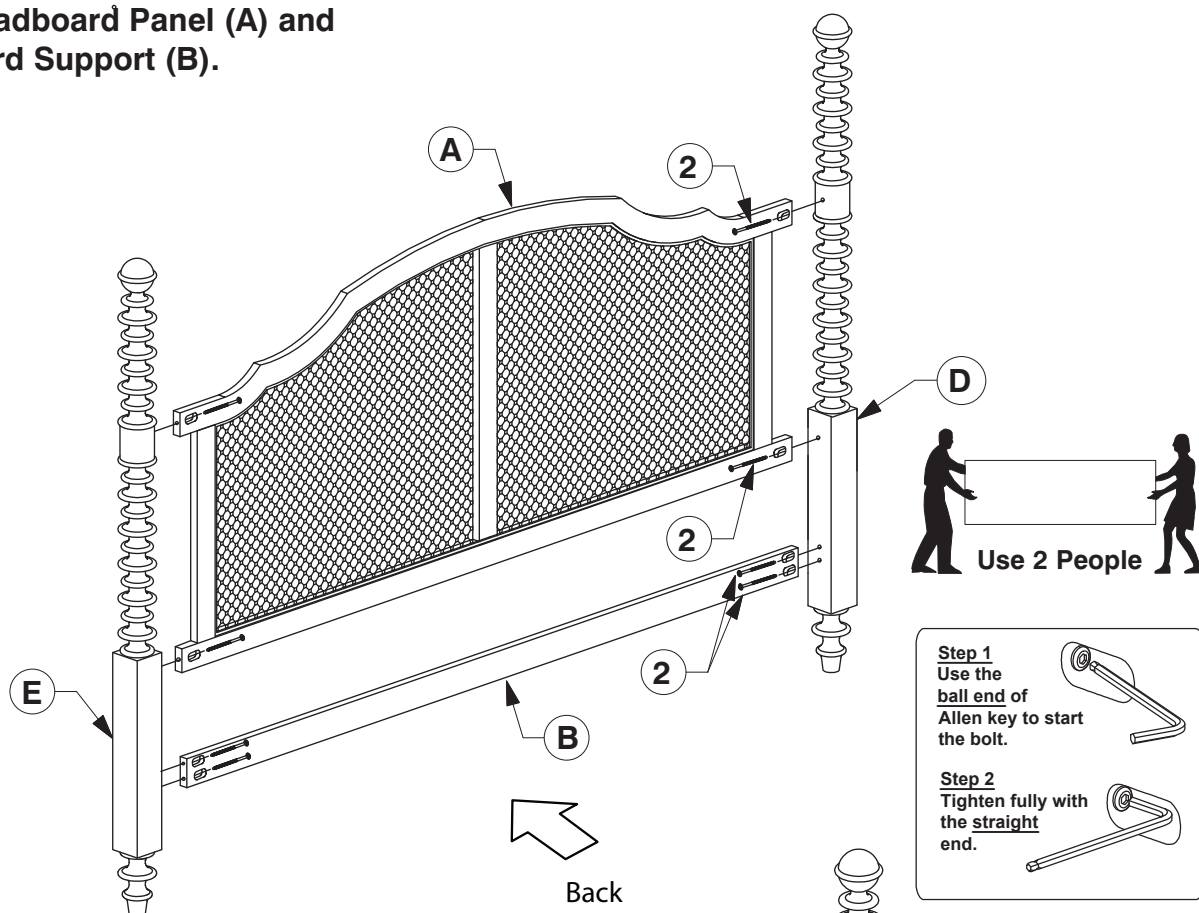

- 9** Attach the Footboard Post (H & J) to the Footboard Panel (K).

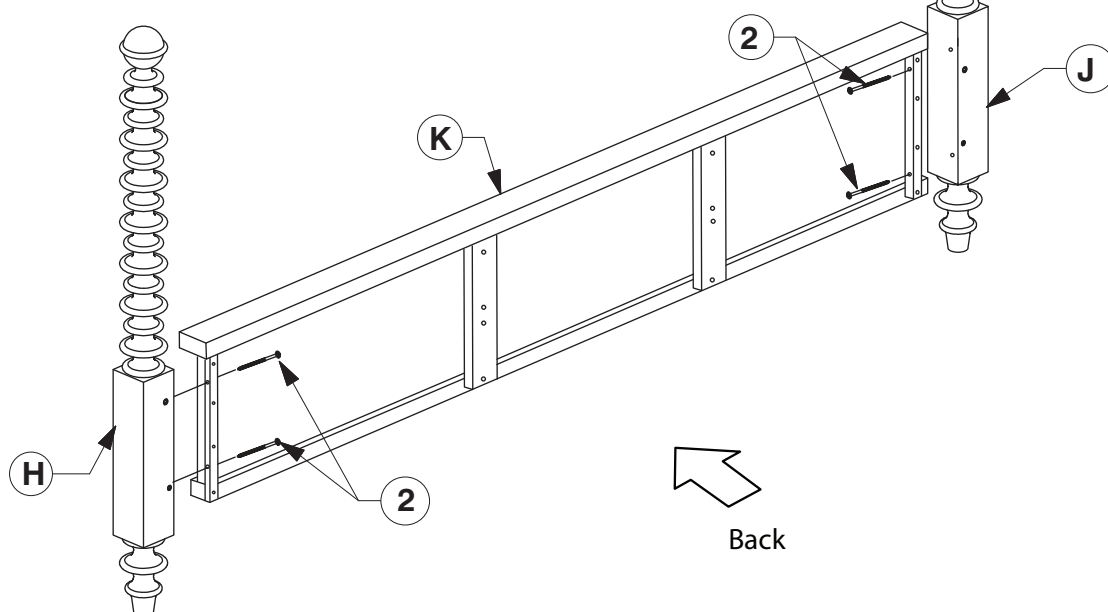


0267-1 King Bed


Assembly Instructions

WI-0326

- 10** Fit the Center Rail Bracket (6) to the Headboard Support (B).

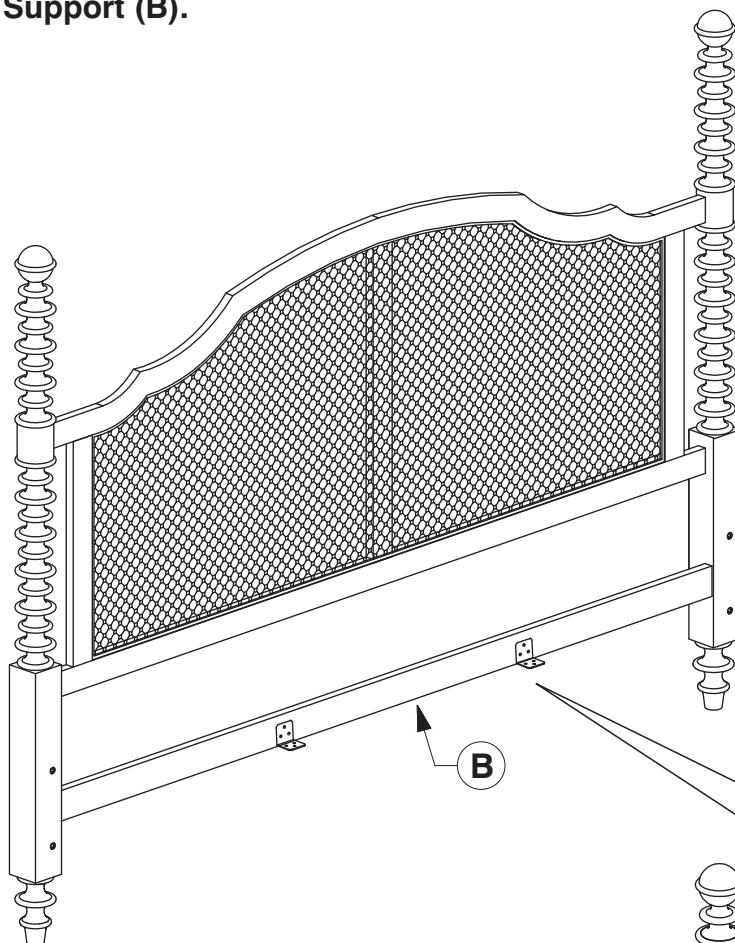

- 11** Fit the Center Rail Bracket (6) to the Footboard Panel (K).


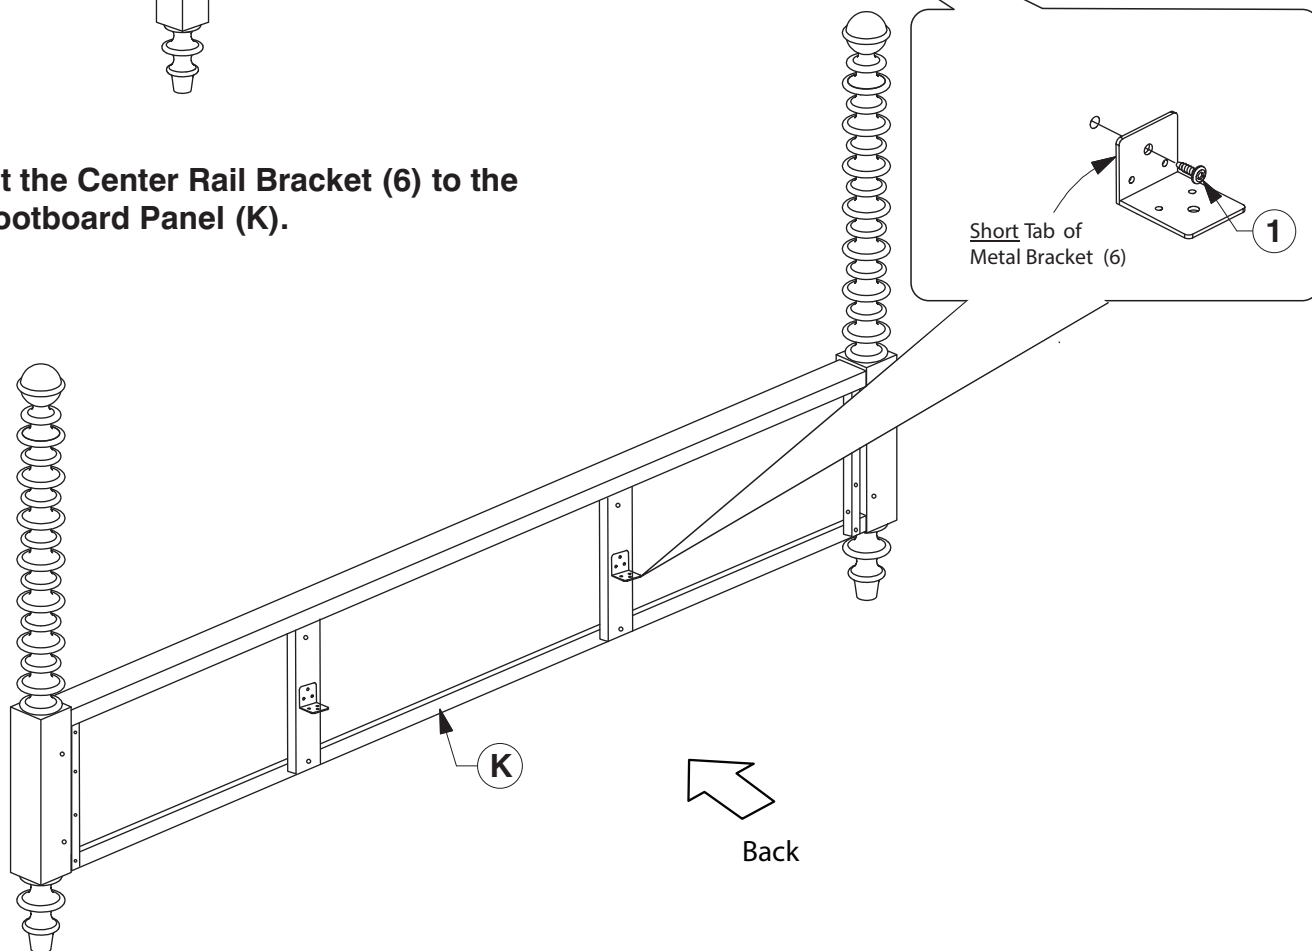


0267-1 King Bed

Assembly Instructions

WI-0326

- 12** Assemble the Side Rail (L) to the Head / Footboard.

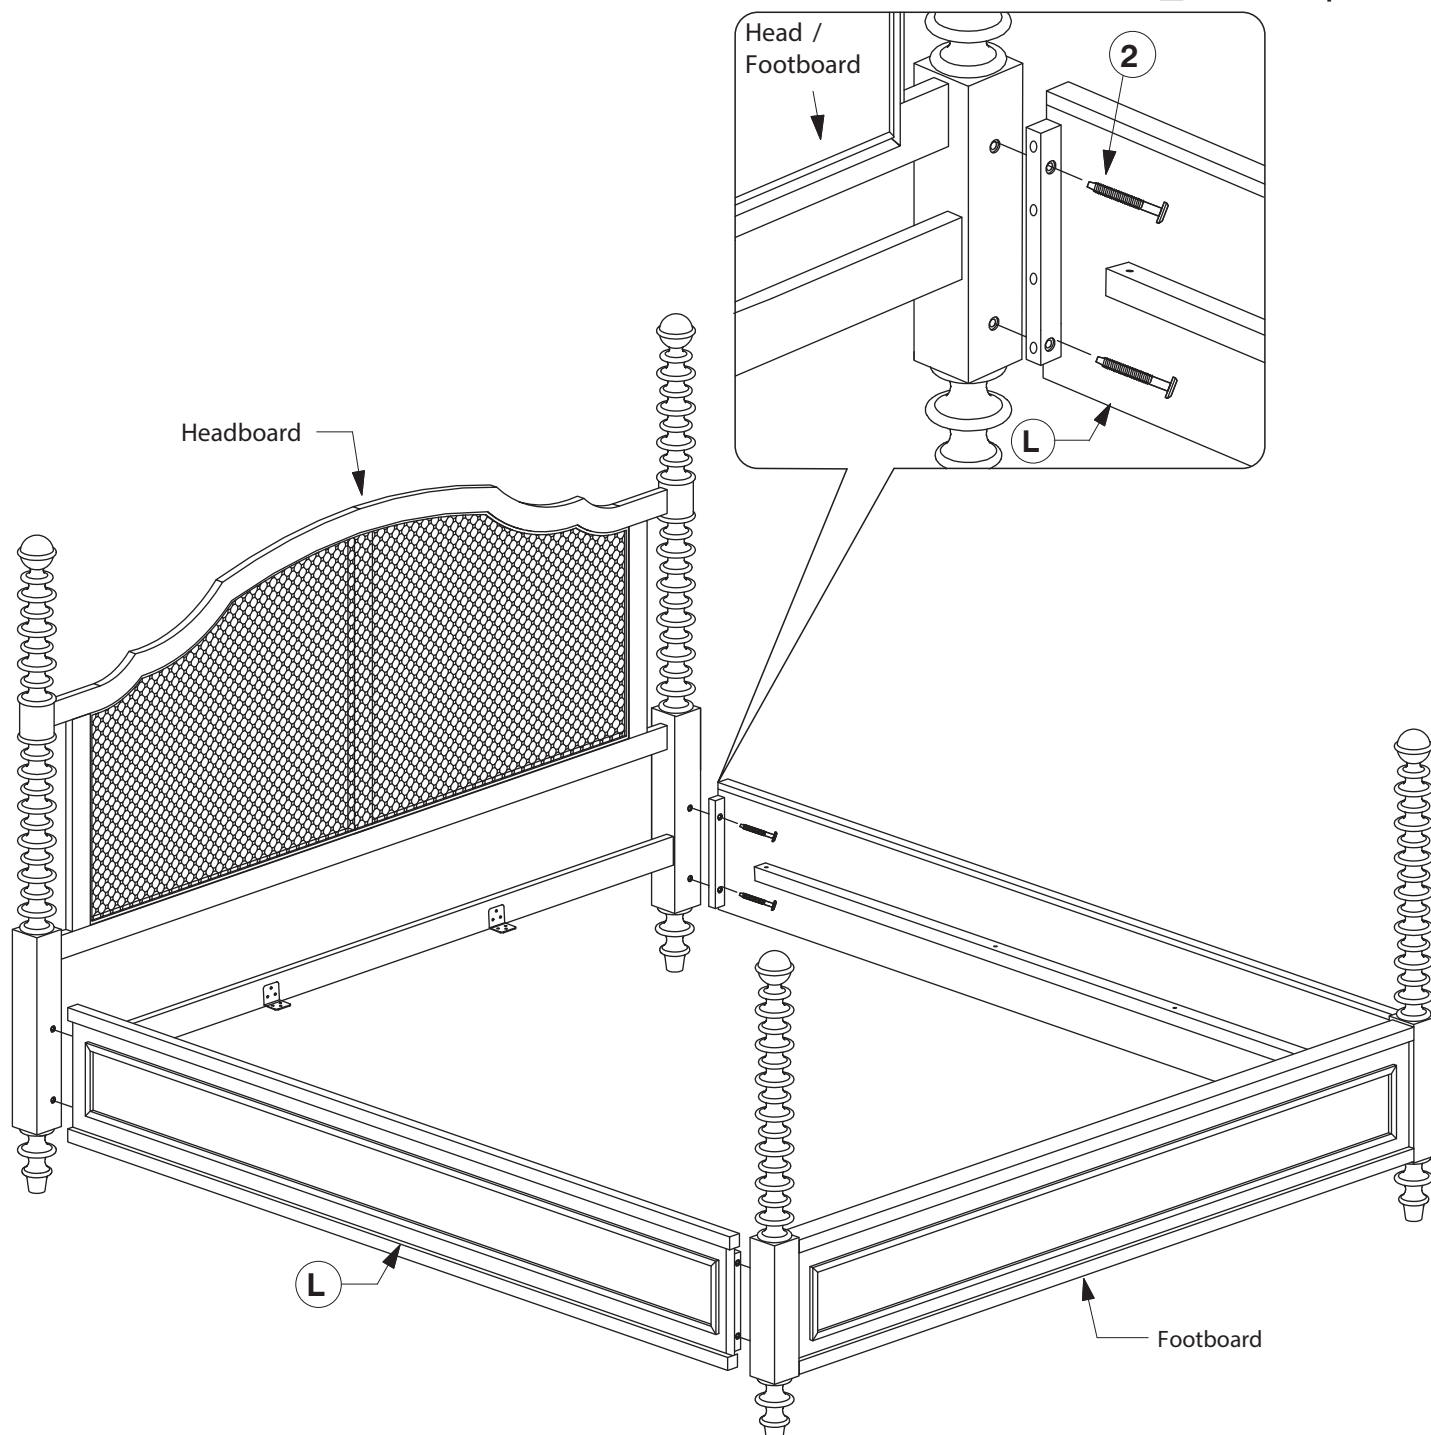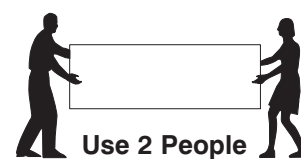


0267-1 King Bed

Assembly Instructions

WI-0326

- 13** Bolt the Long Support (M) to the Center Rail Brackets on the Headboard/Footboard.

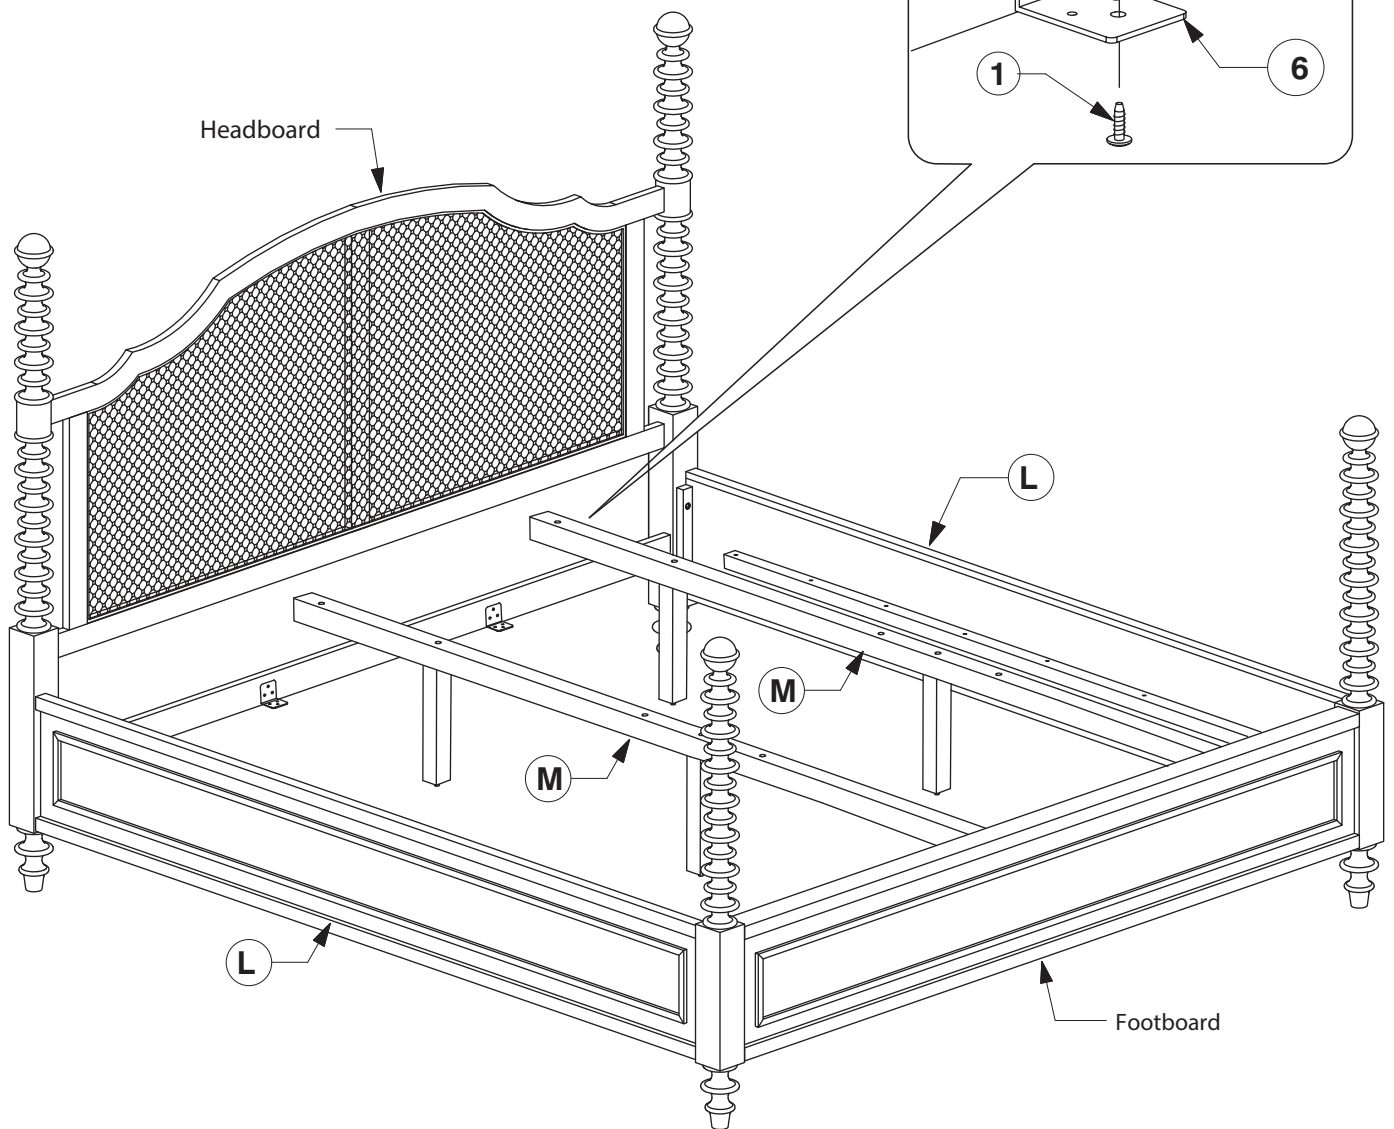


0267-1 King Bed

Assembly Instructions

WI-0326



- 14** Bolt & Screw the Bed Slats (O) to the Side Rail (L) and Long Support (M).

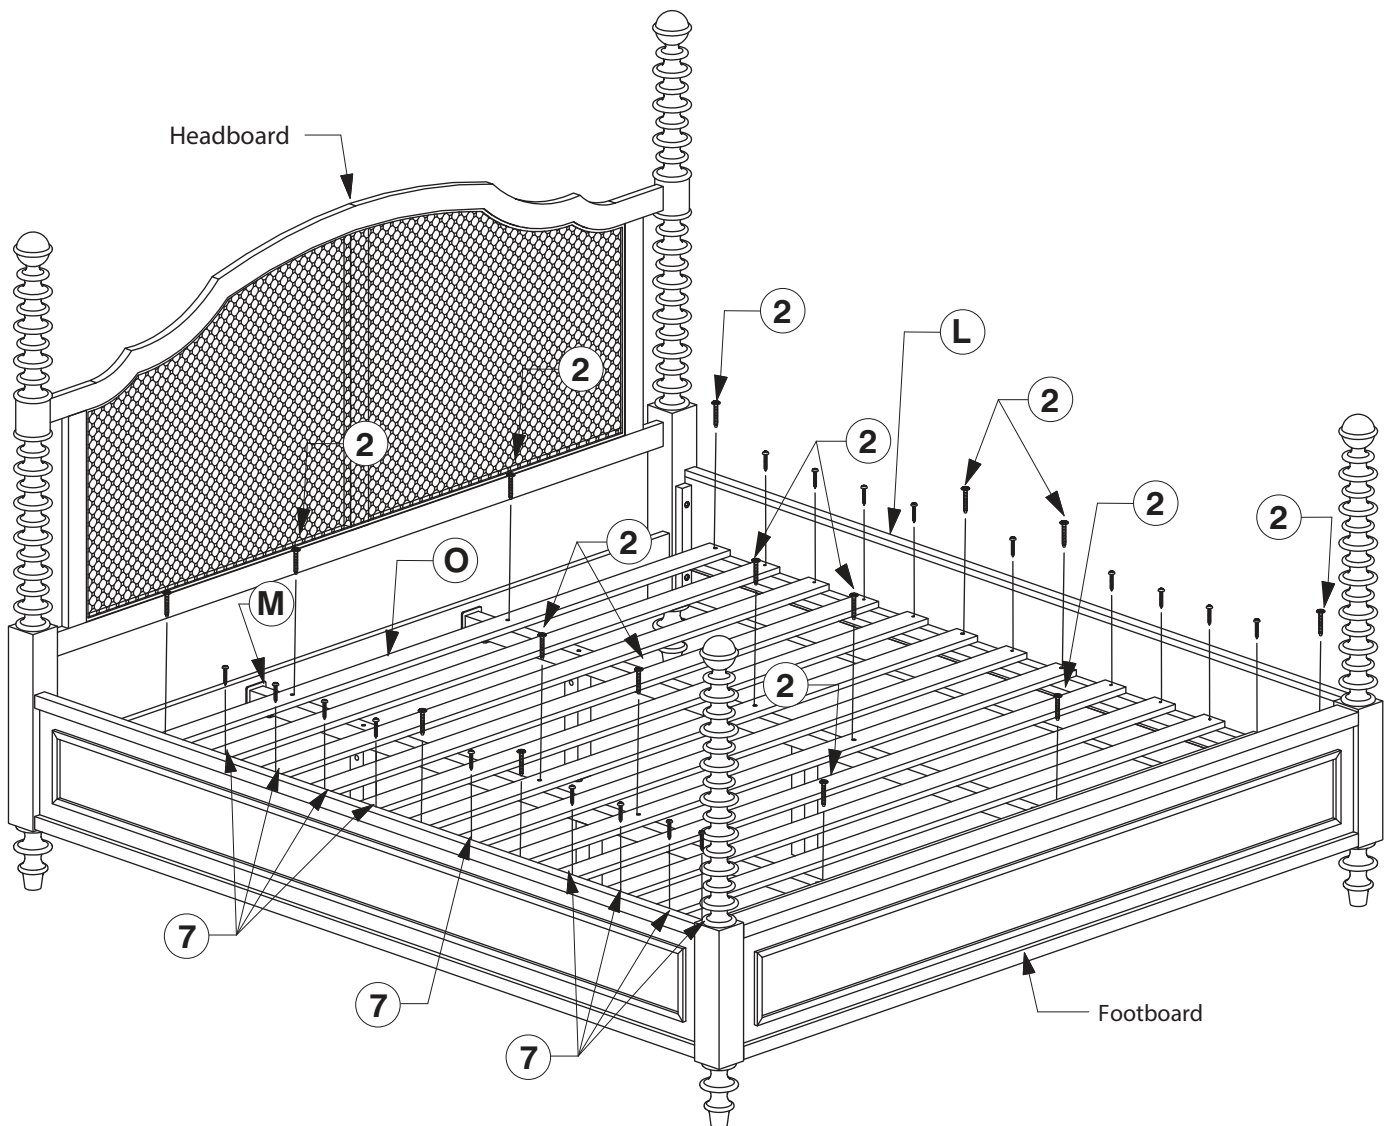

9029 2D Night Stand












Assembly Instructions

WI-0425

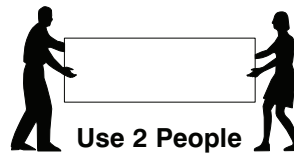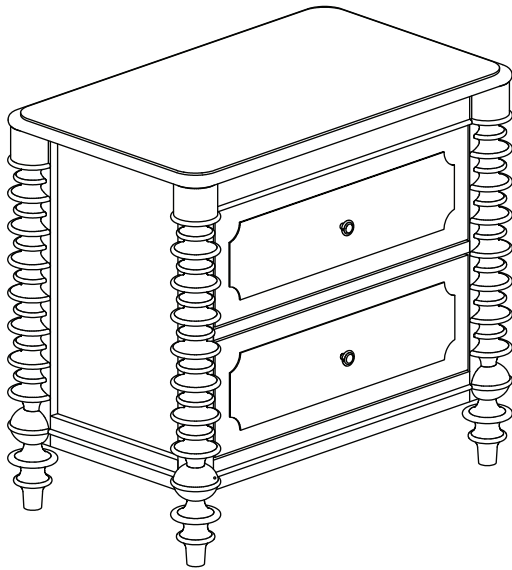

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

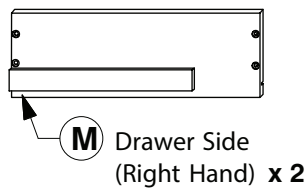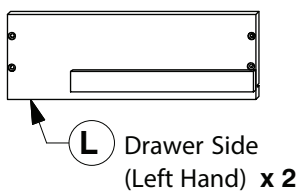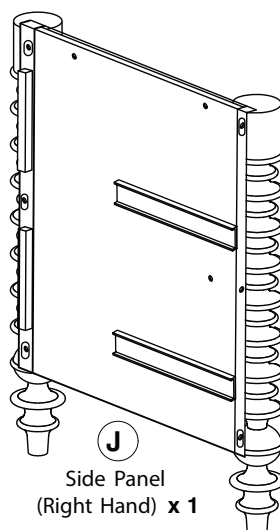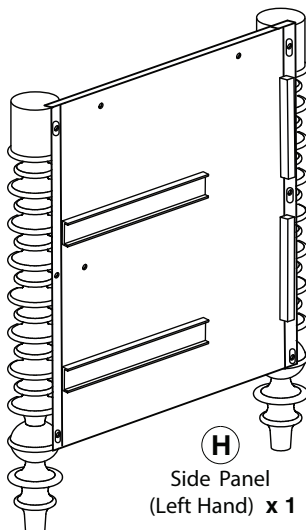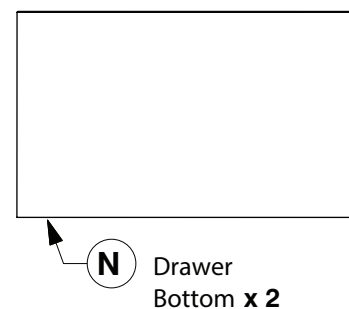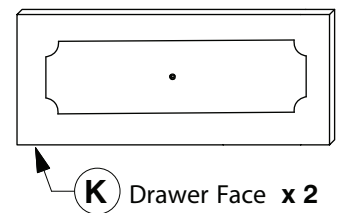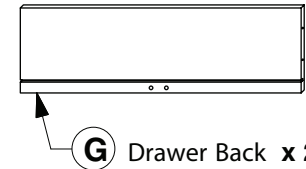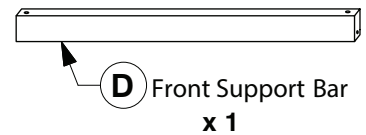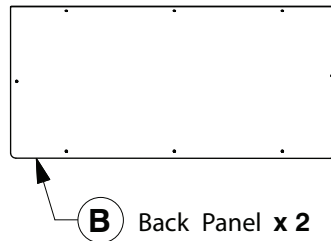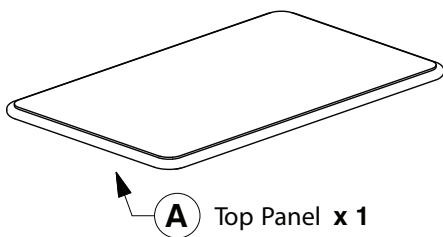


9029 2D Night Stand

Assembly Instructions


WI-0425

2 Hardware List

- | | | | | |
|---|--|--|--|---|
| 
1 M6 x 15mm
JCB x 12 | 
2 M6 x 40mm
JCB x 10 | 
3 'L' Bracket
(5005-3) x 6 | 
4 M8 x 30mm
Wood Dowel
x 2 | 
5 M6 x 25mm
Wood Dowel
x 8 |
| 
6 M4 x 16mm
Wood Screw x 16 | 
7 M4 x 20mm
Wood Screw x 8 | 
8 M4 x 25mm
Wood Screw x 20 | 
9 Handle
(9029) x 2 | |
| 
10 M4 x 22mm
Wood Screw x 2 | | | 
11 Allen Key
x 1 | |

3 Assemble the Drawer Sides (L & M) and Drawer Rail (P) to the Drawer Face (K).

x2

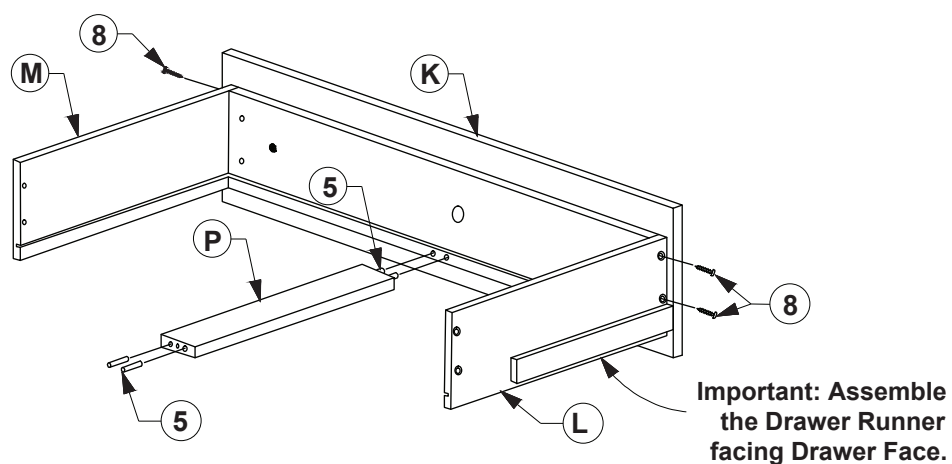


9029 2D Night Stand

Assembly Instructions


WI-0425

- 4** Slide the Drawer Bottom (N) into the groove on the Drawer Sides (L & M).

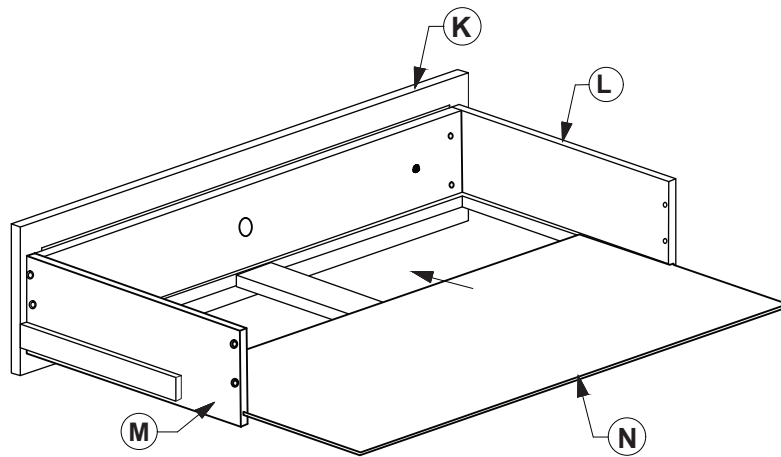


x2

- 5** Assemble the Drawer Back (G) to the Drawer Sides (L & M). Fit the Handle to the Drawer Face (K).

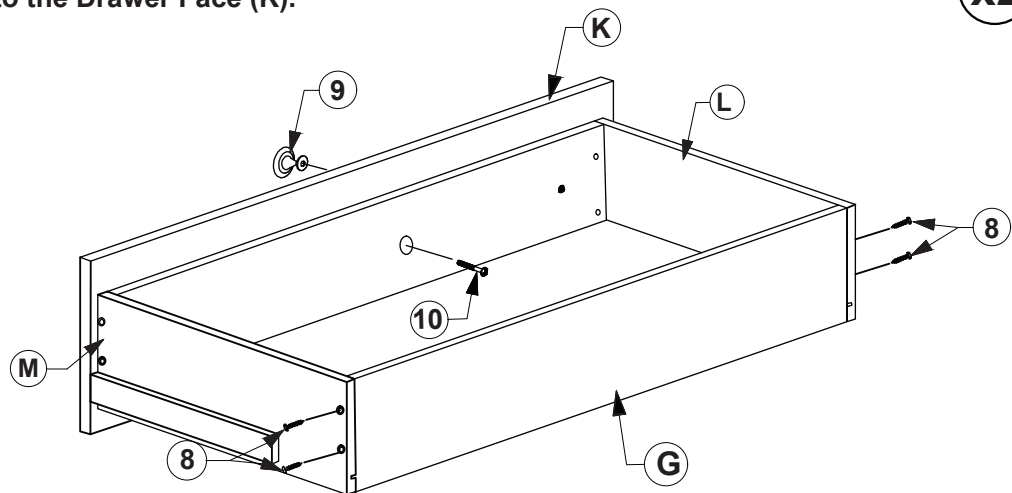

x2

- 6** Turn the Drawer over to fit angled 25mm Wood screws (8) to the Drawer Rail (P).

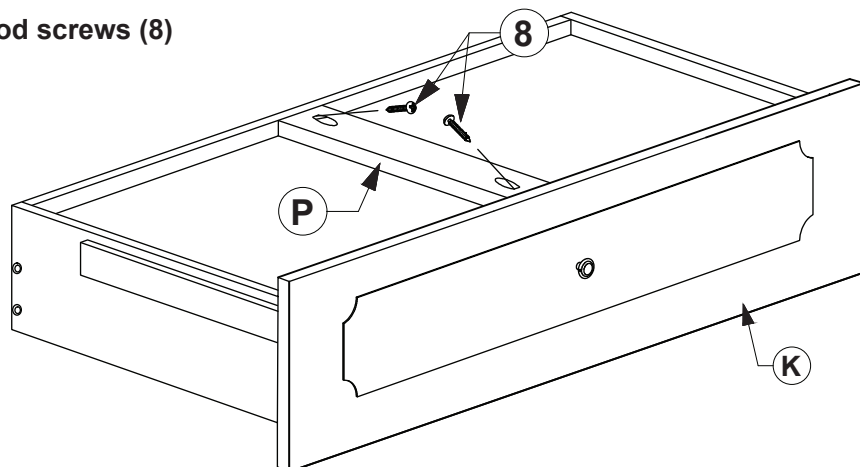


x2

9029 2D Night Stand


Assembly Instructions

WI-0425

- 7** Fit the 'L' Bracket (3) to the Side Panel (H & J).

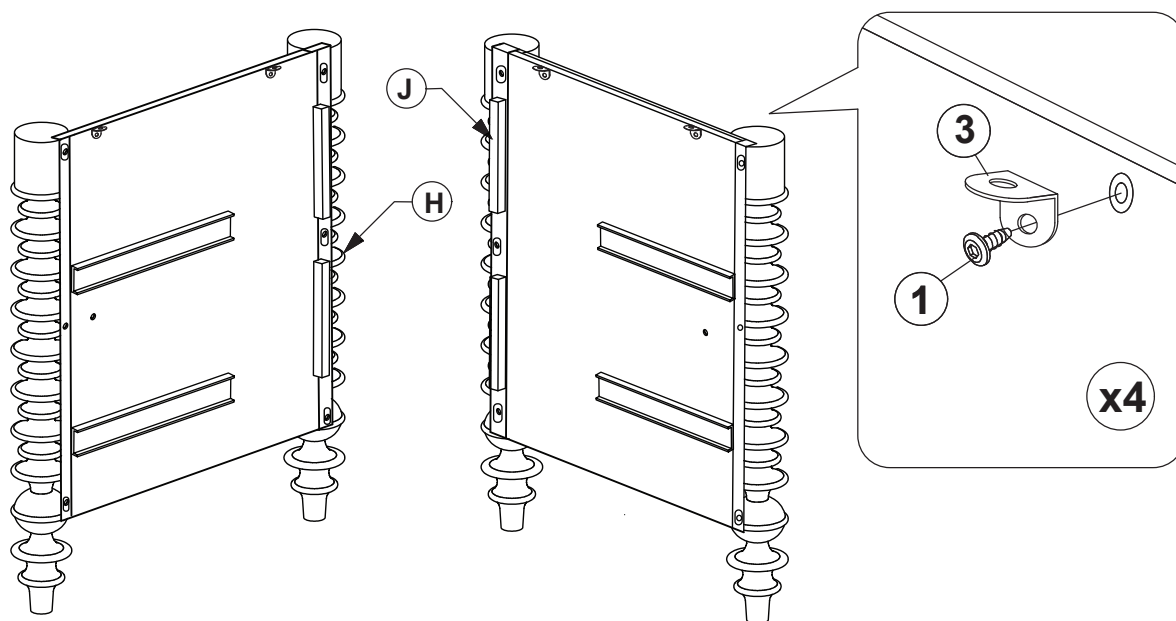

- 8** Fit the "L" Bracket (3) and Wood Dowel (4) to the Front Support Bar (D).

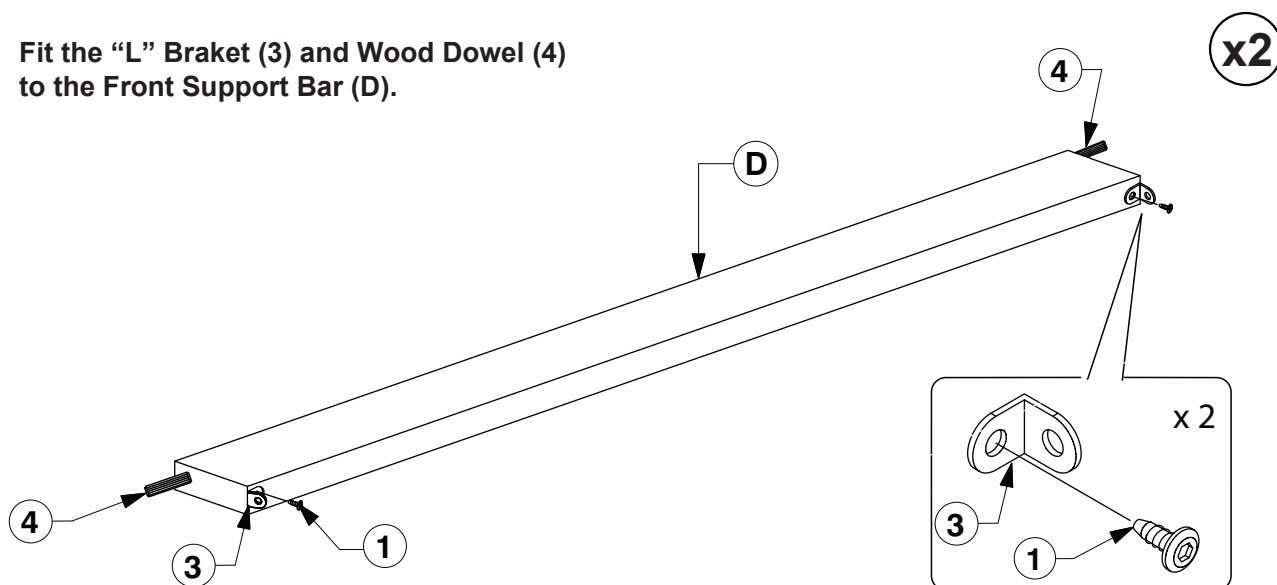


9029 2D Night Stand

Assembly Instructions



WI-0426

9 Assemble Support Bar (C, D, E & F) to the Side Panel (H).

Step 1
Use the
ball end of
Allen key to start
the bolt.

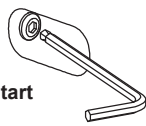


Step 2
Tighten fully with
the straight
end.

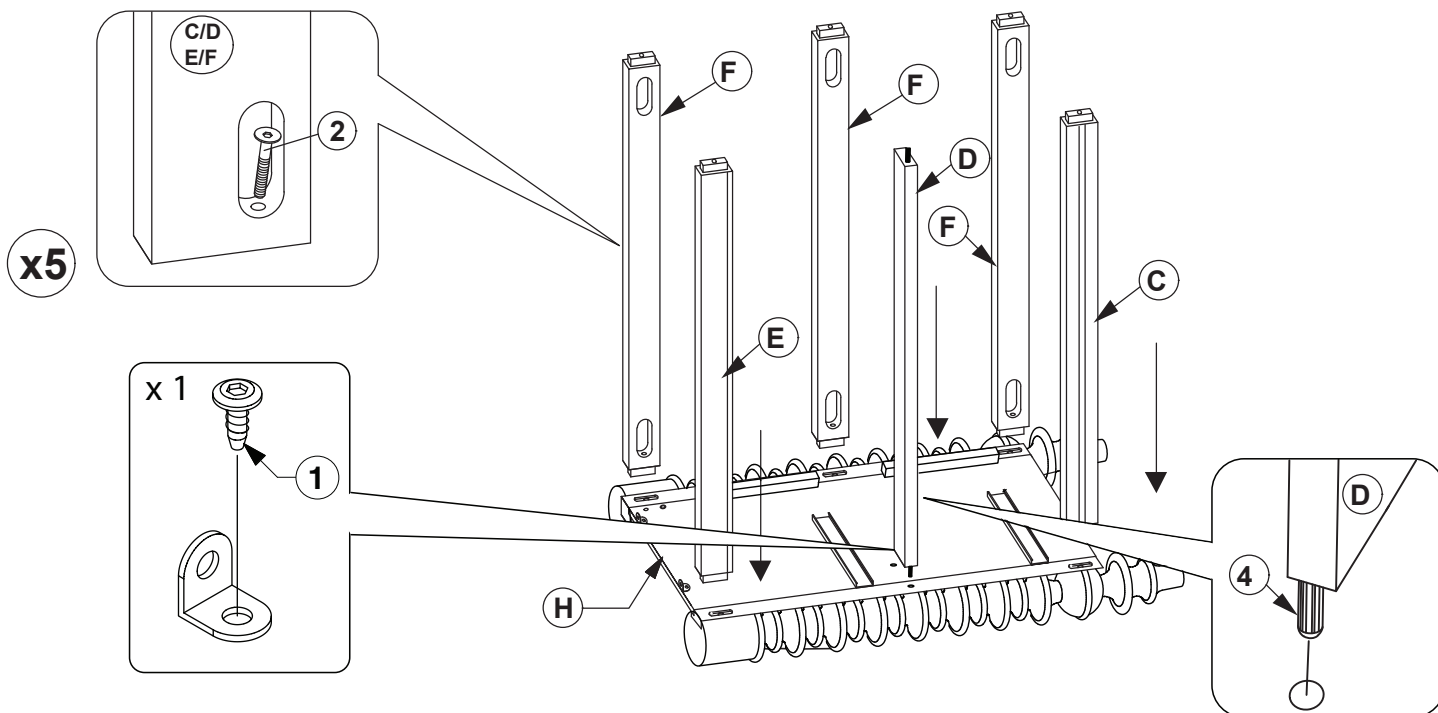



10 Fit the Side Panel (J) to the Support Bar (C, D, E & F).

Step 1
Use the
ball end of
Allen key to start
the bolt.

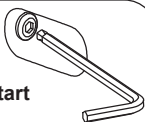

Step 2
Tighten fully with
the straight
end.

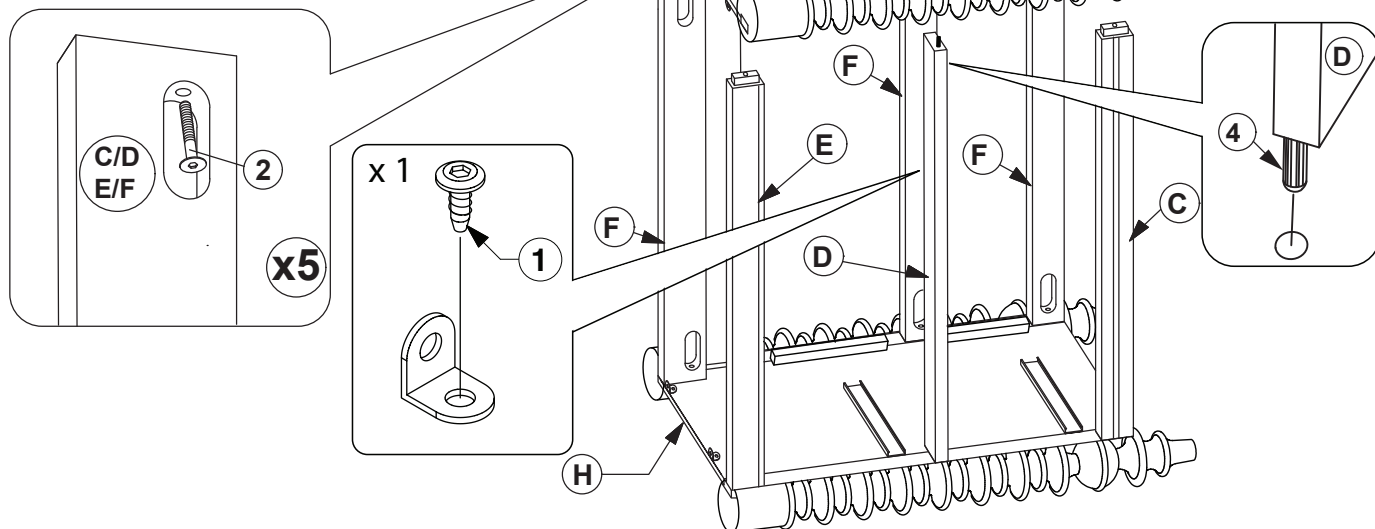


9029 2D Night Stand


Assembly Instructions

WI-0426

- 11** Assemble the Side Panel (H & J) to the Top Panel (A).

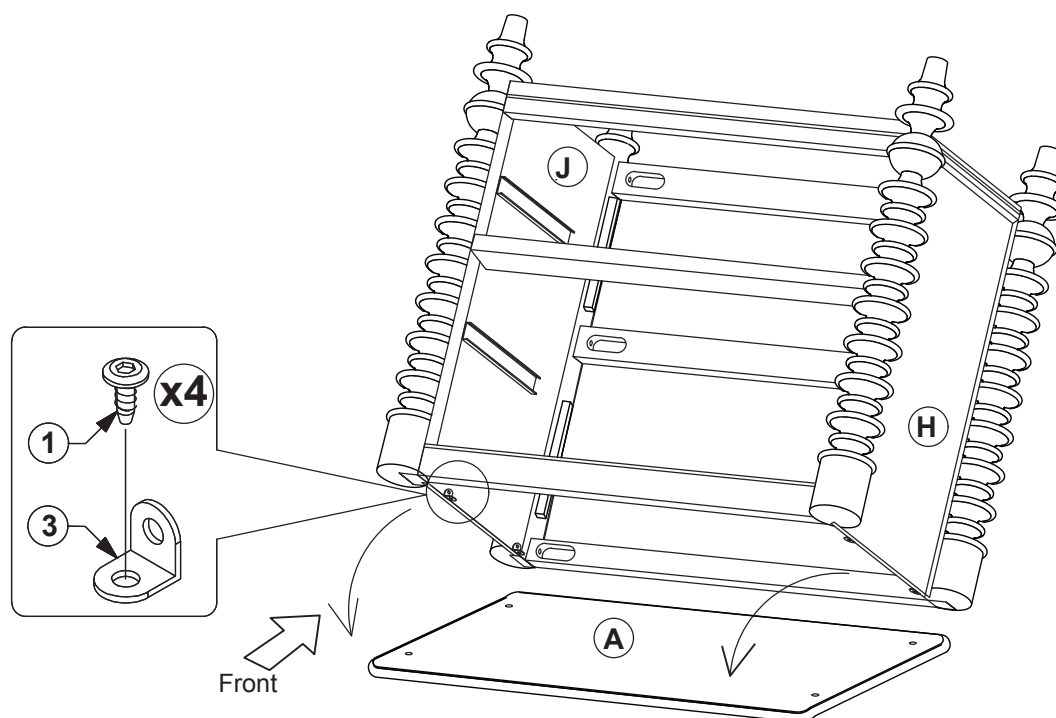

- 12** Use screw to tighten the Back Panel (B) to the back of the frame.

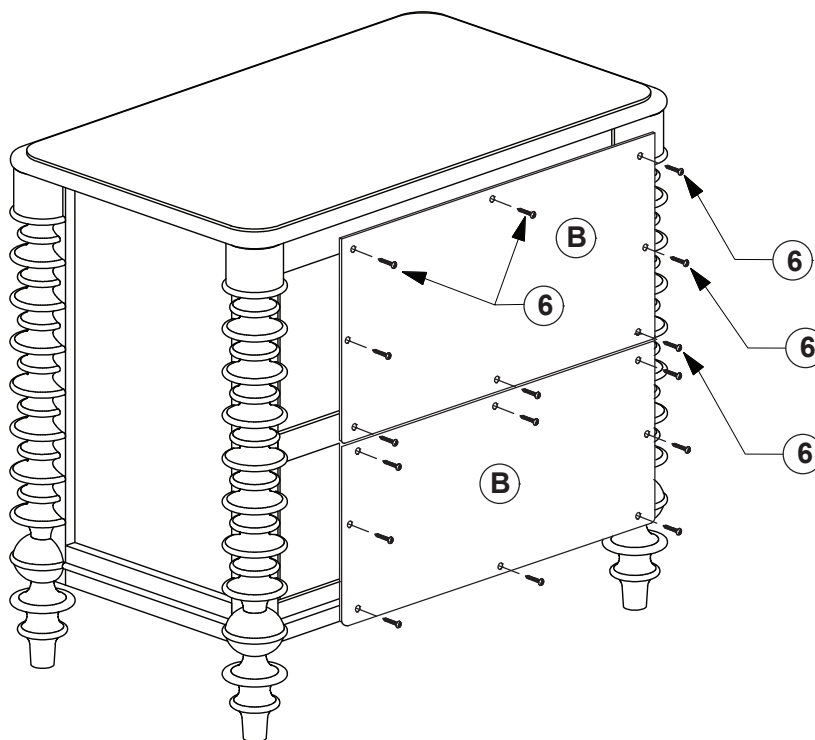


9029 2D Night Stand

Assembly Instructions


WI-0426

- 13** Fit the Drawer Face (K) to the casegood body.

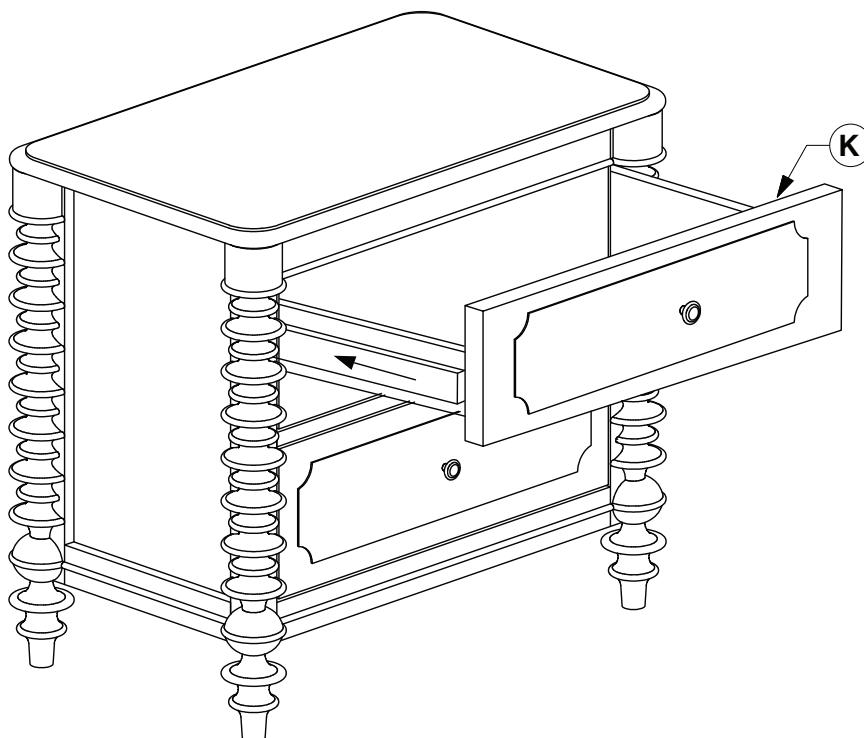

- 14** Adjust the Drawer Face (K).

* NOTE: Before fitting the Wood Screws .
Loosen the JCBs on the Drawer Face if
the face needs alignment .

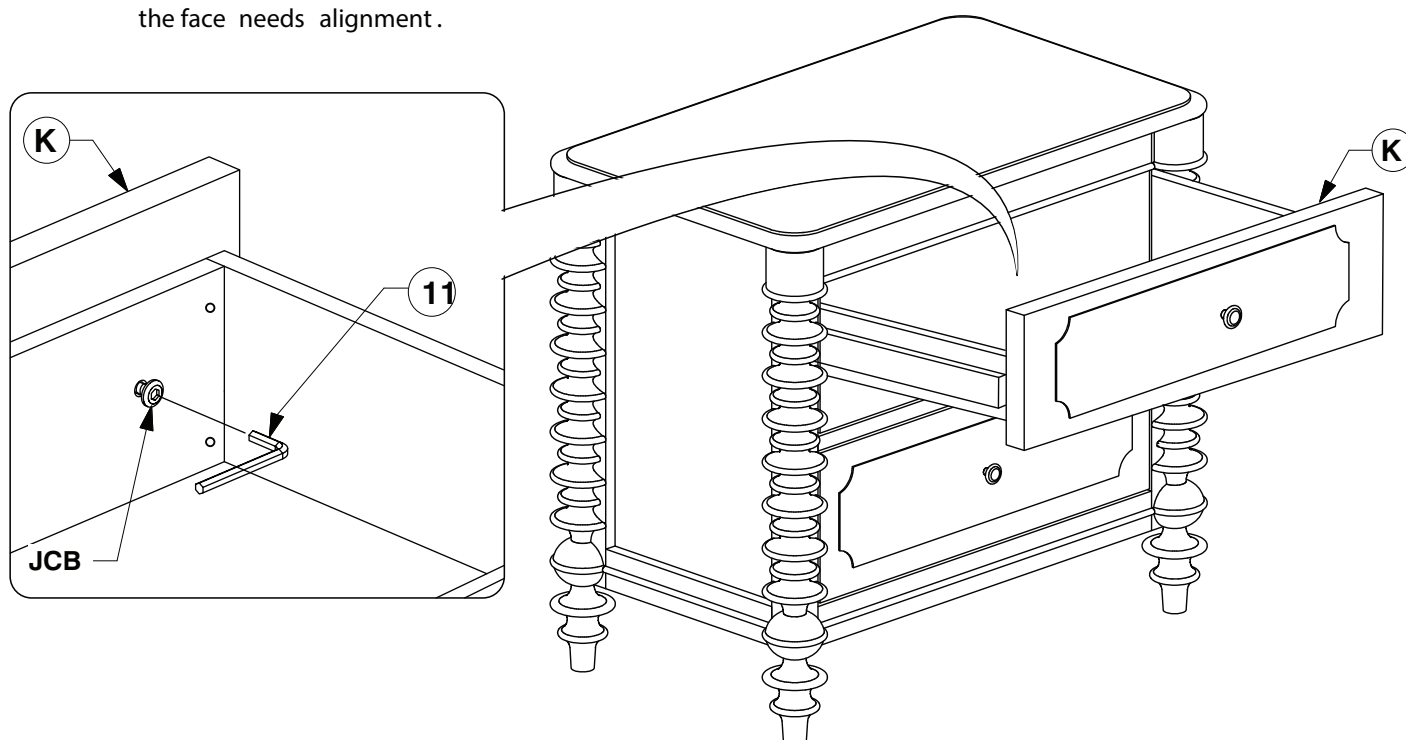


9029 2D Night Stand

Assembly Instructions

WI-0426


- 15** After the Drawer Faces (K) are aligned, secure with wood screws.

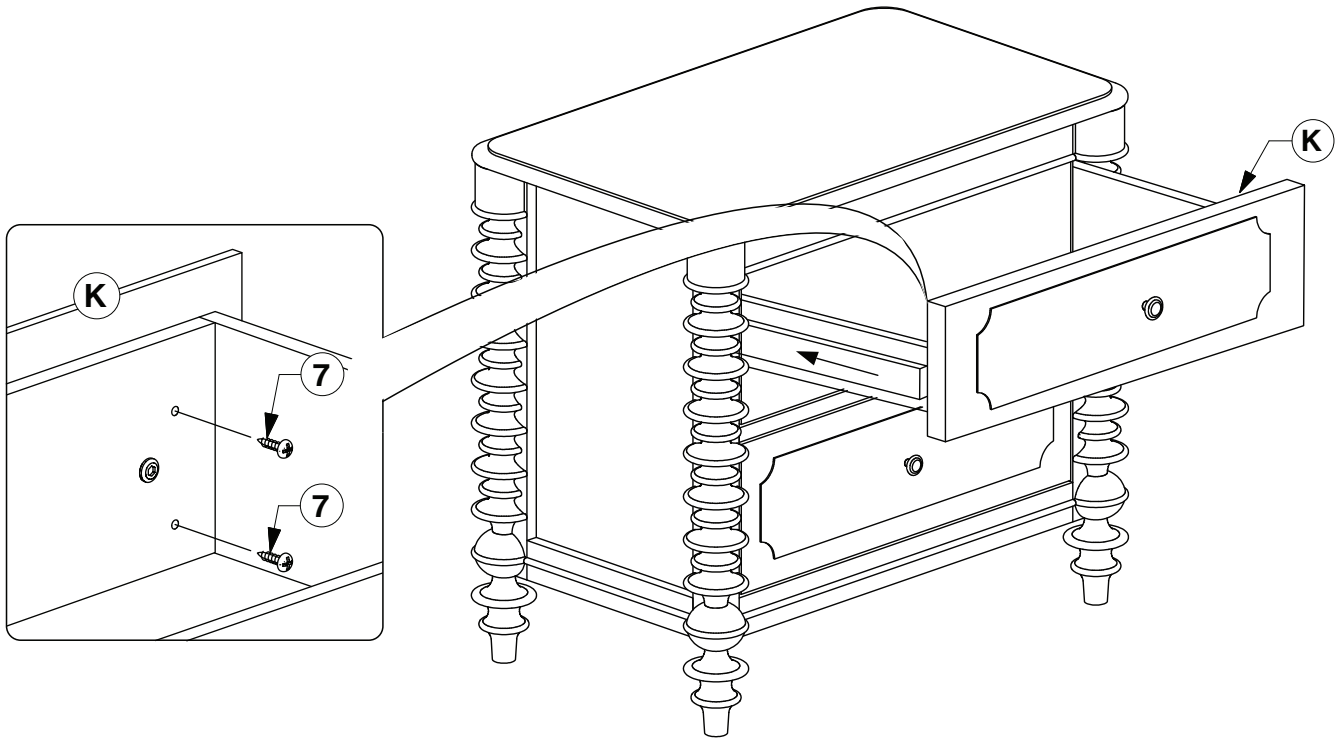

9029 7 Drawer Dresser

Assembly Instructions


WI-0426

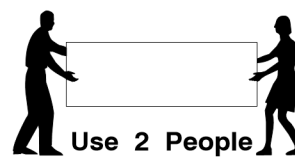

Note: Do not assemble
using power tools.
This can cause the bolts
to be overtightened

1 Parts List

Parts in Box A:



A Top Panel x 1




B Front Upper Support Bar x 1



C Front Bottom Support Bar x 1



D Front Upper Drawer Support Bar x 1



E Front Bottom Drawer Support Bar x 1



F Rear Upper Support Bar x 2



G Rear Bottom Support Bar x 2




H Center Post x 1




J Back Panel x 3

Upper Drawers



K Drawer Face x 3




L Drawer Back x 3




M Drawer Bottom x 3

Lower Drawers



N Drawer Face x 4



O Drawer Back x 4



P Drawer Bottom x 4



Q Drawer Rail x 4


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

1 Parts List


Parts in Box B:

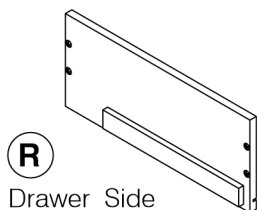


R
Drawer Side
(Left Hand) x 7

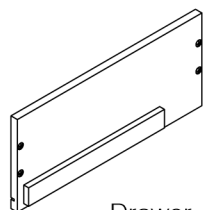


S
Drawer Side
(Right Hand) x 7

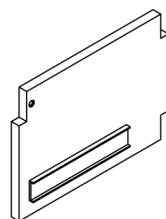


V
Center Panel
(Upper) x 2

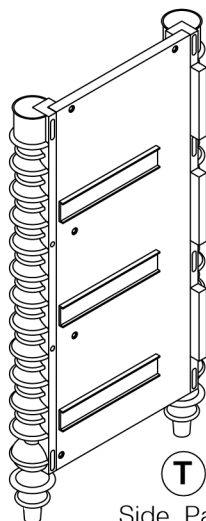

T
Side Panel
(Left Hand) x 1

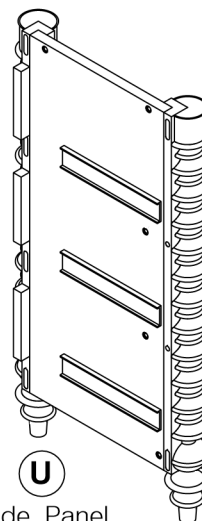

U
Side Panel
(Right Hand) x 1

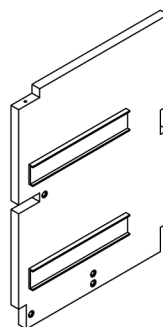

W
Center Panel
(Lower) x 1


2 Hardware List



1 M6 x
15mm JCB x 28




2 M6 x
40mm JCB x 12



3 M6 x
50mm JCB x 2



4 M6 JNC
Nut x 4




5 Adjustable
Foot x 1




6 'L' Bracket
(5005-3) x 16



7 Wood Screw
(M4 x 20mm) x 28



8 Wood Screw
(M4 x 25mm) x 64



9 M4 x 32mm
Wood Screw x 30



10 CSK Cap Wood Screw
(M6 x 60mm) x 9




11 Handle
(9029) x 7



12 M4 x 22mm
Wood Screw
x 7



13 M6 x 25mm
Wood Dowel x 16



14 M8 x 30mm
Wood Dowel x 4



15 Long Allen Key x 1


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

3 Assemble the Upper Drawers.


STEP 3.1

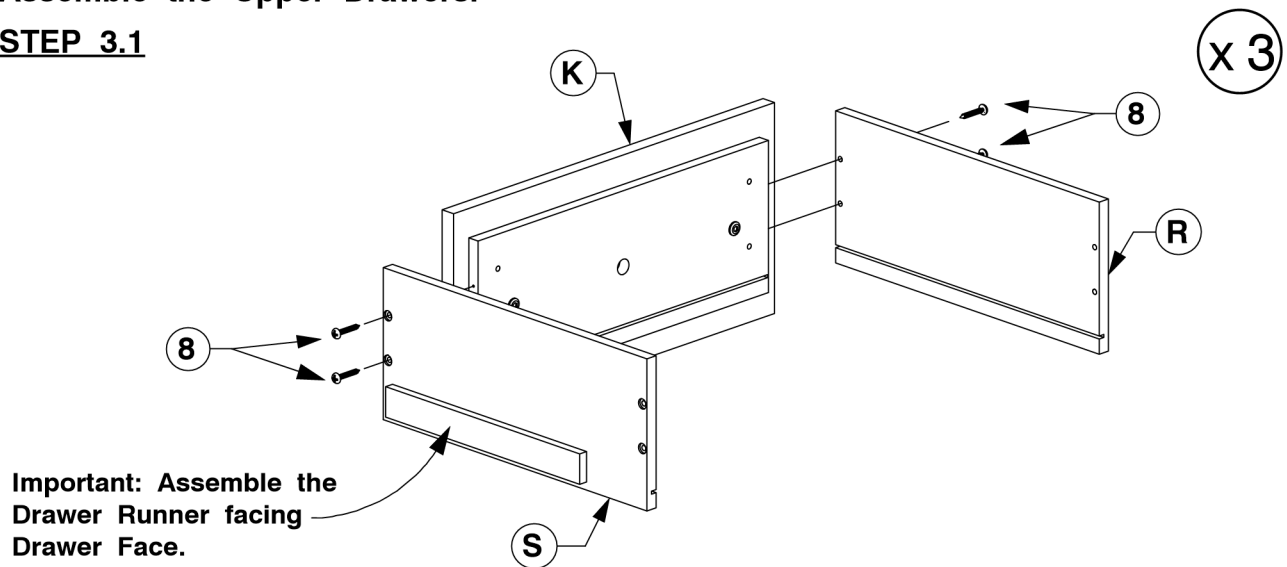

STEP 3.2

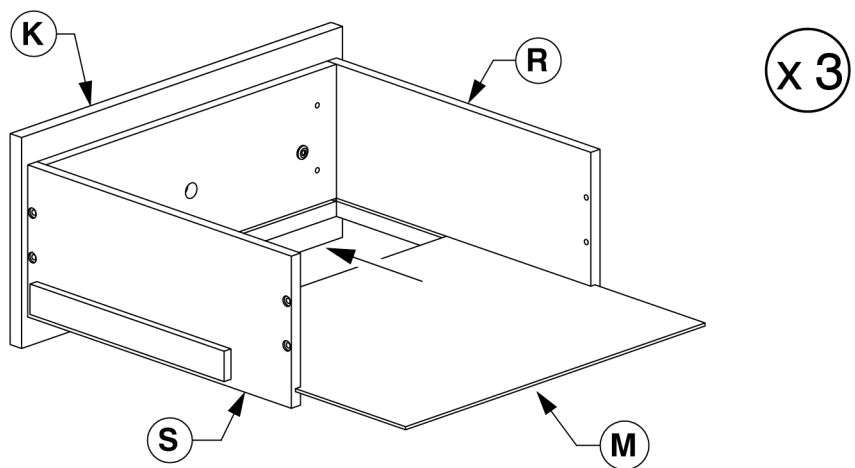

STEP 3.3

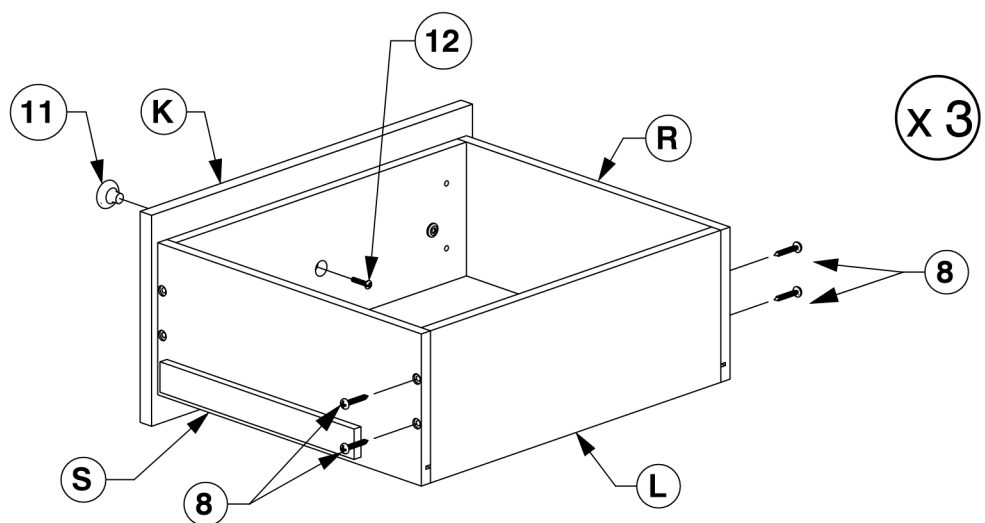


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

3 Assemble the Lower Drawers.


STEP 3.4

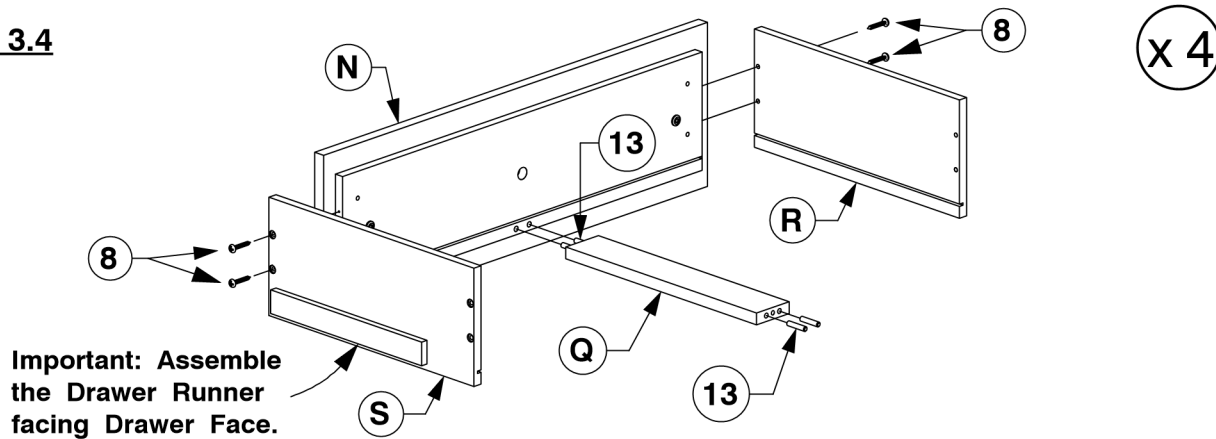


STEP 3.5

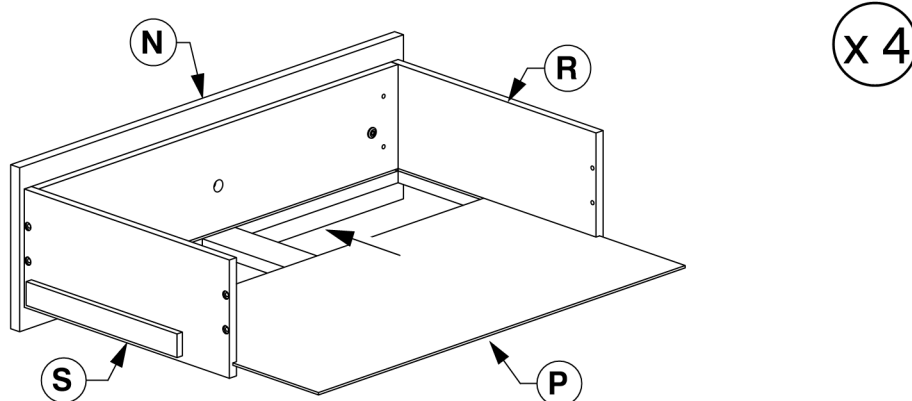

STEP 3.6

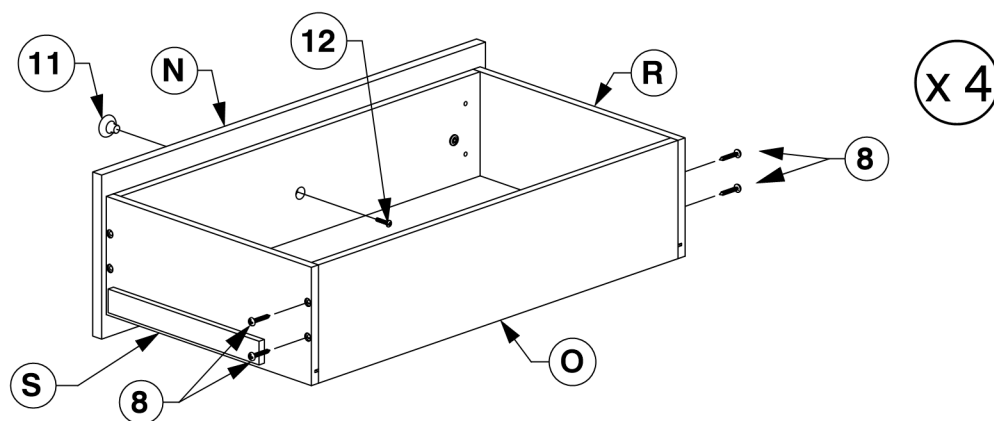

STEP 3.7

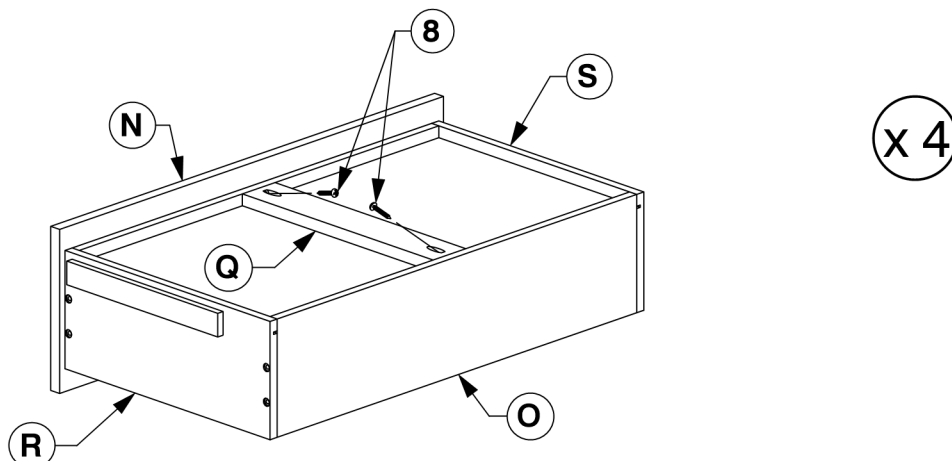


9029 7 Drawer Dresser


Assembly Instructions

WI-0426


4 Fit the 'L' Bracket to the Top Panel (A).

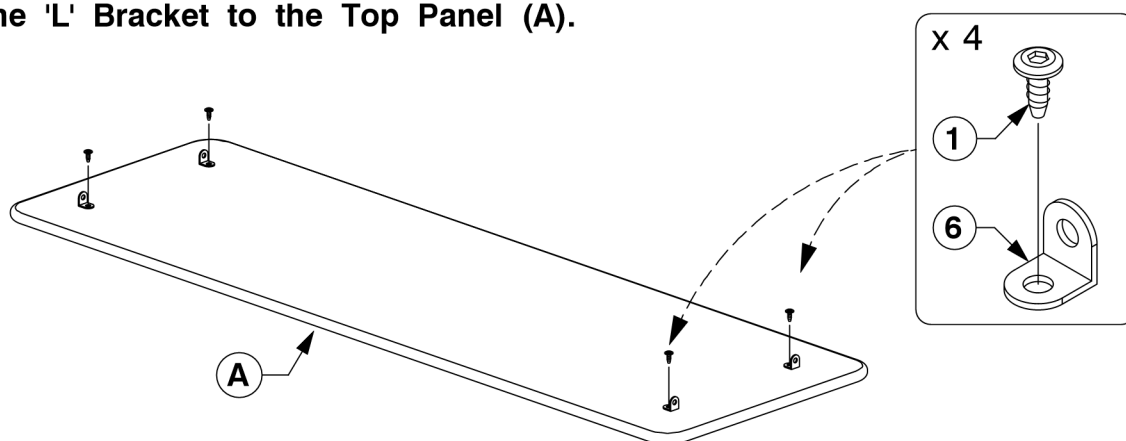

5 Attach 'L' Bracket (6) to the Upper and Lower Center Panels (V & W) using JNC (4) and Bolts (1).

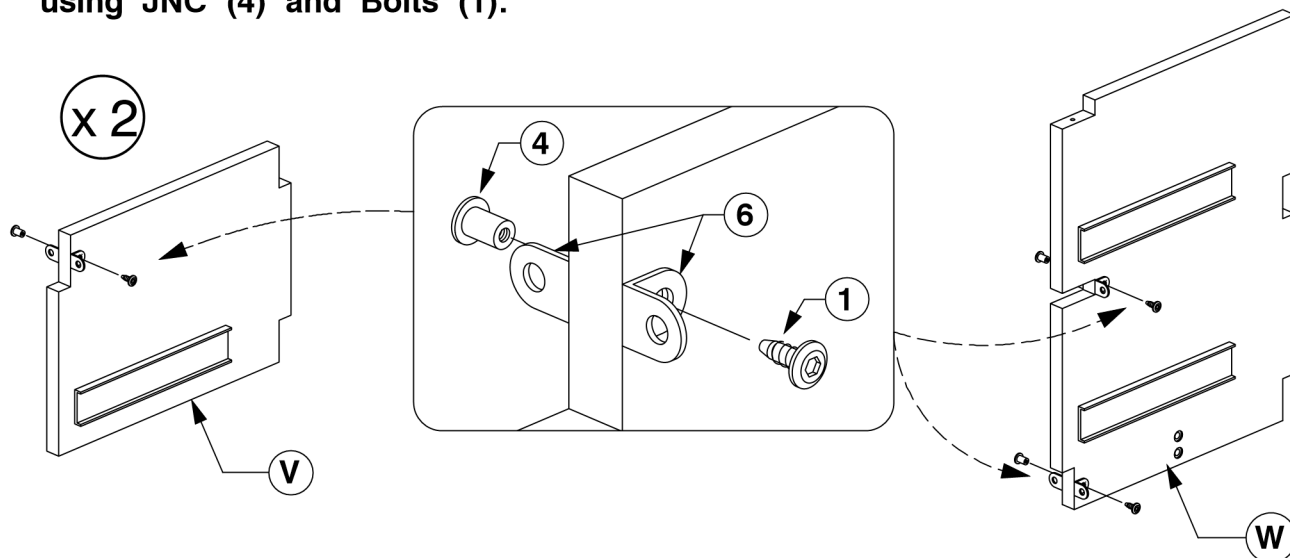

6 Insert Dowels (14) into the ends of Support Bars (D & E). Then attach Brackets (6) to the Support Bars using Bolts (1).


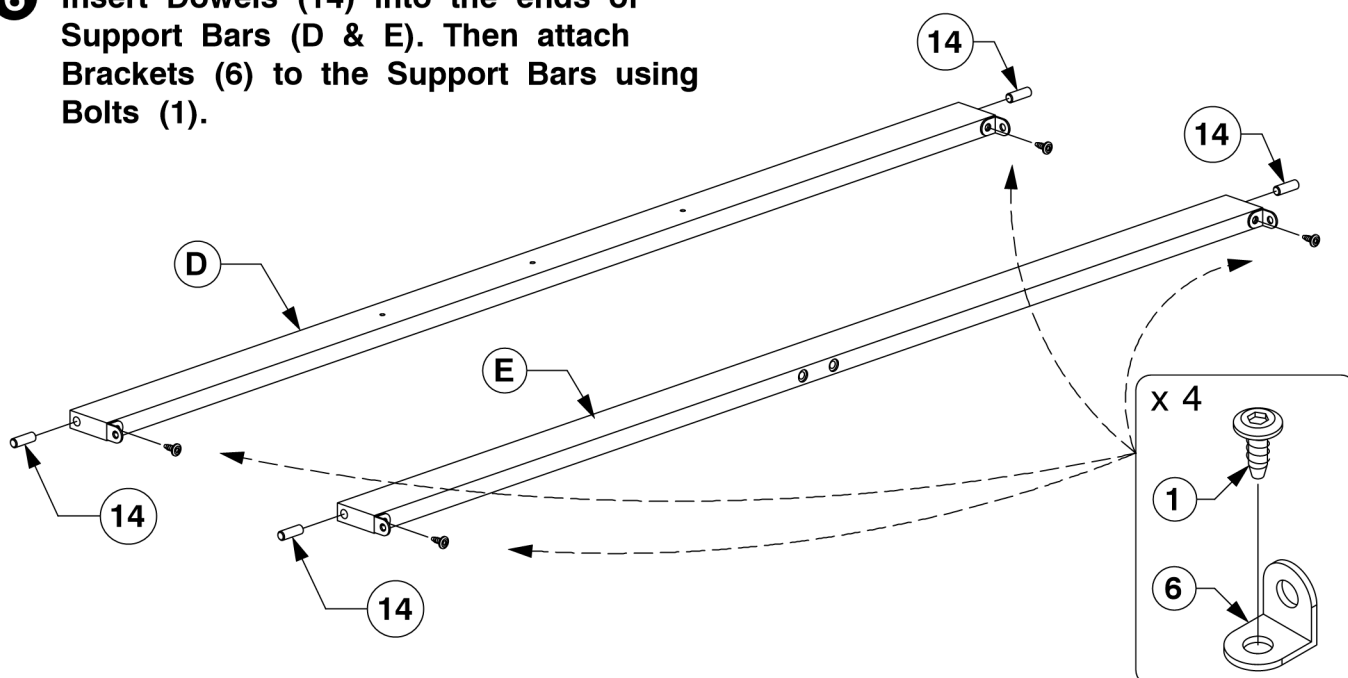


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 7** Fit the Right Side Panel (U) to the Top Panel (A).

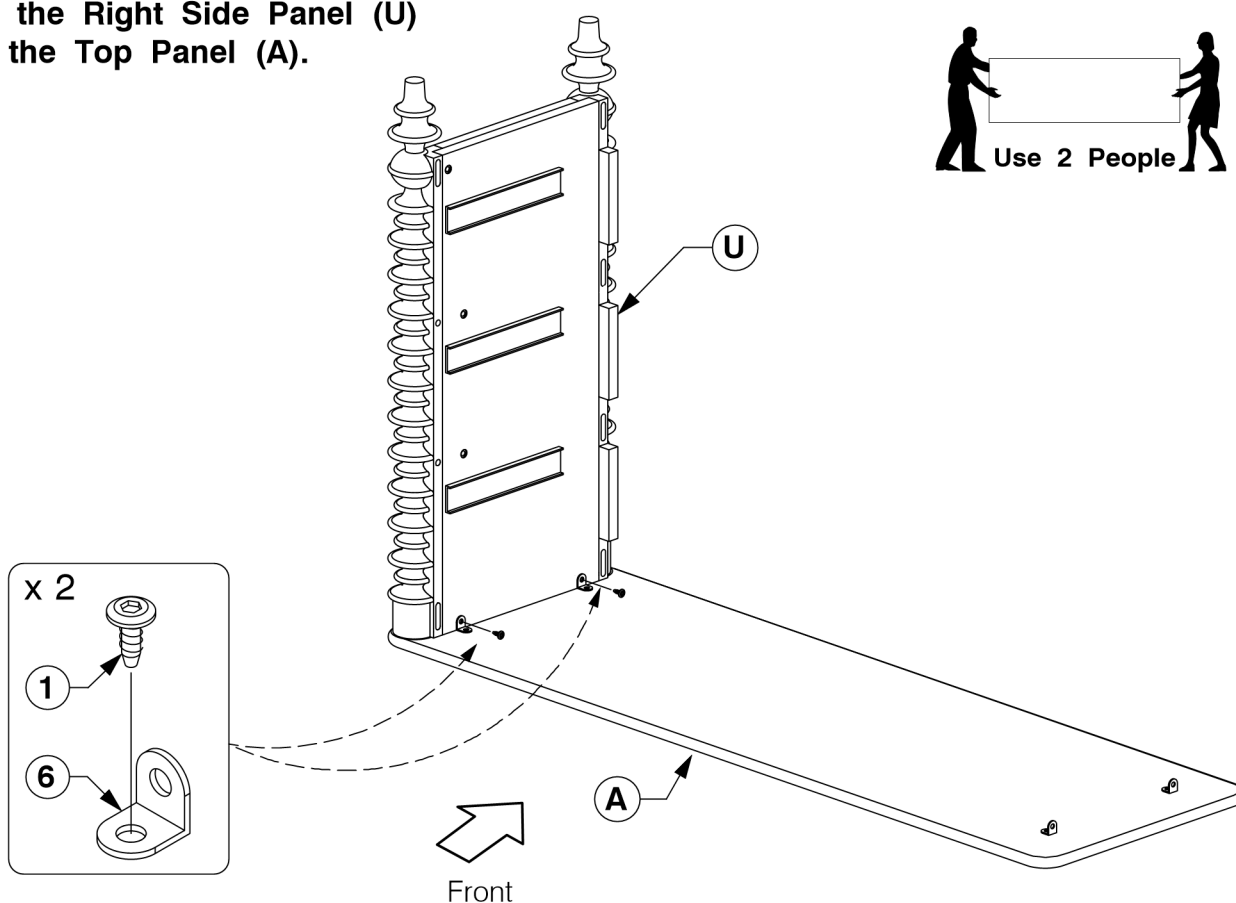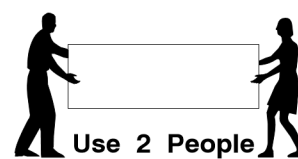


- 8** Assemble the Support Bar (B & F) to the Right Side Panel (U).

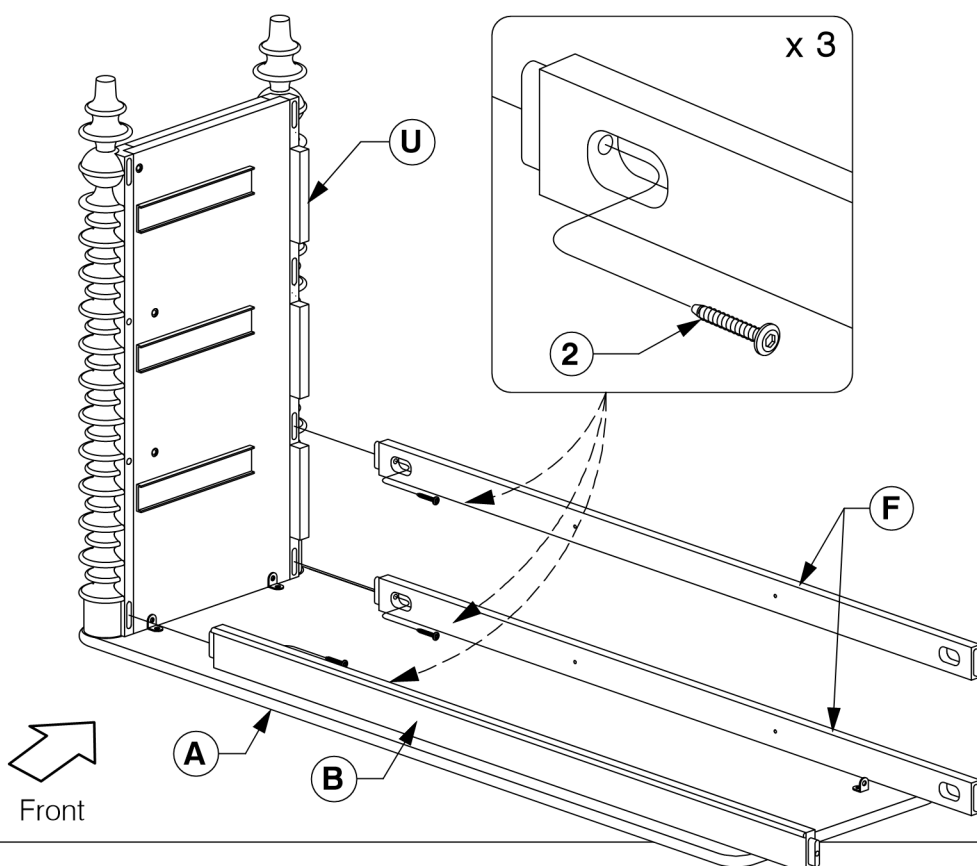


Step 1

Use the ball end of Allen key to start the bolt.

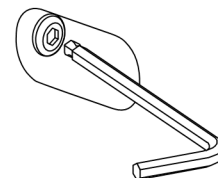

Step 2

Tighten fully with the straight end.

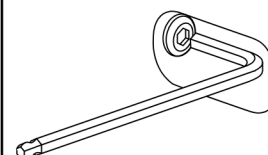


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 9** Assemble the Center Panel (V) to Support Bar (B & F).

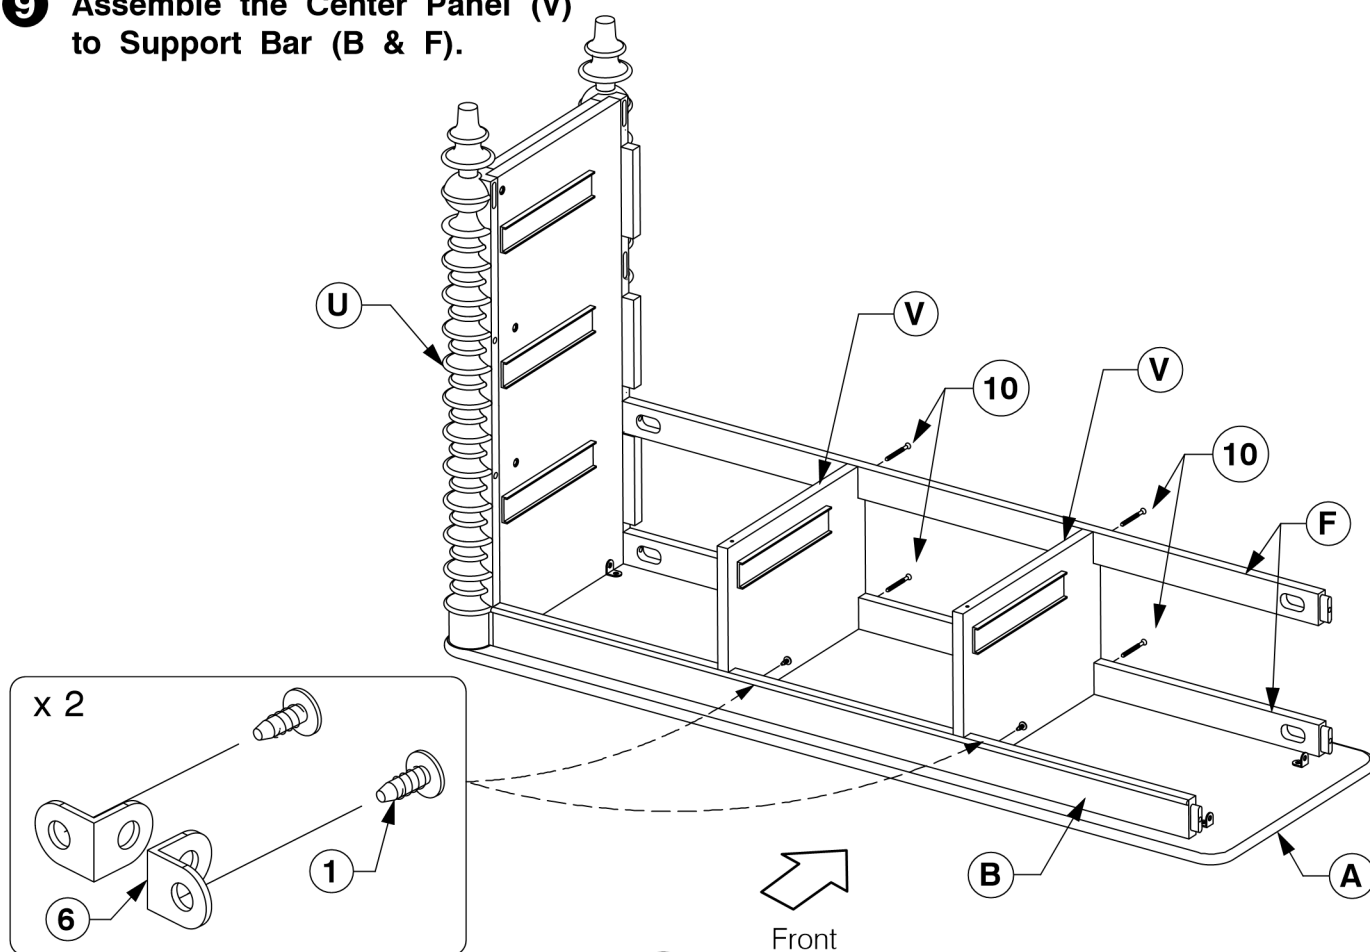

- 10** Attach Support Bars (D & E) to the Right Side Panel (U). Then tighten using Bolts.

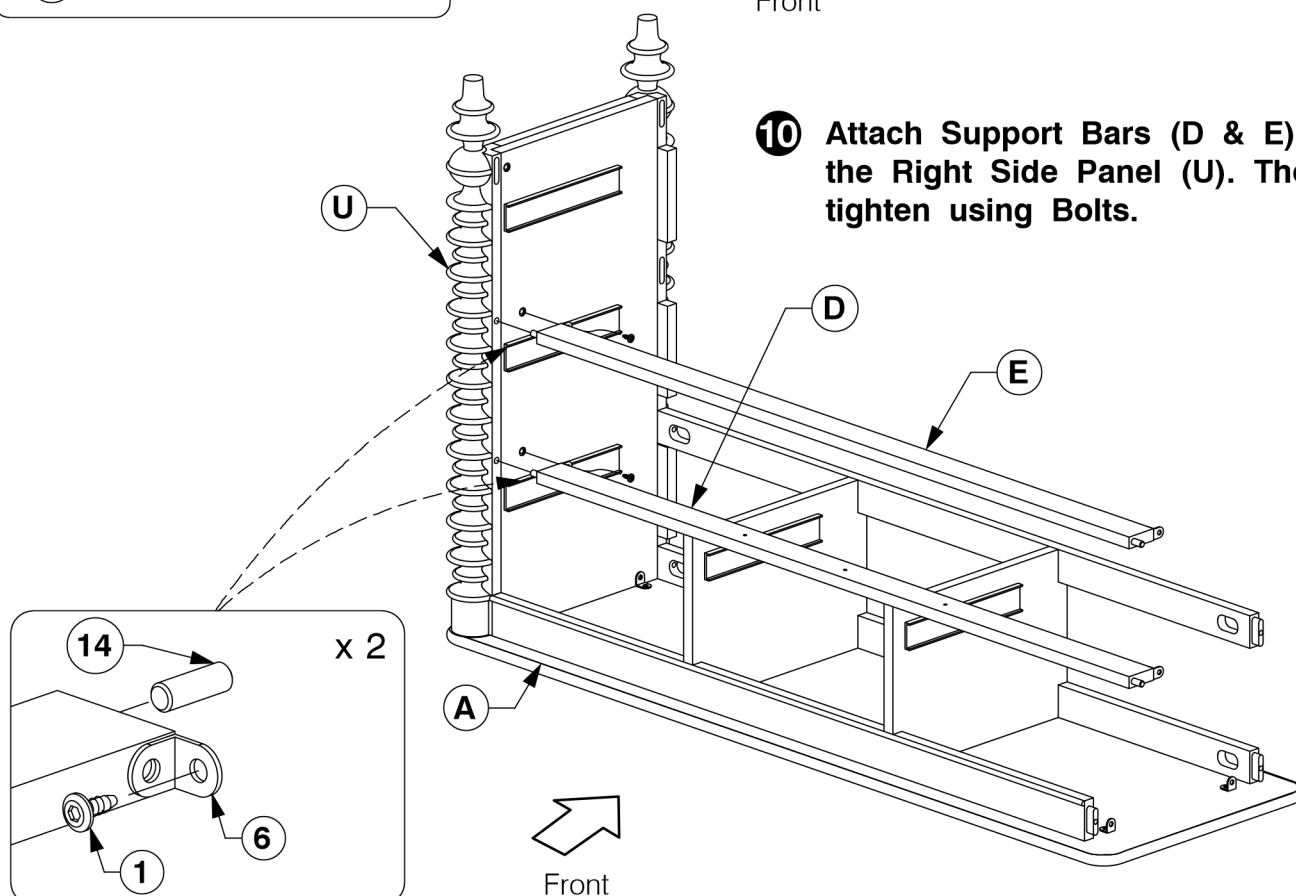


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 11** Assemble the Center Panel (W) to Support Bar (D, E, & F).

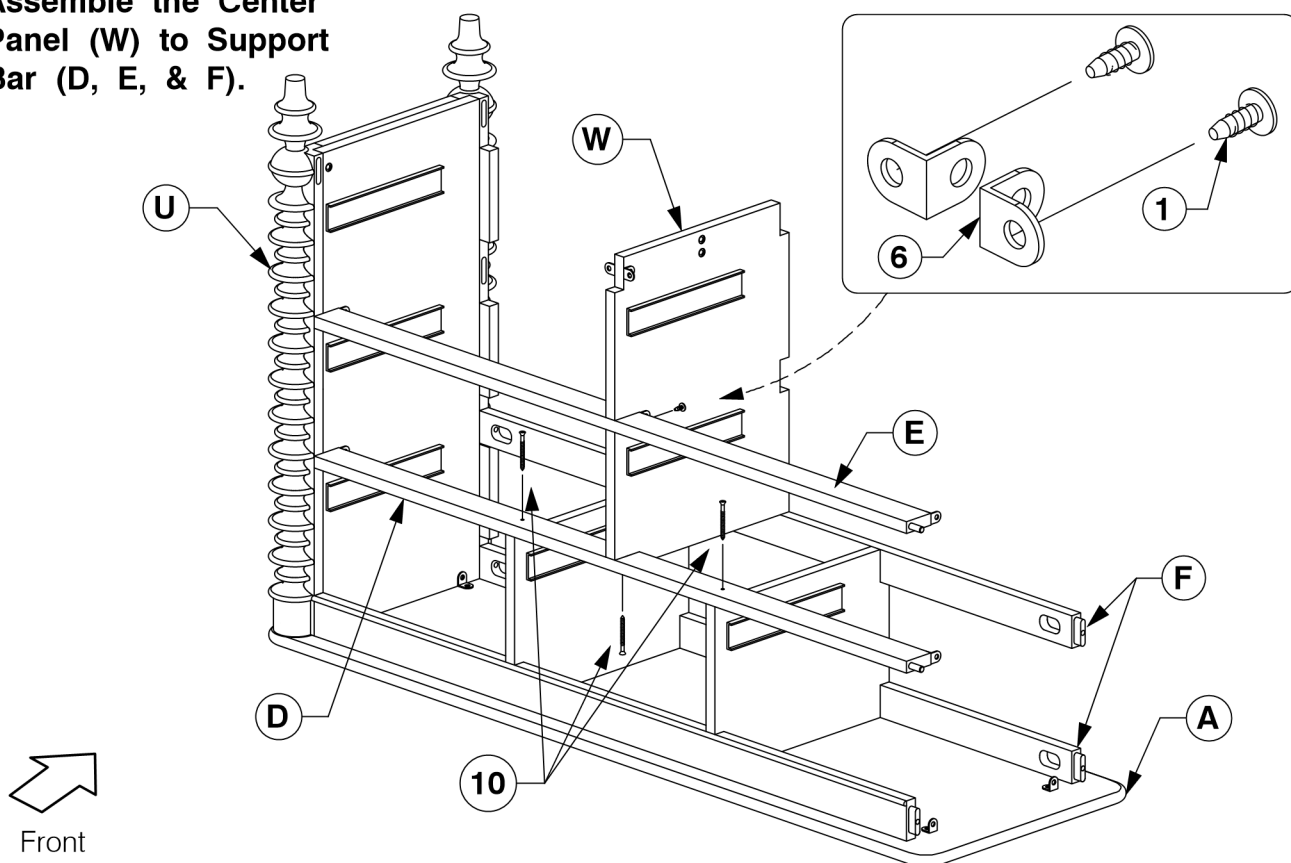


- 12** Fit the Support Bars (G) to the Center Panel (W).

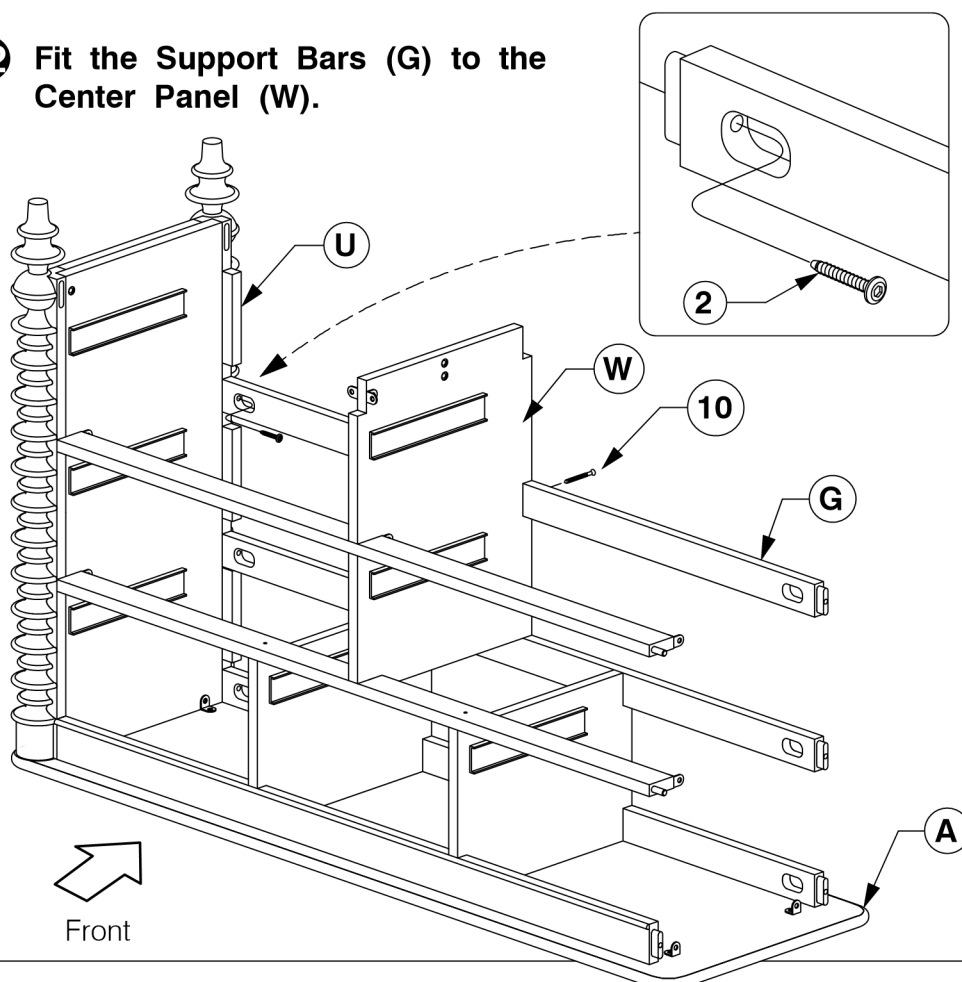


Step 1

Use the ball end of Allen key to start the bolt.

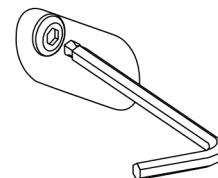

Step 2

Tighten fully with the straight end.

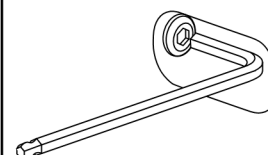


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

- 13** Attach the Support Bar (C & G) to the Right Side Panel (U) & Center Panel (W).

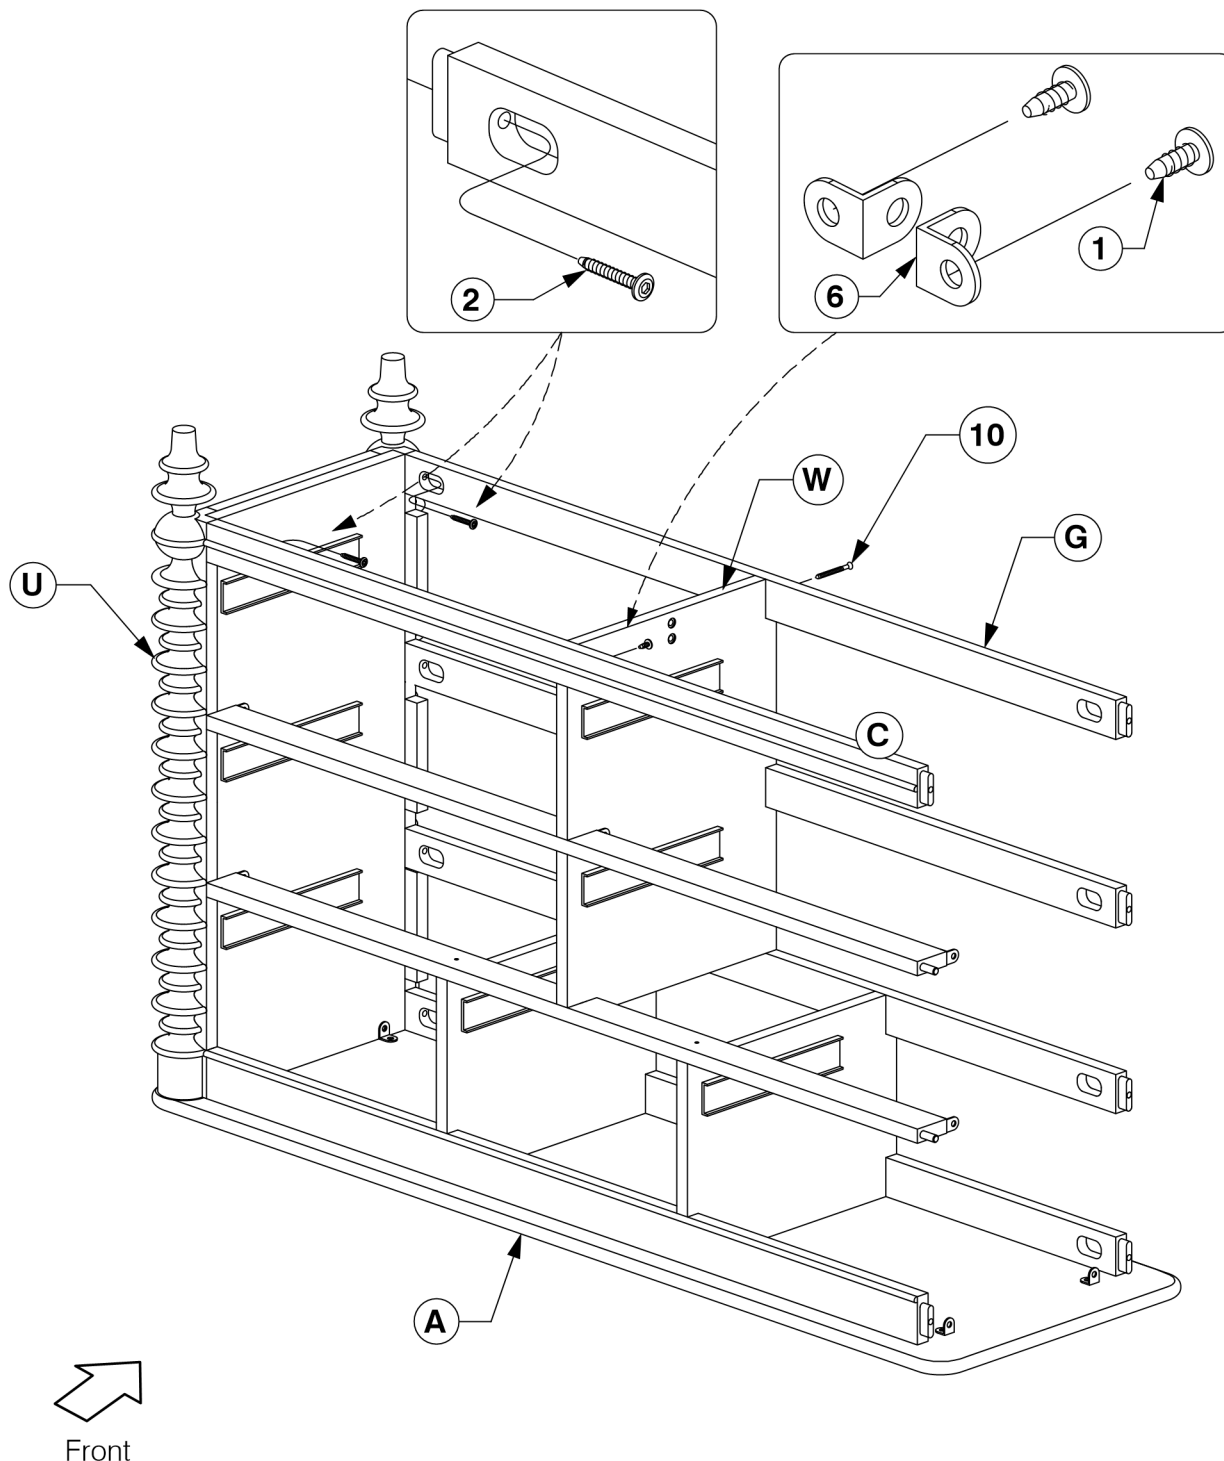


Step 1

Use the **ball end** of Allen key to start the bolt.

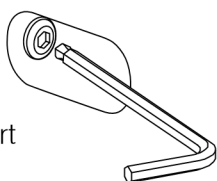

Step 2

Tighten fully with the **straight end**.


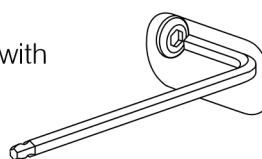


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

- 14** Assemble the Left Side Panel (T) to the Support Bars (B, C, D, E, F & G).

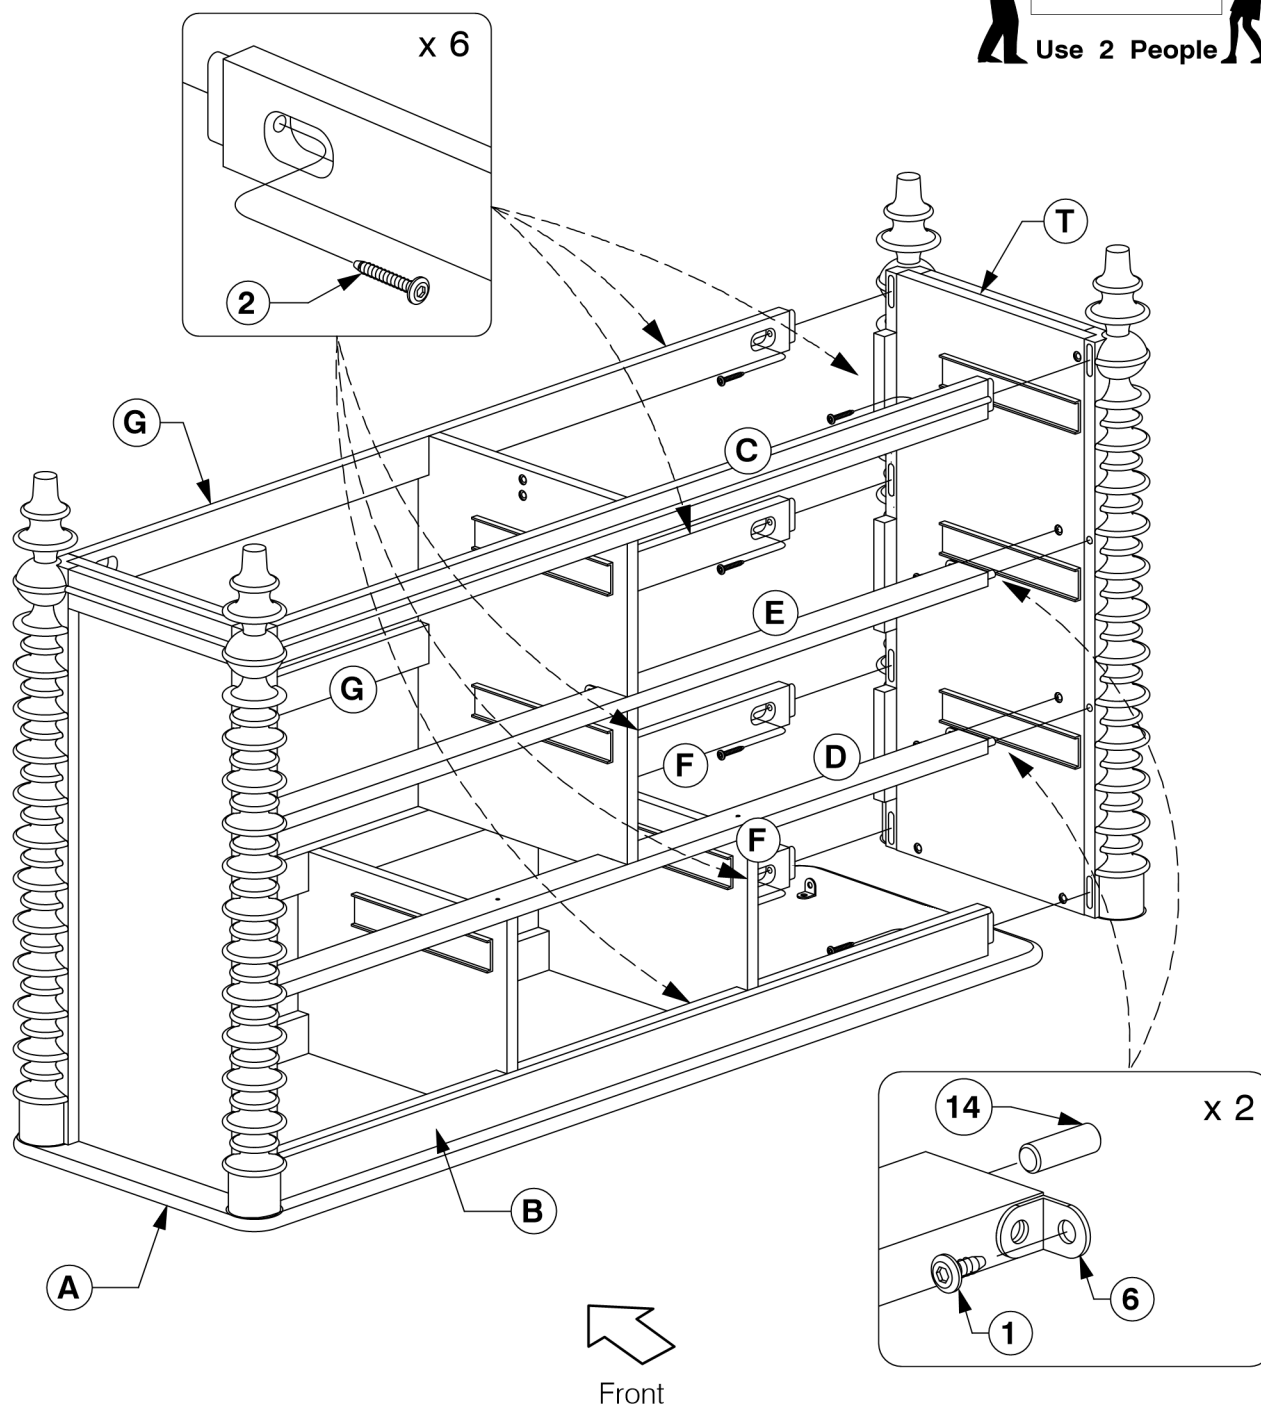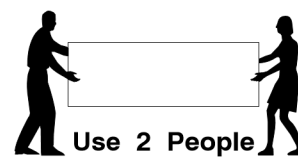


Step 1

Use the **ball end** of Allen key to start the bolt.

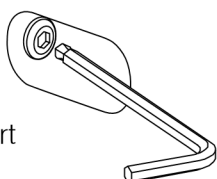

Step 2

Tighten fully with the **straight end**.

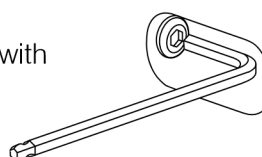


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 15** Tighten the bolts as shown.

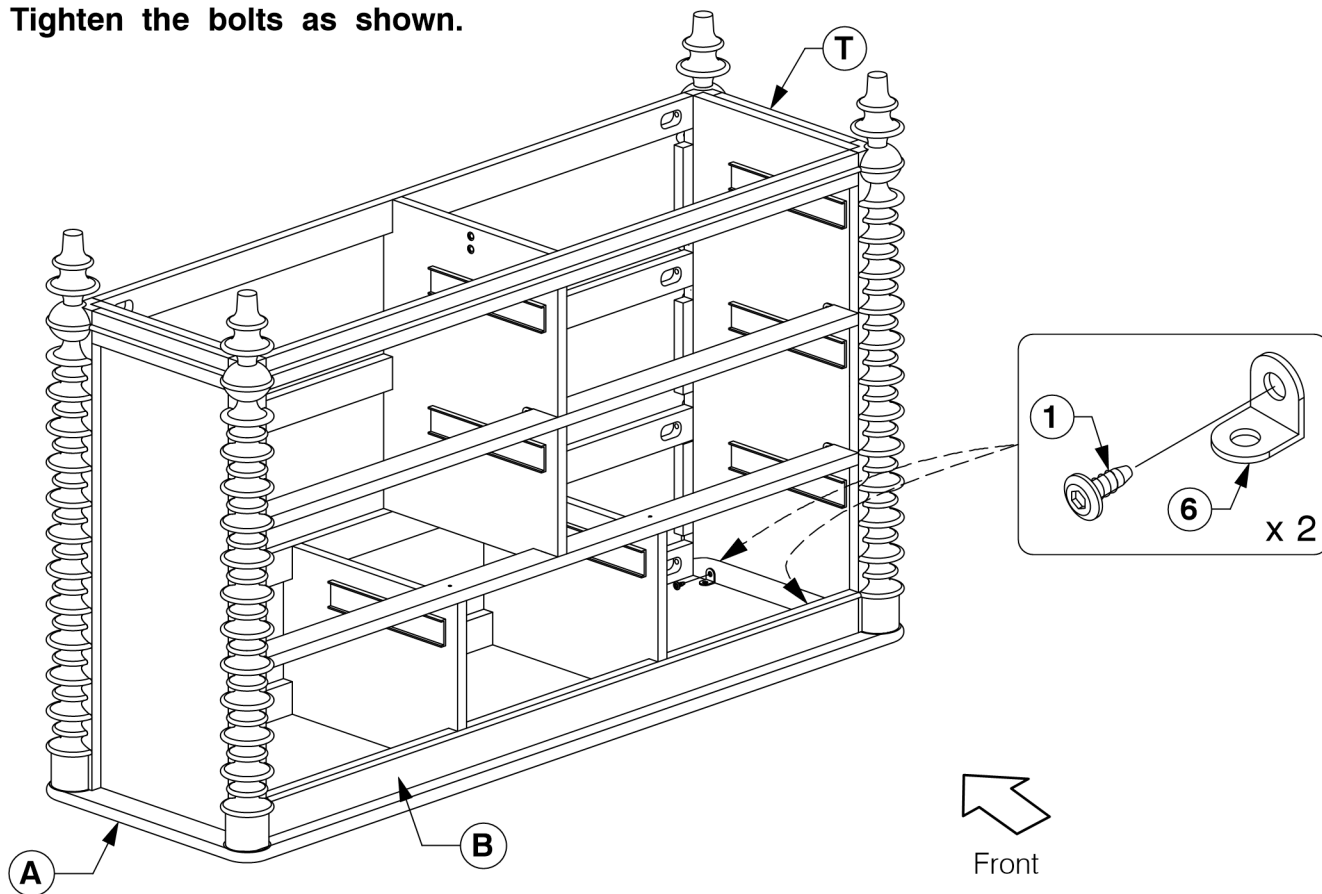

- 16** Fix the Adjustable foot to the bottom of the Center Post (H).
Fit the Center Post (H) to the Center Panel (W).

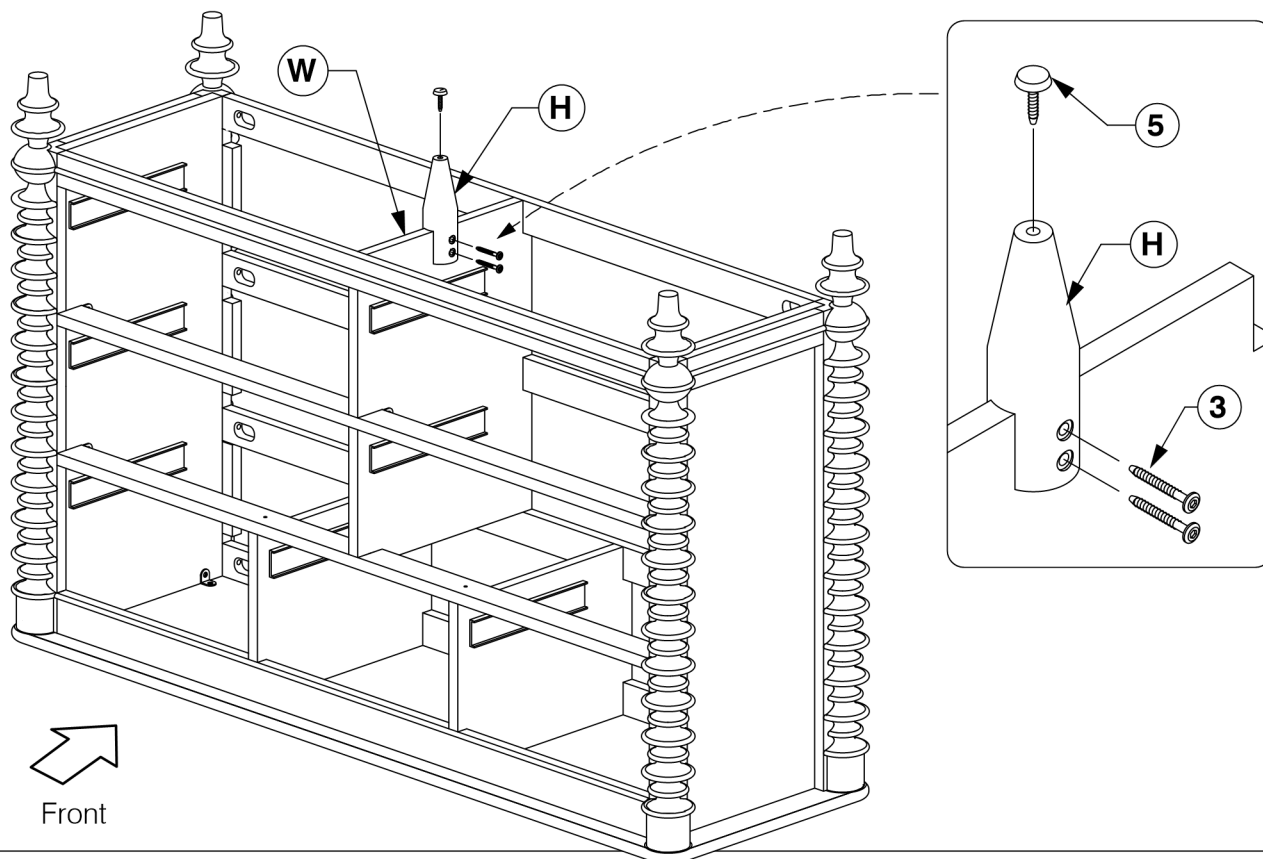


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 17** Attached the Back Panel (J) to the back of the frame.

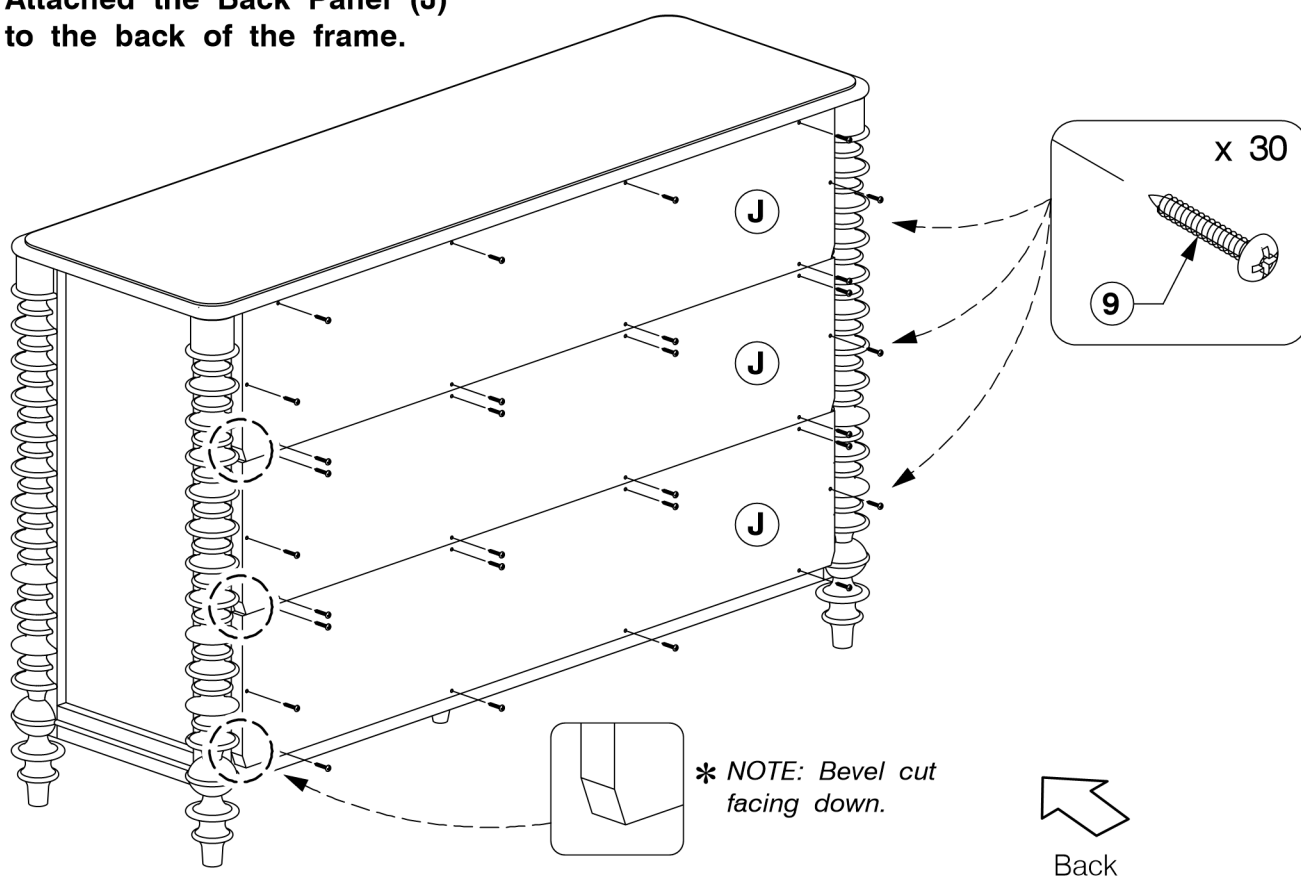

- 18** Fit the Drawer Box (K & N) to the casegood body.

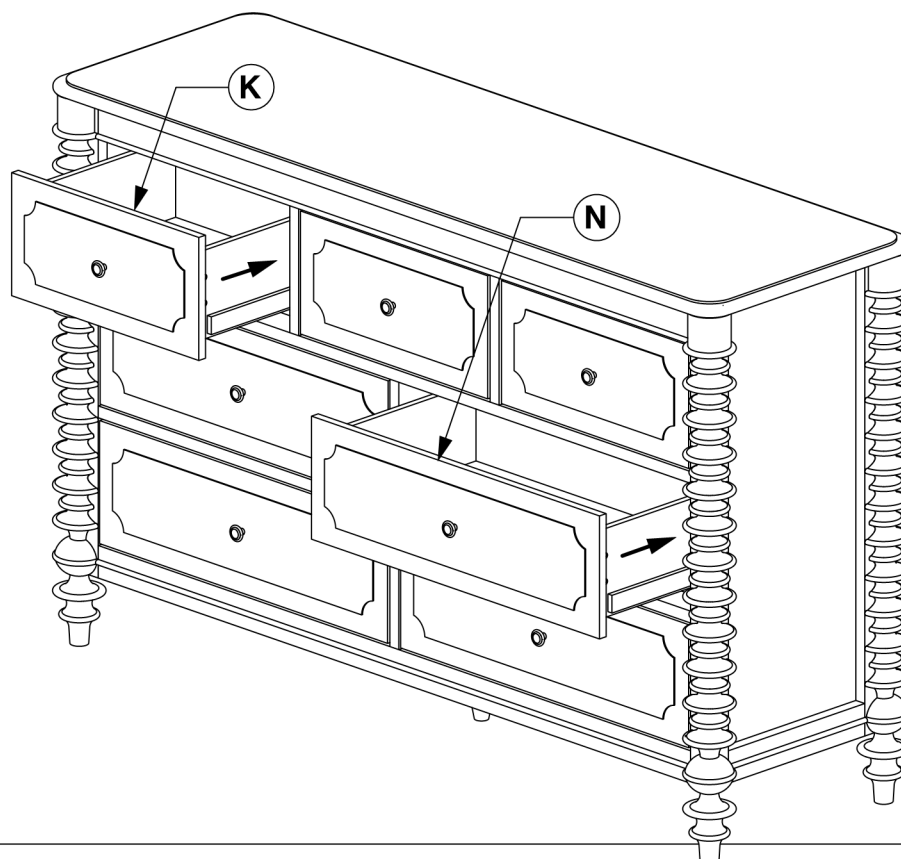


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

19 Adjust the Drawer Face (K & N).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.

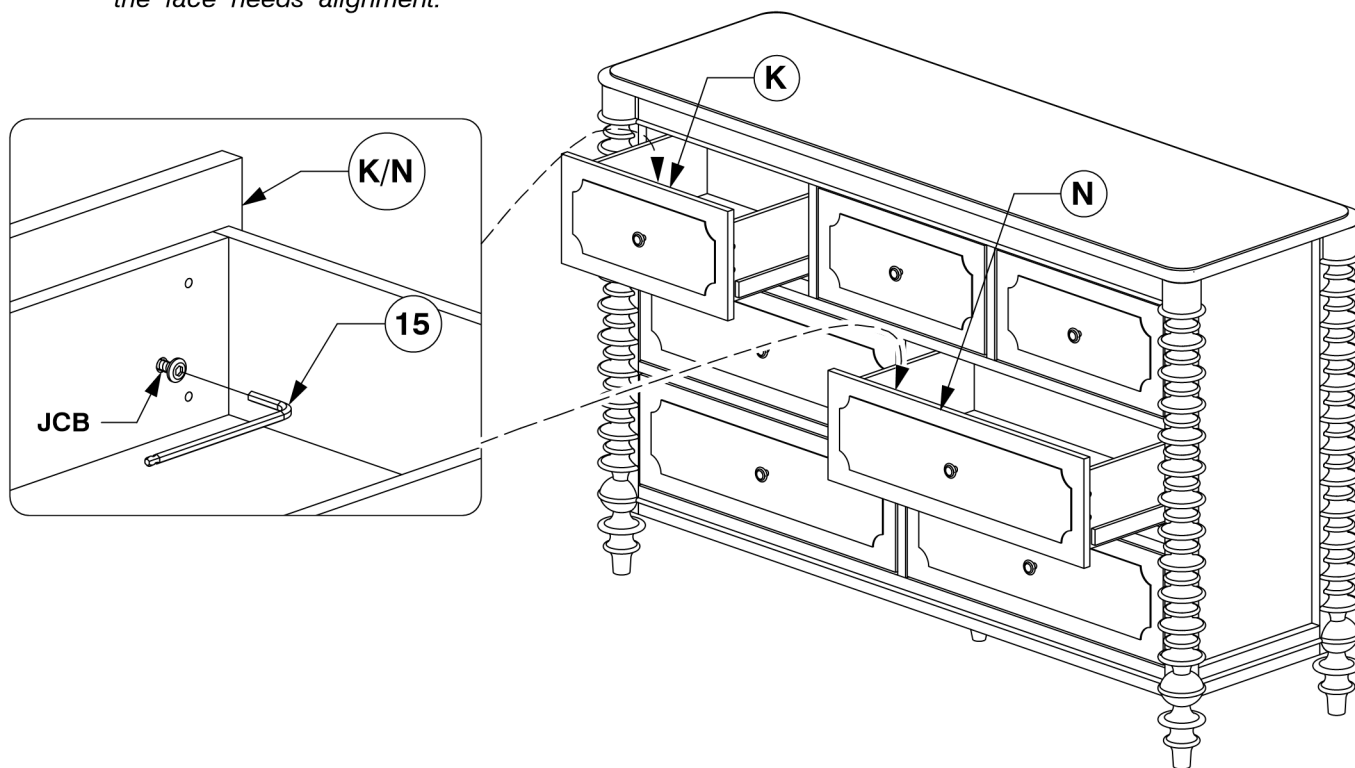



20 After the Drawer Faces (K & N) are aligned, secure with wood screws.

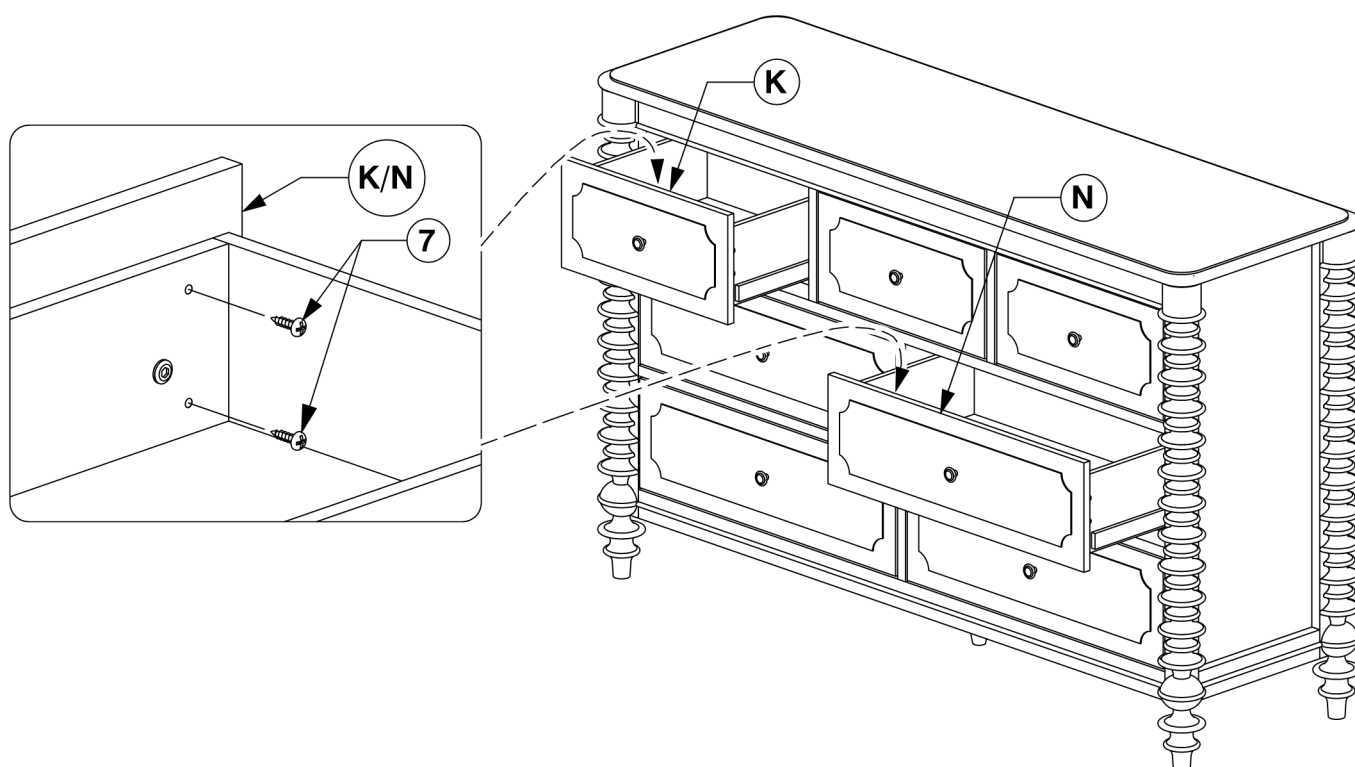

9029 3D Chest

Assembly Instructions


WI-0426

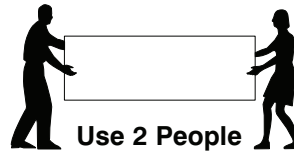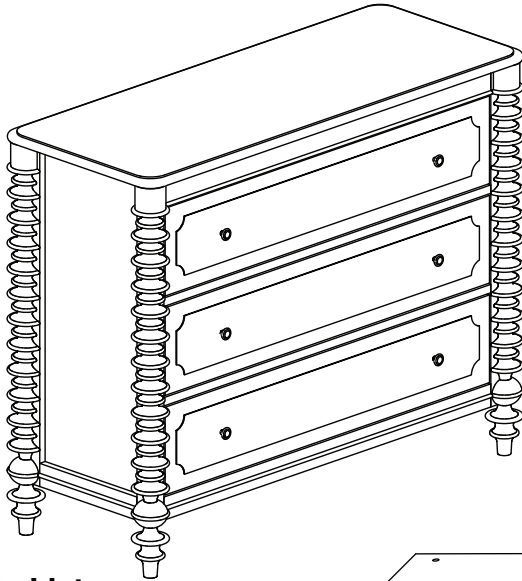


Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List


Parts in Box A:

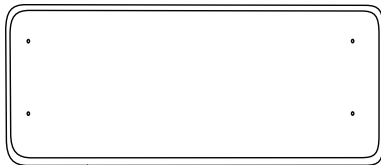


A Top Panel x 1

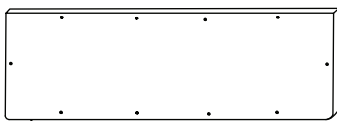


B Back Panel x 3




C Bottom Panel x 1




D Bottom Support x 4




E Front Bottom Support Bar x 1




F Front Support Bar x 2



G Front Upper Support Bar x 1




H Rear Support Bar x 3



J Rear Bottom Support Bar x 1




K Drawer Back x 3

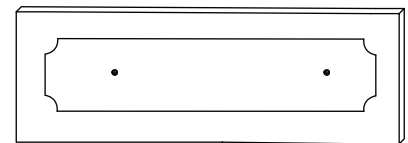

L Drawer Face x 3




M Drawer Bottom x 3




N Drawer Rail x 6


Parts in Box B:

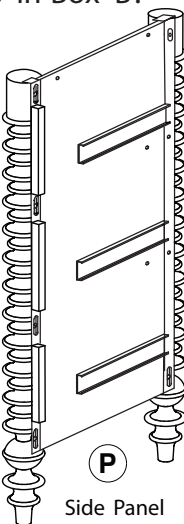


P Side Panel (Right Hand) x 1



R Drawer Side (Left Hand) x 3

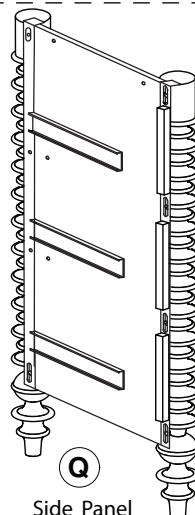

Q Side Panel (Left Hand) x 1







S Drawer Side (Right Hand) x 3

9029 3D Chest


Assembly Instructions

WI-0426

2 Hardware List

- | | | | | |
|--|---|--|---|---|
| 
1 M6 x 15mm
JCB x 16 | 
2 M6 x 40mm
JCB x 16 | 
3 M6 x 60mm JCB
x 8 | 
4 'L' Bracket
(5005-3) x 8 | 
5 M8 x 30mm
Wood Dowel
x 4 |
| 
6 M6 x 25mm
Wood Dowel
x 24 | 
7 M4 x 20mm
Wood Screw x 18 | 
8 M4 x 25mm
Wood Screw x 36 | 
9 M4 x 32mm
Wood Screw x 30 | |
| 
10 Handle
(9029) x 6 | 
11 M4 x 22mm
Wood Screw x 6 | 
12 Allen Key
x 1 | | |

3 Assemble the Drawer Sides (R & S) and Drawer Rail (N) to the Drawer Face (L).

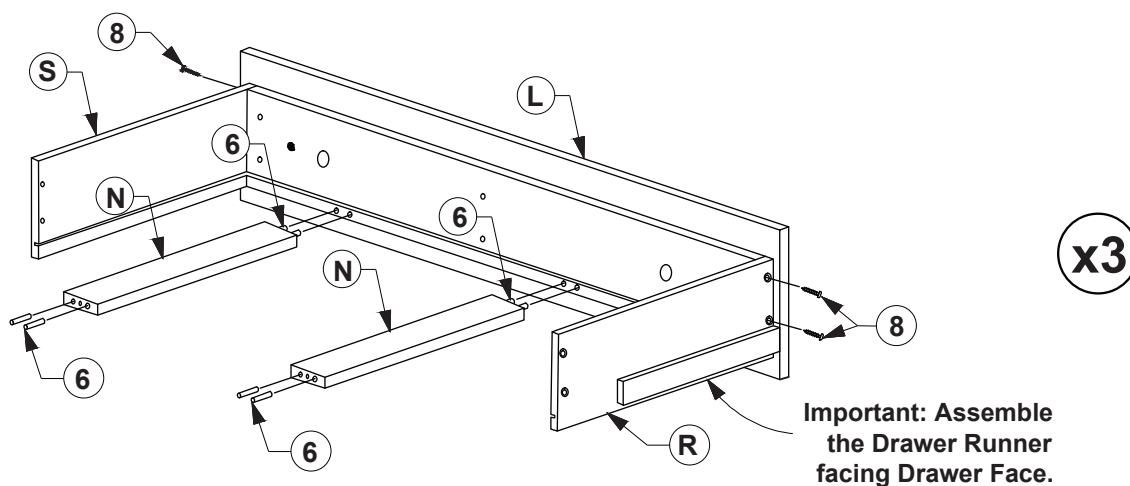


9029 3D Chest


Assembly Instructions

WI-0426


- 4** Slide the Drawer Bottom (M) into the groove on the Drawer Sides (R & S).

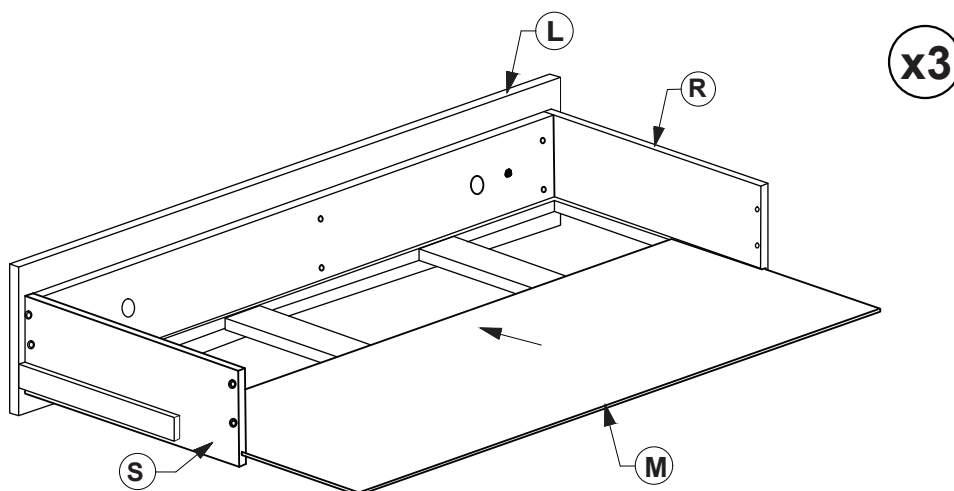

- 5** Assemble the Drawer Back (K) to the Drawer Sides (R & S). Fit the Handle to the Drawer Face (L).

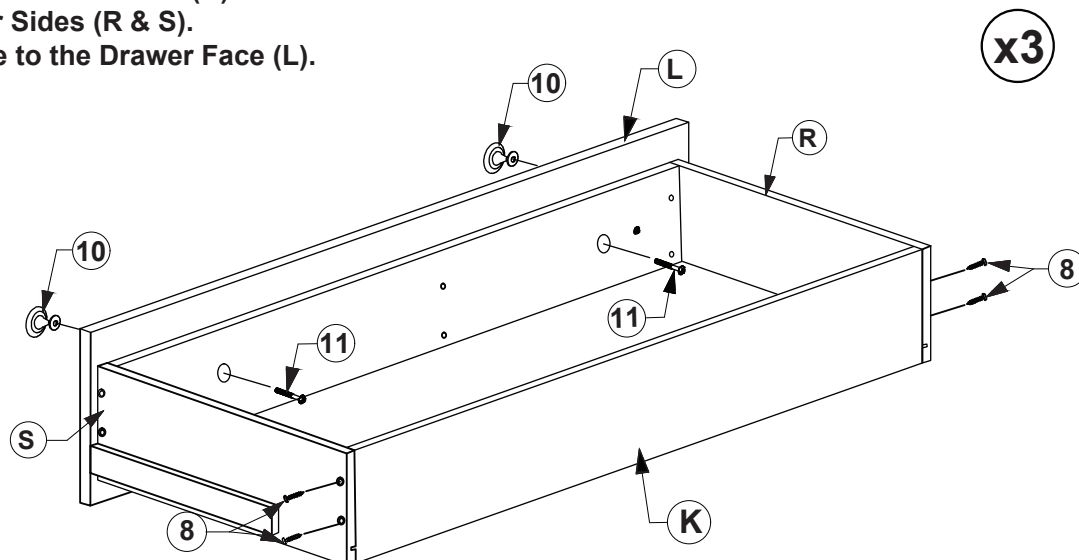

- 6** Turn the Drawer over to fit angled 25mm Wood screws (8) to the Drawer Rail (N).

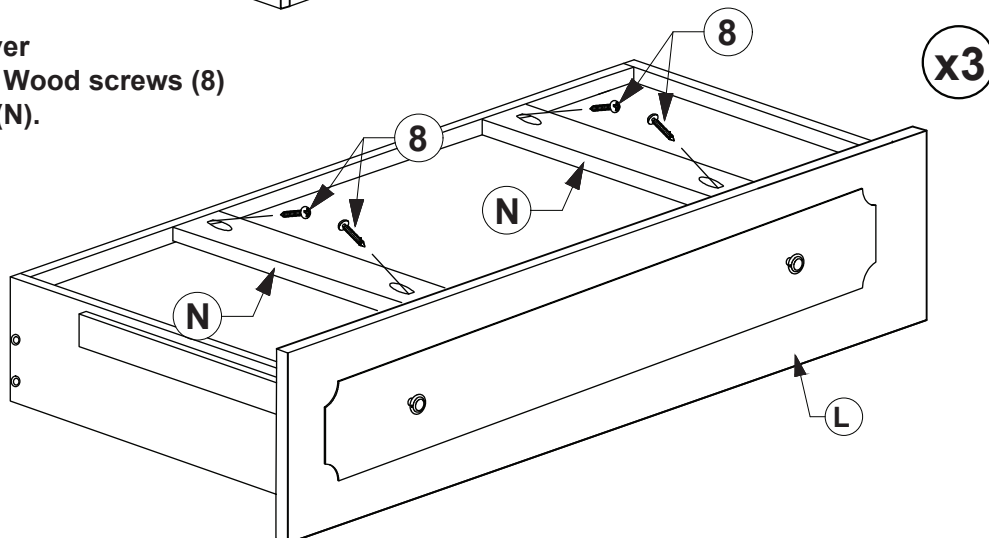


9029 3D Chest


Assembly Instructions

WI-0426

- 7** Fit the 'L' Bracket (4) to the Side Panel (P & Q).

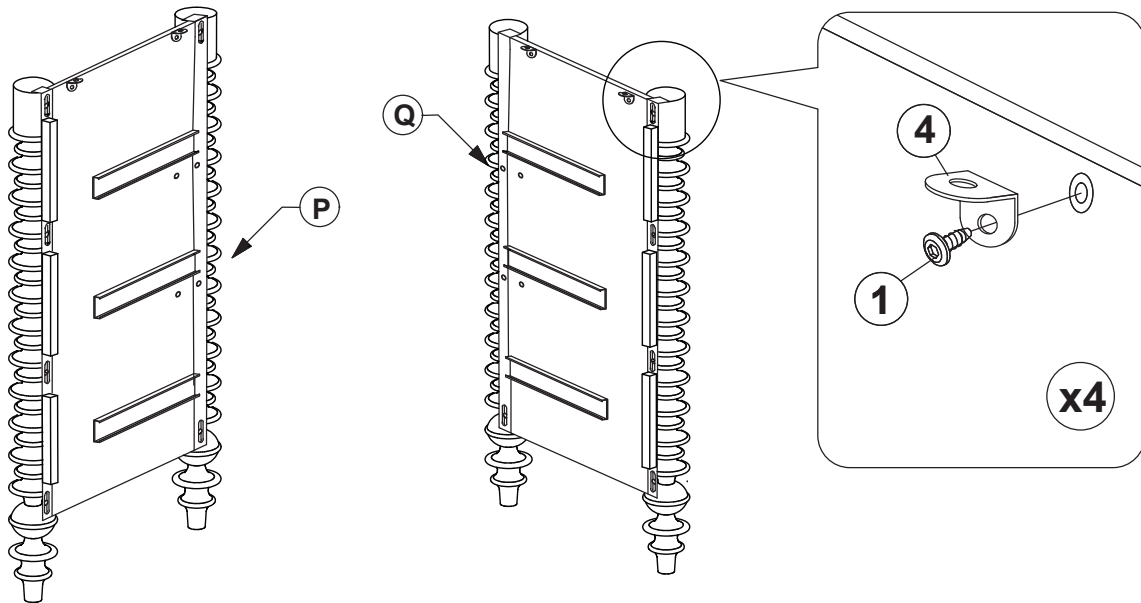

- 8** Fit the "L" Braket (4) and Wood Dowel (5) to the Front Support Bar (F).

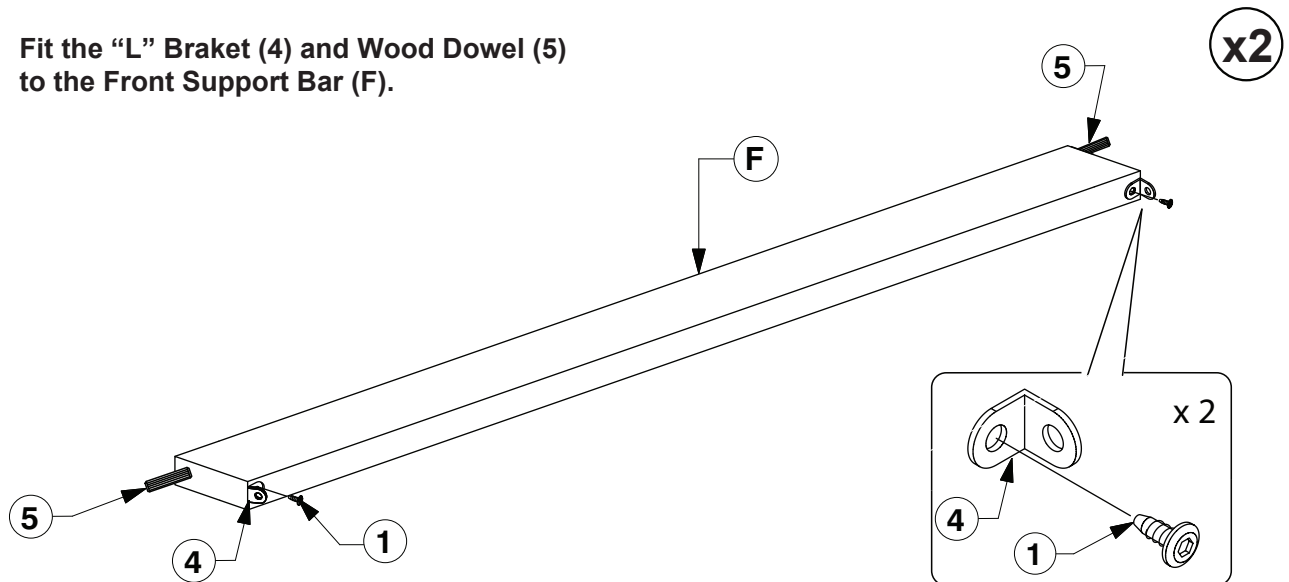


9029 3D Chest

Assembly Instructions





WI-0426

9 Assemble Support Bar (E, F, G, H & J) to the Side Panel (Q).

Step 1
Use the
ball end of
Allen key to start
the bolt.

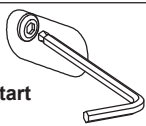


Step 2
Tighten fully with
the straight
end.


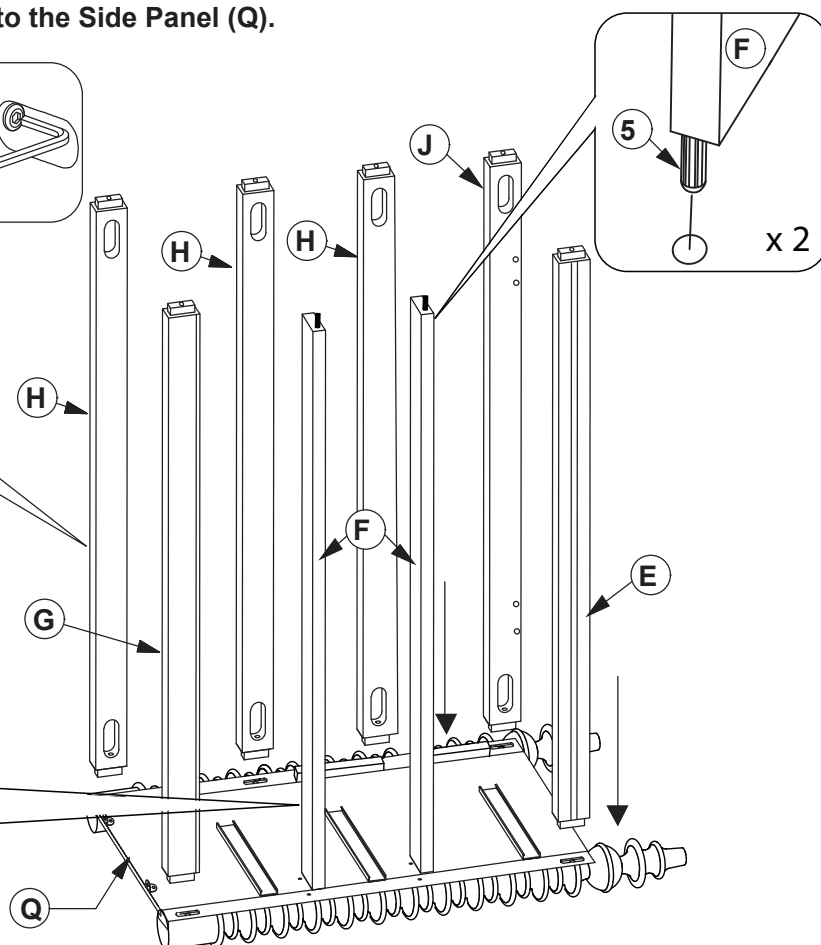
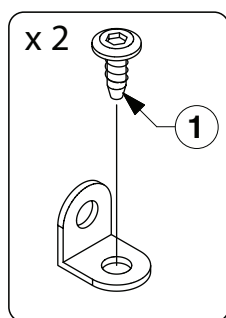
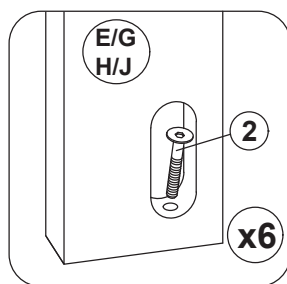



10 Fit the Side Panel (P) to the Support Bar (E, F, G, H & J).

Step 1
Use the
ball end of
Allen key to start
the bolt.

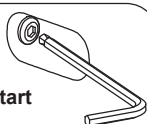

Step 2
Tighten fully with
the straight
end.

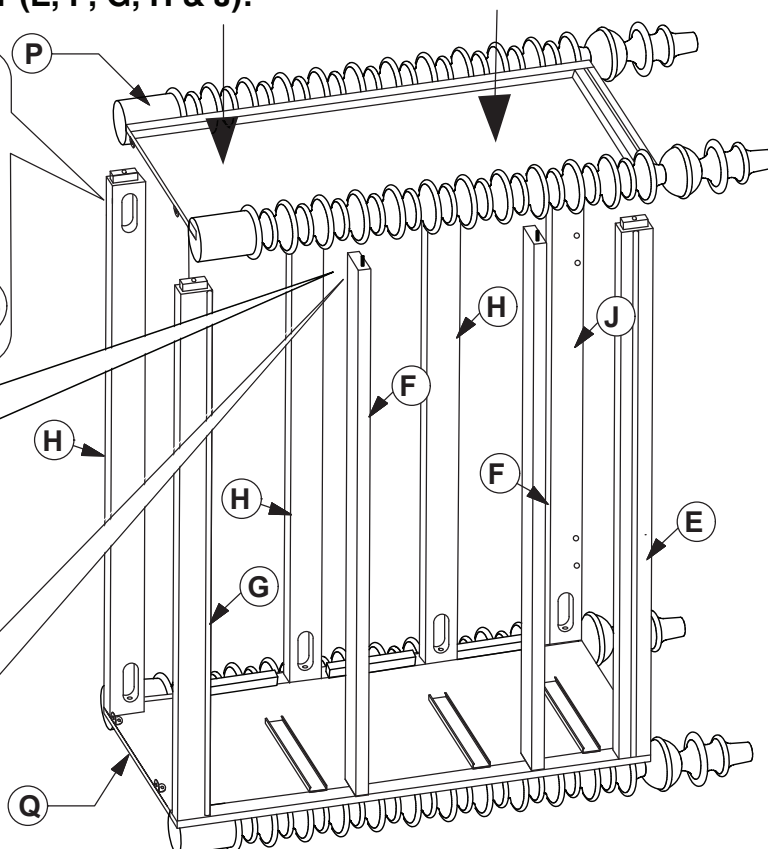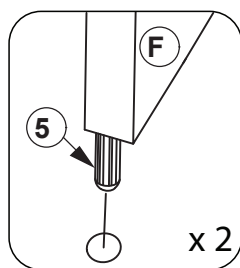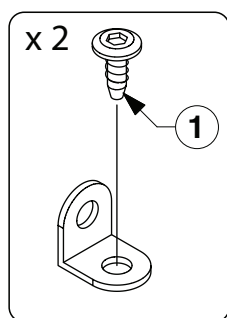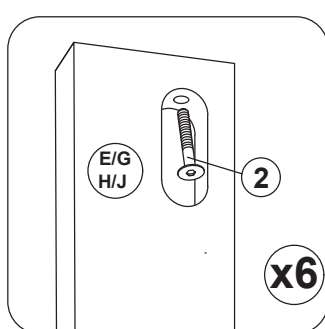


9029 3D Chest


Assembly Instructions

WI-0426

- 11** Assemble the Side Panel (P & Q) to the Top Panel (A).

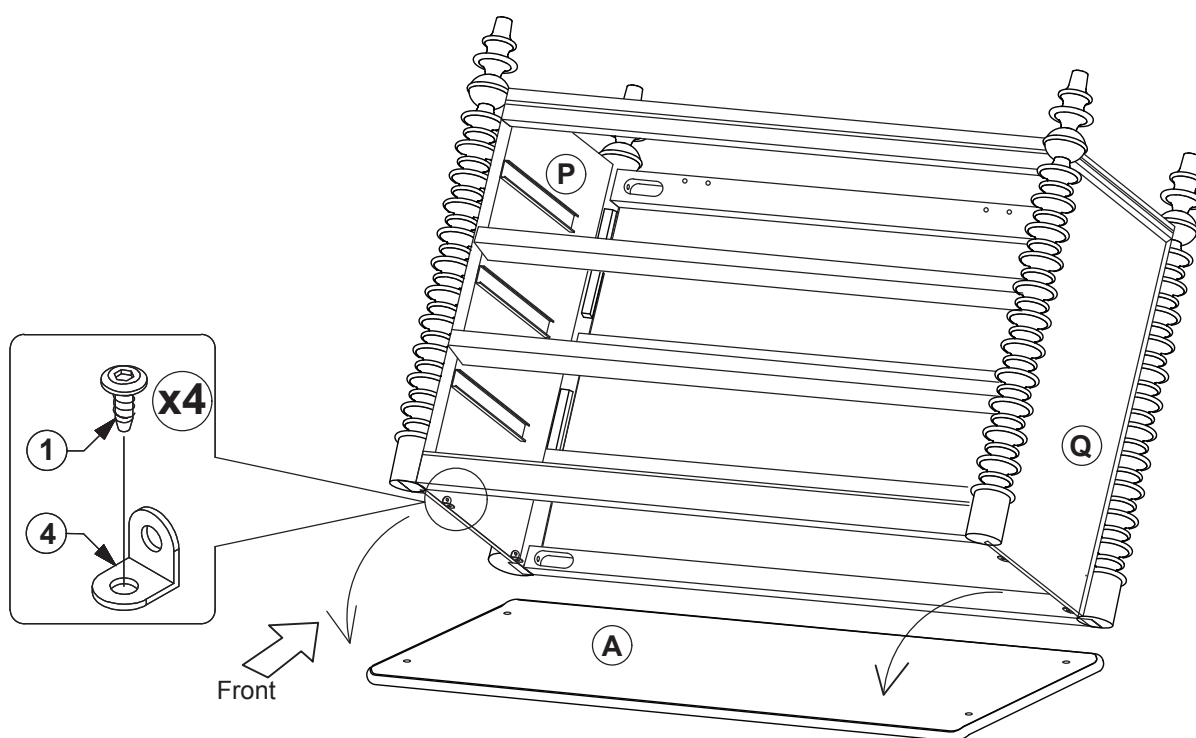

- 12** Assemble the Bottom Support (D) to the Bottom Front & Rear Support Bar (E & J) as shown.

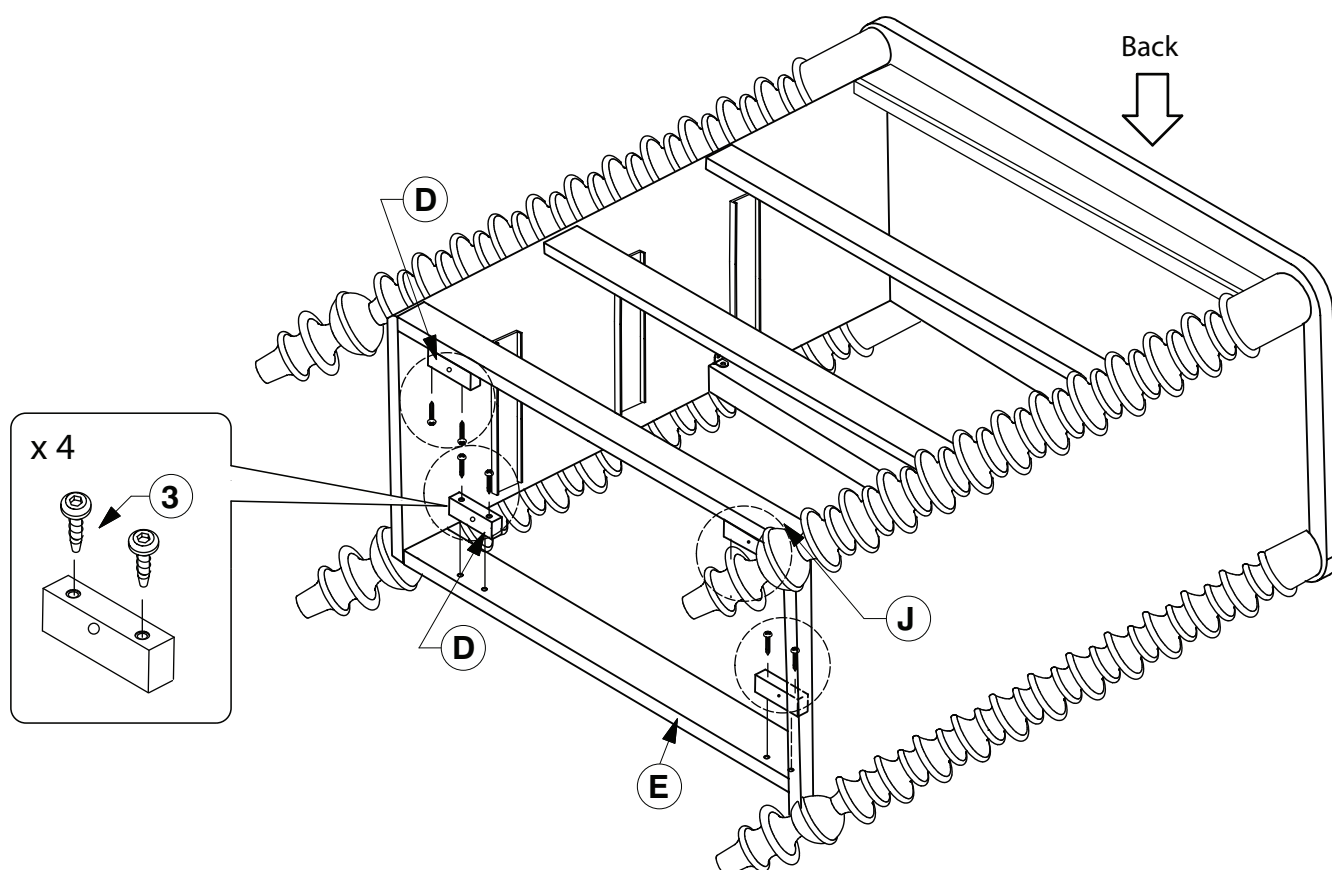


9029 3D Chest


Assembly Instructions

WI-0426

- 13** Bolt the Bottom Support (D) to the Bottom Panel (C) as shown.

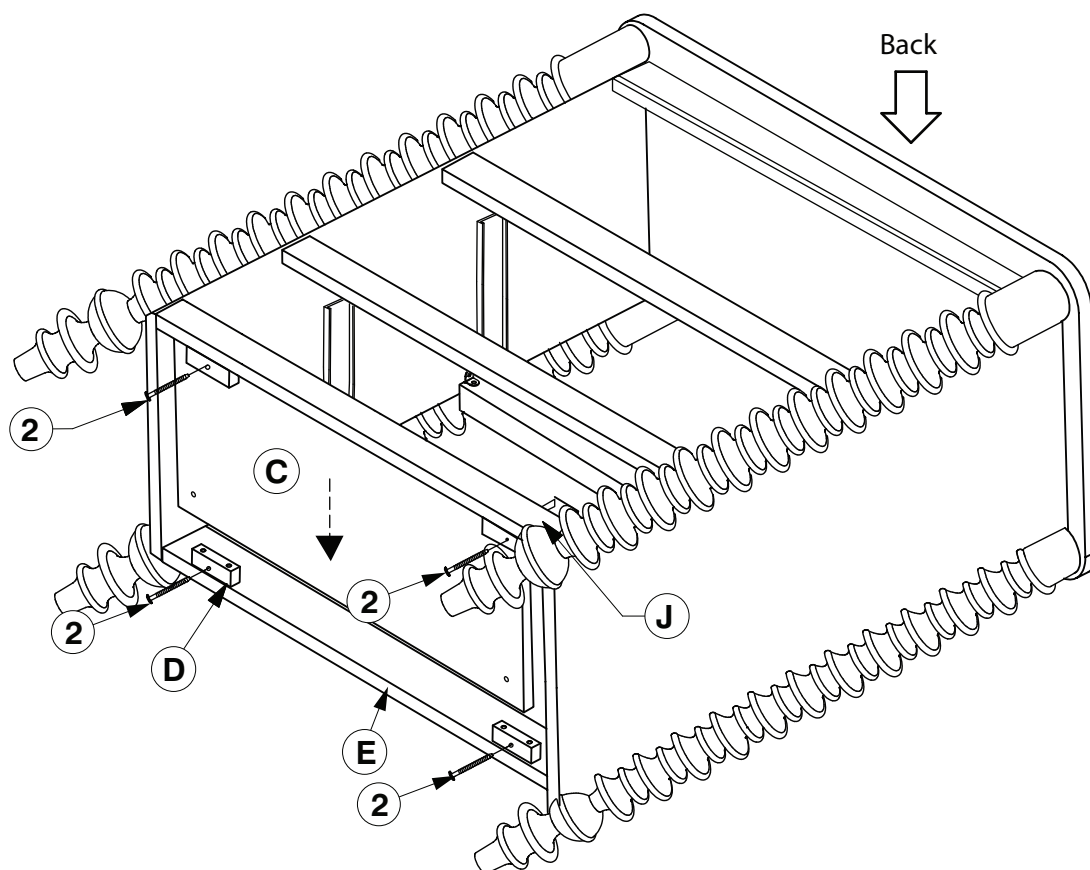

- 14** Use screw to tighten the Back Panel (B) to the back of the frame.

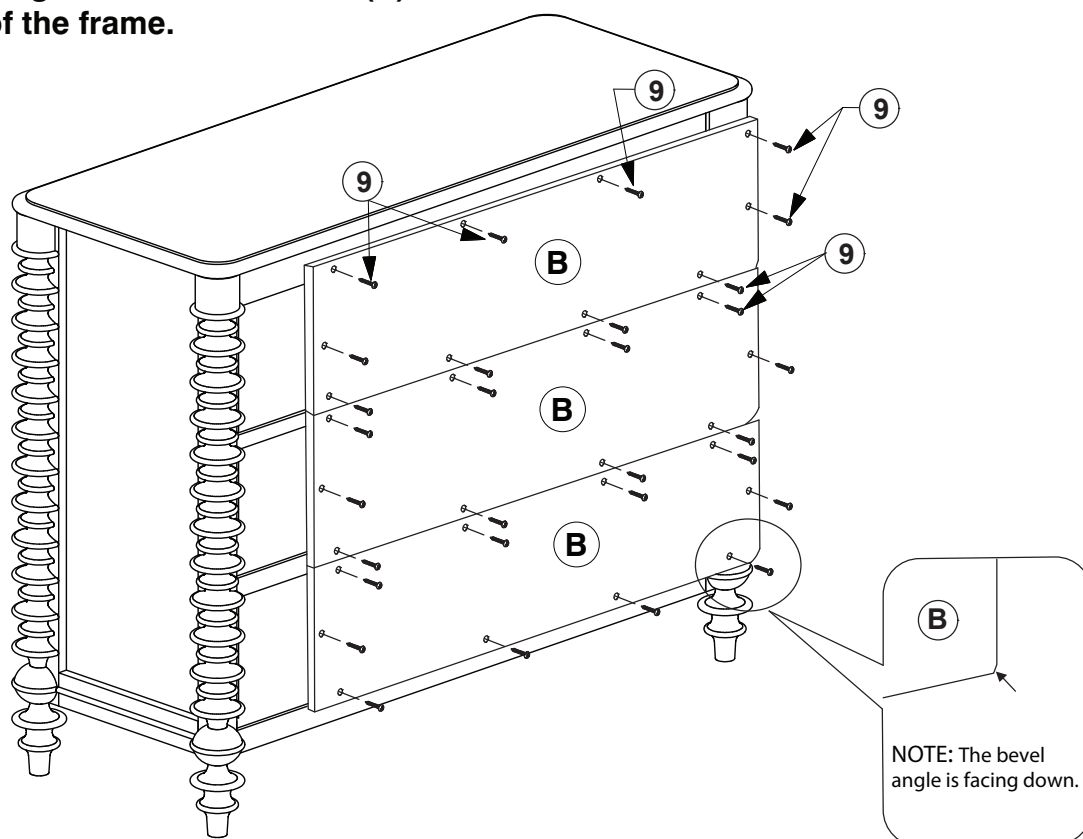


9029 3D Chest

Assembly Instructions


- 15** Fit the Drawer Face (L) to the casegood body.

WI-0426

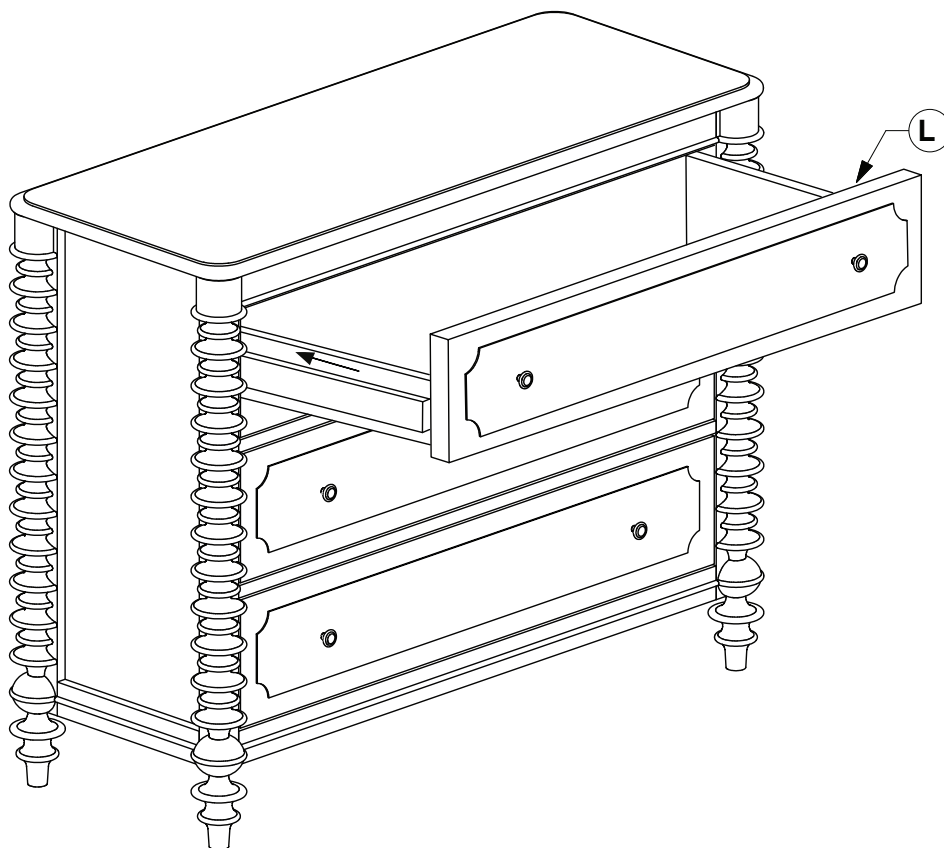

- 16** Adjust the Drawer Face (L) .

* NOTE: Before fitting the Wood Screws .
Loosen the JCBs on the Drawer Face if
the face needs alignment .

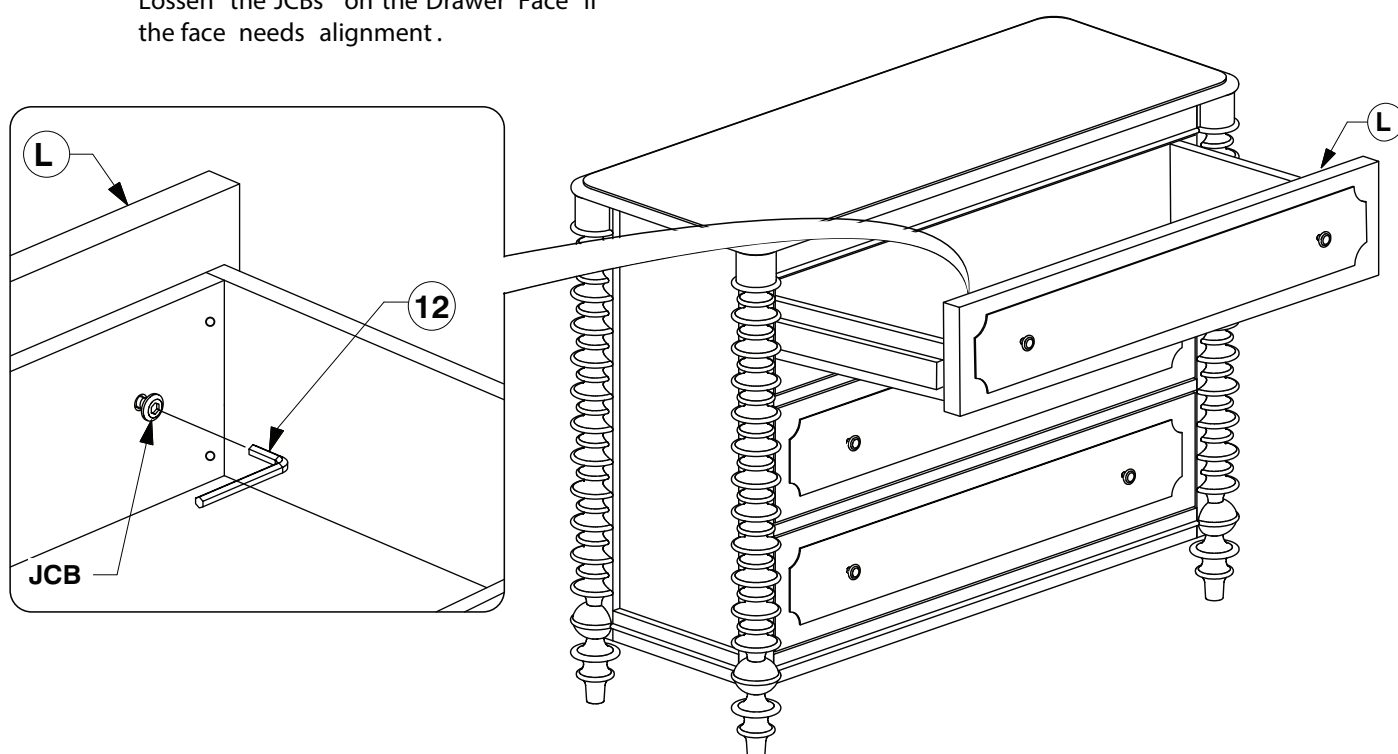

9029 3D Chest

Assembly Instructions

WI-0426

- 17** After the Drawer Faces (L) are aligned, secure with Wood Screw (7).

