
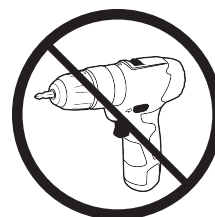
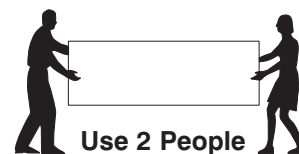


0267-1 Queen Bed

Assembly Instructions

WI-0326


1 Assembled View

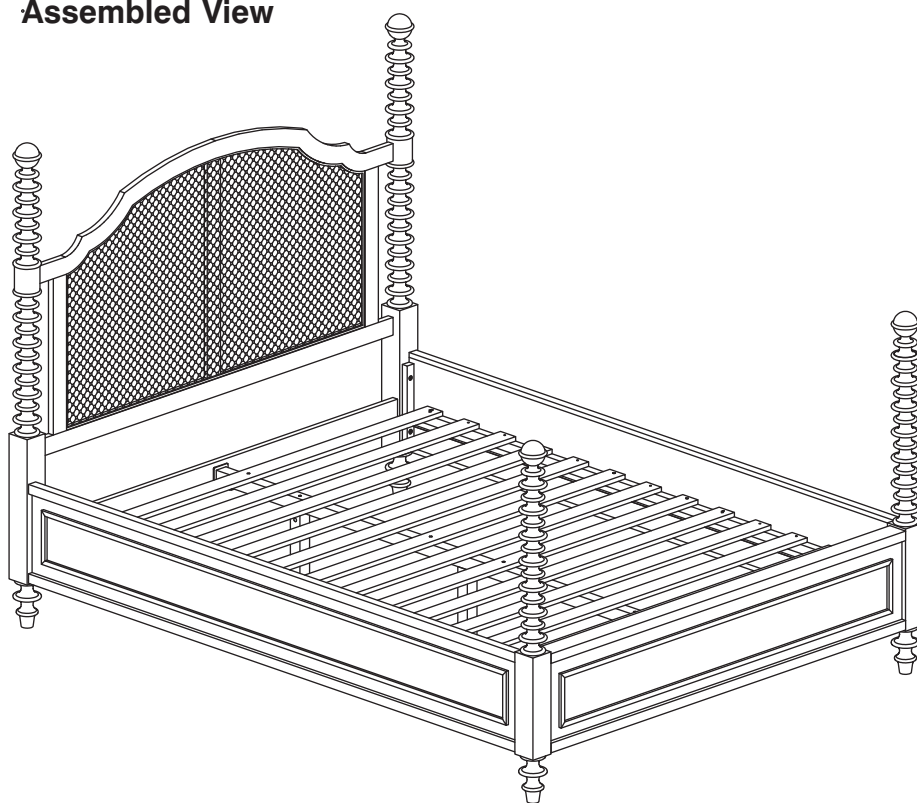

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List

Parts in Box A:

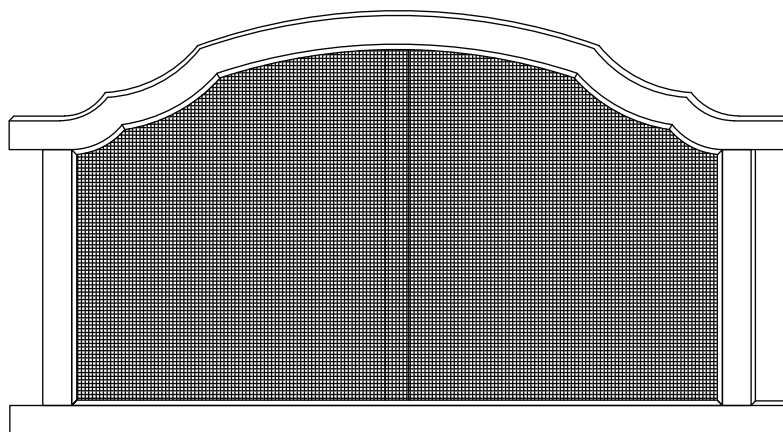

A Headboard Panel x 1



B Headboard Support x 1

0267-1 Queen Bed

Assembly Instructions

WI-0326

3 Parts List

Parts in Box B:



C
Headboard
Upper Post
x 2



D
Headboard
Center Post
(Left Hand)
x 1



E
Headboard
Center Post
(Right Hand)
x 1



F
Footboard
Upper Post
x 2



G
Headboard/
Footboard
Lower Post
x 4




H
Footboard
Center Post
(Left Hand)
x 1



J
Footboard
Center Post
(Right Hand)
x 1


Parts in Box C:

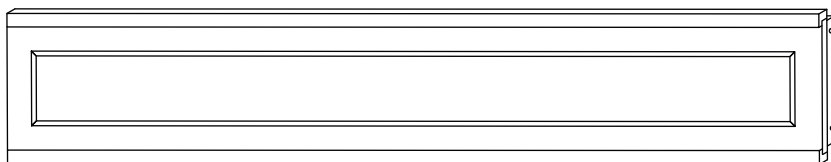

K Side Rail x 2




N Support
Leg x 3

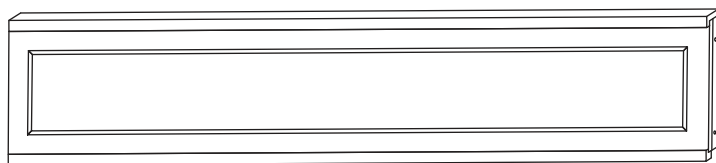

L Footboard Panel x 1



M Long Support x 1

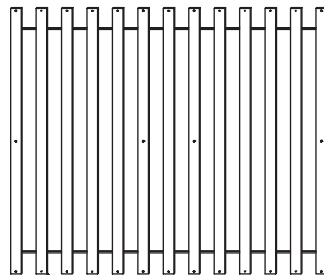









O Set of
Bed Slats x 1

0267 -1 Queen Bed


Assembly Instructions

WI-0326

4 Hardware List

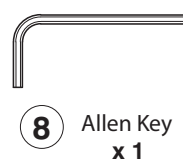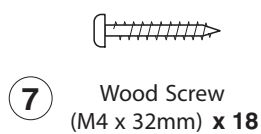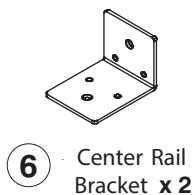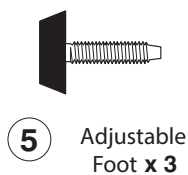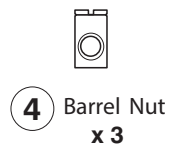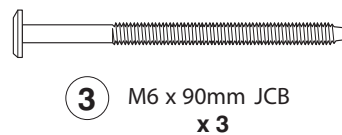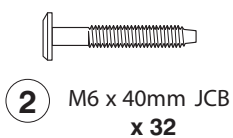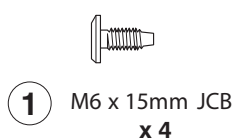

5 Assemble the Support Leg (N) to the Long Support (M).

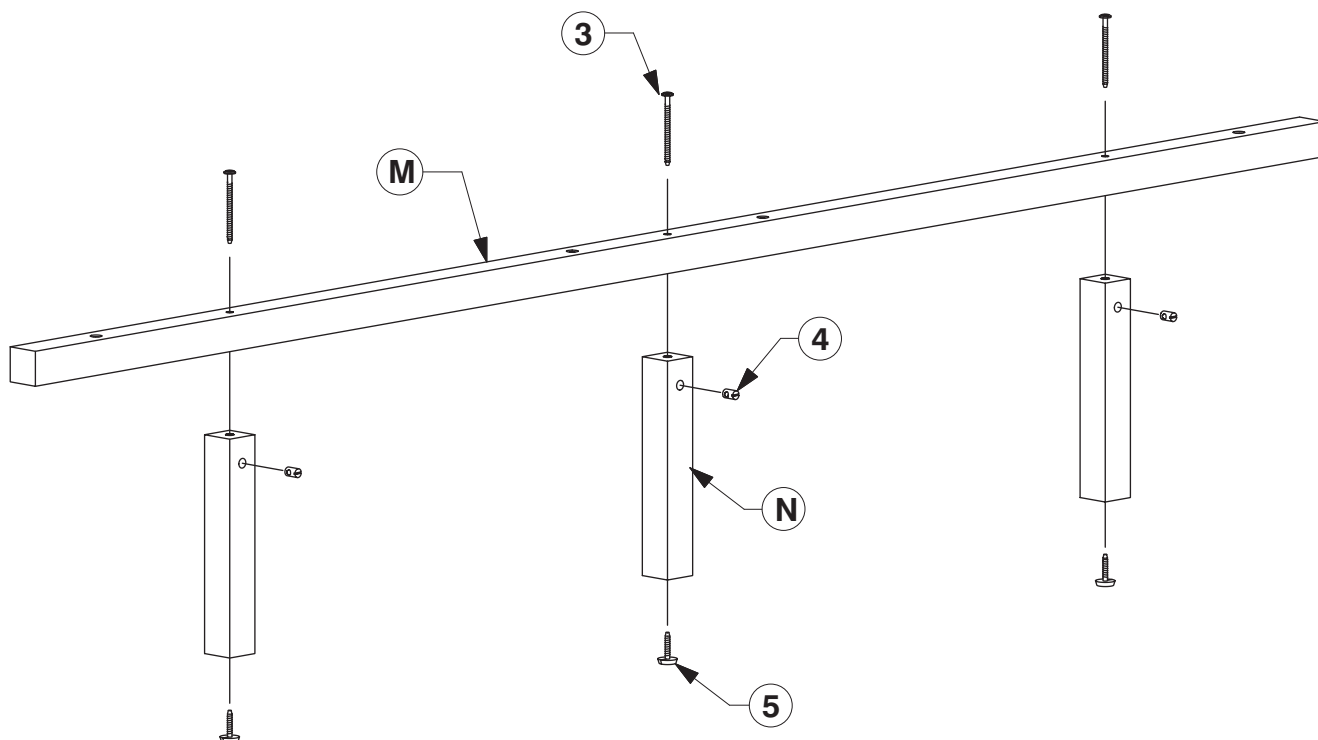


0267 -1 Queen Bed


Assembly Instructions

WI-0226

- 6** Assemble Headboard Upper Post (C) and HB/FB Lower Post (G) to the Headboard Center Post (D & E).

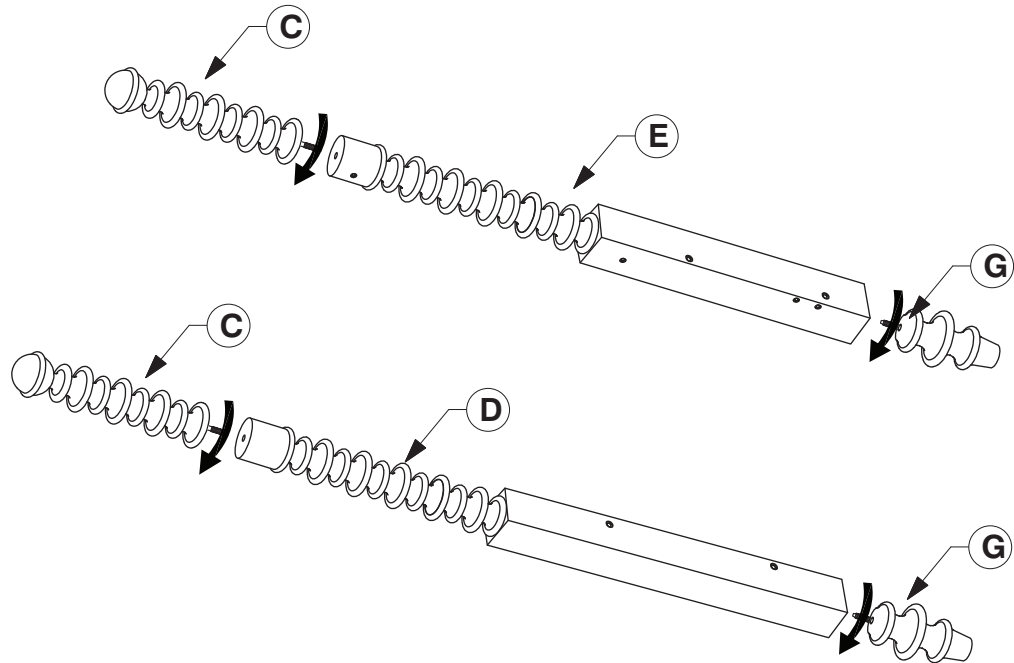

- 7** Assemble Footboard Upper Post (F) and HB/F Lower Post (G) to the Footboard Center Post (H/J) .

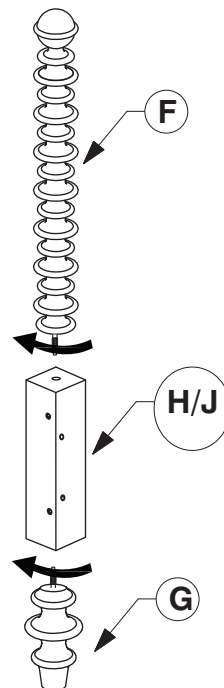


0267 -1 Queen Bed


Assembly Instructions

WI-0226

- 8** Attach the Headboard Post (D & E) to the Headboard Panel (A) and Headboard Support (B).

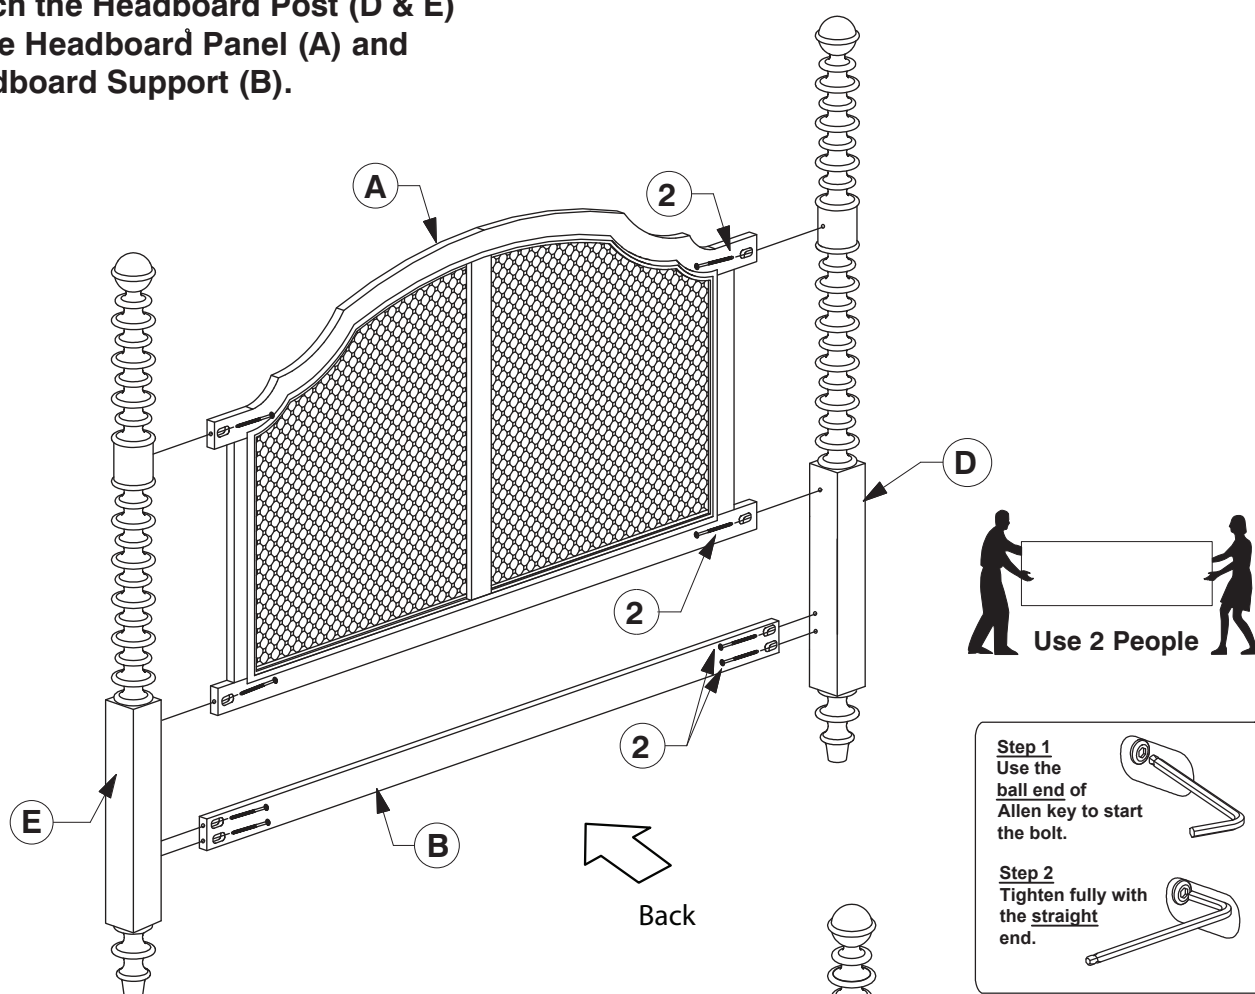

- 9** Attach the Footboard Post (H & J) to the Footboard Panel (L).

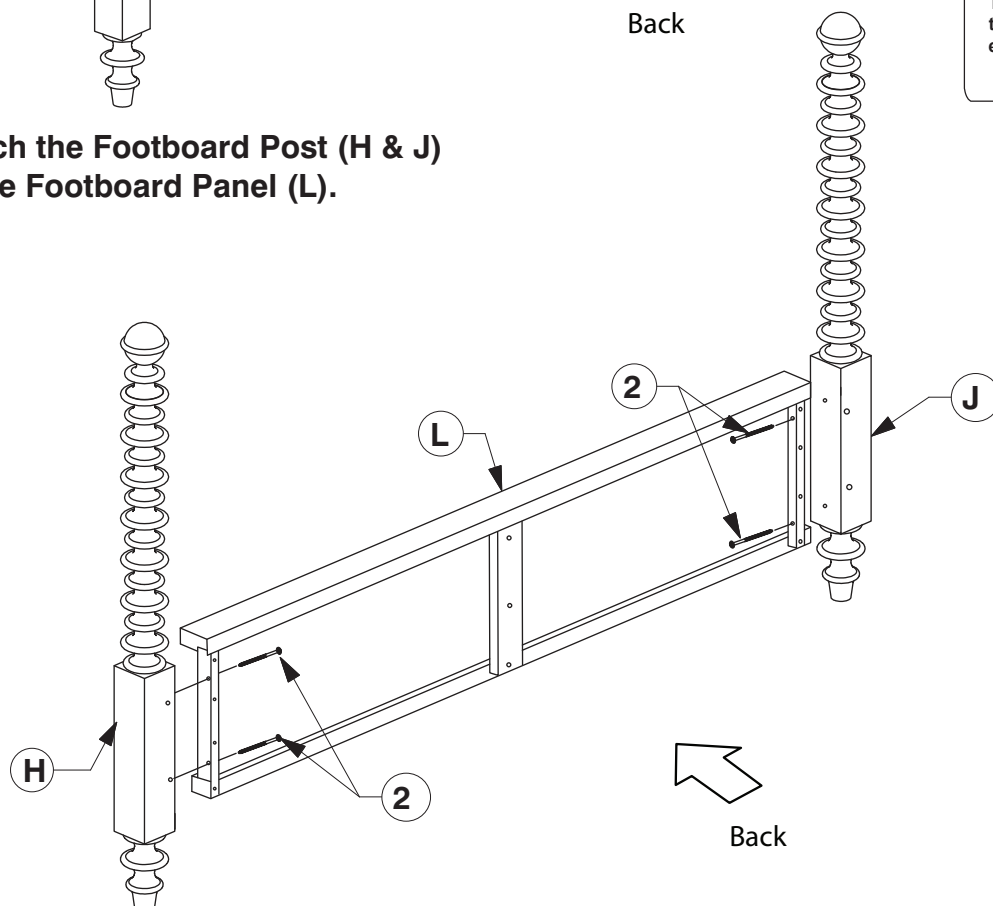


0267-1 Queen Bed


Assembly Instructions

WI-0326

- 10** Fit the Center Rail Bracket (6) to the Headboard Support (B).

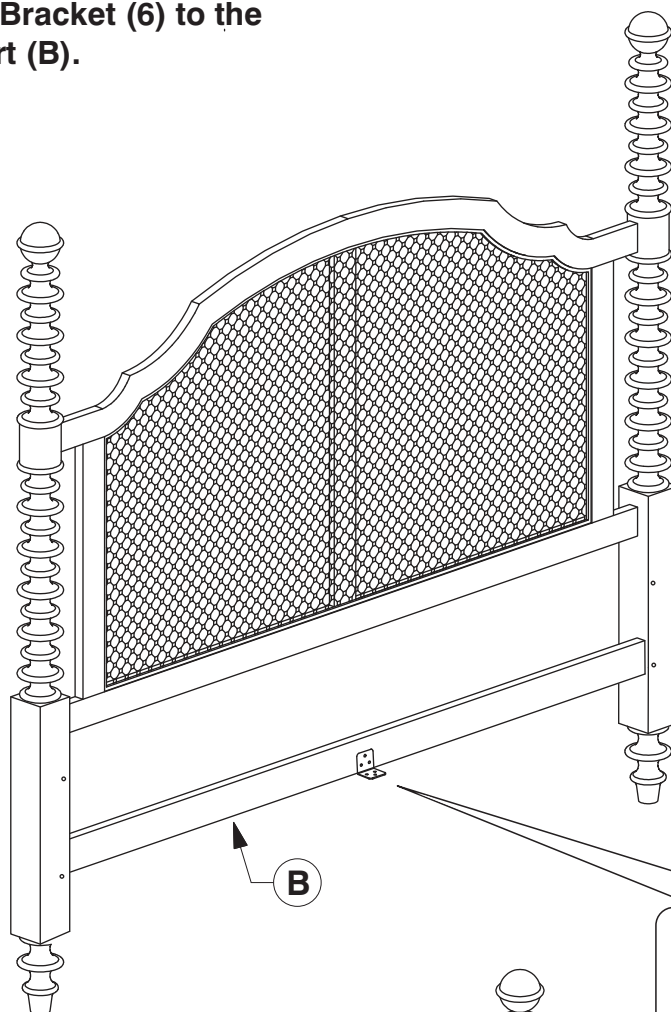

- 11** Fit the Center Rail Bracket (6) to the Footboard Panel (L).

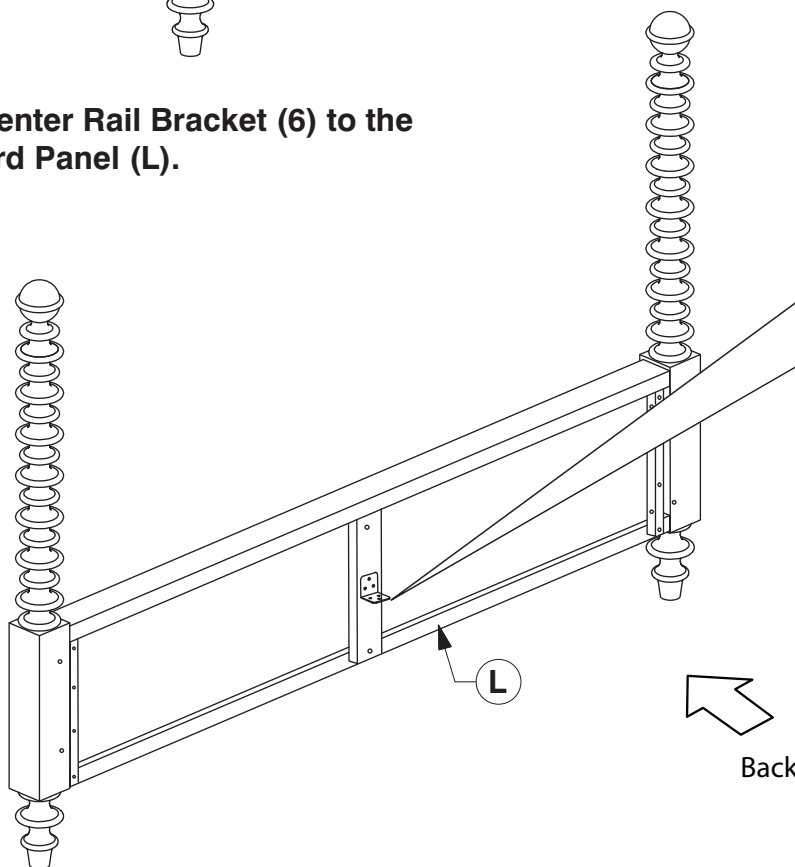

Short Tab of
Metal Bracket (6)



1

0267 -1 Queen Bed

Assembly Instructions

WI-0326

- 12** Assemble the Side Rail (K) to the Head / Footboard.

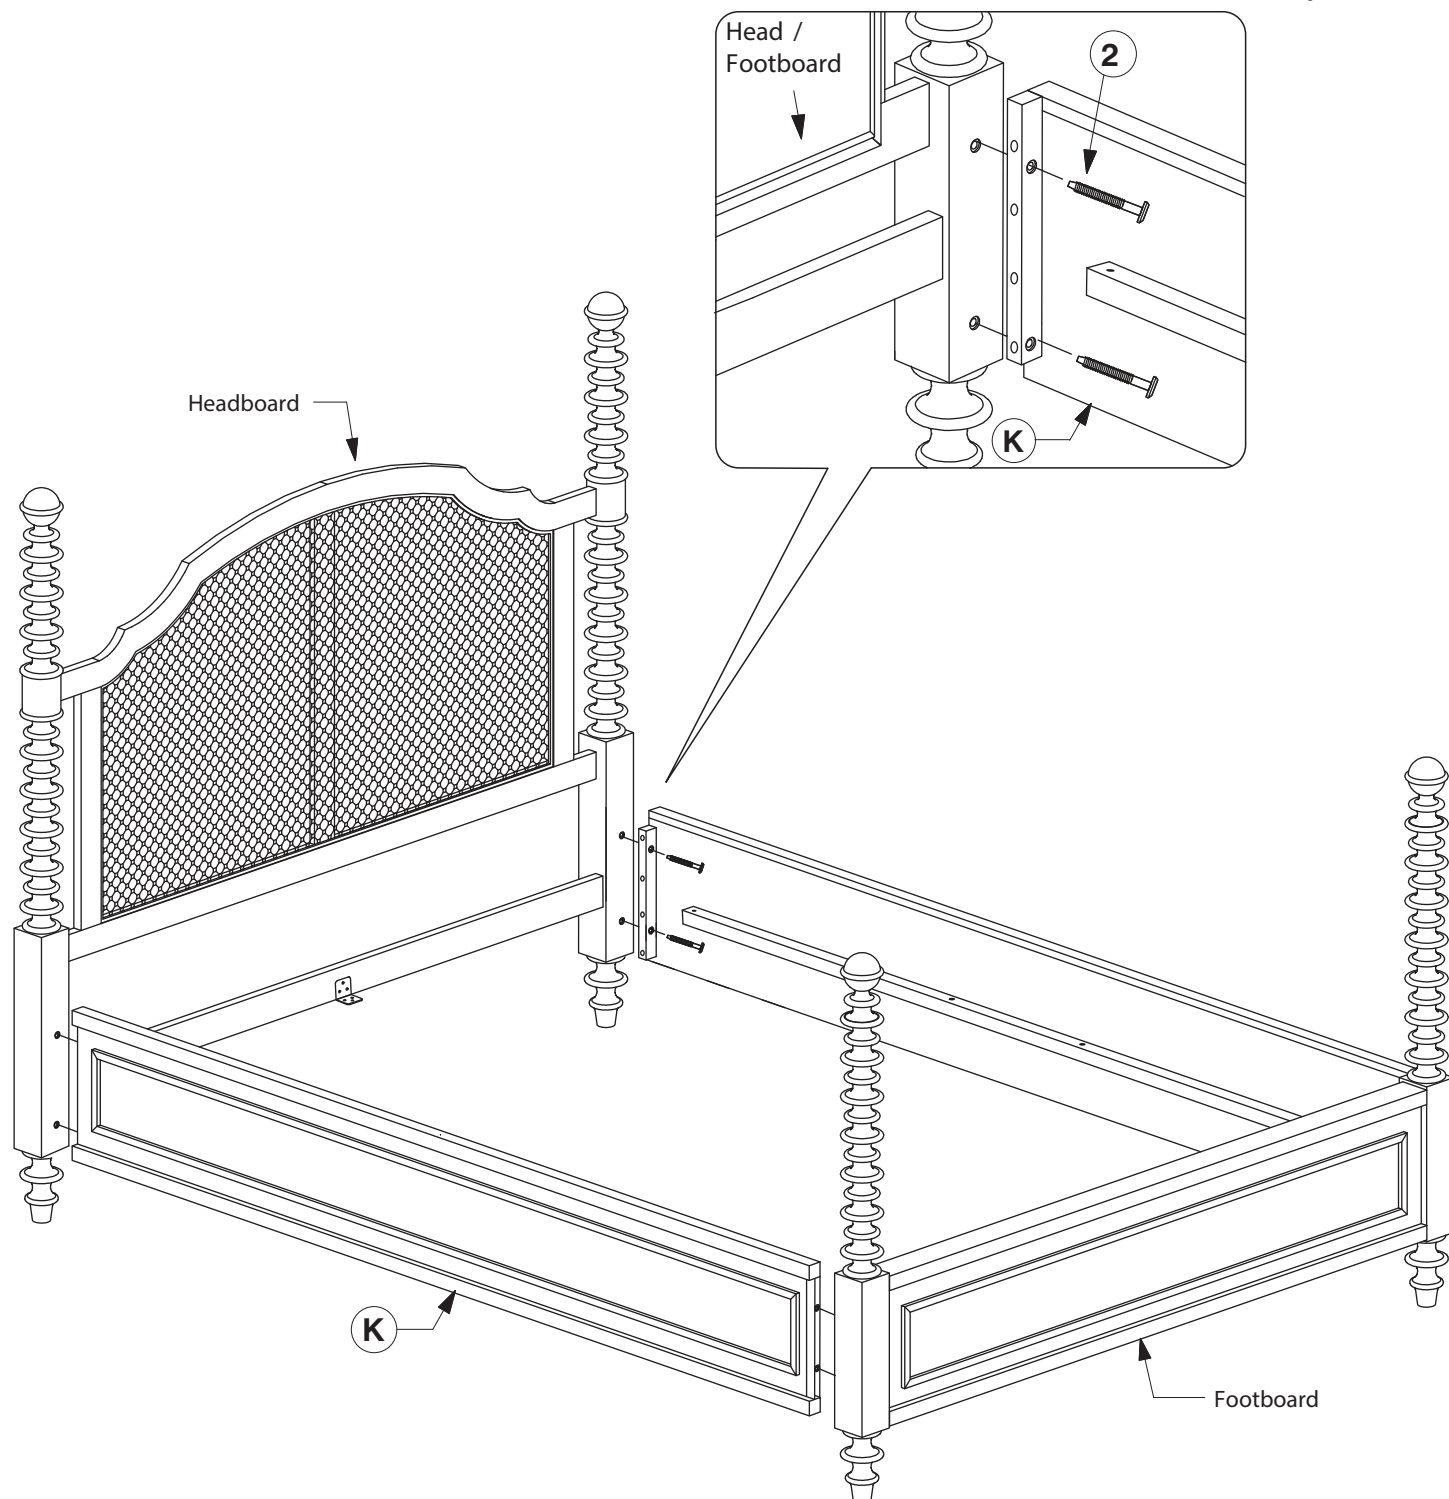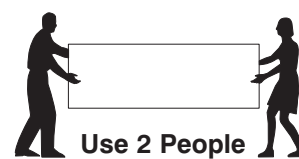


0267 -1 Queen Bed

Assembly Instructions

WI-0326

- 13** Bolt the Long Support (M) to the Center Rail Brackets on the Headboard/Footboard.

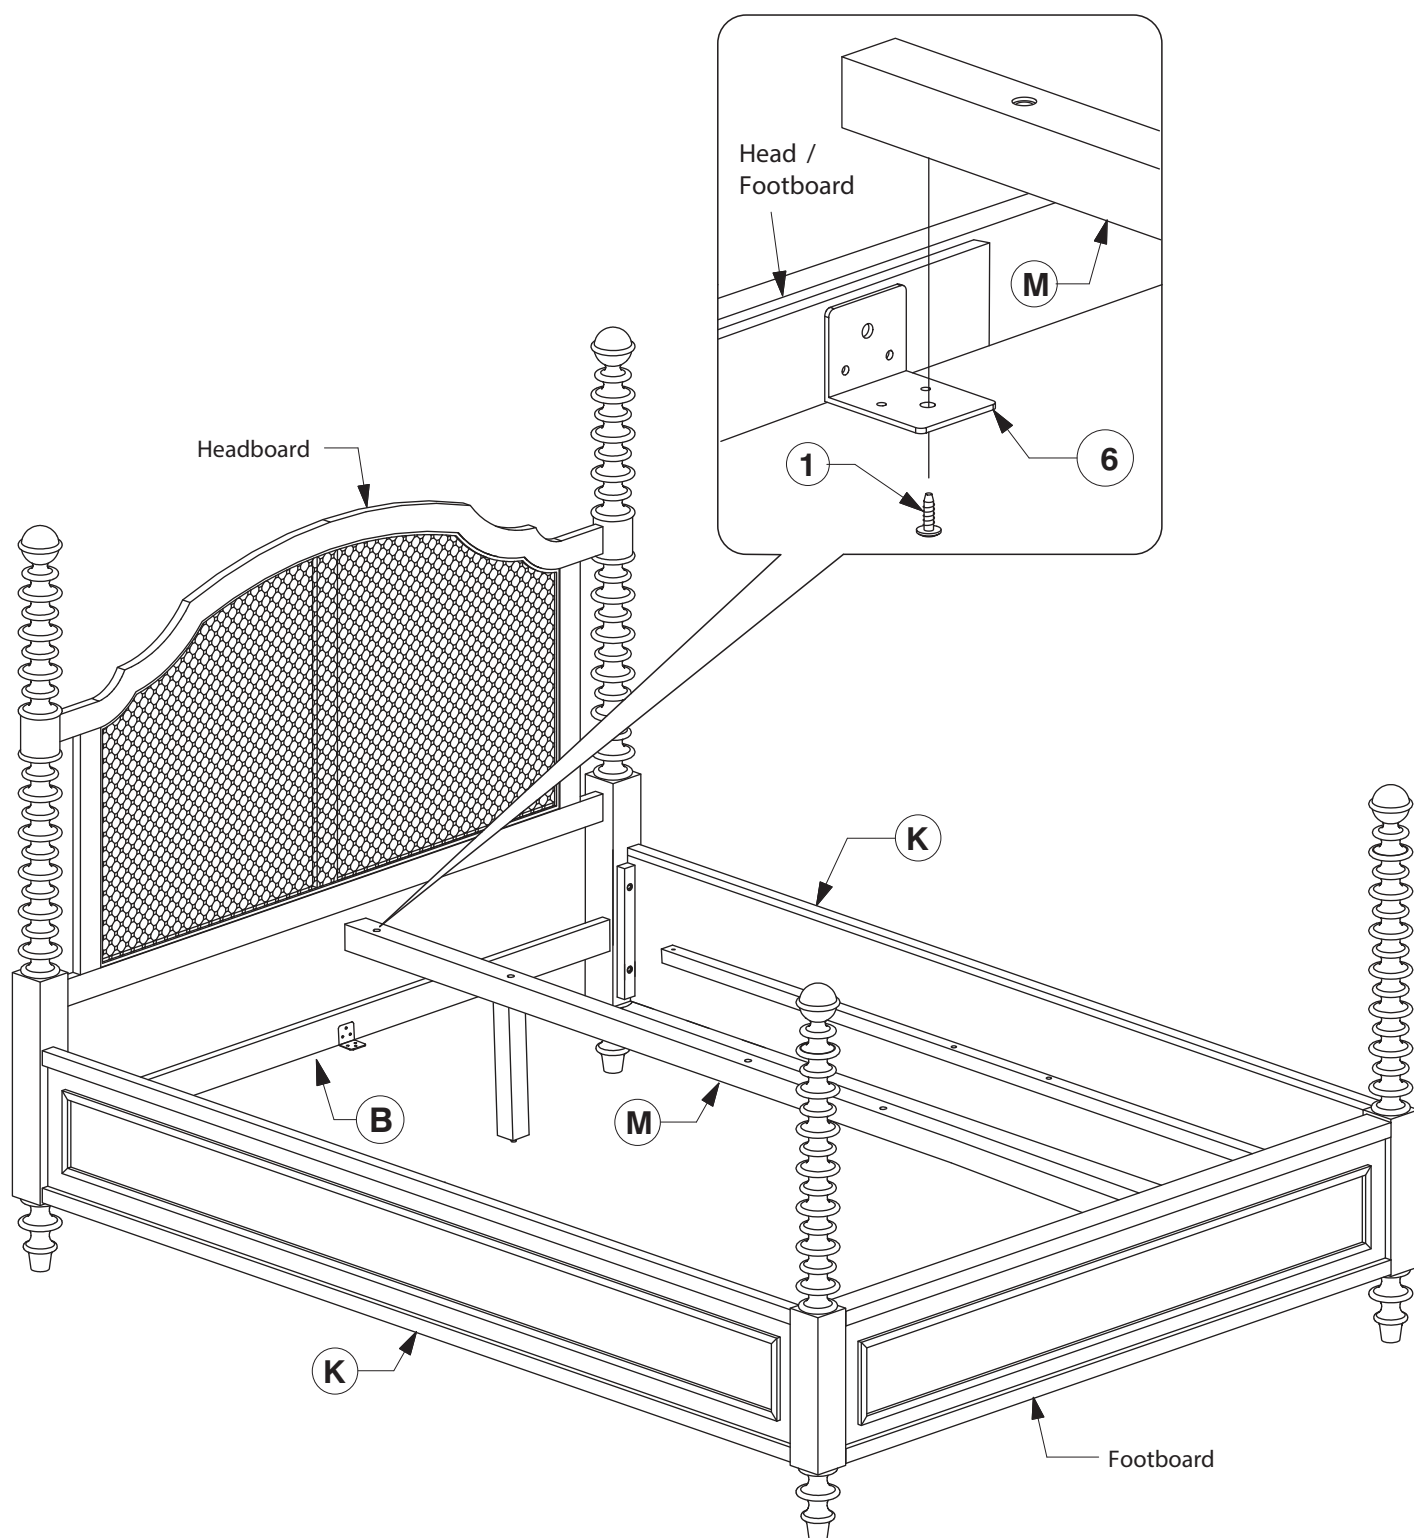


0267 -1 Queen Bed

Assembly Instructions

WI-0326



- 14** Bolt & Screw the Bed Slats (O) to the Side Rail (K) and Long Support (M).

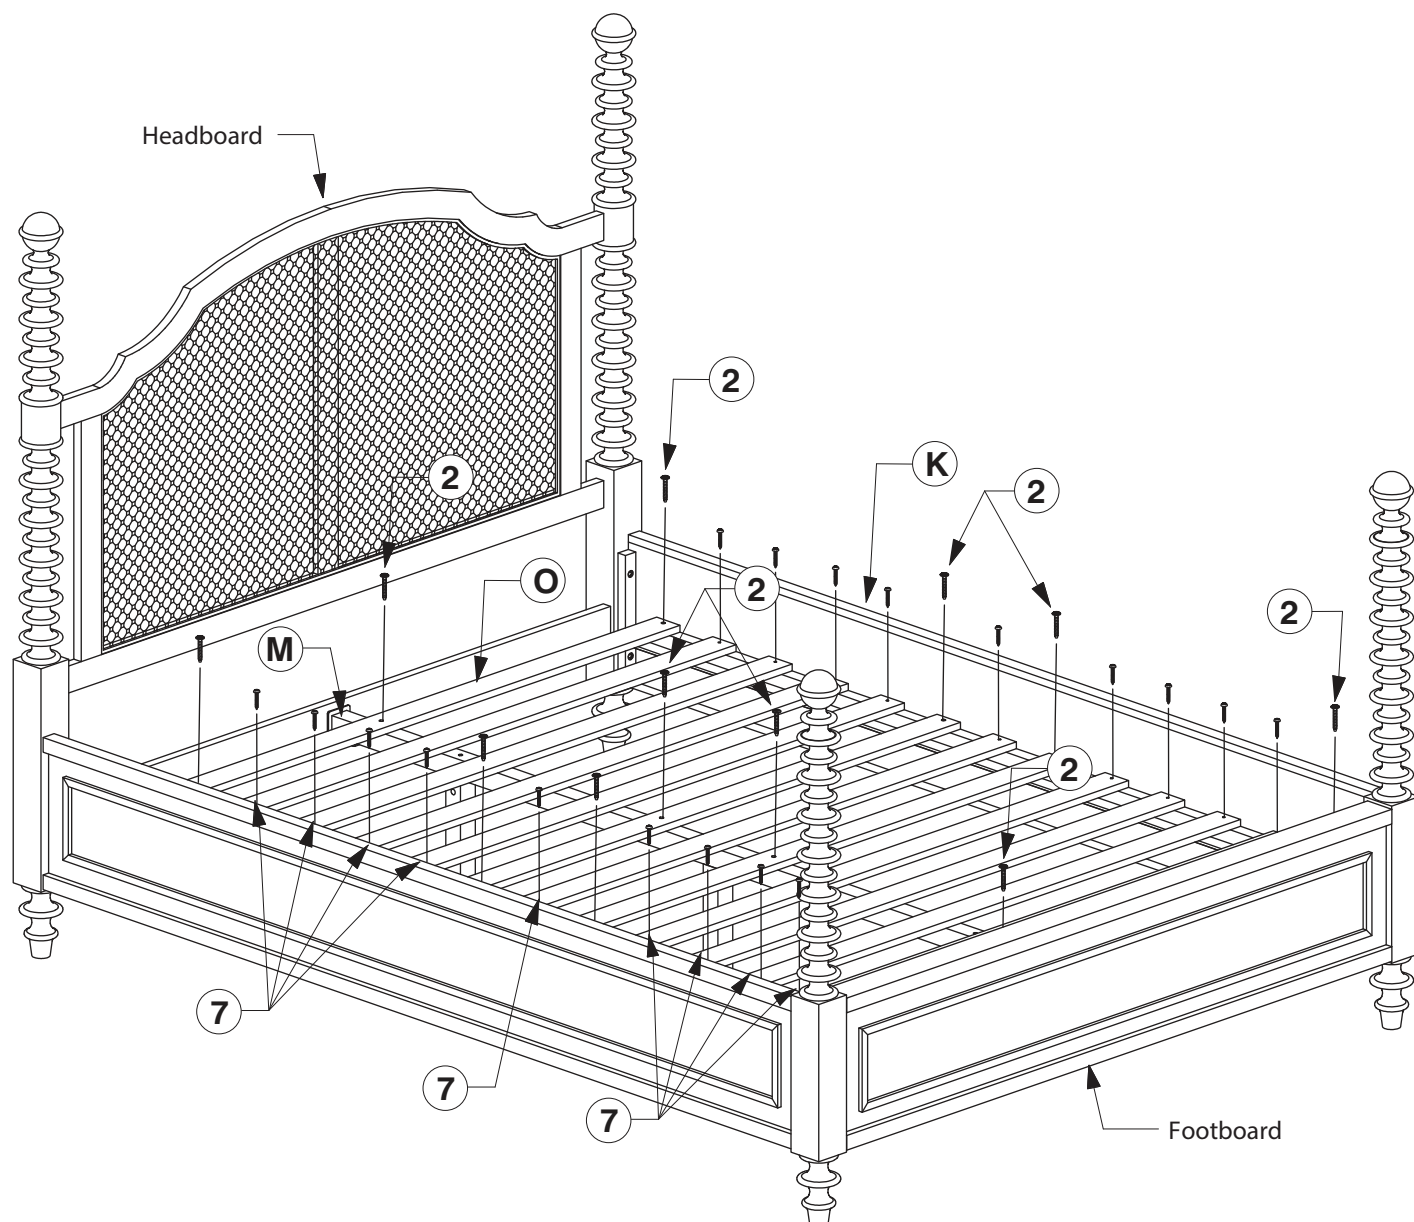

9029 2D Night Stand











Assembly Instructions

WI-0425

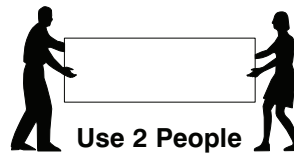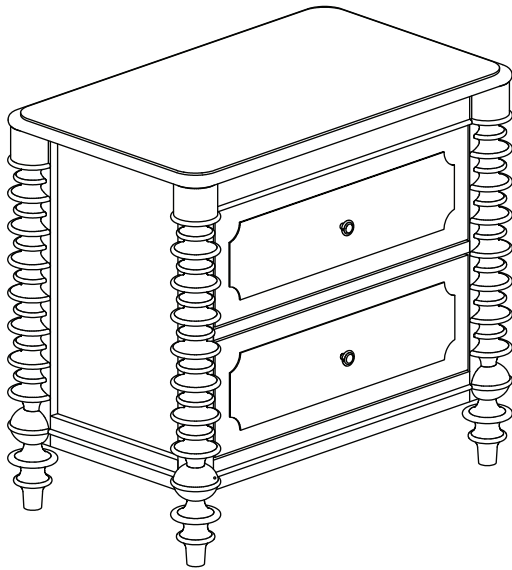

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

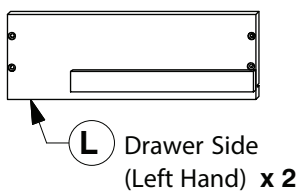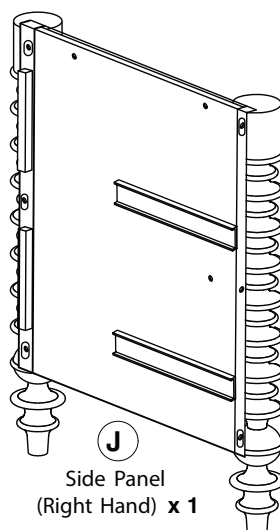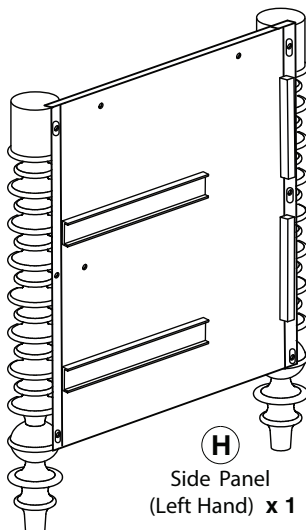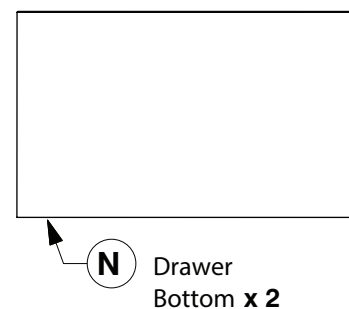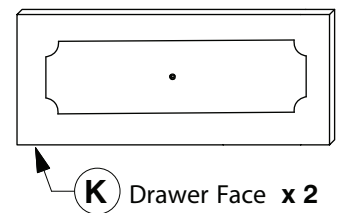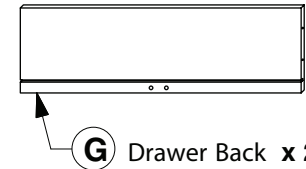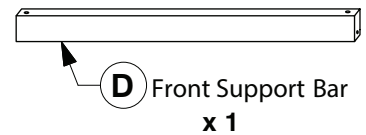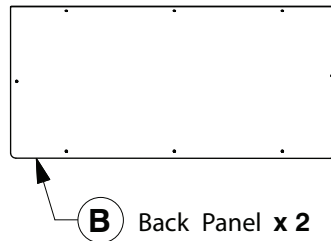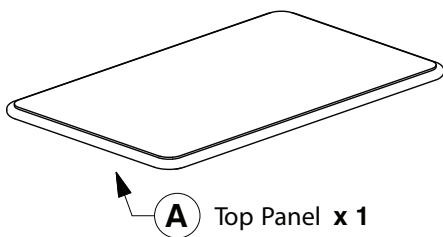


9029 2D Night Stand

Assembly Instructions


WI-0425

2 Hardware List

- | | | | | |
|---|---|---|---|---|
|  |  |  |  |  |
| 1 M6 x 15mm JCB x 12 | 2 M6 x 40mm JCB x 10 | 3 'L' Bracket (5005-3) x 6 | 4 M8 x 30mm Wood Dowel x 2 | 5 M6 x 25mm Wood Dowel x 8 |
|  |  |  |  | |
| 6 M4 x 16mm Wood Screw x 16 | 7 M4 x 20mm Wood Screw x 8 | 8 M4 x 25mm Wood Screw x 20 | 9 Handle (9029) x 2 | |
| |  |  | | |
| | 10 M4 x 22mm Wood Screw x 2 | 11 Allen Key x 1 | | |

3 Assemble the Drawer Sides (L & M) and Drawer Rail (P) to the Drawer Face (K).

x2

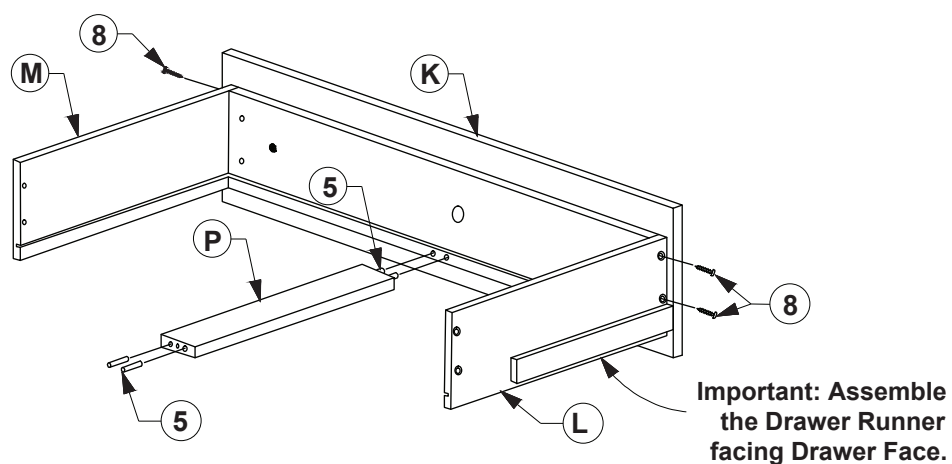


9029 2D Night Stand


Assembly Instructions

WI-0425


- 4** Slide the Drawer Bottom (N) into the groove on the Drawer Sides (L & M).

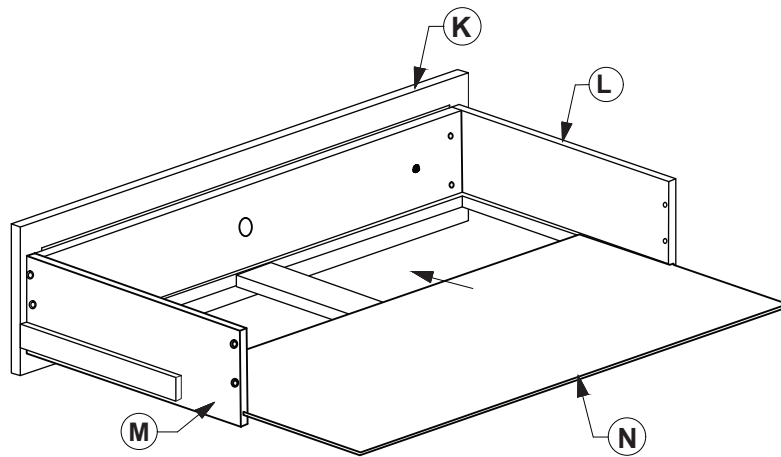

- 5** Assemble the Drawer Back (G) to the Drawer Sides (L & M). Fit the Handle to the Drawer Face (K).

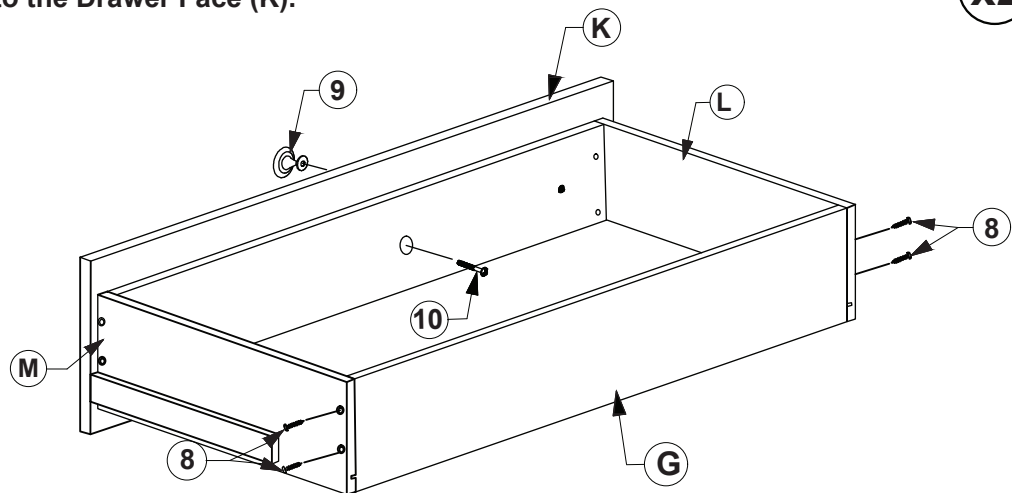

- 6** Turn the Drawer over to fit angled 25mm Wood screws (8) to the Drawer Rail (P).

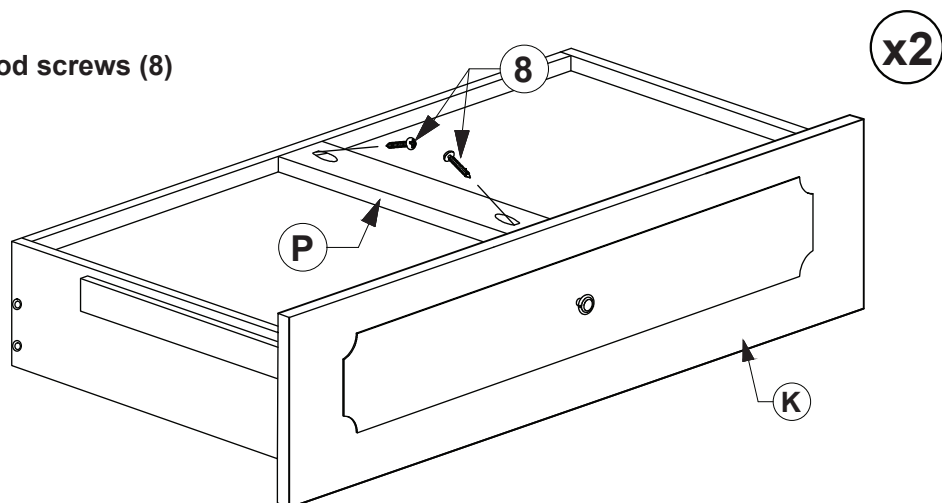


9029 2D Night Stand


Assembly Instructions

WI-0425

- 7** Fit the 'L' Bracket (3) to the Side Panel (H & J).

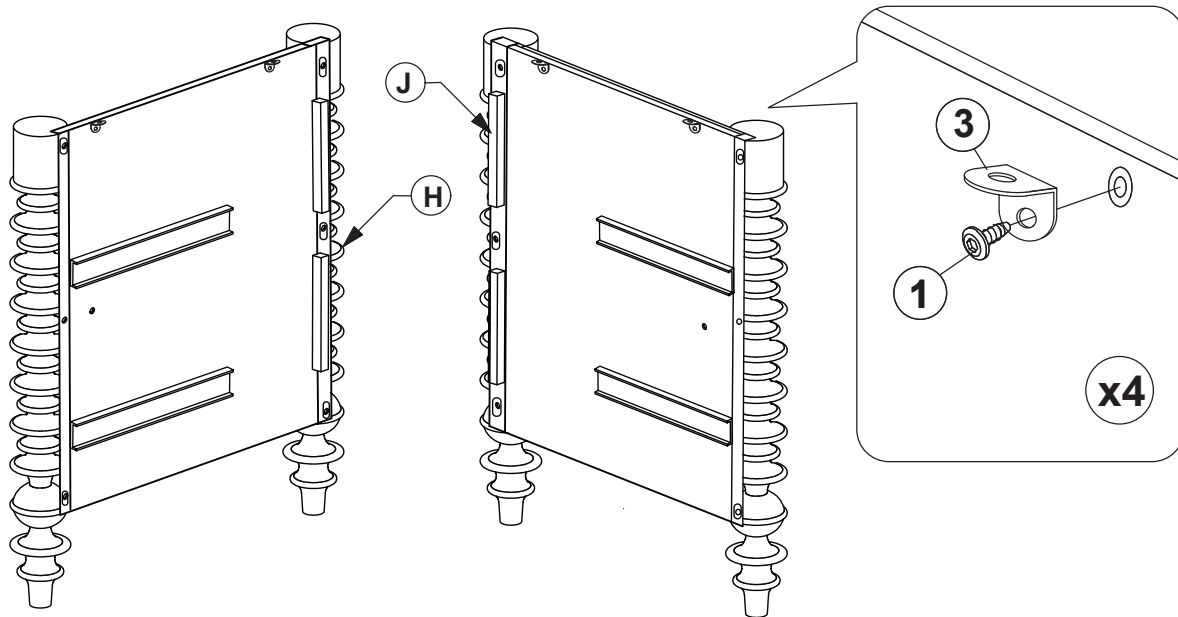

- 8** Fit the "L" Bracket (3) and Wood Dowel (4) to the Front Support Bar (D).

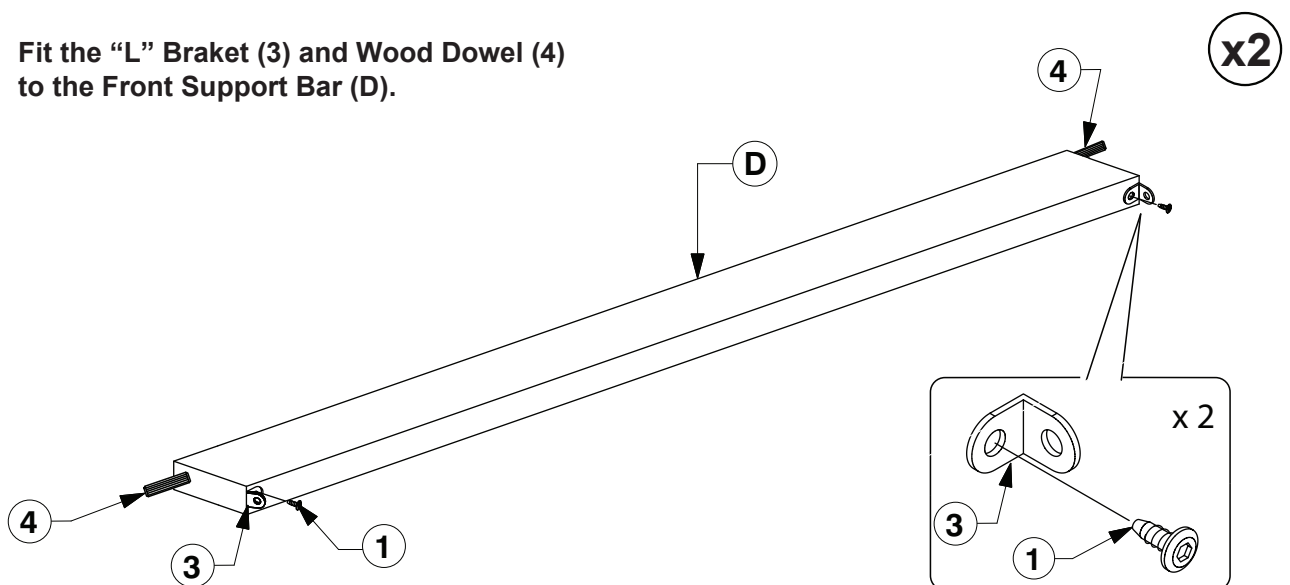


9029 2D Night Stand

Assembly Instructions



WI-0426

9 Assemble Support Bar (C, D, E & F) to the Side Panel (H).

Step 1
Use the
ball end of
Allen key to start
the bolt.

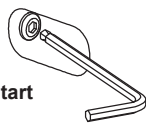


Step 2
Tighten fully with
the straight
end.

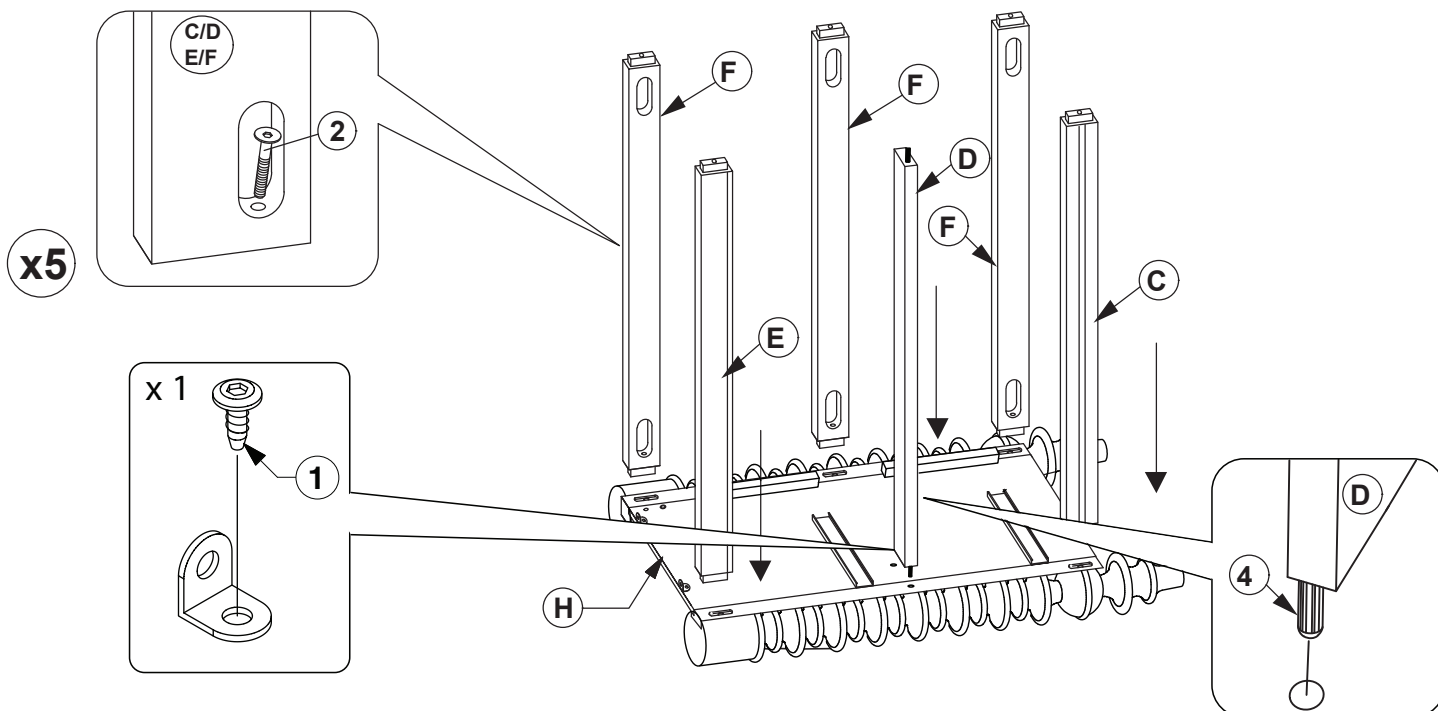



10 Fit the Side Panel (J) to the Support Bar (C, D, E & F).

Step 1
Use the
ball end of
Allen key to start
the bolt.

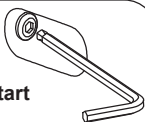

Step 2
Tighten fully with
the straight
end.

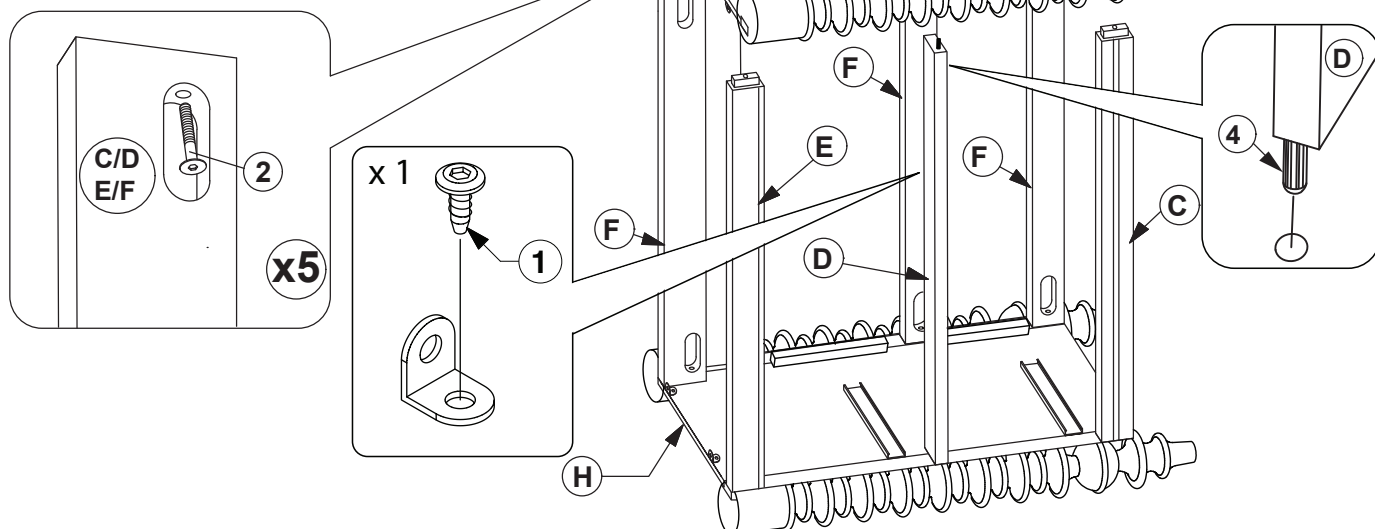


9029 2D Night Stand


Assembly Instructions

WI-0426

- 11** Assemble the Side Panel (H & J) to the Top Panel (A).

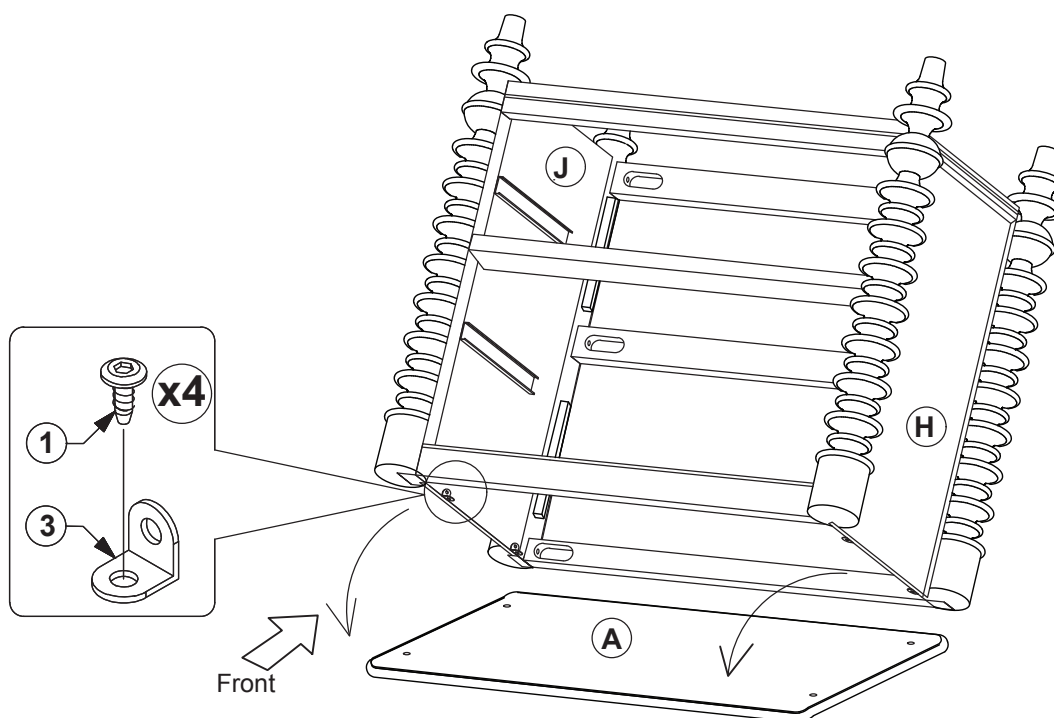

- 12** Use screw to tighten the Back Panel (B) to the back of the frame.

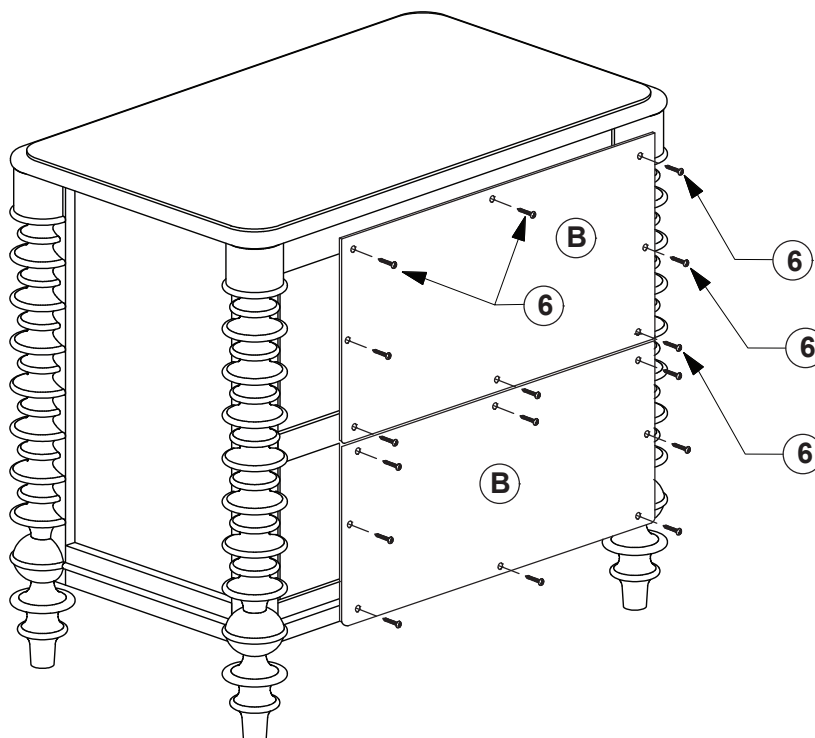


9029 2D Night Stand

Assembly Instructions


WI-0426

- 13** Fit the Drawer Face (K) to the casegood body.

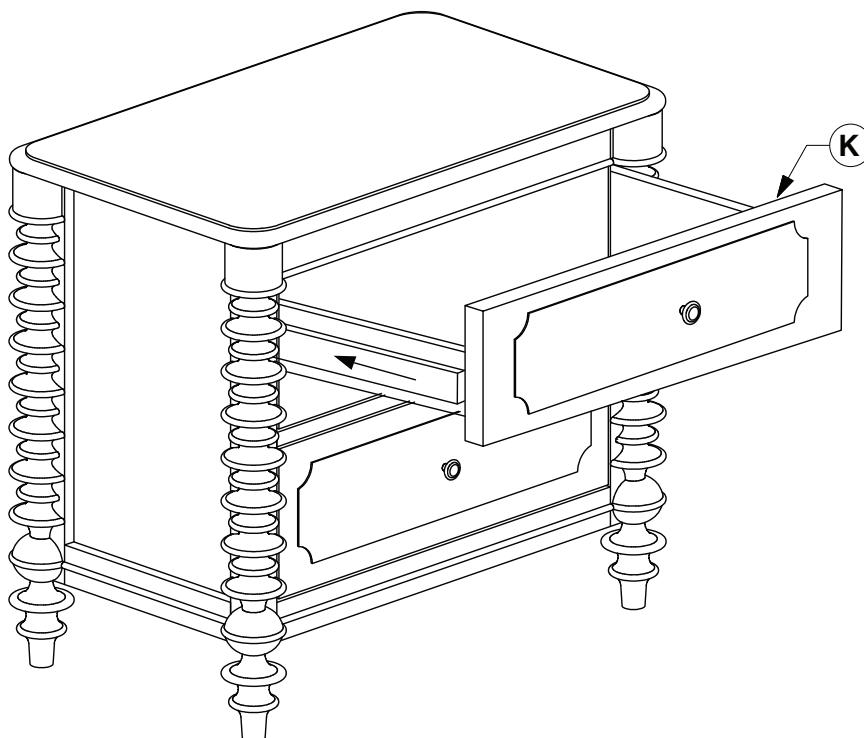

- 14** Adjust the Drawer Face (K).

* NOTE: Before fitting the Wood Screws .
Loosen the JCBs on the Drawer Face if
the face needs alignment.

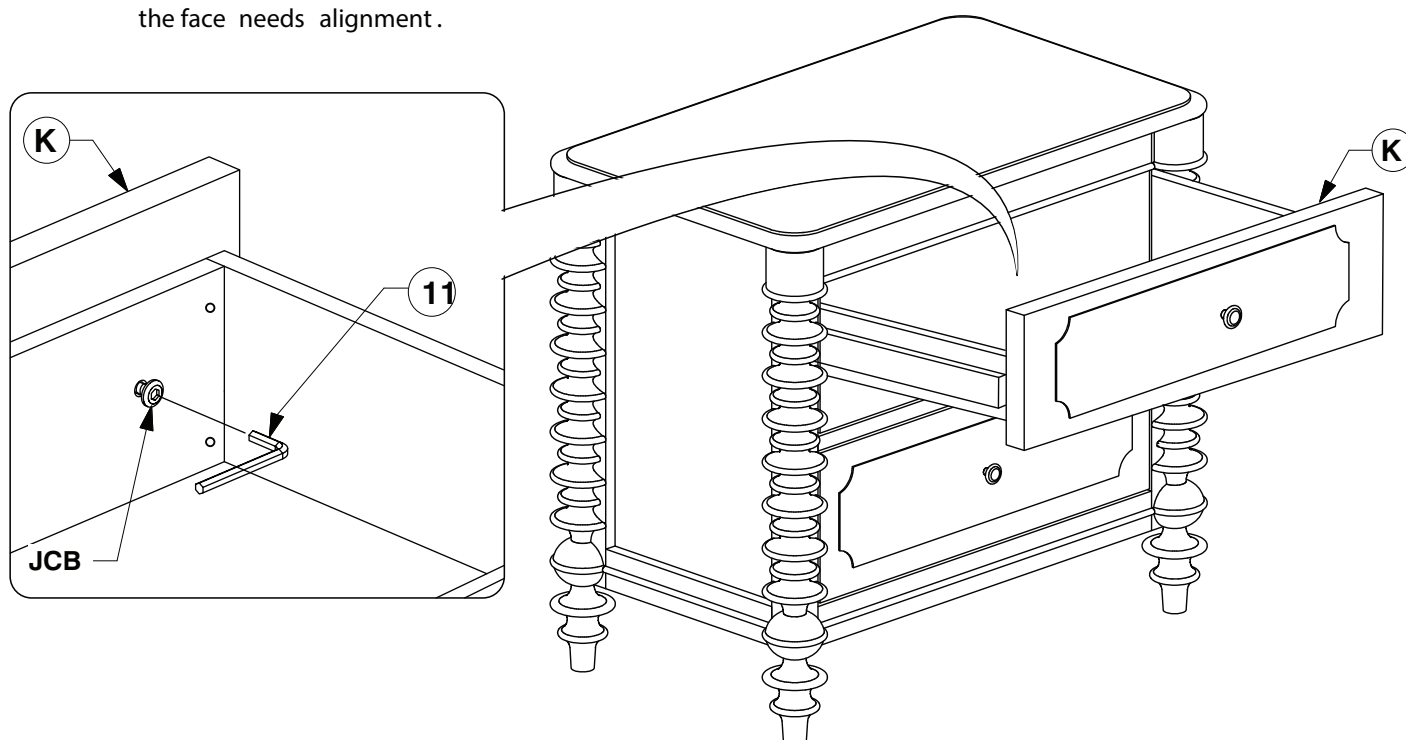


9029 2D Night Stand

Assembly Instructions

WI-0426


- 15** After the Drawer Faces (K) are aligned, secure with wood screws.

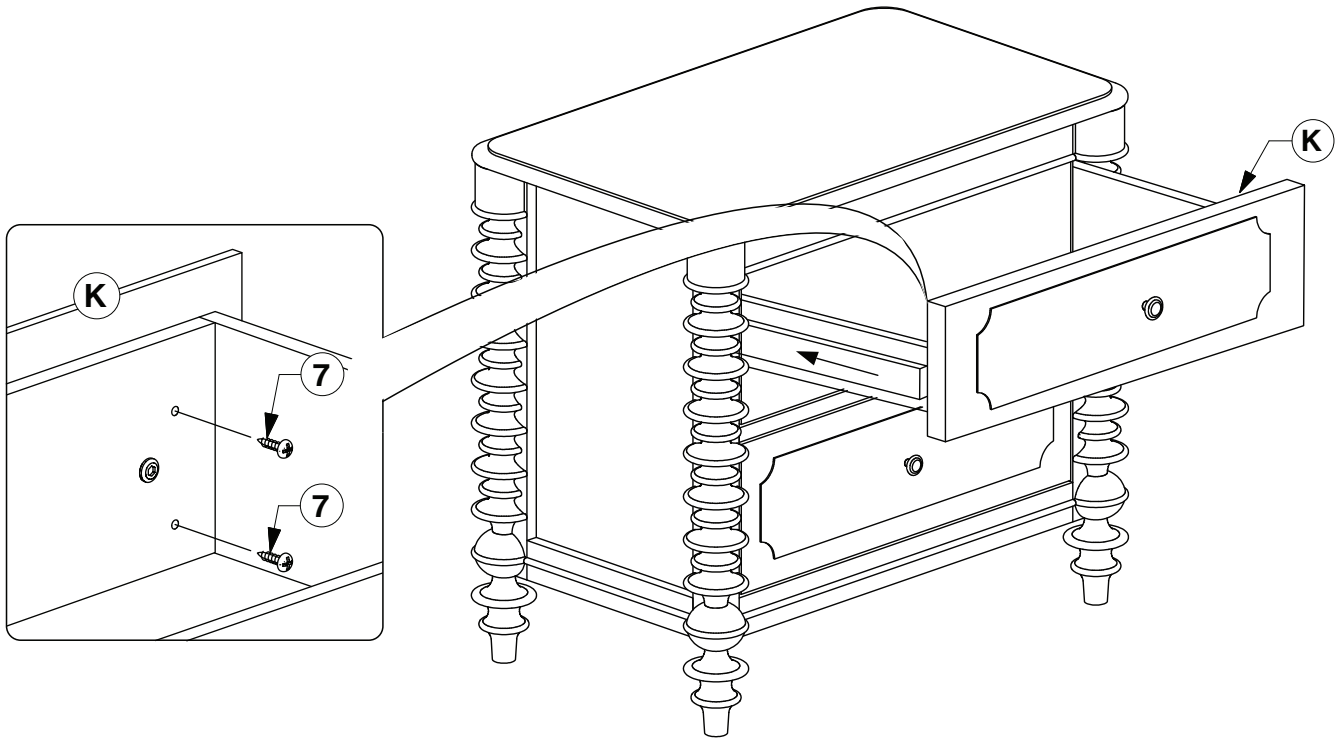

9029 7 Drawer Dresser

Assembly Instructions


WI-0426

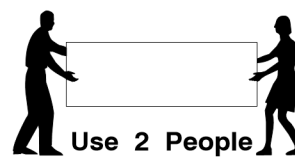

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

Parts in Box A:



A Top Panel x 1




B Front Upper Support Bar x 1



C Front Bottom Support Bar x 1



D Front Upper Drawer Support Bar x 1



E Front Bottom Drawer Support Bar x 1



F Rear Upper Support Bar x 2



G Rear Bottom Support Bar x 2




H Center Post x 1



J Back Panel x 3

Lower Drawers



N Drawer Face x 4



O Drawer Back x 4




P Drawer Bottom x 4




Q Drawer Rail x 4

Upper Drawers



K Drawer Face x 3



L Drawer Back x 3



M Drawer Bottom x 3


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

1 Parts List


Parts in Box B:

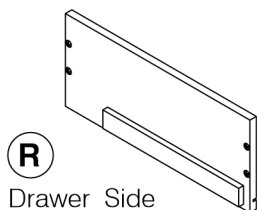


R
Drawer Side
(Left Hand) x 7

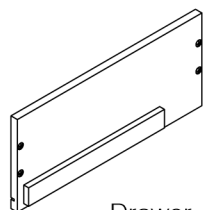


S
Drawer Side
(Right Hand) x 7

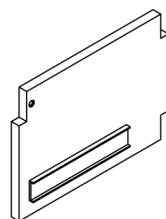


V
Center Panel
(Upper) x 2

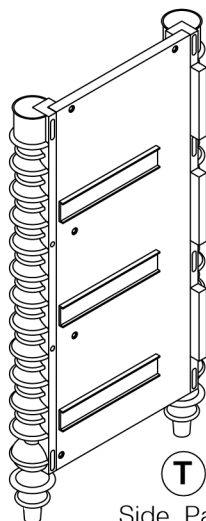

T
Side Panel
(Left Hand) x 1

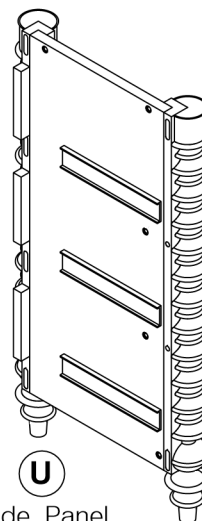

U
Side Panel
(Right Hand) x 1

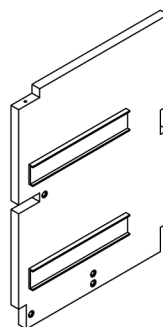

W
Center Panel
(Lower) x 1


2 Hardware List



1 M6 x
15mm JCB x 28




2 M6 x
40mm JCB x 12



3 M6 x
50mm JCB x 2



4 M6 JNC
Nut x 4




5 Adjustable
Foot x 1




6 'L' Bracket
(5005-3) x 16



7 Wood Screw
(M4 x 20mm) x 28



8 Wood Screw
(M4 x 25mm) x 64



9 M4 x 32mm
Wood Screw x 30



10 CSK Cap Wood Screw
(M6 x 60mm) x 9




11 Handle
(9029) x 7



12 M4 x 22mm
Wood Screw
x 7



13 M6 x 25mm
Wood Dowel x 16



14 M8 x 30mm
Wood Dowel x 4



15 Long Allen Key x 1


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

③ Assemble the Upper Drawers.


STEP 3.1

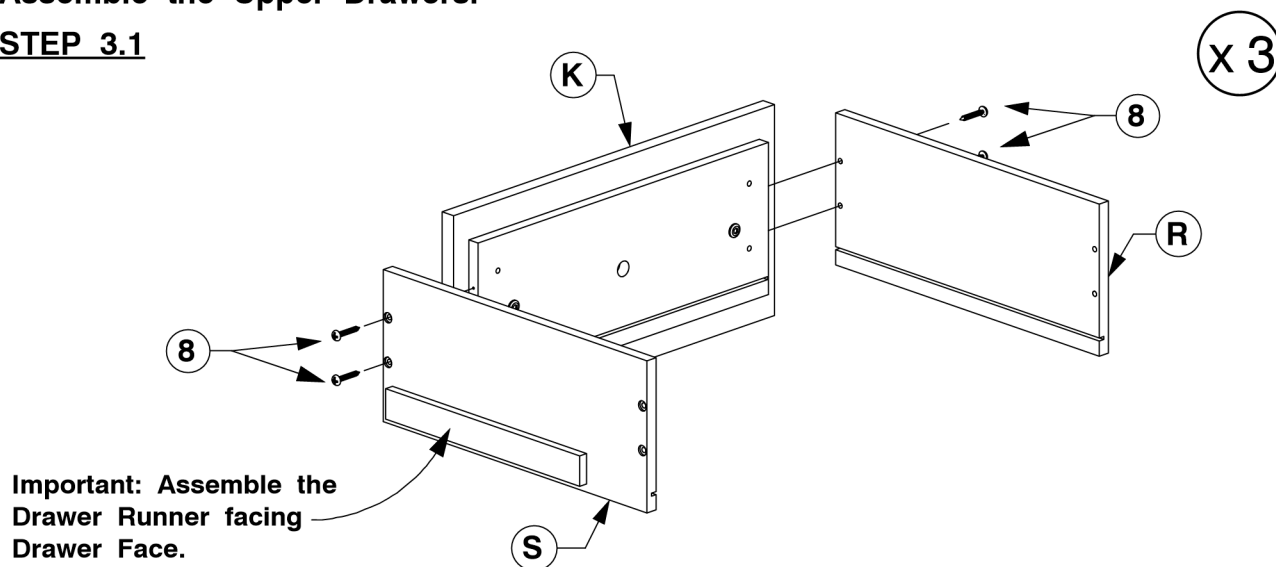

STEP 3.2

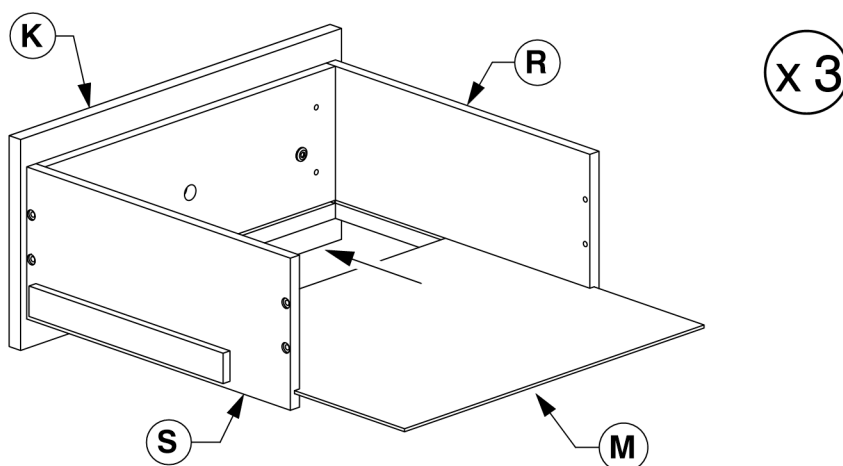

STEP 3.3

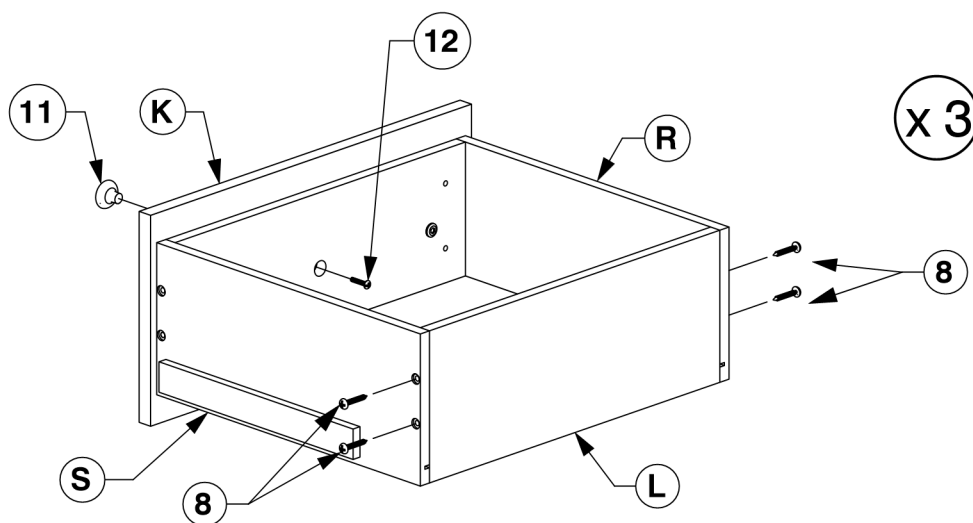


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

3 Assemble the Lower Drawers.


STEP 3.4

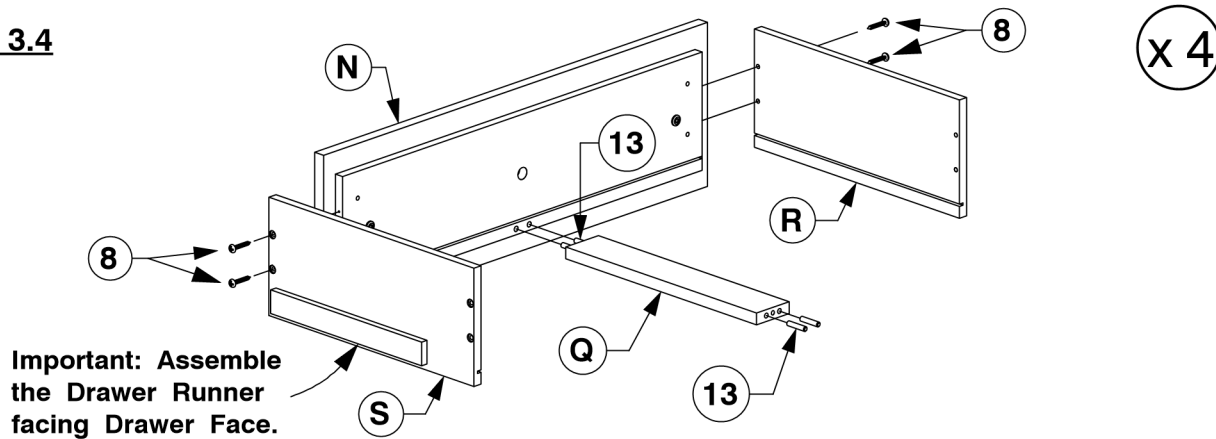


STEP 3.5

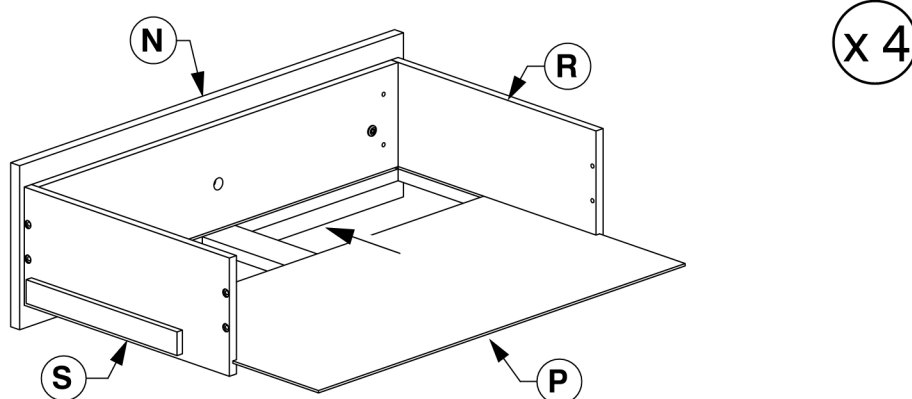

STEP 3.6

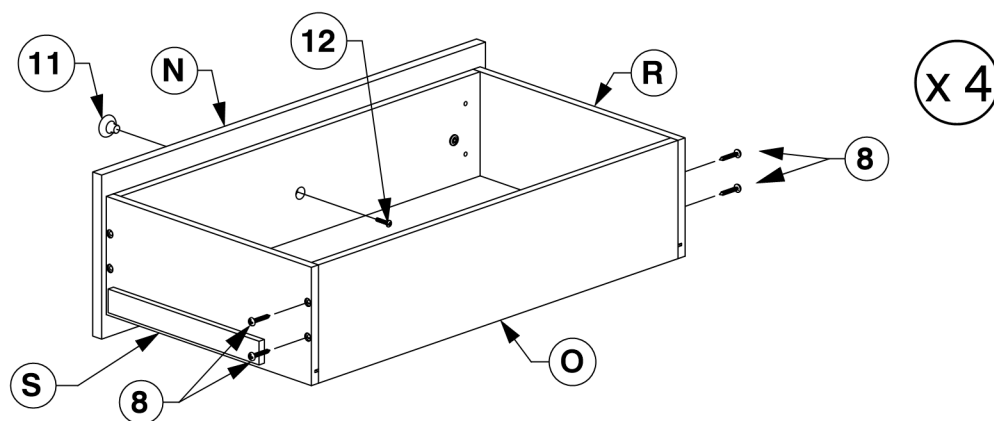

STEP 3.7

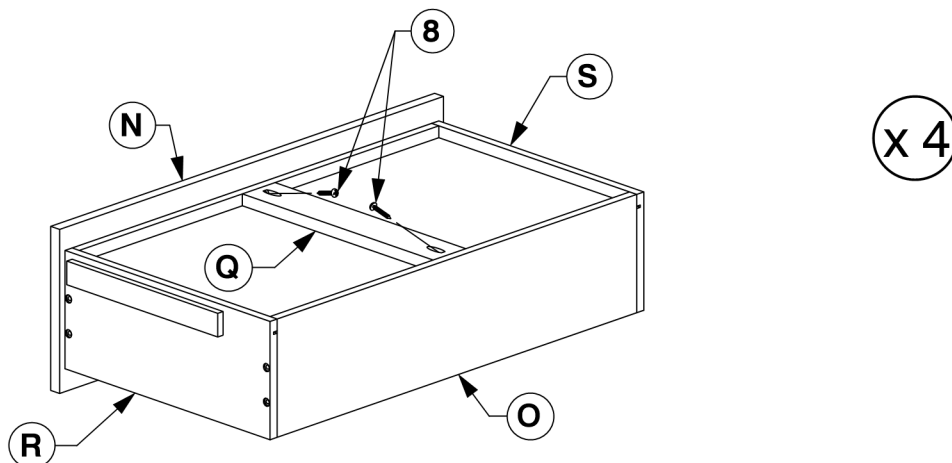


9029 7 Drawer Dresser


Assembly Instructions

WI-0426


4 Fit the 'L' Bracket to the Top Panel (A).

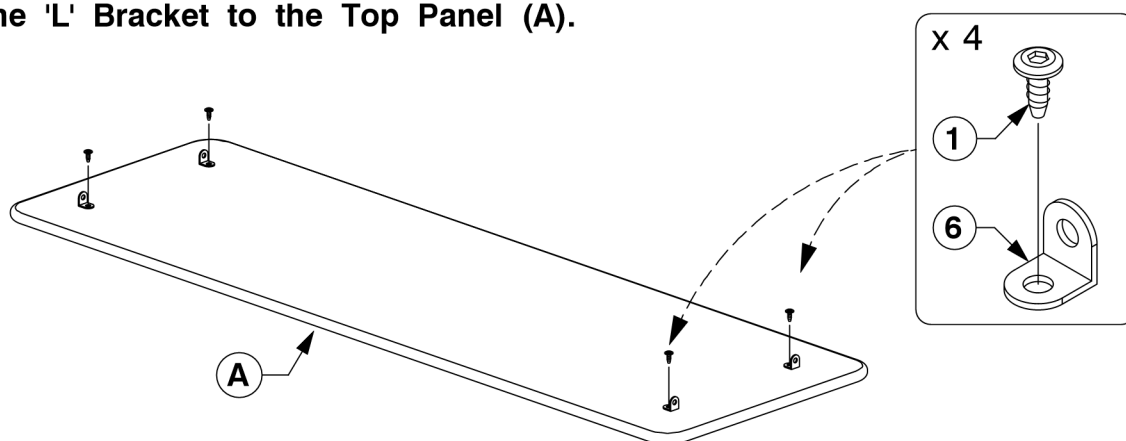

5 Attach 'L' Bracket (6) to the Upper and Lower Center Panels (V & W) using JNC (4) and Bolts (1).

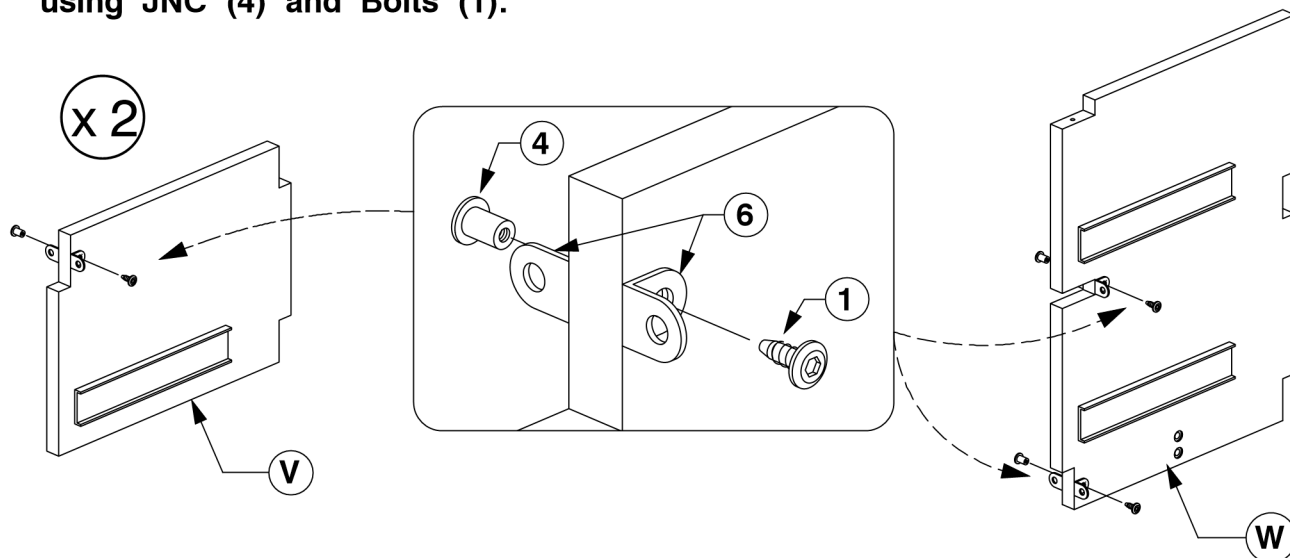

6 Insert Dowels (14) into the ends of Support Bars (D & E). Then attach Brackets (6) to the Support Bars using Bolts (1).


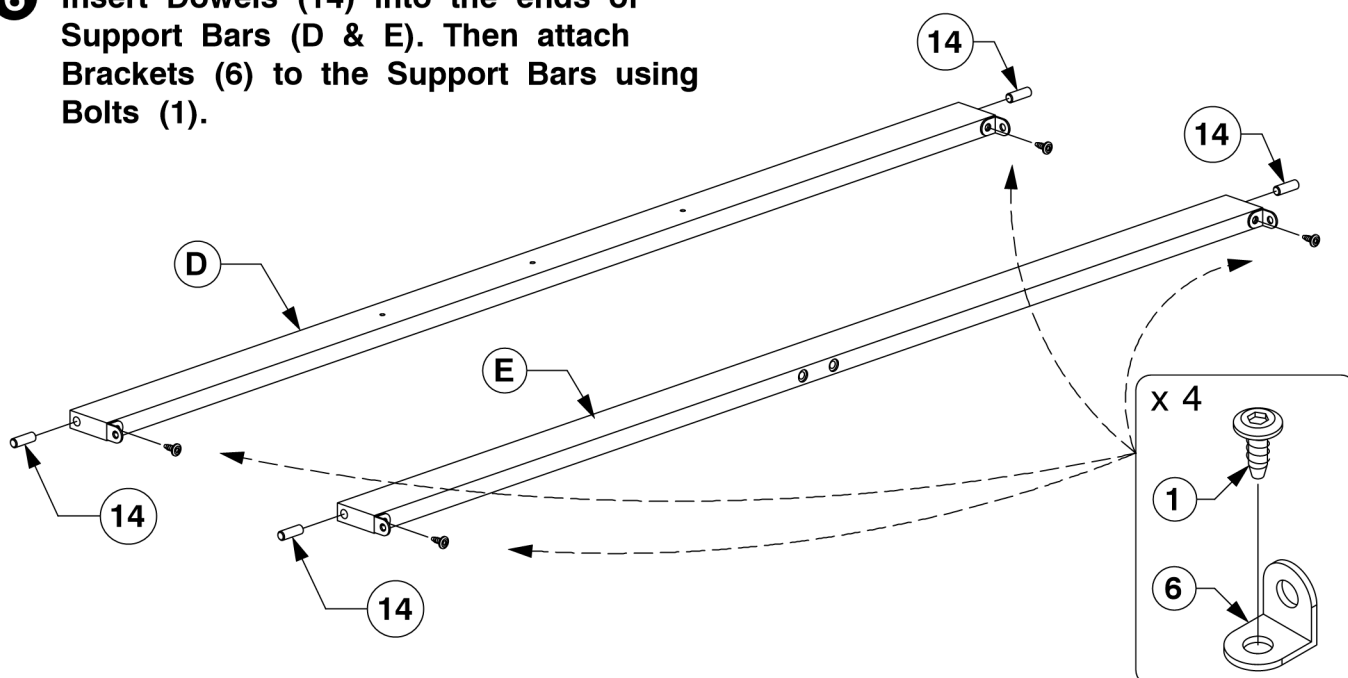


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 7** Fit the Right Side Panel (U) to the Top Panel (A).

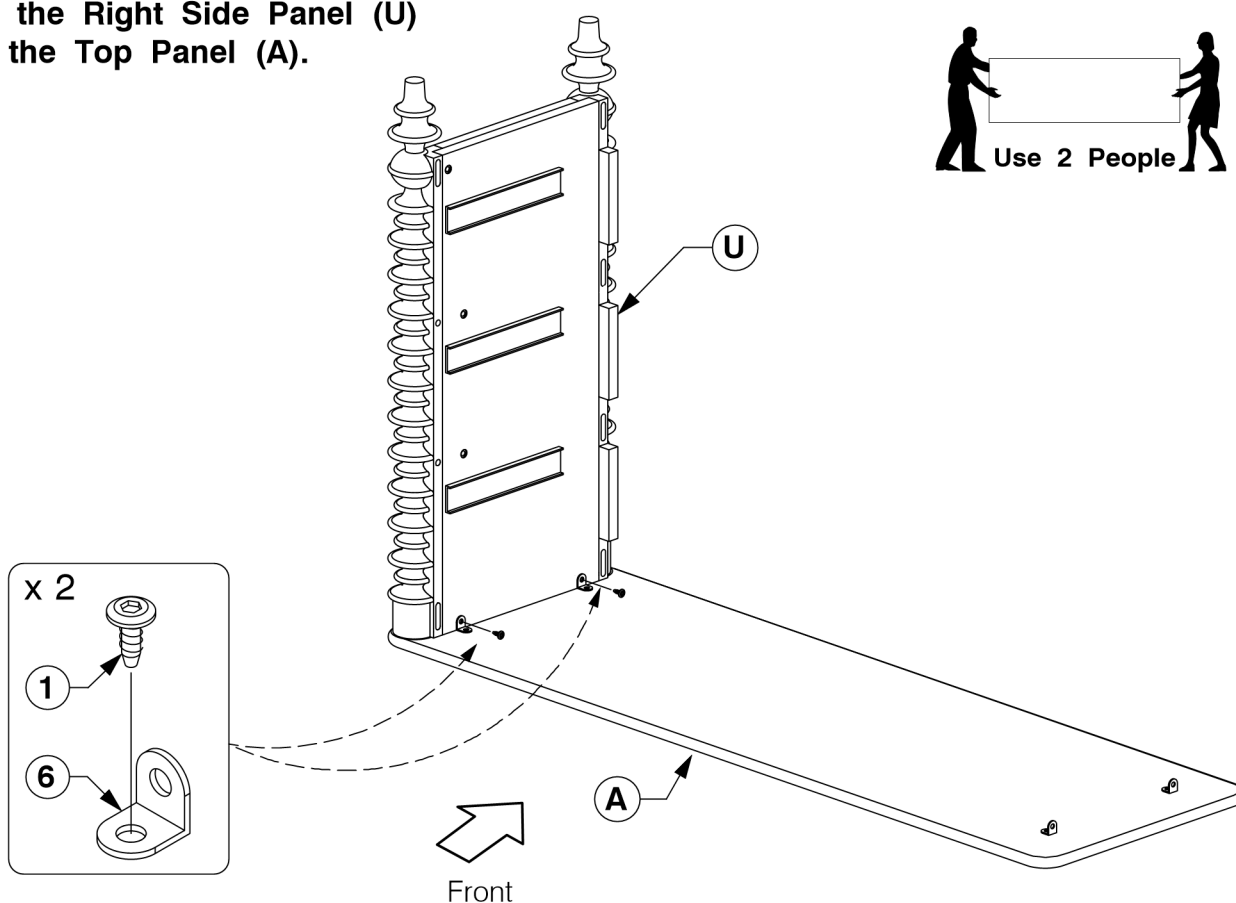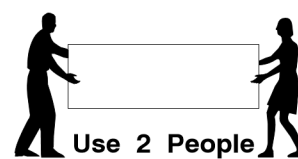


- 8** Assemble the Support Bar (B & F) to the Right Side Panel (U).

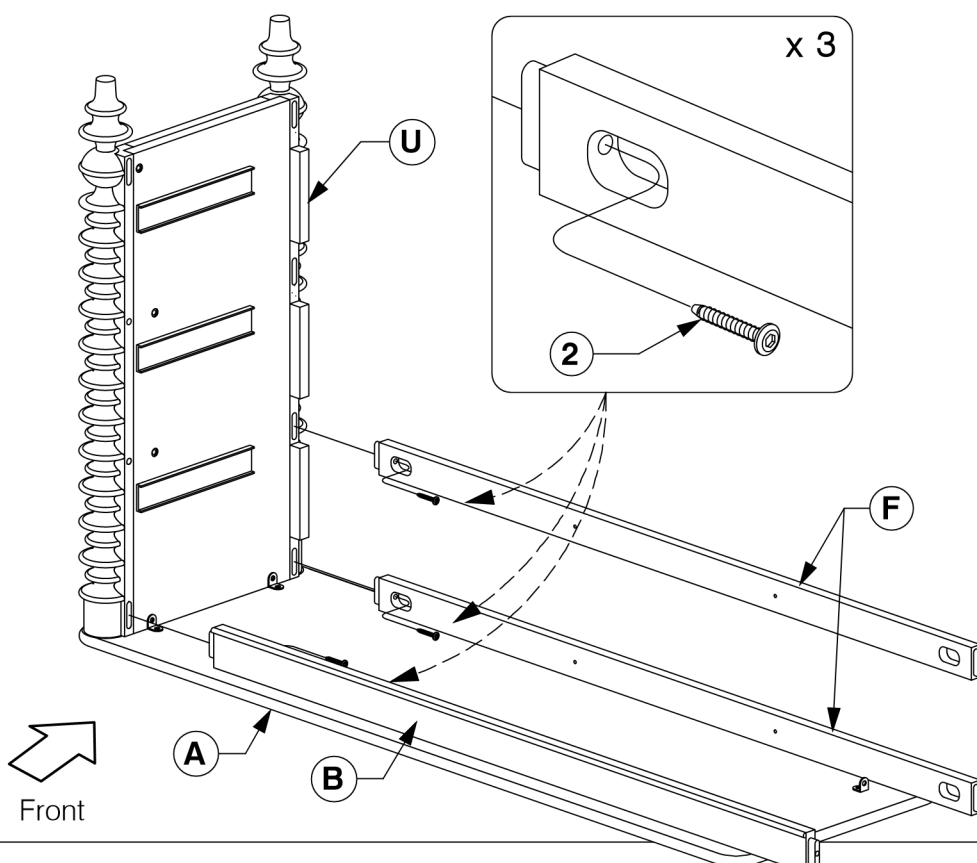


Step 1

Use the ball end of Allen key to start the bolt.

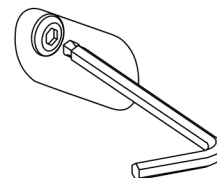

Step 2

Tighten fully with the straight end.

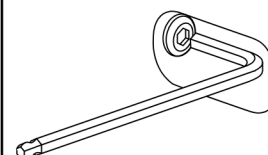


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 9** Assemble the Center Panel (V) to Support Bar (B & F).

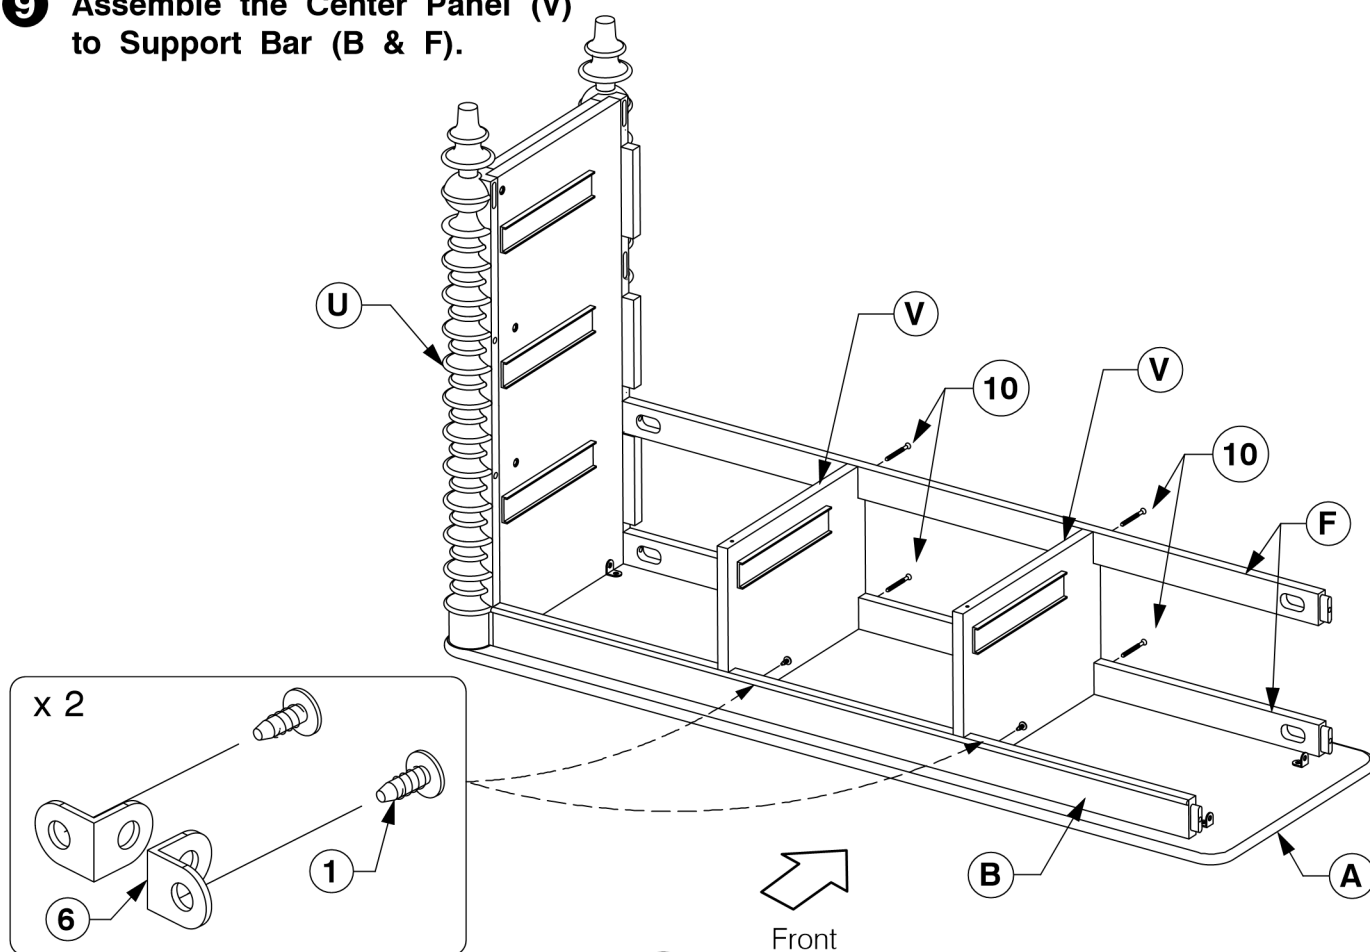

- 10** Attach Support Bars (D & E) to the Right Side Panel (U). Then tighten using Bolts.

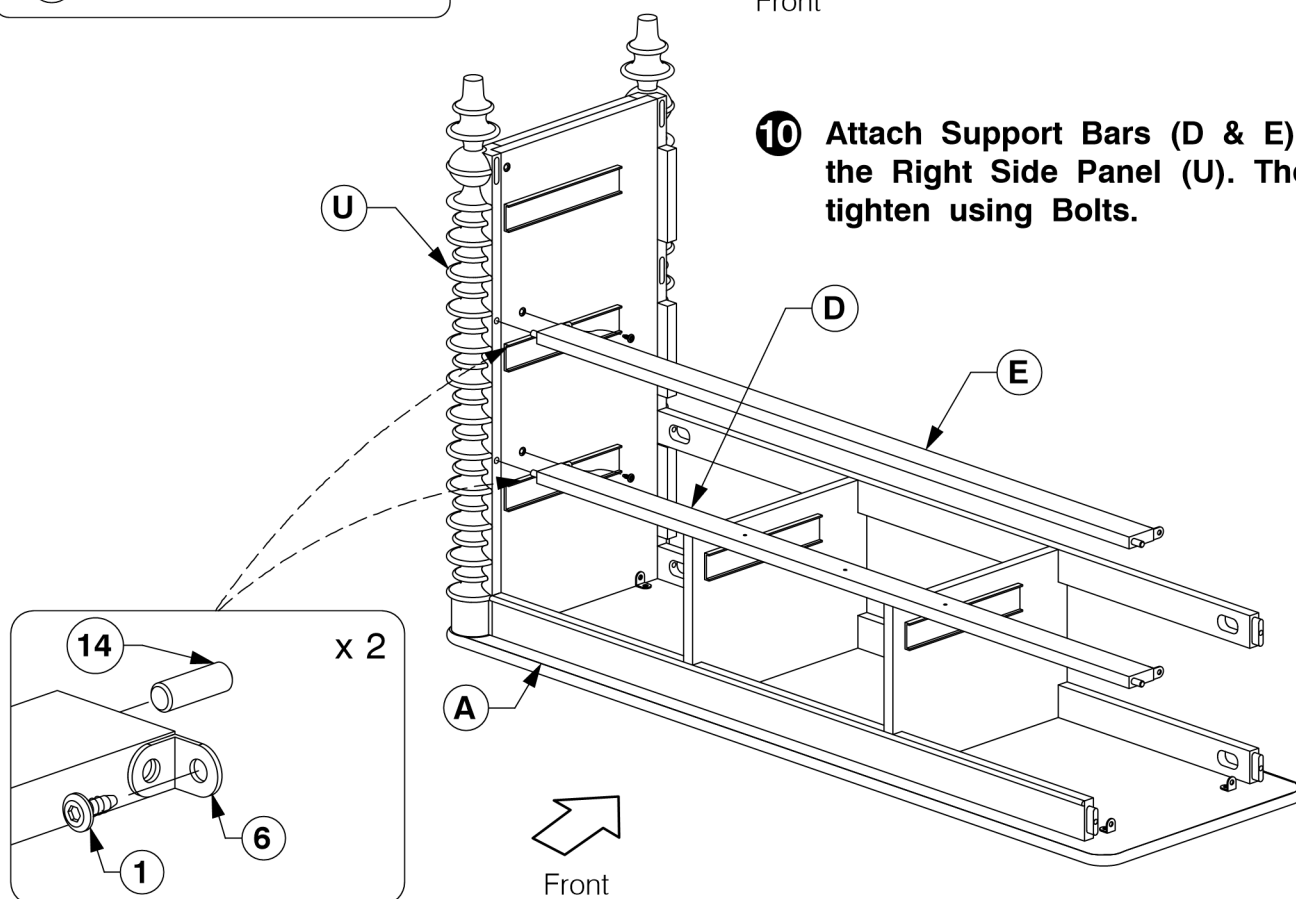


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 11** Assemble the Center Panel (W) to Support Bar (D, E, & F).

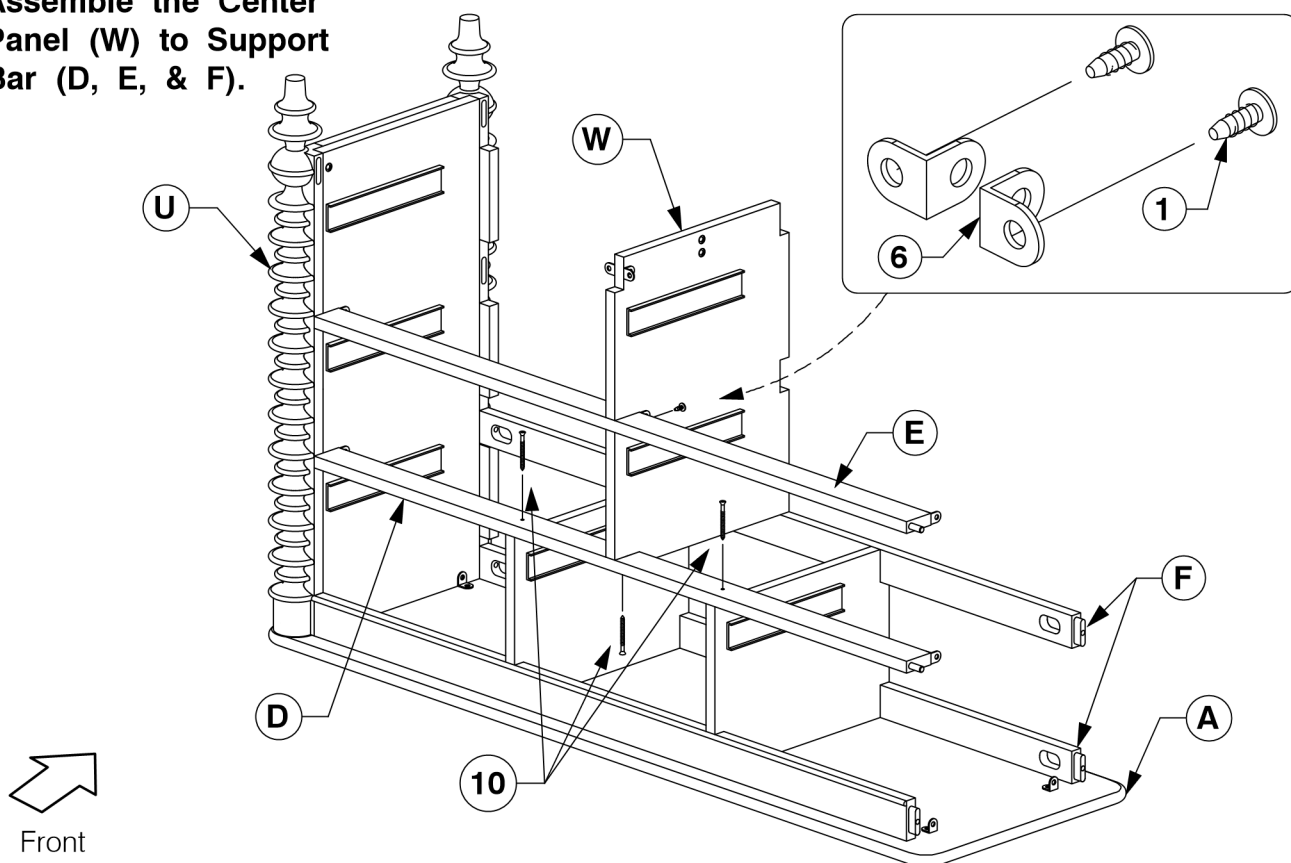


- 12** Fit the Support Bars (G) to the Center Panel (W).

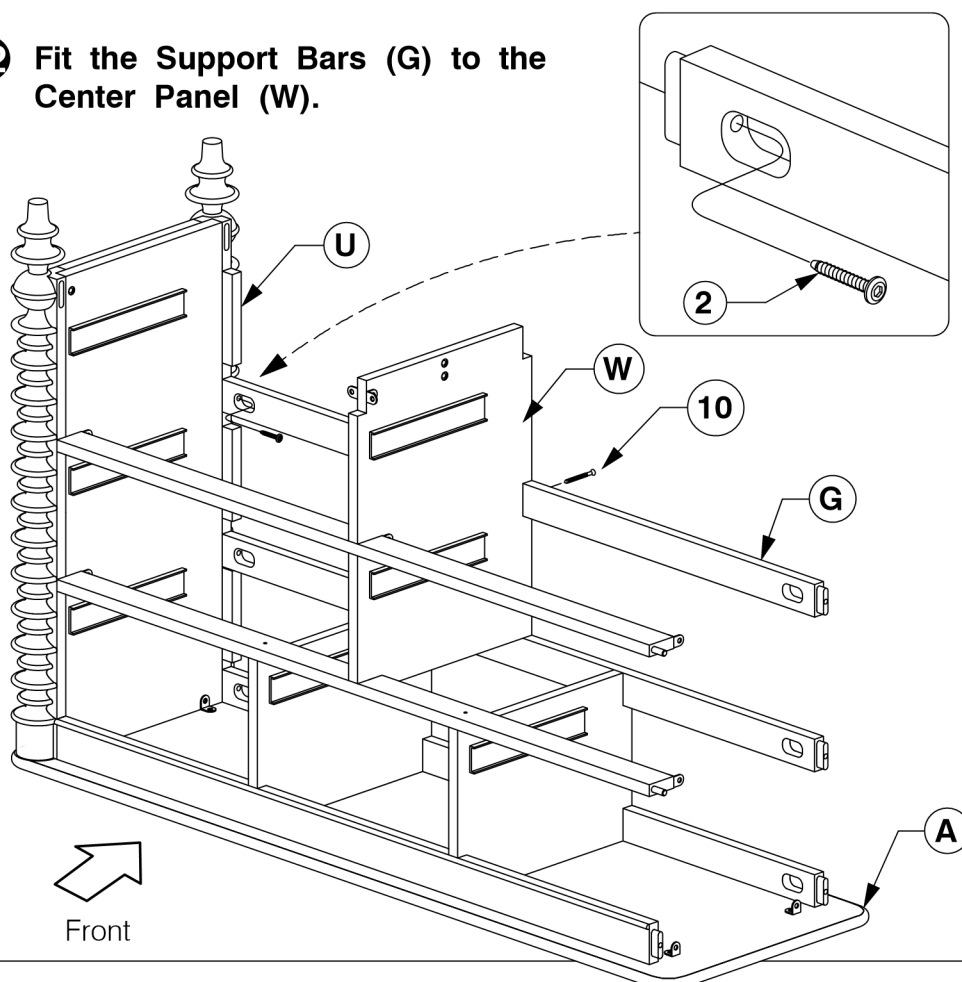


Step 1

Use the ball end of Allen key to start the bolt.

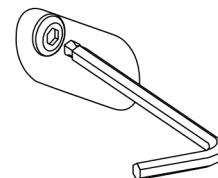

Step 2

Tighten fully with the straight end.

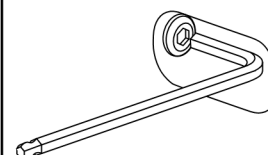


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

- 13** Attach the Support Bar (C & G) to the Right Side Panel (U) & Center Panel (W).

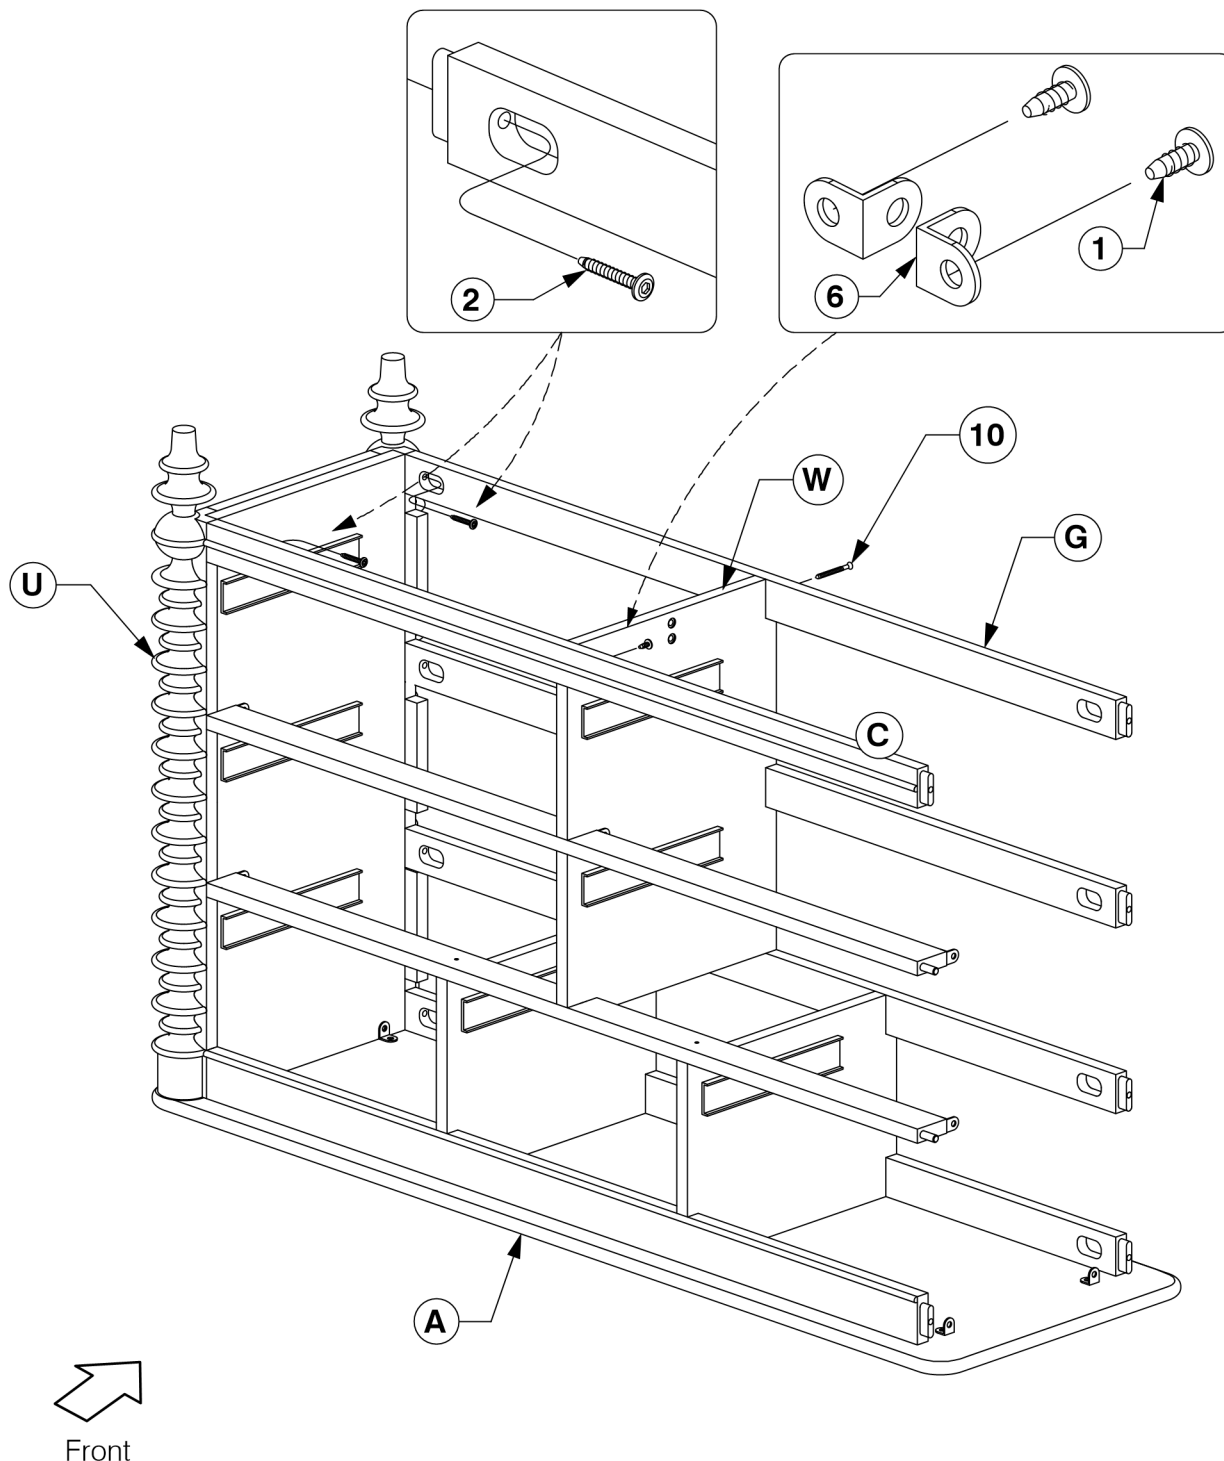


Step 1

Use the ***ball end*** of Allen key to start the bolt.

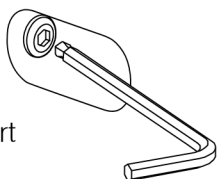

Step 2

Tighten fully with the ***straight end***.


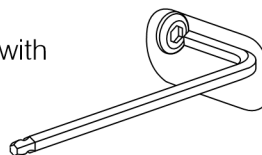


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

- 14** Assemble the Left Side Panel (T) to the Support Bars (B, C, D, E, F & G).

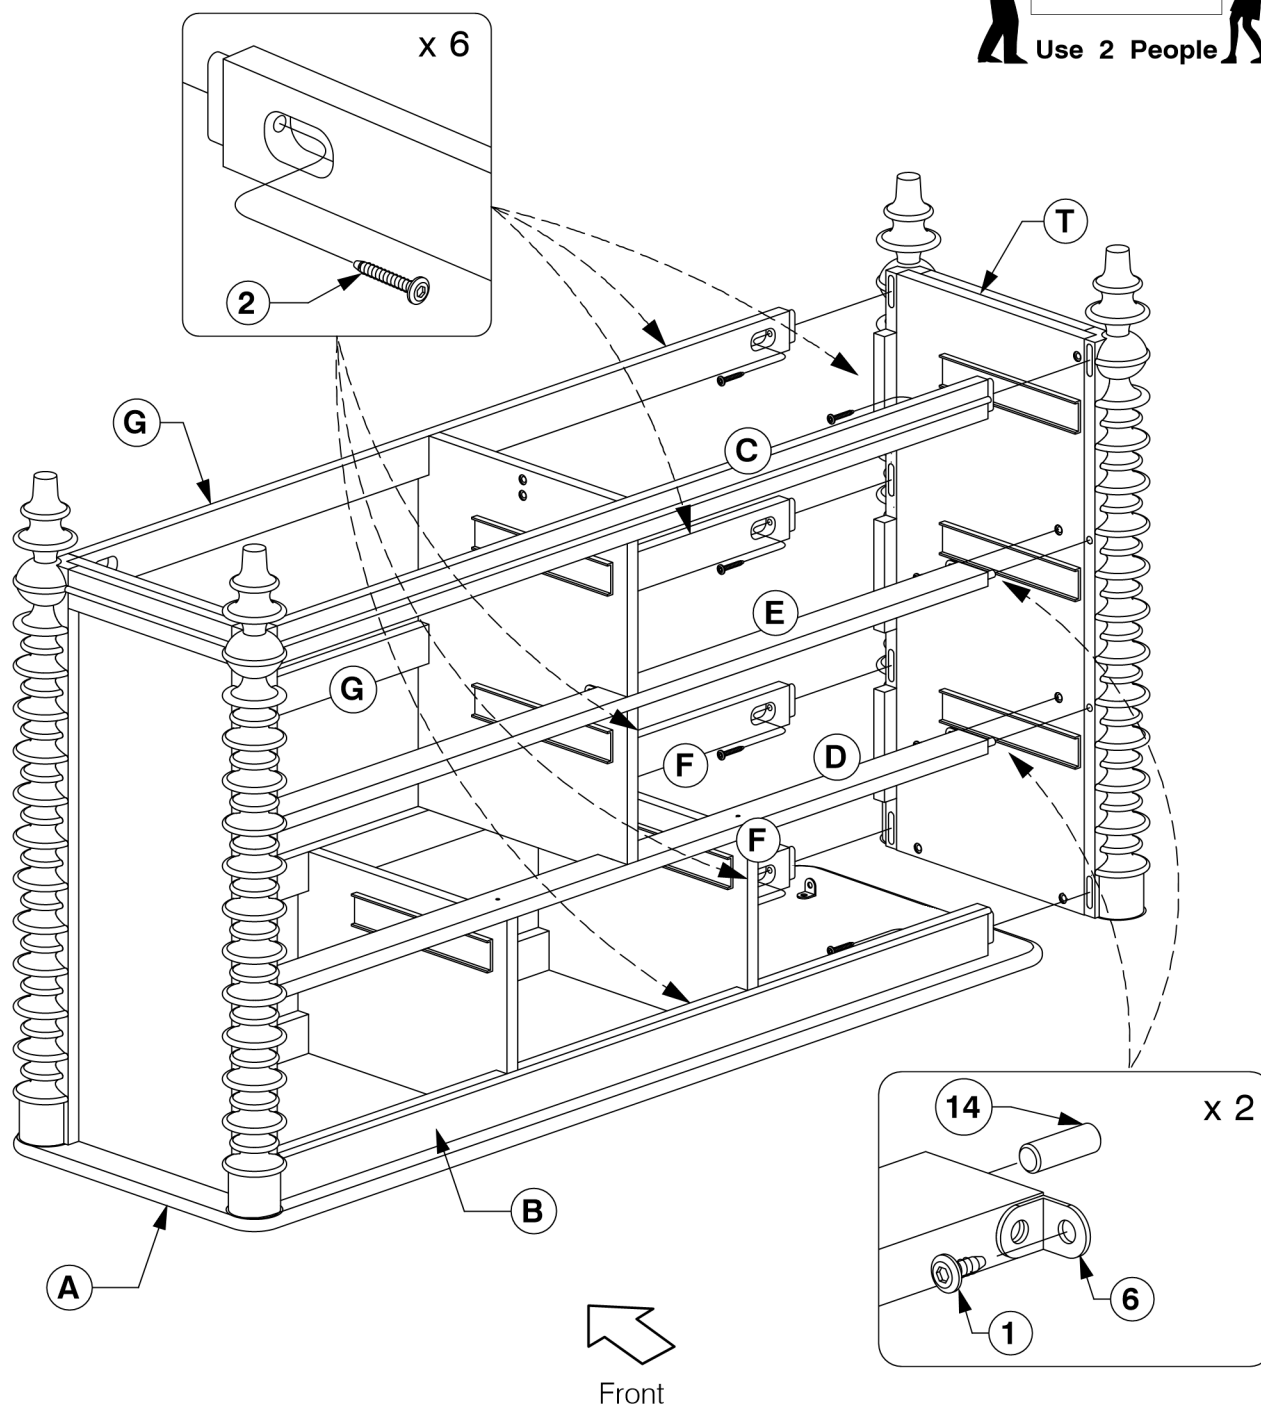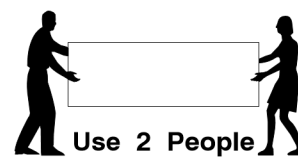


Step 1

Use the ***ball end*** of Allen key to start the bolt.

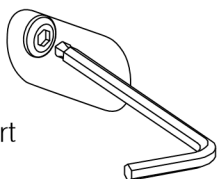

Step 2

Tighten fully with the ***straight end***.

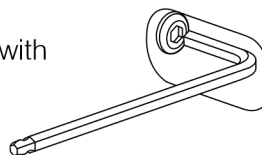


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 15** Tighten the bolts as shown.

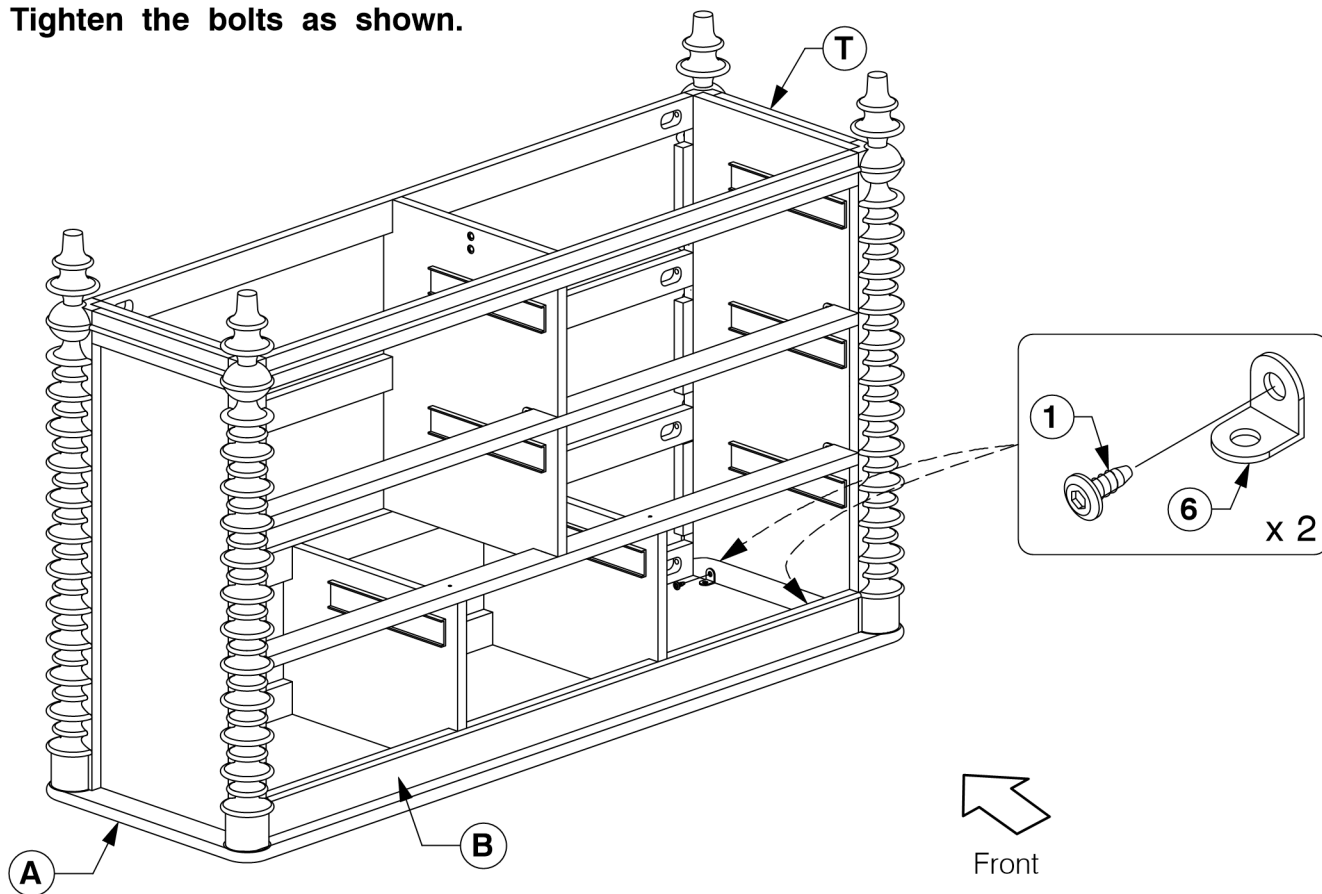

- 16** Fix the Adjustable foot to the bottom of the Center Post (H).
Fit the Center Post (H) to the Center Panel (W).

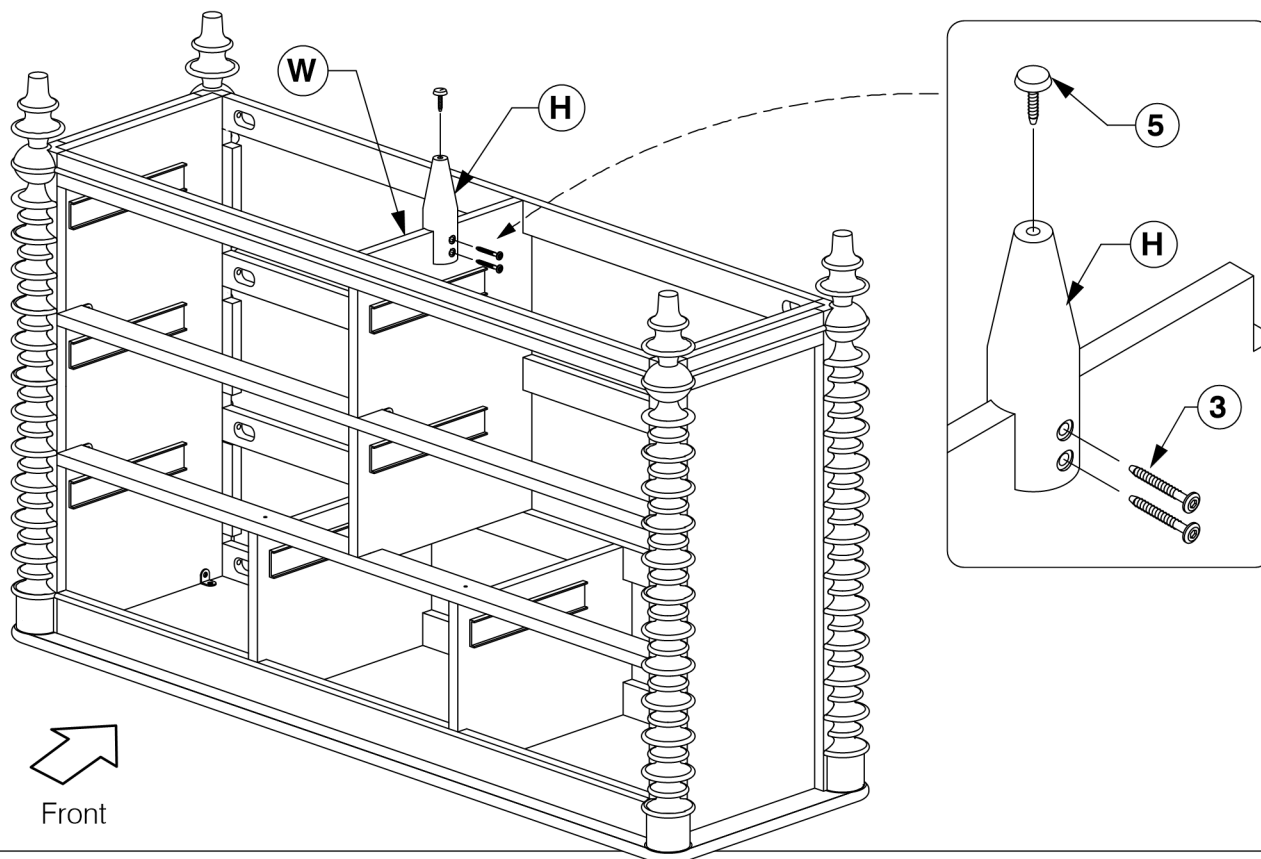


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 17** Attached the Back Panel (J) to the back of the frame.

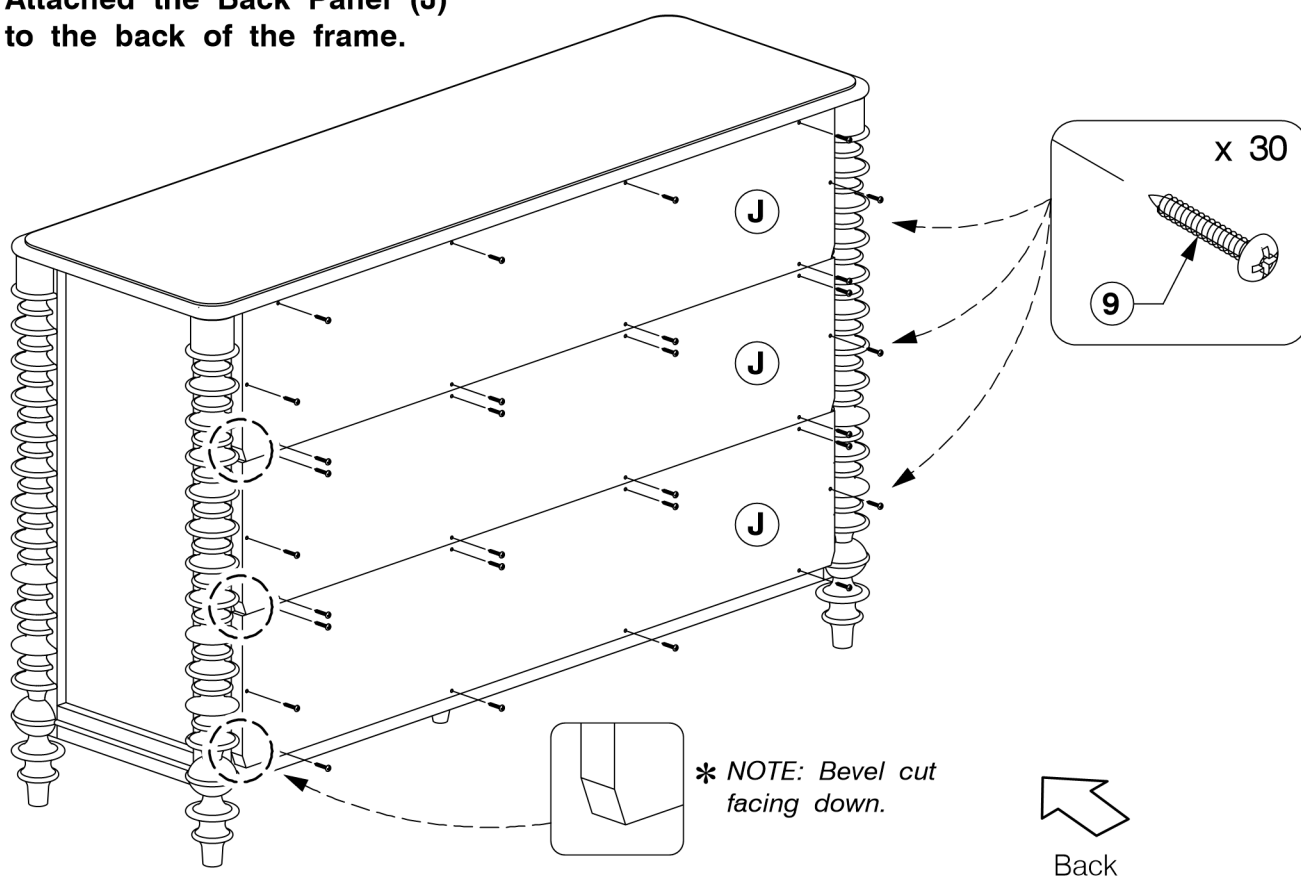

- 18** Fit the Drawer Box (K & N) to the casegood body.

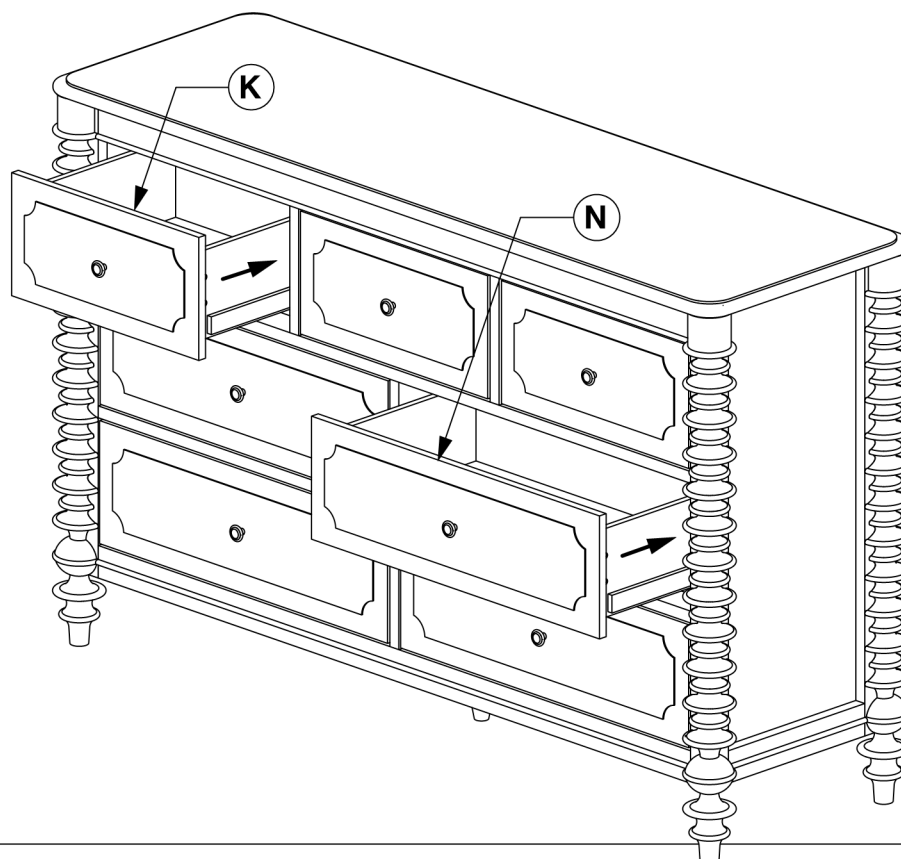


9029 7 Drawer Dresser

Assembly Instructions

WI-0426

19 Adjust the Drawer Face (K & N).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.

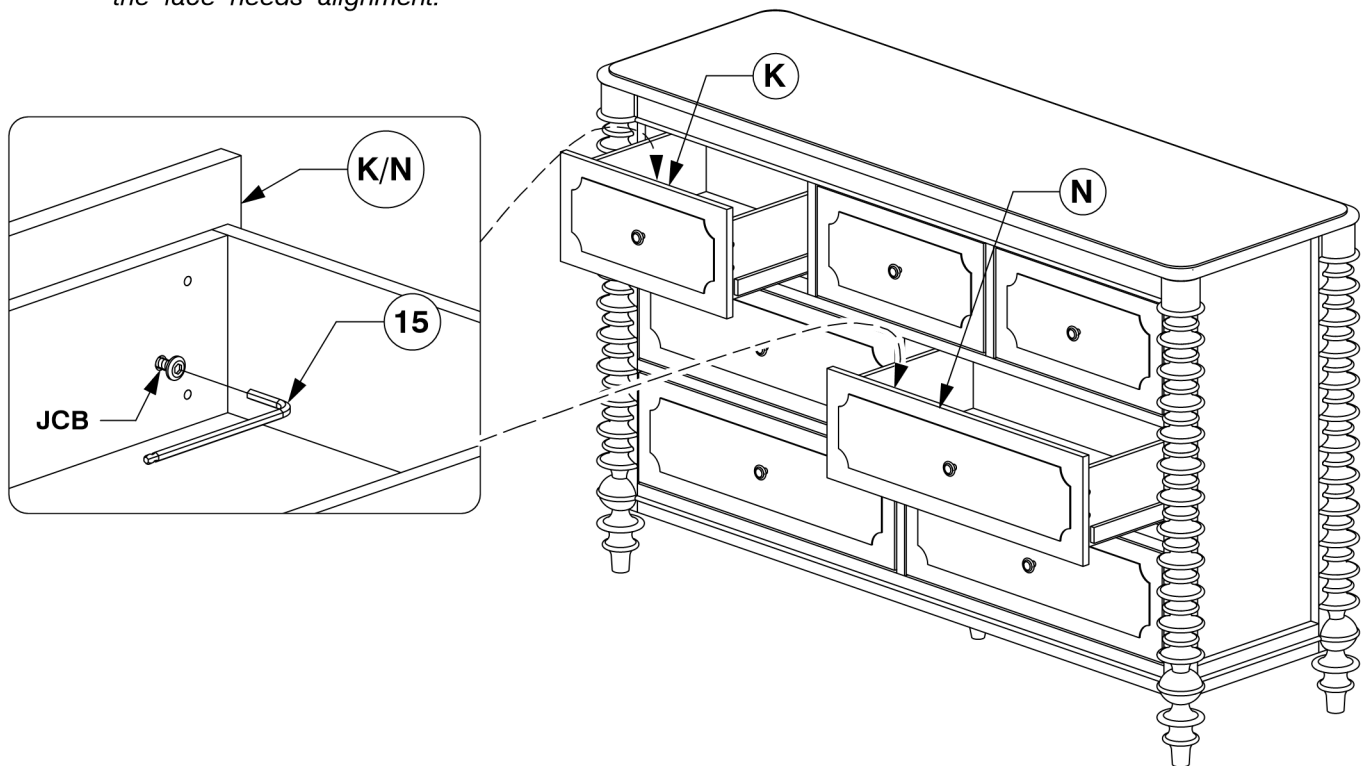

20 After the Drawer Faces (K & N) are aligned, secure with wood screws.

