
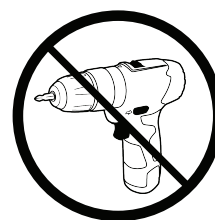
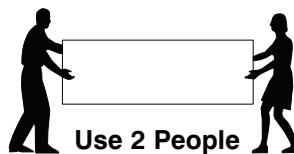


9029 1D Night Stand


Assembly Instructions

WI-0326

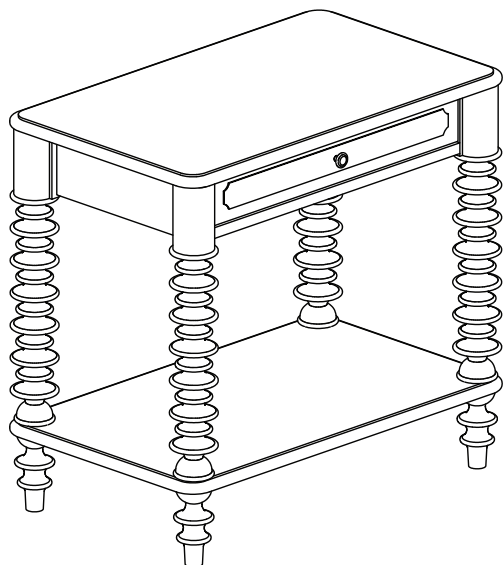

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

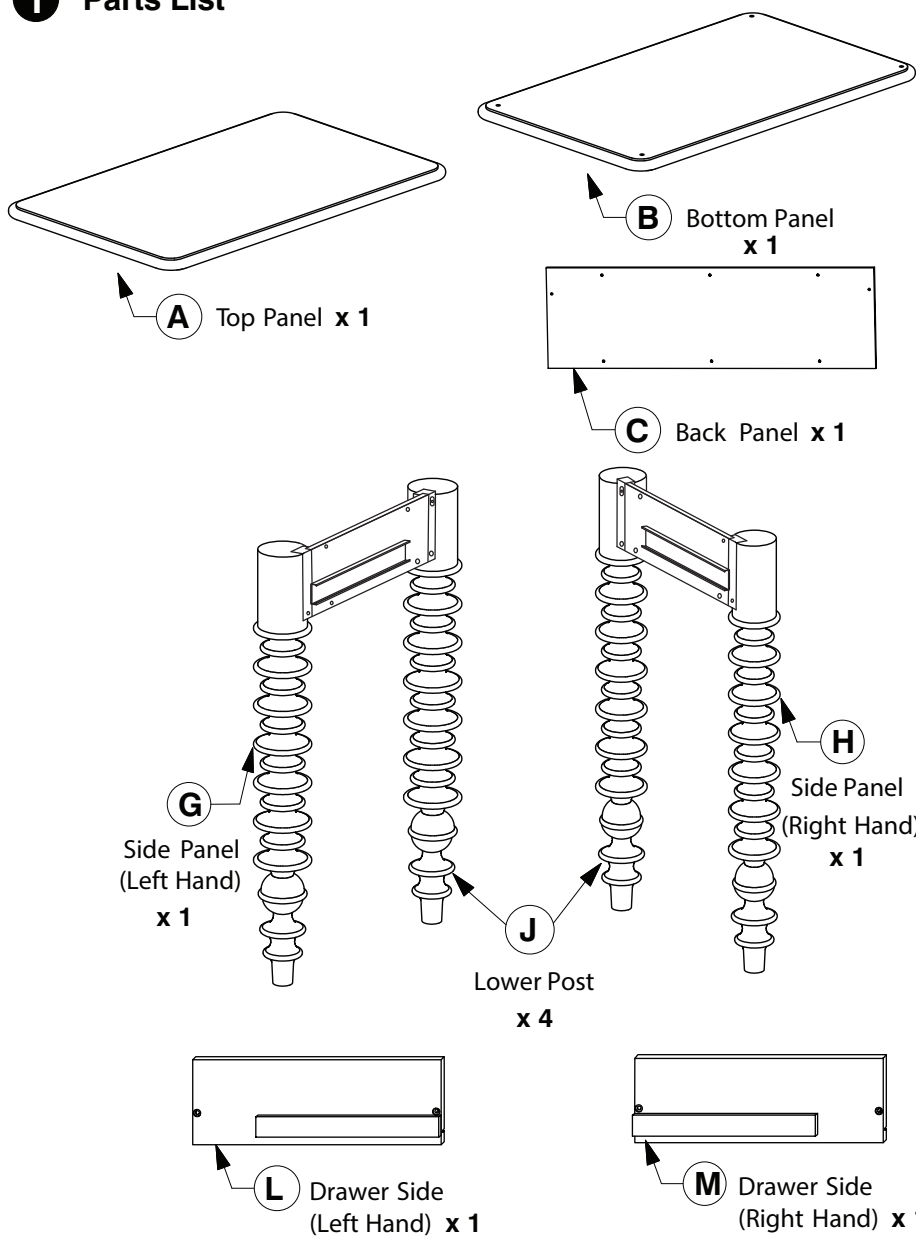


9029 1D Night Stand


Assembly Instructions

WI-0326


2 Hardware List

- | | | | | | |
|---|---|---|--|---|---|
|  |  |  |  |  |  |
| 1 M6 x 15mm JCB x 16 | 2 M6 x 40mm JCB x 2 | 3 Wood Dowel (M8 x 30mm) x 4 | 4 M6 x 25mm Wood Dowel x 4 | 5 'L' Bracket (5005-3) x 8 | 6 M4 x 16mm Wood Screw x 8 |
|  |  |  |  |  | |
| 7 M4 x 20mm Wood Screw x 4 | 8 M4 x 25mm Wood Screw x 6 | 9 Handle (9029) x 1 | 10 M4 x 22mm Wood Screw x 1 | 11 Allen Key x 1 | |

3 Assemble the Drawer Sides (L & M) & Drawer Rail (P) to the Drawer Face (K).


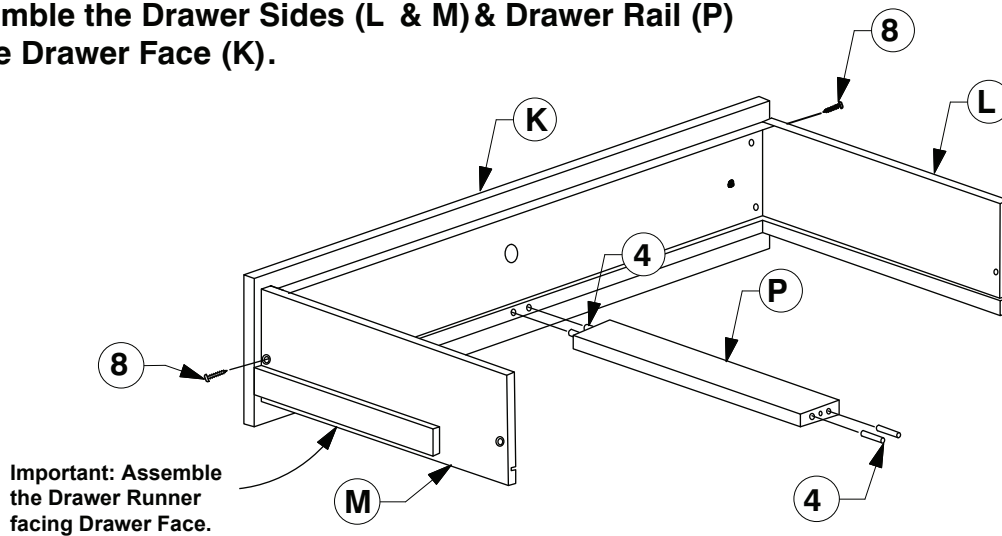


4 Slide the Drawer Bottom (N) into the groove on the Drawer Sides (L & M).

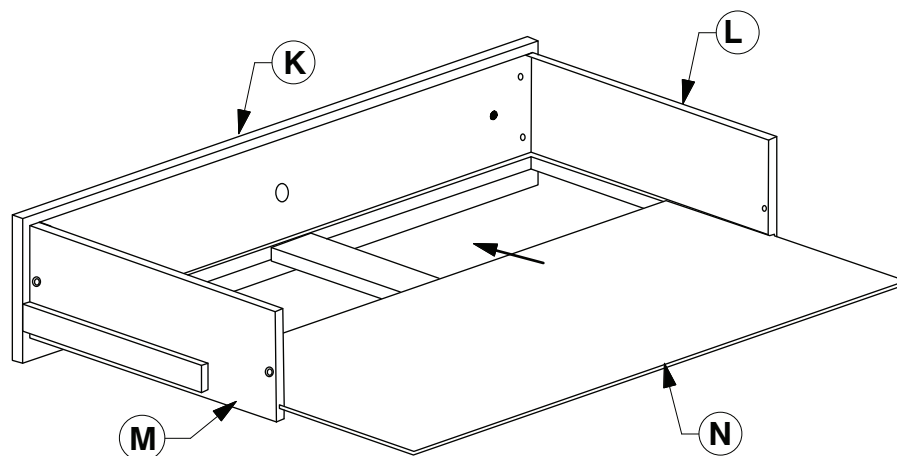

Assembly Instructions

5 Assemble the Drawer Back (F) to the Drawer Sides (L & M). Fit the Handle to the Drawer Face (K).




9029 1D Night Stand


Assembly Instructions

WI-0326

- 8** Fit the "L" Braket (5) and Wood Dowel (3) to the Support Bar Bottom (D).

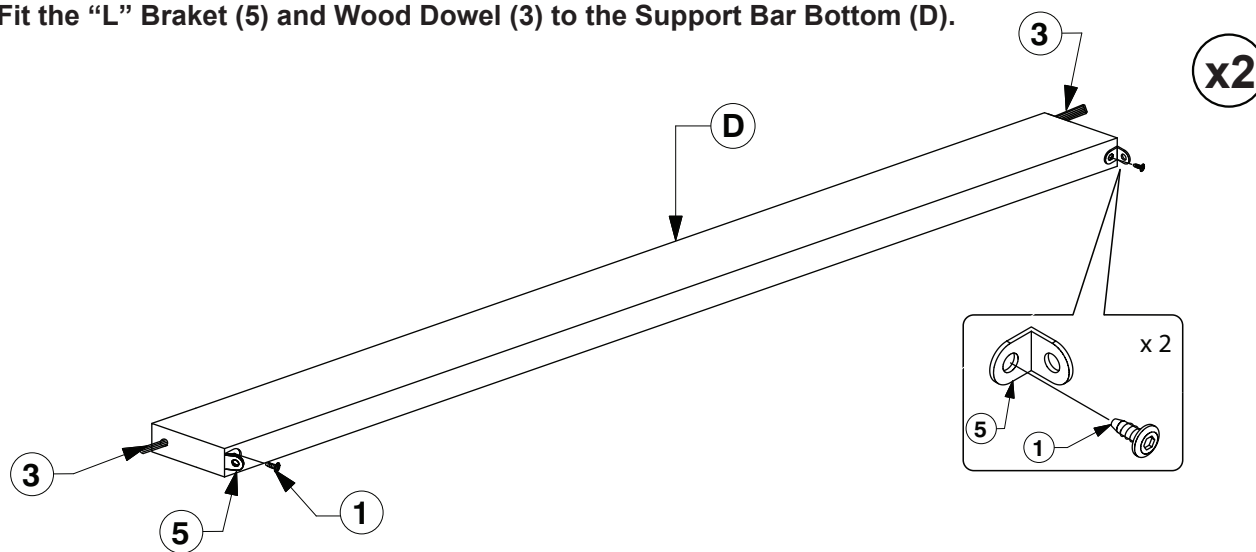

- 9** Assemble the Support Bar (Rear & Bottom) (D & E) to the Side Panel (G).

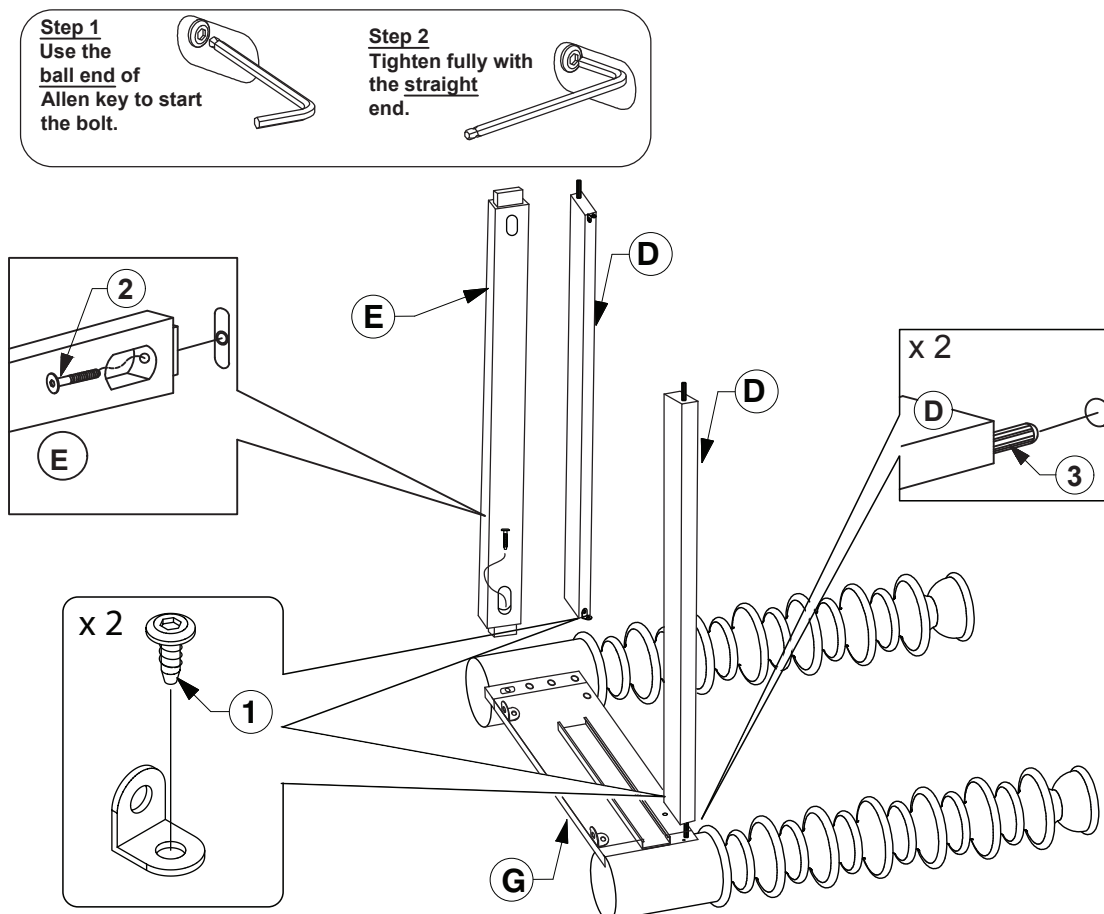


9029 1D Night Stand


Assembly Instructions

WI-0326


- 10** Fit the Support Bar Rear & Bottom (D & E) to the Side Panel (H).

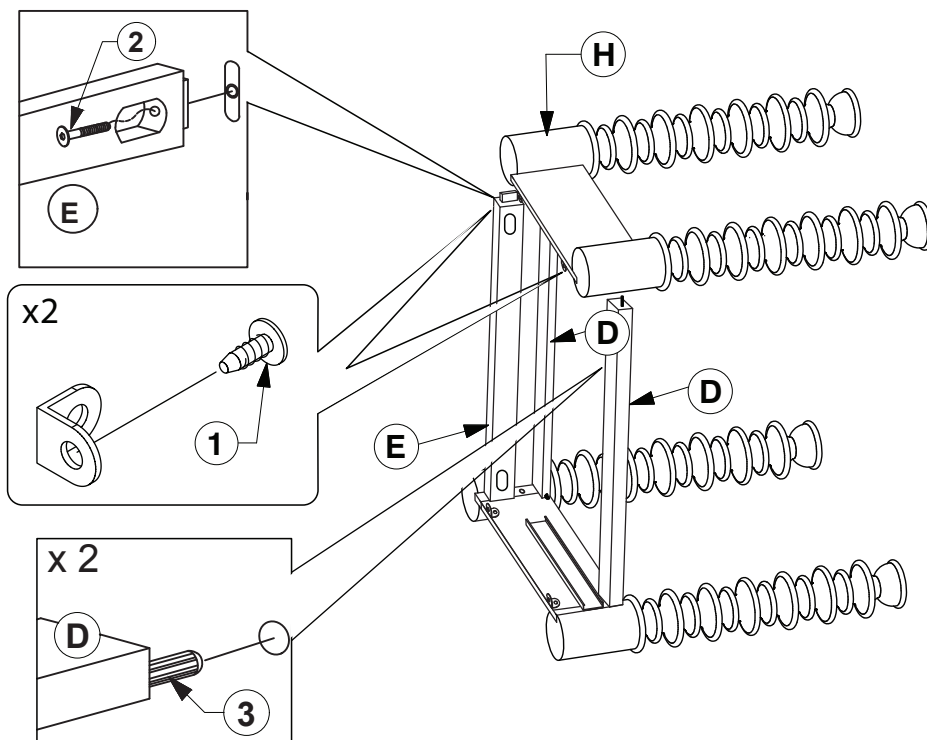


Step 1
Use the ball end of Allen key to start the bolt.

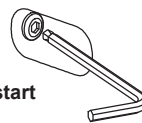

Step 2
Tighten fully with the straight end.



- 11** Assemble the Side Panel (G & H) to the Top Panel (A).

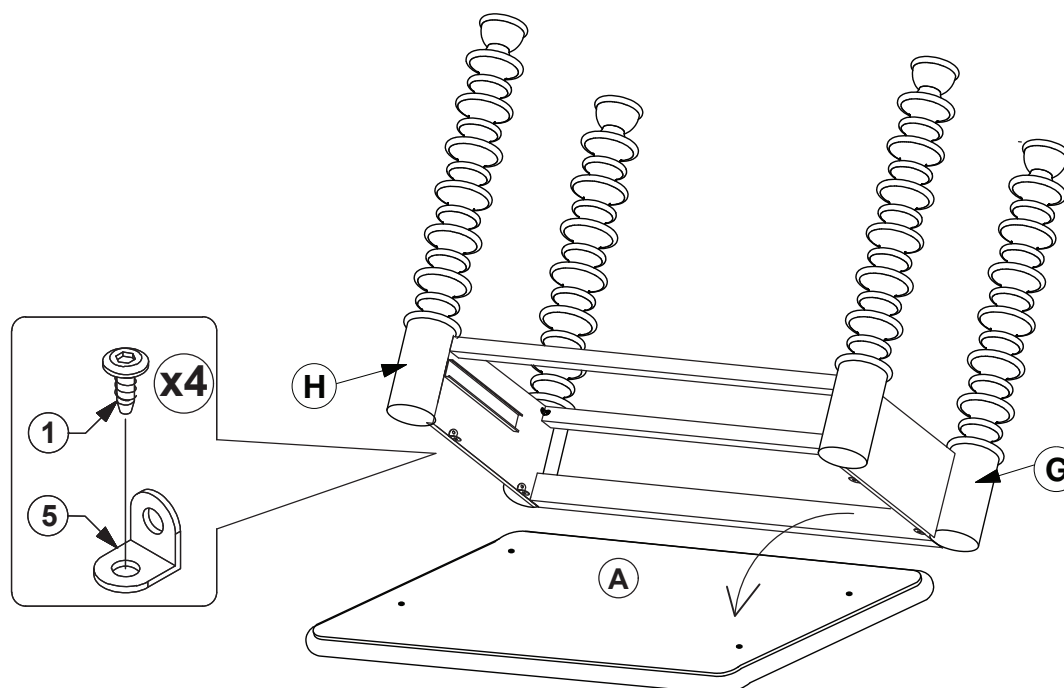


9029 1D Night Stand


Assembly Instructions

WI-0326

- 12** Use Screw to tighten the Back Panel (C) to the back of frame.

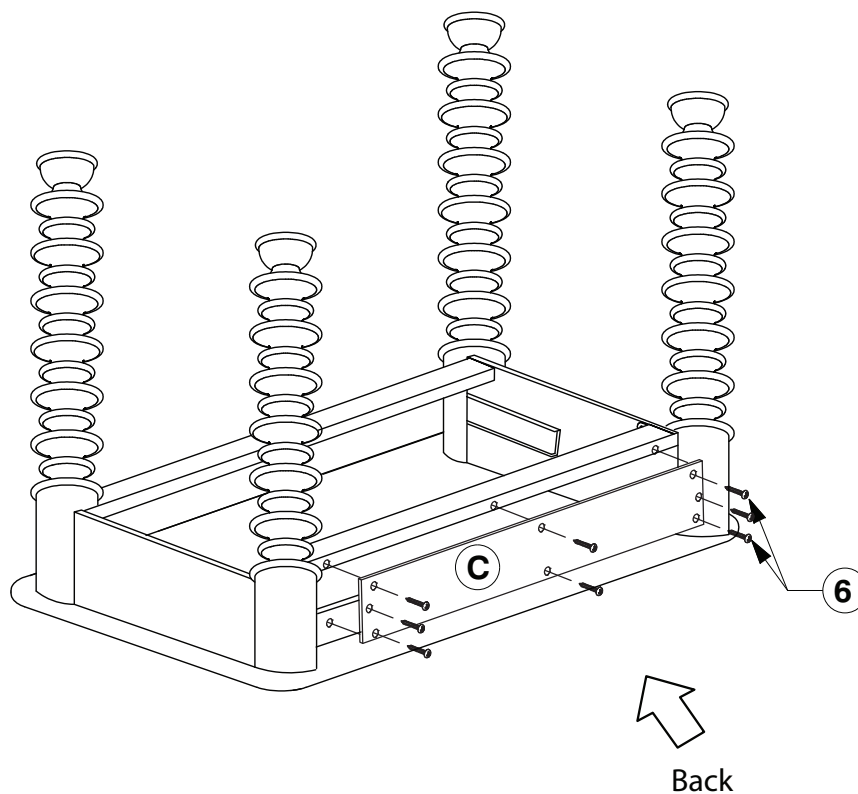

- 13** Fit the Bottom Panel (B) and Lower Post (J) to the Bottom Side Panel (G & H).

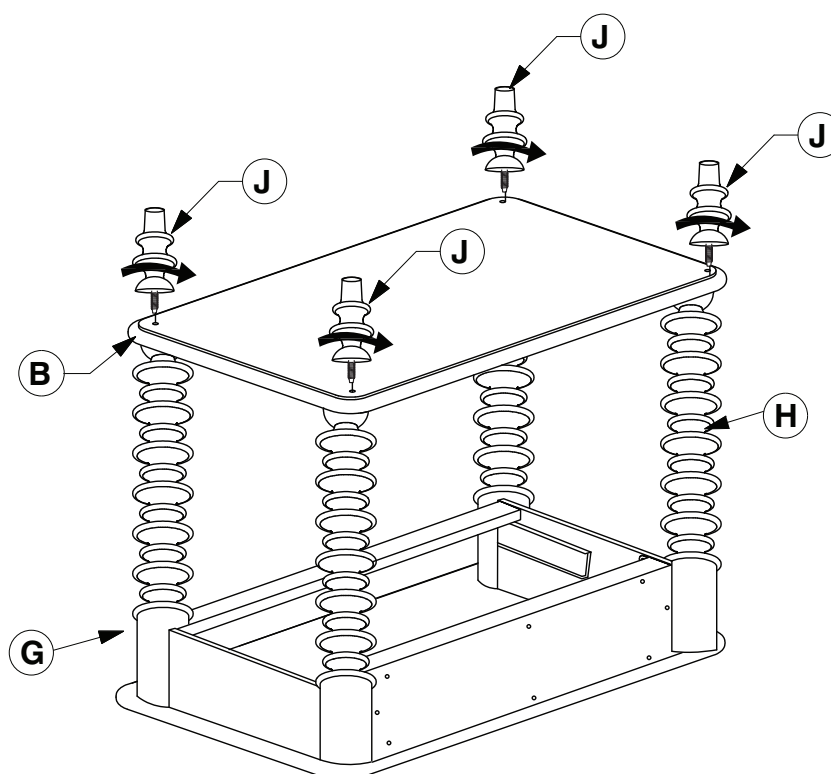


9029 1D Night Stand

Assembly Instructions


WI-0326

14 Fit the Drawer to the Casegood Body.

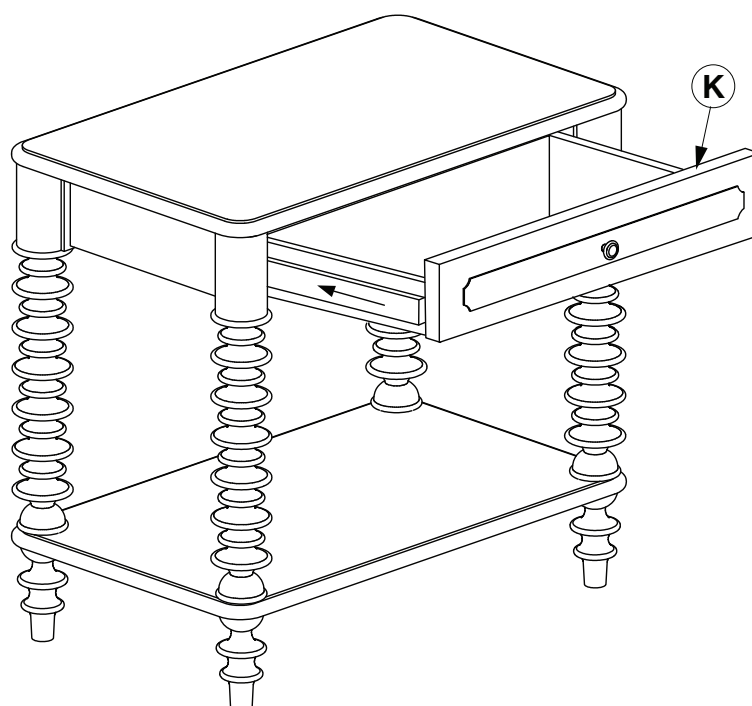

15 Fit and adjust the Drawer Face (K).

* NOTE: Before fitting the Wood Screws .
Loosen the JCBs on the Drawer Face if
the face needs alignment .

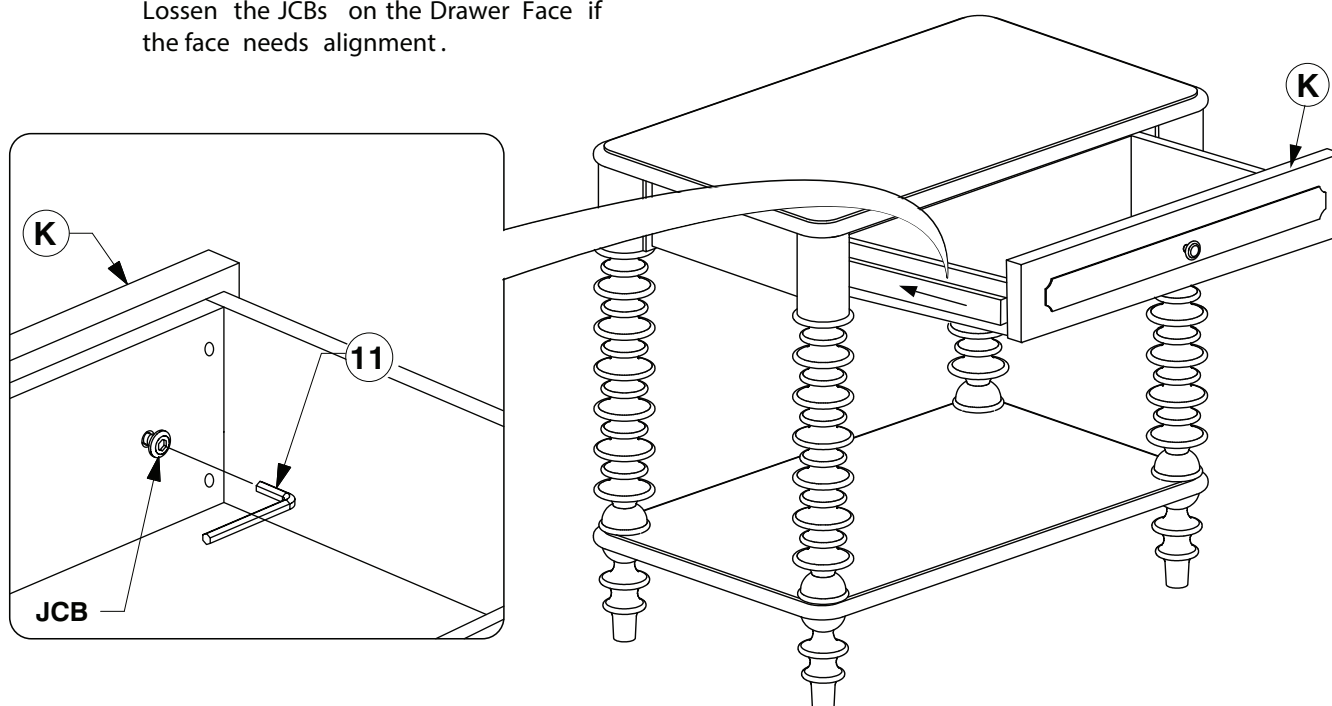

9029 1D Night Stand

Assembly Instructions

WI-0326

- 16** After the Drawer Face (K) are aligned, secure with wood screw.

