
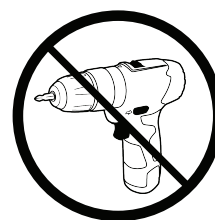
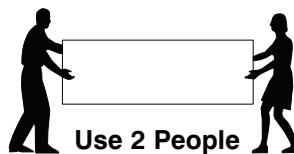


9029 2D Night Stand












Assembly Instructions

WI-0425

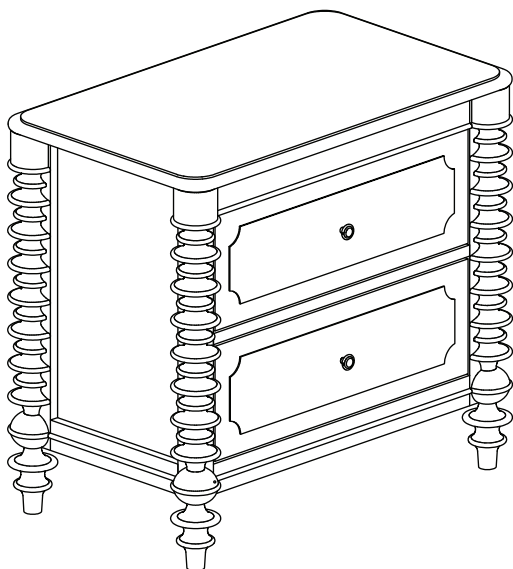

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

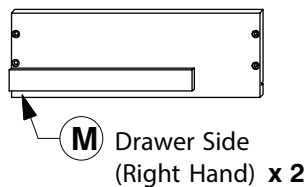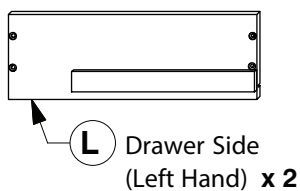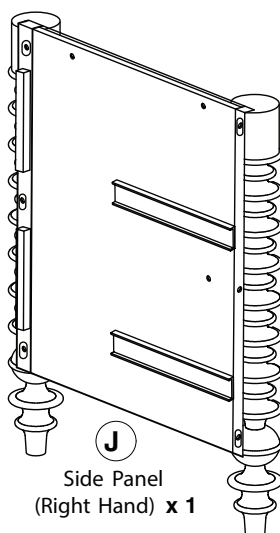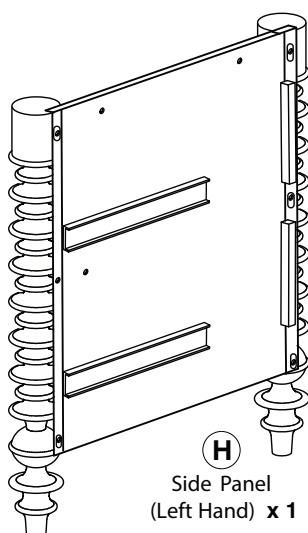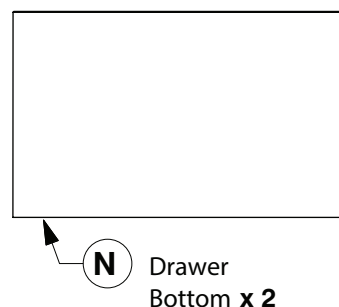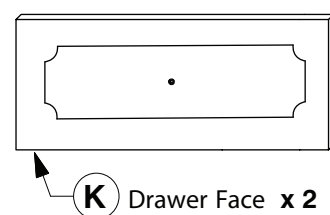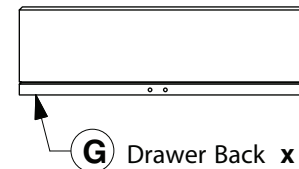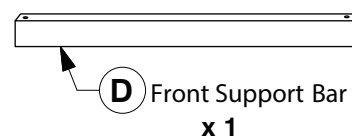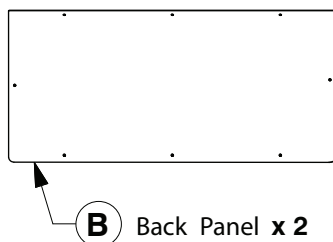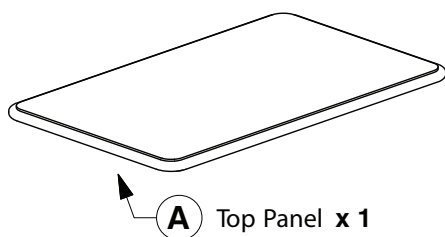


9029 2D Night Stand

Assembly Instructions


WI-0425

2 Hardware List

- | | | | | |
|---|--|--|--|---|
| 
1 M6 x 15mm
JCB x 12 | 
2 M6 x 40mm
JCB x 10 | 
3 'L' Bracket
(5005-3) x 6 | 
4 M8 x 30mm
Wood Dowel
x 2 | 
5 M6 x 25mm
Wood Dowel
x 8 |
| 
6 M4 x 16mm
Wood Screw x 16 | 
7 M4 x 20mm
Wood Screw x 8 | 
8 M4 x 25mm
Wood Screw x 20 | 
9 Handle
(9029) x 2 | |
| 
10 M4 x 22mm
Wood Screw x 2 | | | 
11 Allen Key
x 1 | |

3 Assemble the Drawer Sides (L & M) and Drawer Rail (P) to the Drawer Face (K).

x2

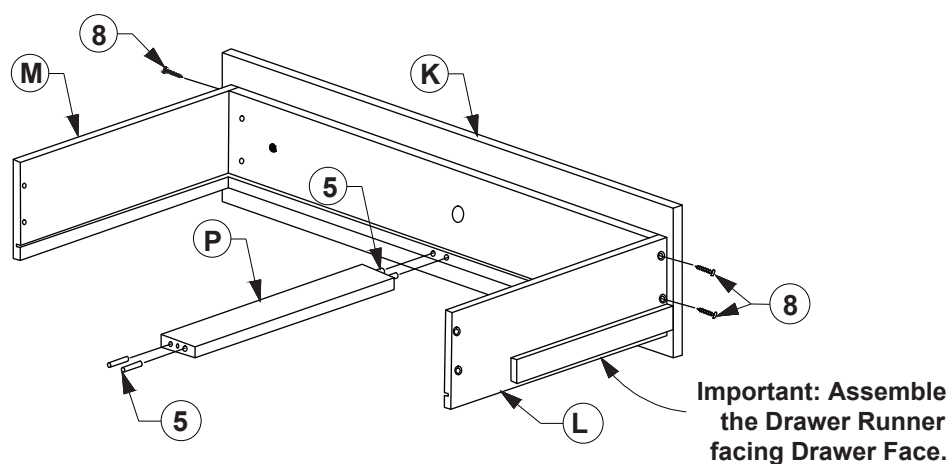


9029 2D Night Stand


Assembly Instructions

WI-0425


- 4** Slide the Drawer Bottom (N) into the groove on the Drawer Sides (L & M).

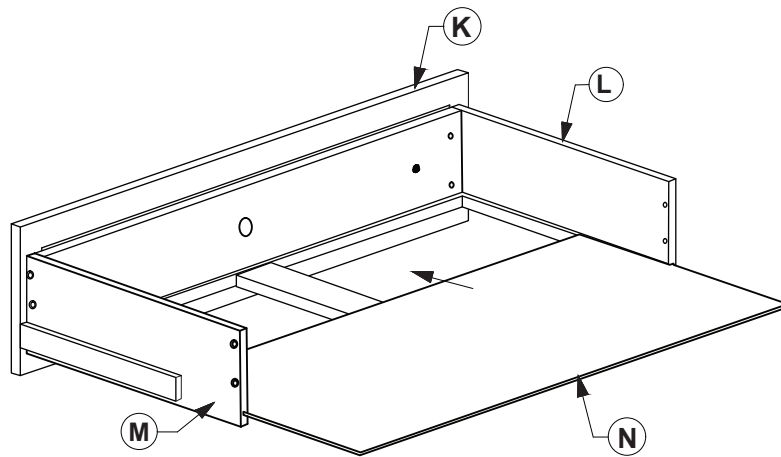

- 5** Assemble the Drawer Back (G) to the Drawer Sides (L & M). Fit the Handle to the Drawer Face (K).

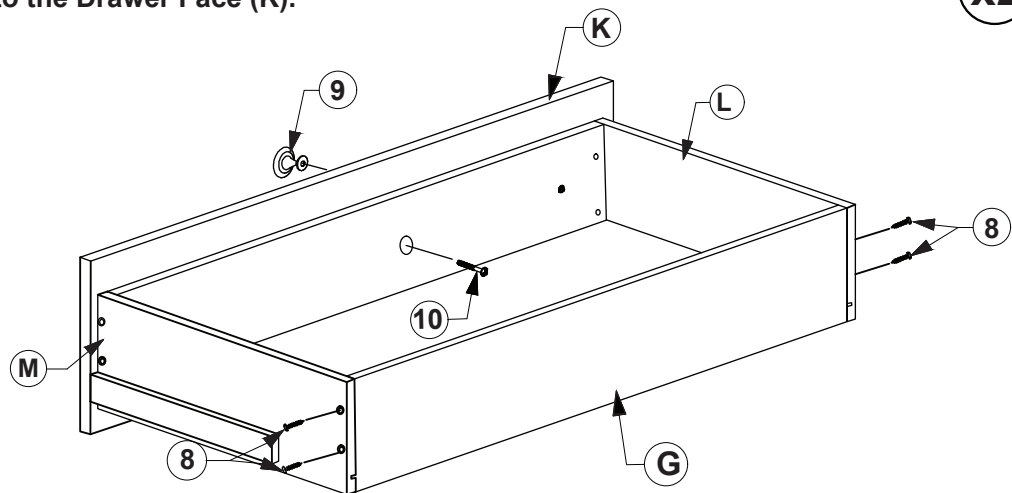

- 6** Turn the Drawer over to fit angled 25mm Wood screws (8) to the Drawer Rail (P).

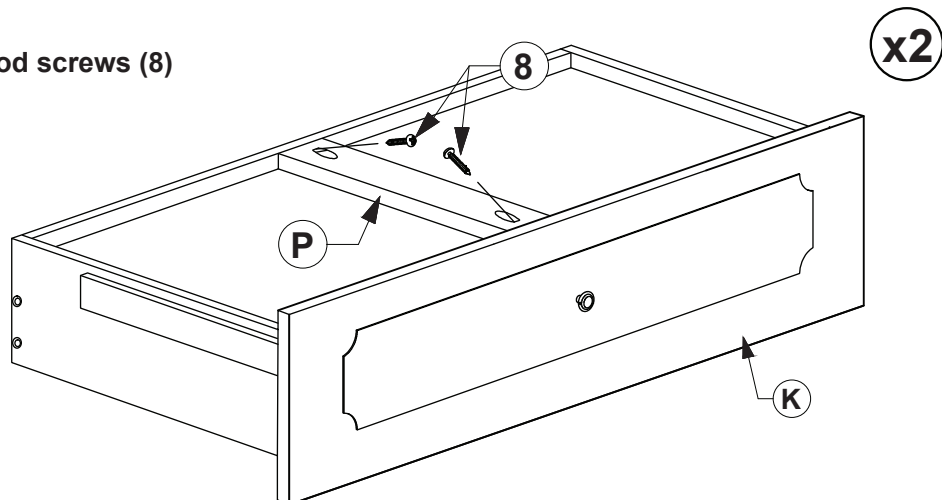


9029 2D Night Stand


Assembly Instructions

WI-0425

- 7** Fit the 'L' Bracket (3) to the Side Panel (H & J).

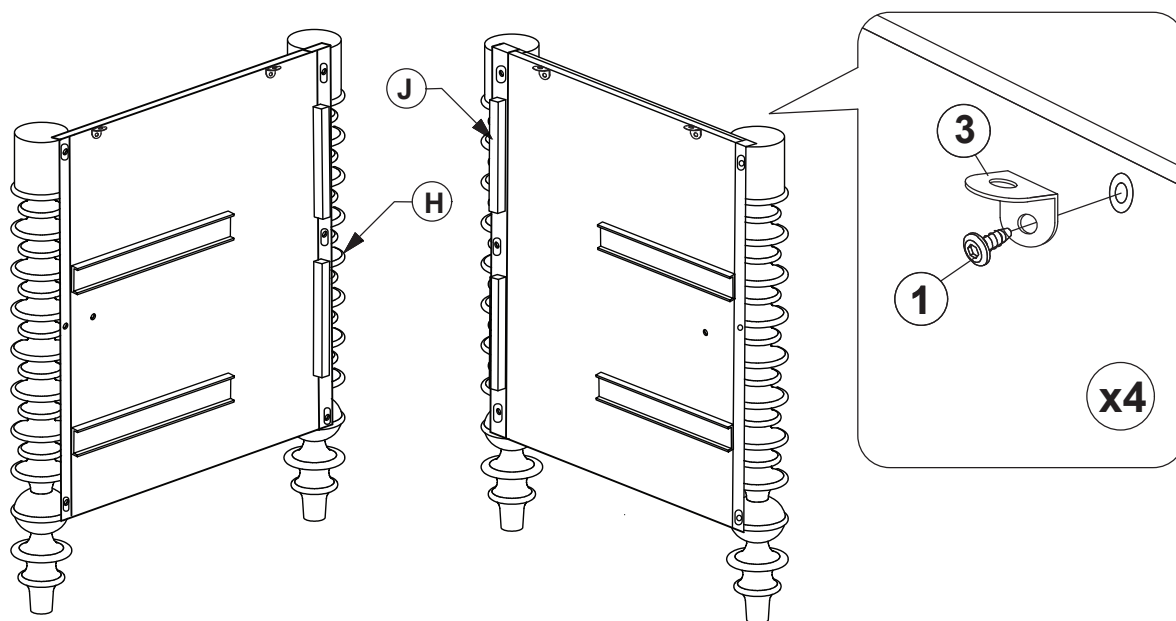

- 8** Fit the "L" Bracket (3) and Wood Dowel (4) to the Front Support Bar (D).

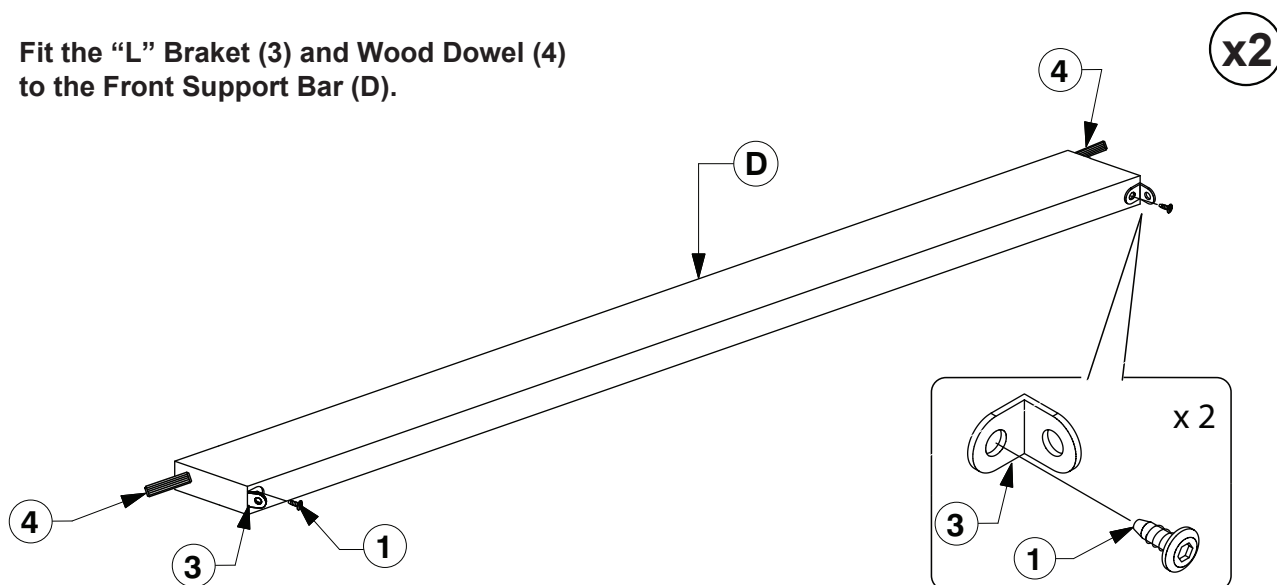


9029 2D Night Stand

Assembly Instructions



WI-0426

9 Assemble Support Bar (C, D, E & F) to the Side Panel (H).

Step 1
Use the
ball end of
Allen key to start
the bolt.

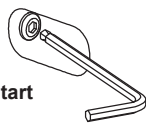


Step 2
Tighten fully with
the straight
end.

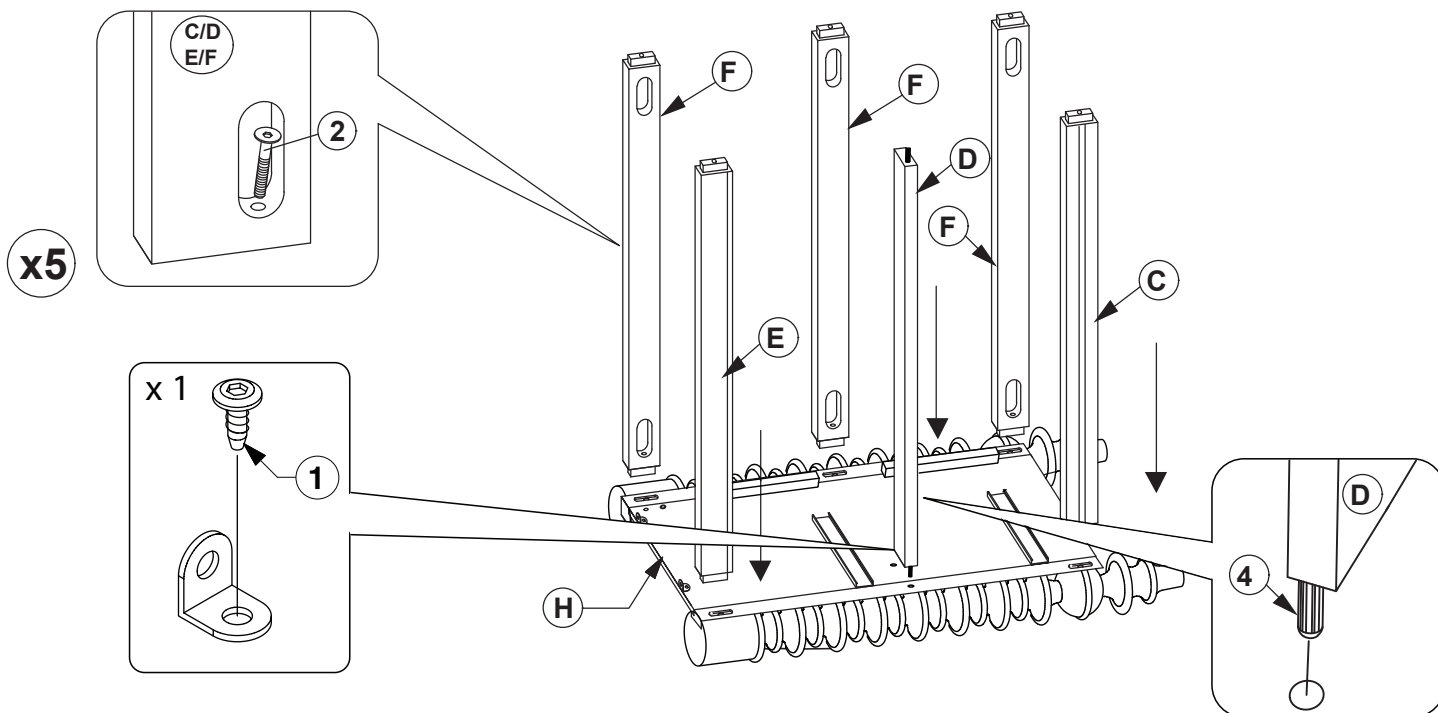



10 Fit the Side Panel (J) to the Support Bar (C, D, E & F).

Step 1
Use the
ball end of
Allen key to start
the bolt.

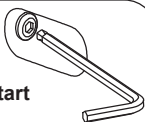

Step 2
Tighten fully with
the straight
end.

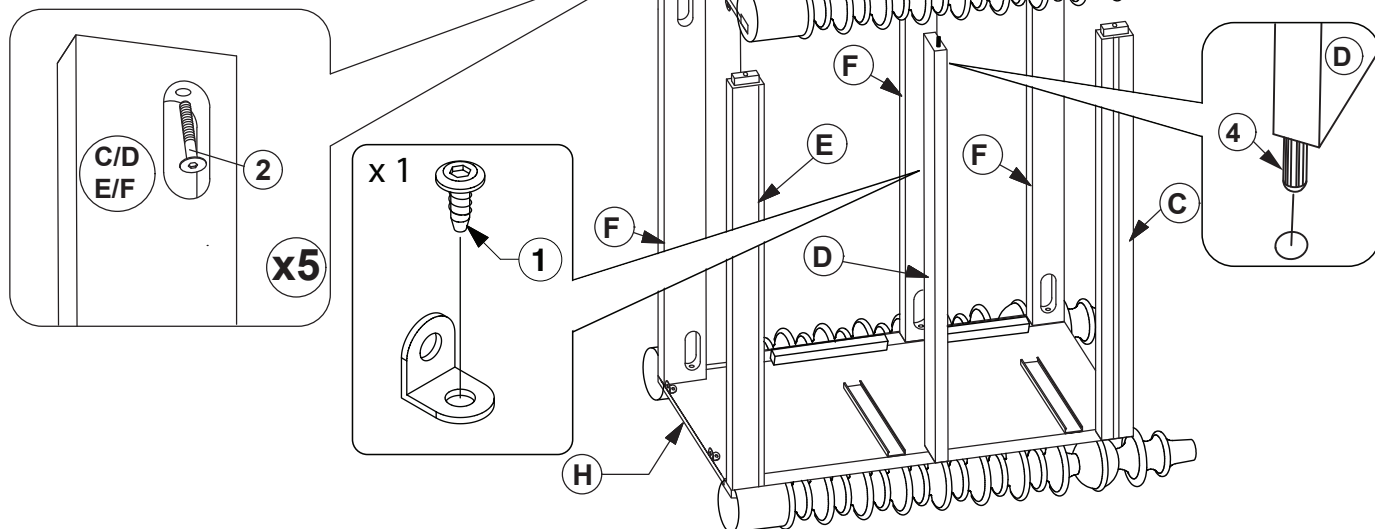


9029 2D Night Stand


Assembly Instructions

WI-0426

- 11** Assemble the Side Panel (H & J) to the Top Panel (A).

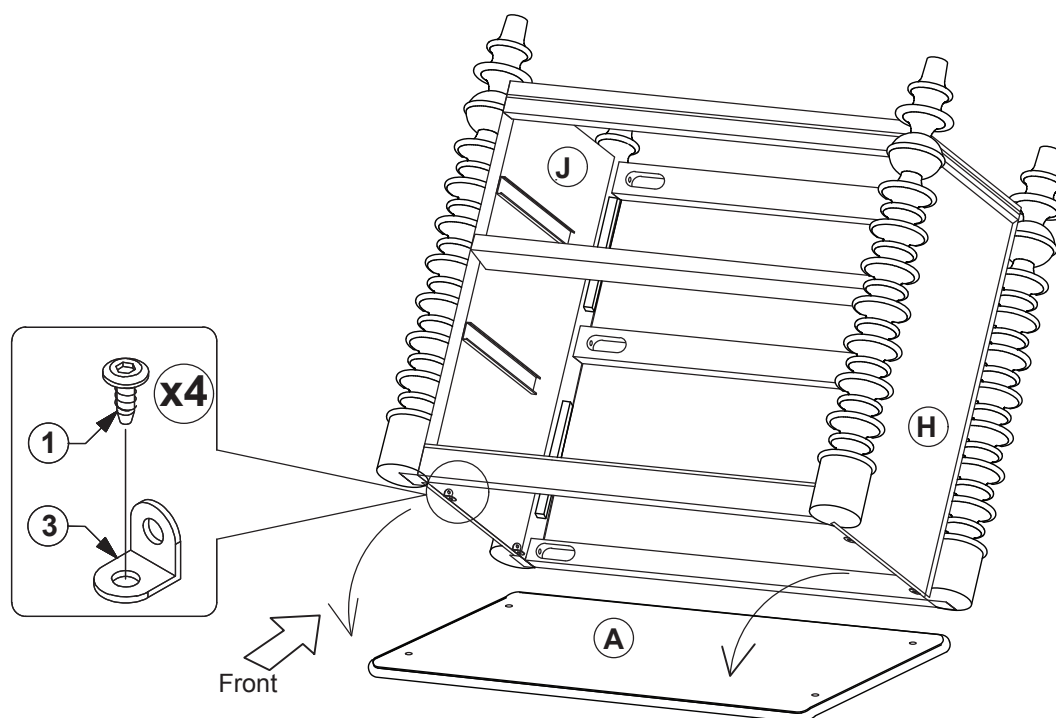

- 12** Use screw to tighten the Back Panel (B) to the back of the frame.

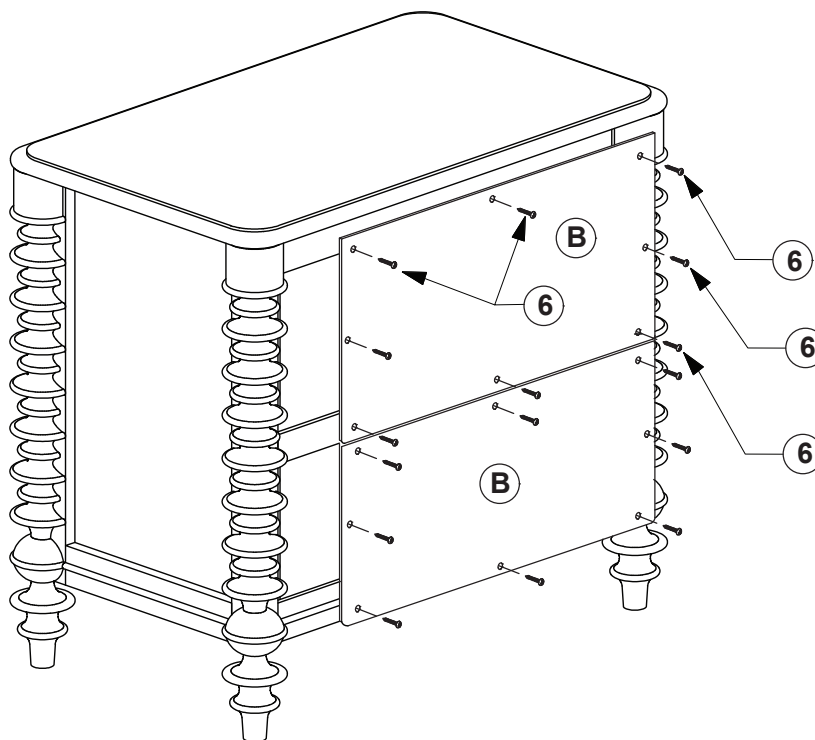


9029 2D Night Stand

Assembly Instructions


WI-0426

- 13** Fit the Drawer Face (K) to the casegood body.

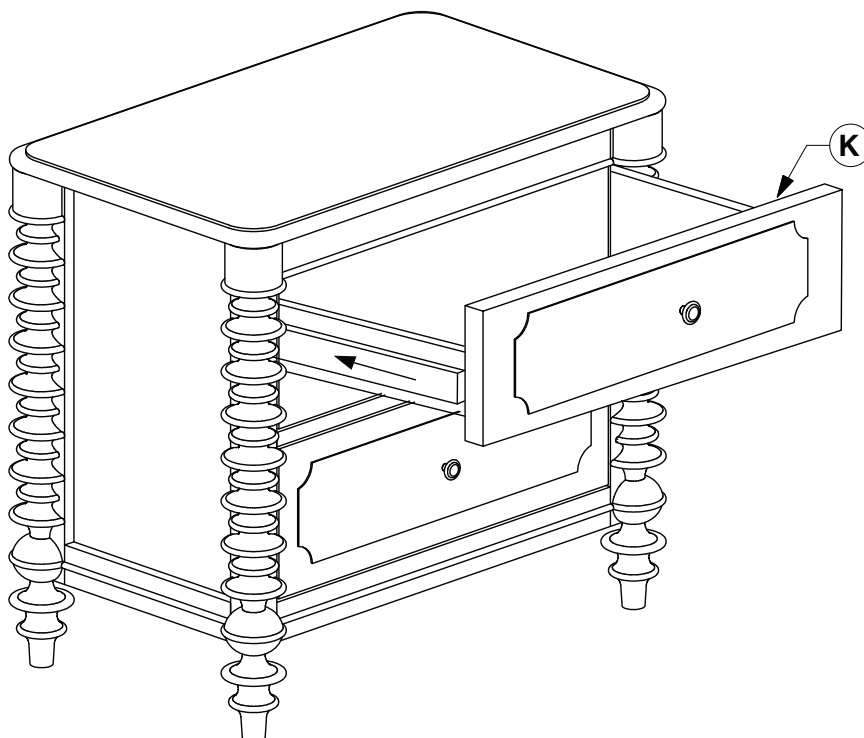

- 14** Adjust the Drawer Face (K).

* NOTE: Before fitting the Wood Screws .
Loosen the JCBs on the Drawer Face if
the face needs alignment .

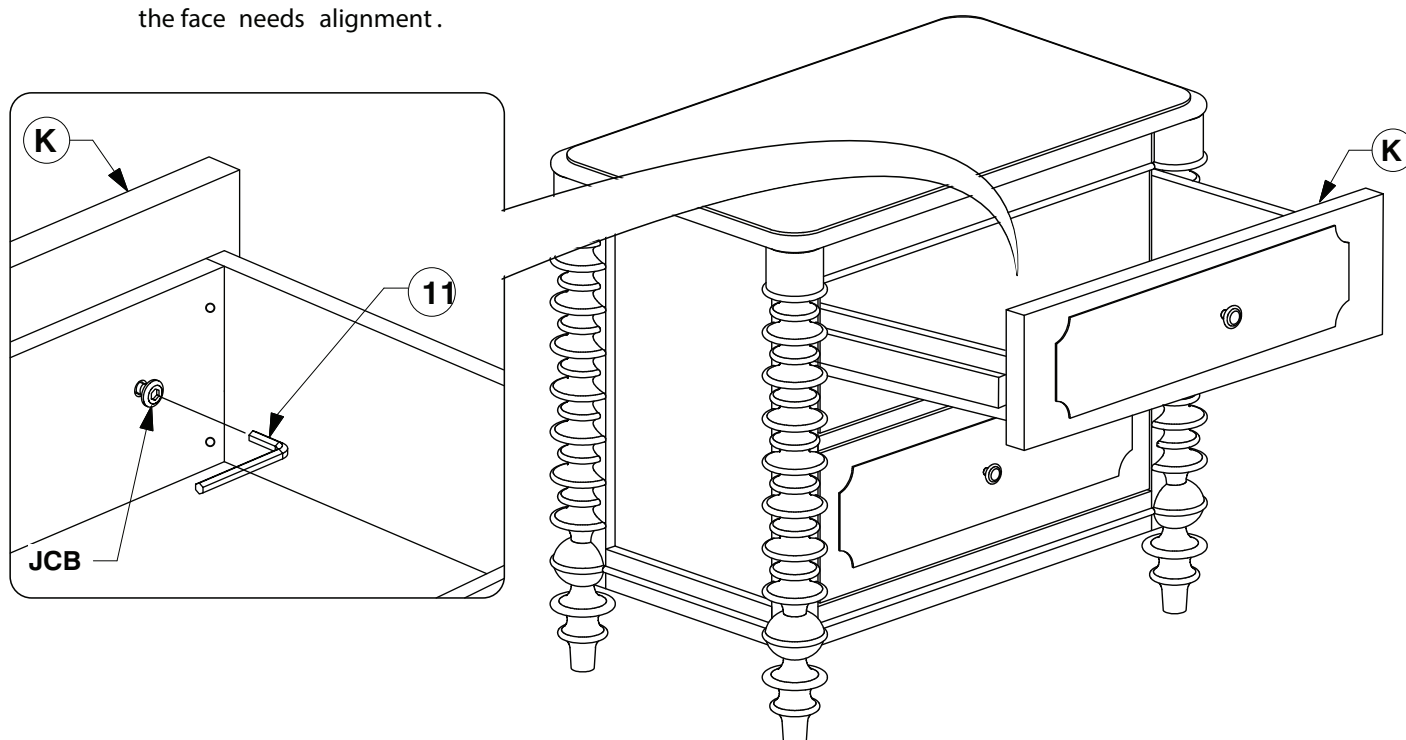

9029 2D Night Stand

Assembly Instructions

WI-0426

- 15** After the Drawer Faces (K) are aligned, secure with wood screws.

