
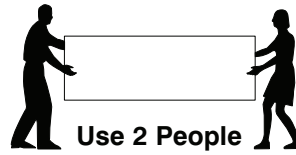


9029 3D Chest

Assembly Instructions


WI-0426

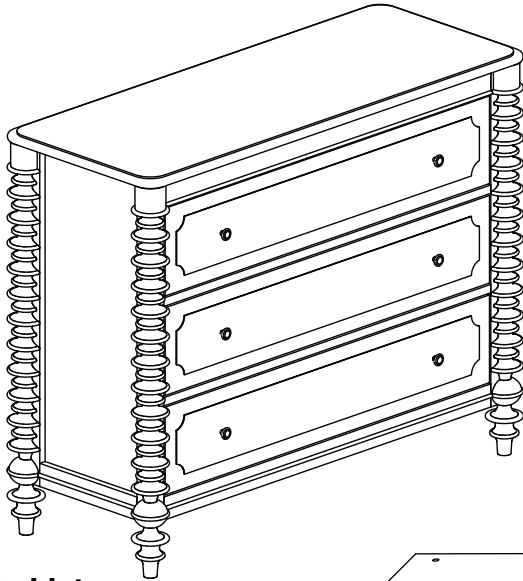


Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List


Parts in Box A:

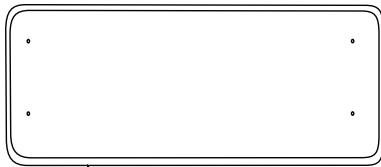


A Top Panel x 1

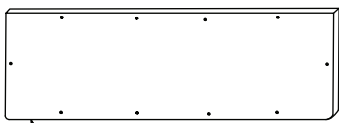

B Back Panel x 3




C Bottom Panel x 1




D Bottom Support x 4




E Front Bottom Support Bar x 1




F Front Support Bar x 2



G Front Upper Support Bar x 1




H Rear Support Bar x 3



J Rear Bottom Support Bar x 1




K Drawer Back x 3

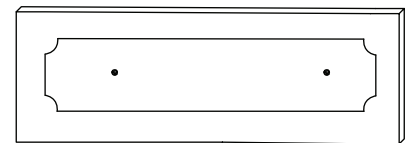

L Drawer Face x 3




M Drawer Bottom x 3




N Drawer Rail x 6


Parts in Box B:

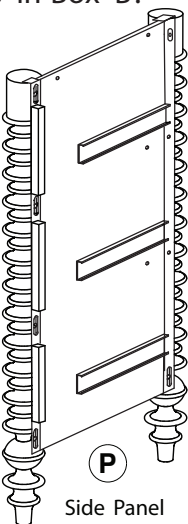


P Side Panel (Right Hand) x 1



R Drawer Side (Left Hand) x 3

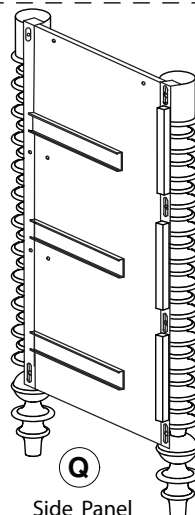

Q Side Panel (Left Hand) x 1







S Drawer Side (Right Hand) x 3

9029 3D Chest


Assembly Instructions

WI-0426

2 Hardware List

- | | | | | |
|---|---|---|---|---|
|  |  |  |  |  |
| 1 M6 x 15mm JCB x 16 | 2 M6 x 40mm JCB x 16 | 3 M6 x 60mm JCB x 8 | 4 'L' Bracket (5005-3) x 8 | 5 M8 x 30mm Wood Dowel x 4 |
|  |  |  |  | |
| 6 M6 x 25mm Wood Dowel x 24 | 7 M4 x 20mm Wood Screw x 18 | 8 M4 x 25mm Wood Screw x 36 | 9 M4 x 32mm Wood Screw x 30 | |
|  |  |  | | |
| 10 Handle (9029) x 6 | 11 M4 x 22mm Wood Screw x 6 | 12 Allen Key x 1 | | |

3 Assemble the Drawer Sides (R & S) and Drawer Rail (N) to the Drawer Face (L).

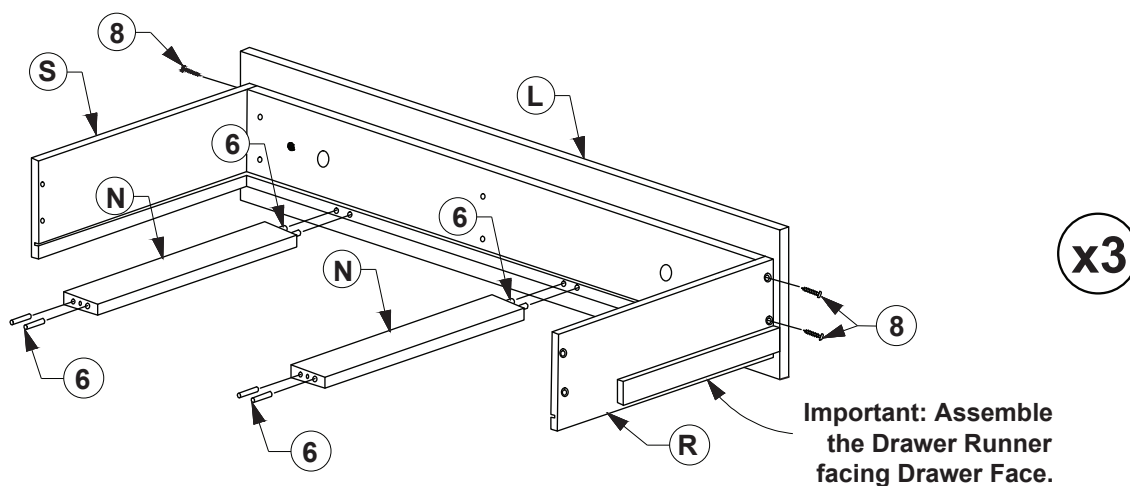


9029 3D Chest


Assembly Instructions

WI-0426


- 4** Slide the Drawer Bottom (M) into the groove on the Drawer Sides (R & S).

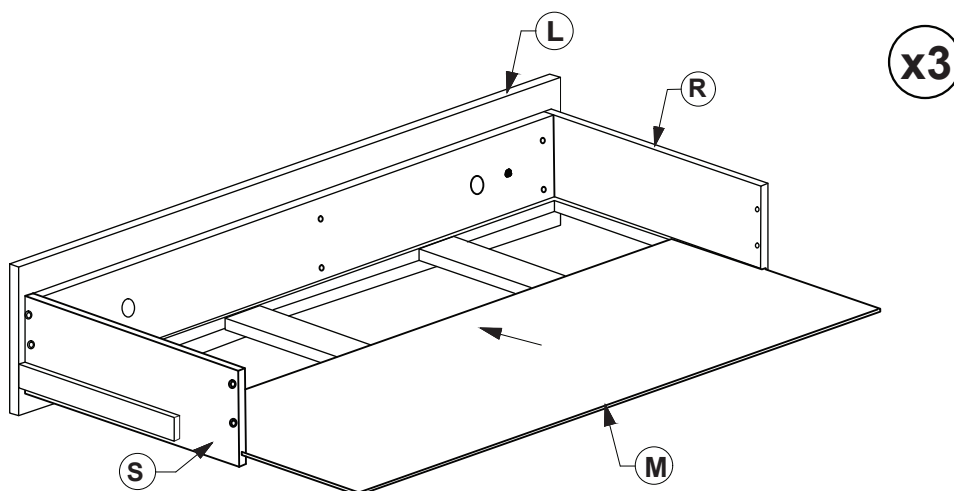

- 5** Assemble the Drawer Back (K) to the Drawer Sides (R & S). Fit the Handle to the Drawer Face (L).

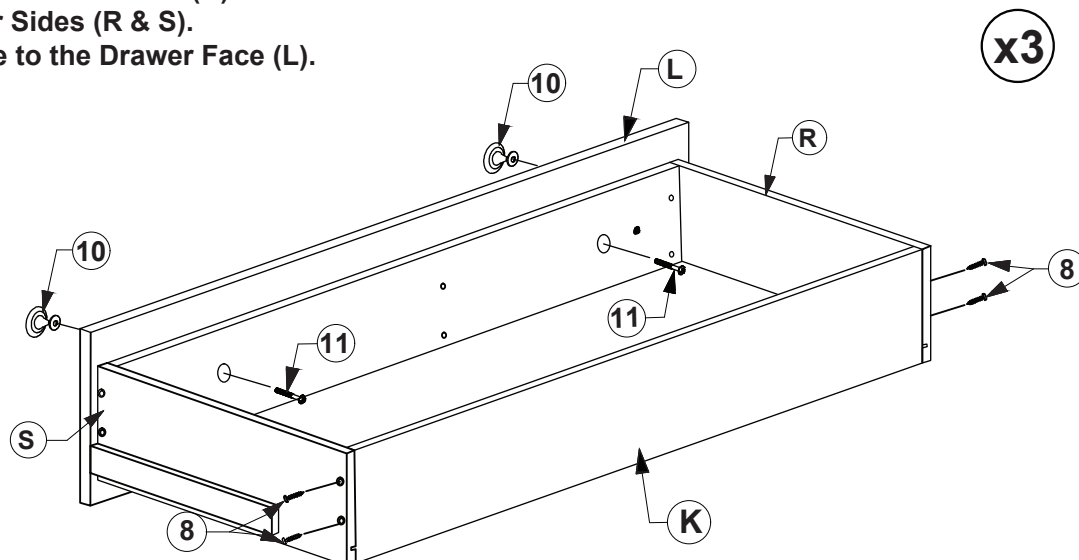

- 6** Turn the Drawer over to fit angled 25mm Wood screws (8) to the Drawer Rail (N).

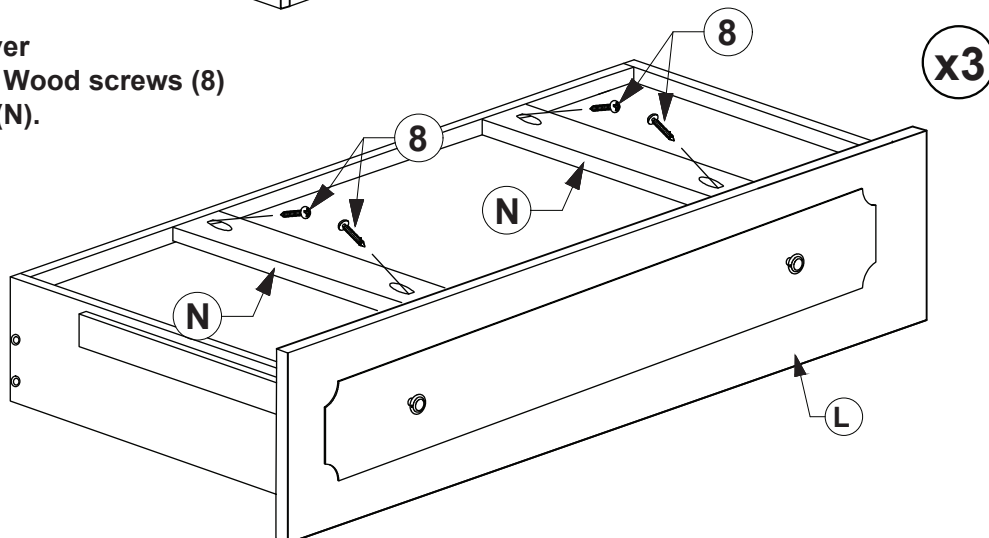


9029 3D Chest


Assembly Instructions

WI-0426

- 7** Fit the 'L' Bracket (4) to the Side Panel (P & Q).

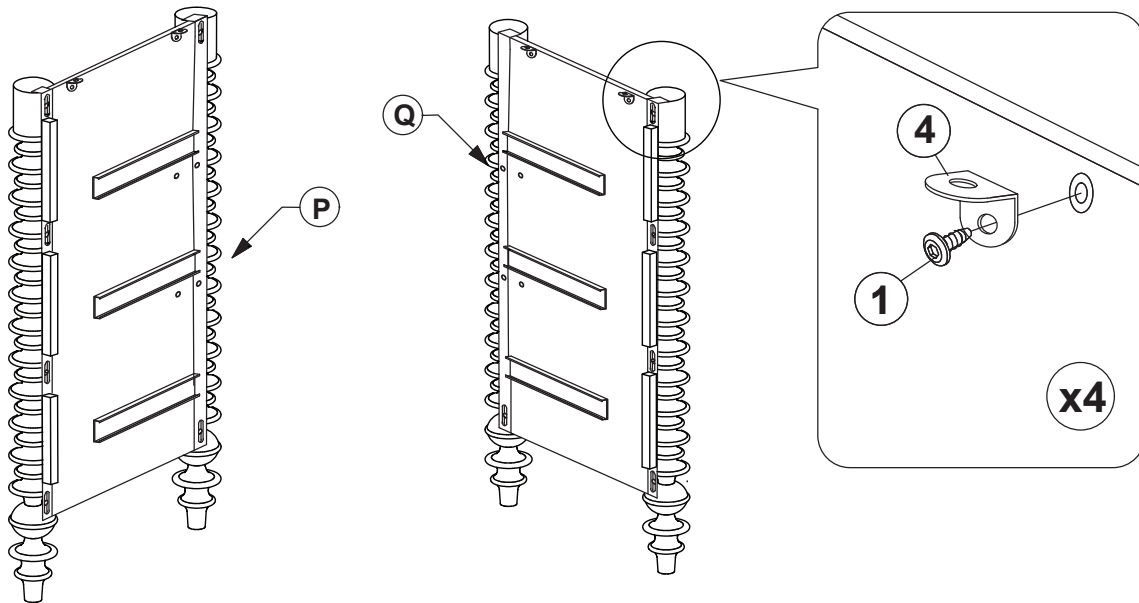

- 8** Fit the "L" Bracket (4) and Wood Dowel (5) to the Front Support Bar (F).

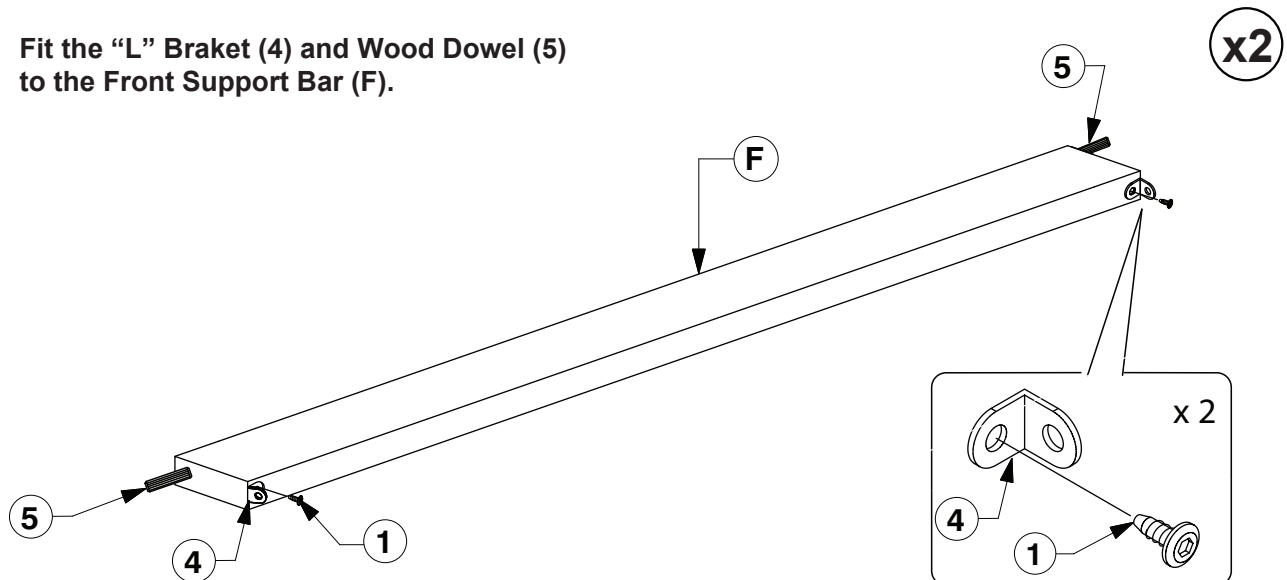


9029 3D Chest

Assembly Instructions





WI-0426

9 Assemble Support Bar (E, F, G, H & J) to the Side Panel (Q).

Step 1
Use the
ball end of
Allen key to start
the bolt.

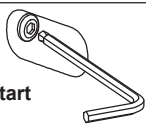


Step 2
Tighten fully with
the straight
end.


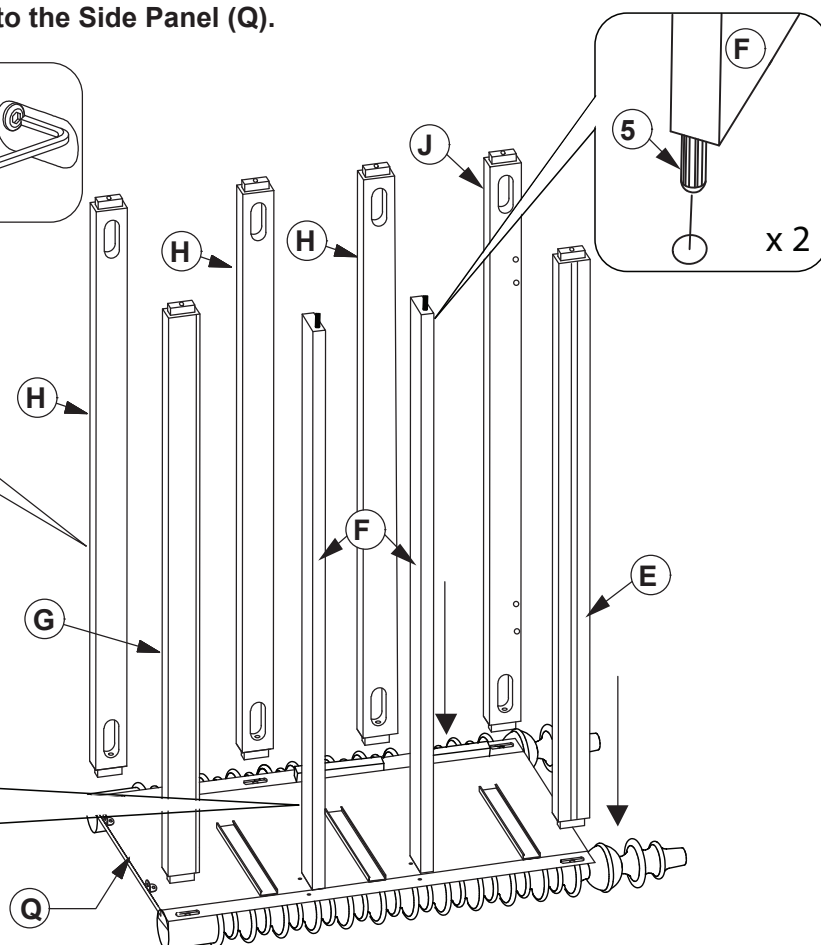
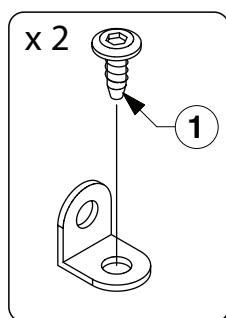
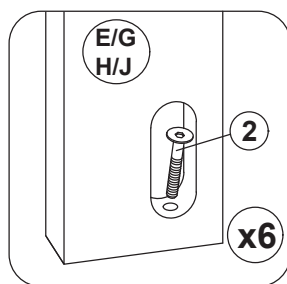



10 Fit the Side Panel (P) to the Support Bar (E, F, G, H & J).

Step 1
Use the
ball end of
Allen key to start
the bolt.

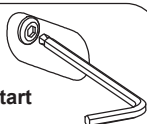

Step 2
Tighten fully with
the straight
end.

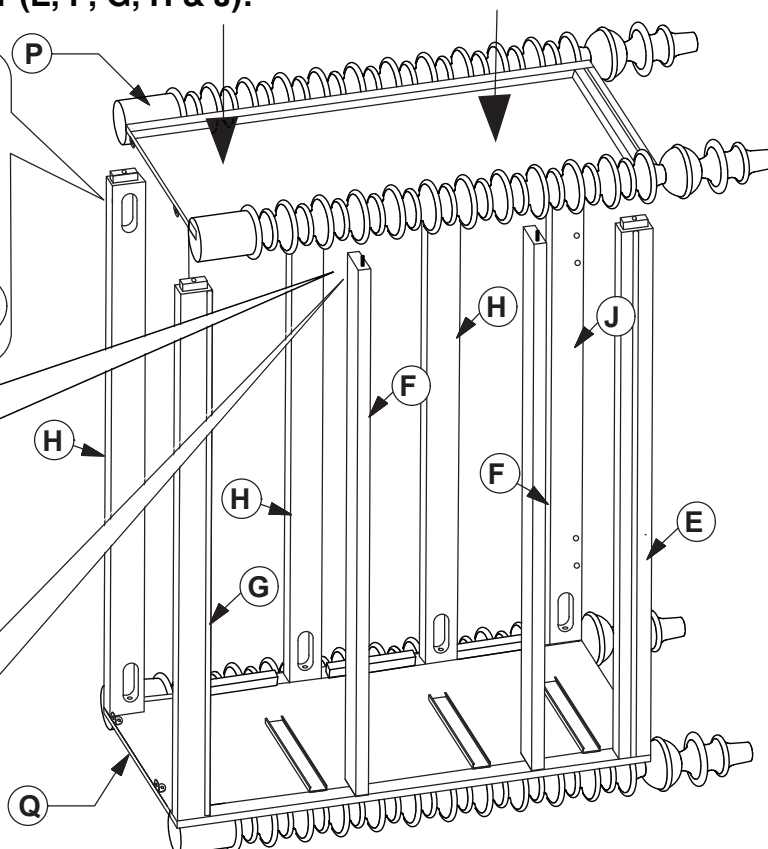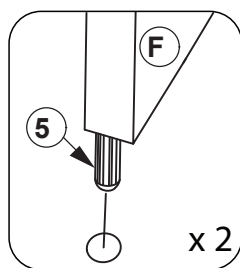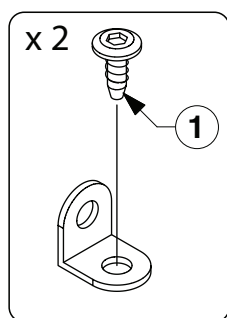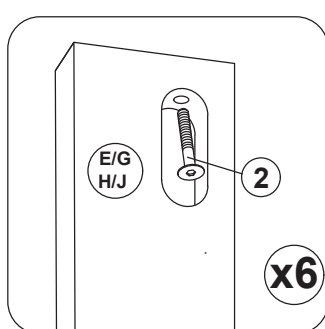


9029 3D Chest


Assembly Instructions

WI-0426

- 11** Assemble the Side Panel (P & Q) to the Top Panel (A).

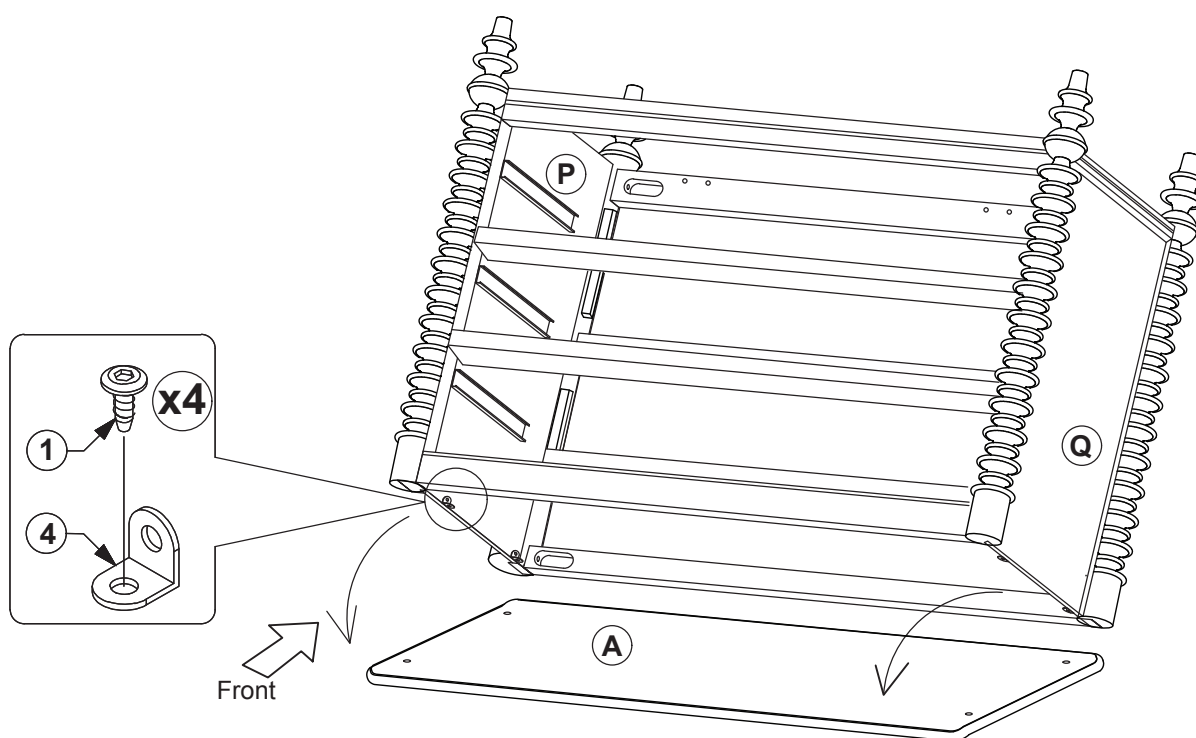

- 12** Assemble the Bottom Support (D) to the Bottom Front & Rear Support Bar (E & J) as shown.

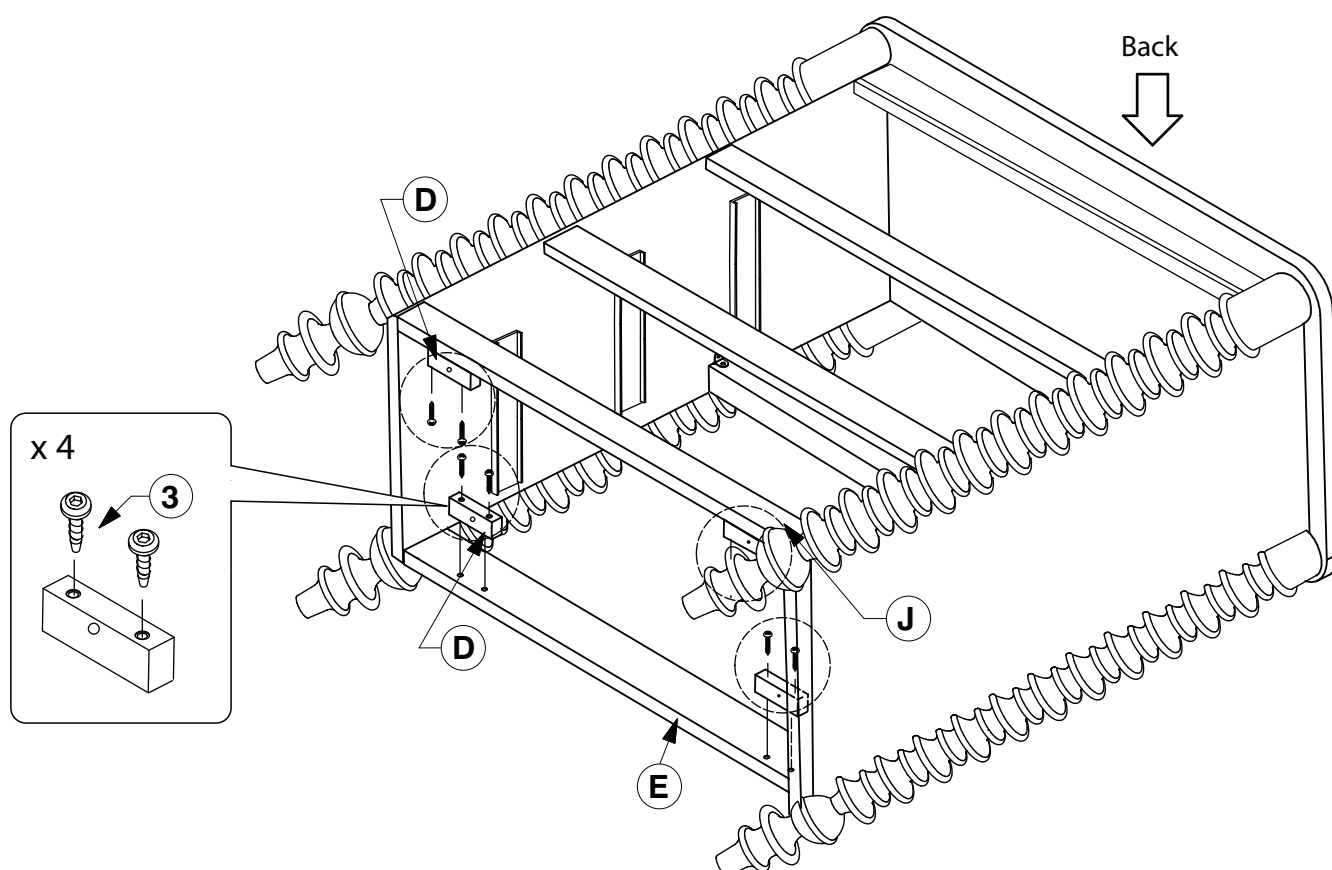


9029 3D Chest


Assembly Instructions

WI-0426

- 13** Bolt the Bottom Support (D) to the Bottom Panel (C) as shown.

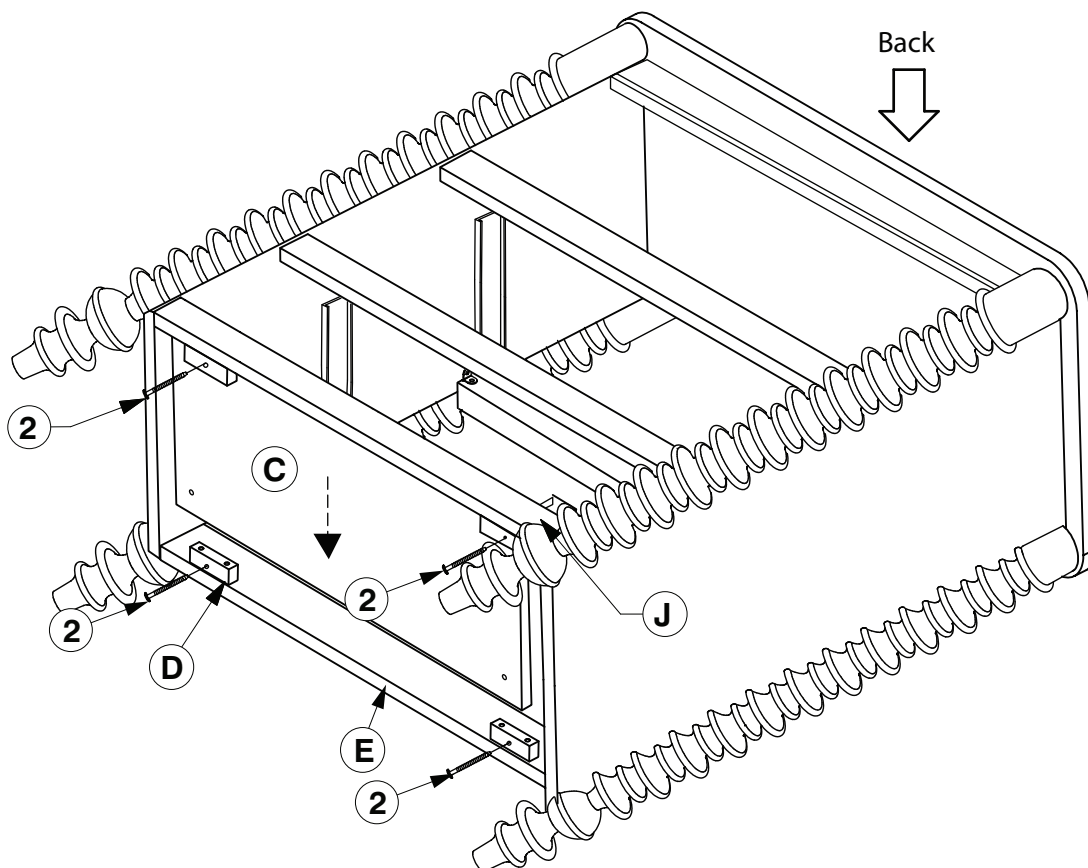

- 14** Use screw to tighten the Back Panel (B) to the back of the frame.

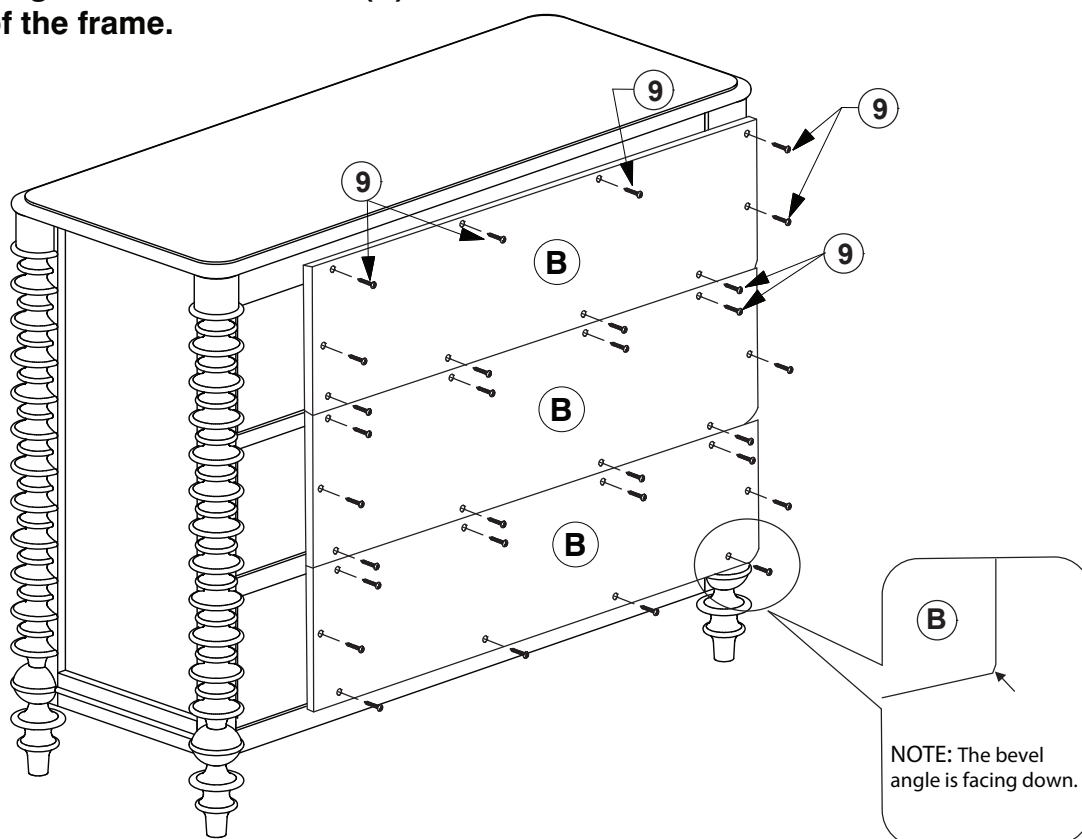


9029 3D Chest

Assembly Instructions


15 Fit the Drawer Face (L) to the casegood body.

WI-0426

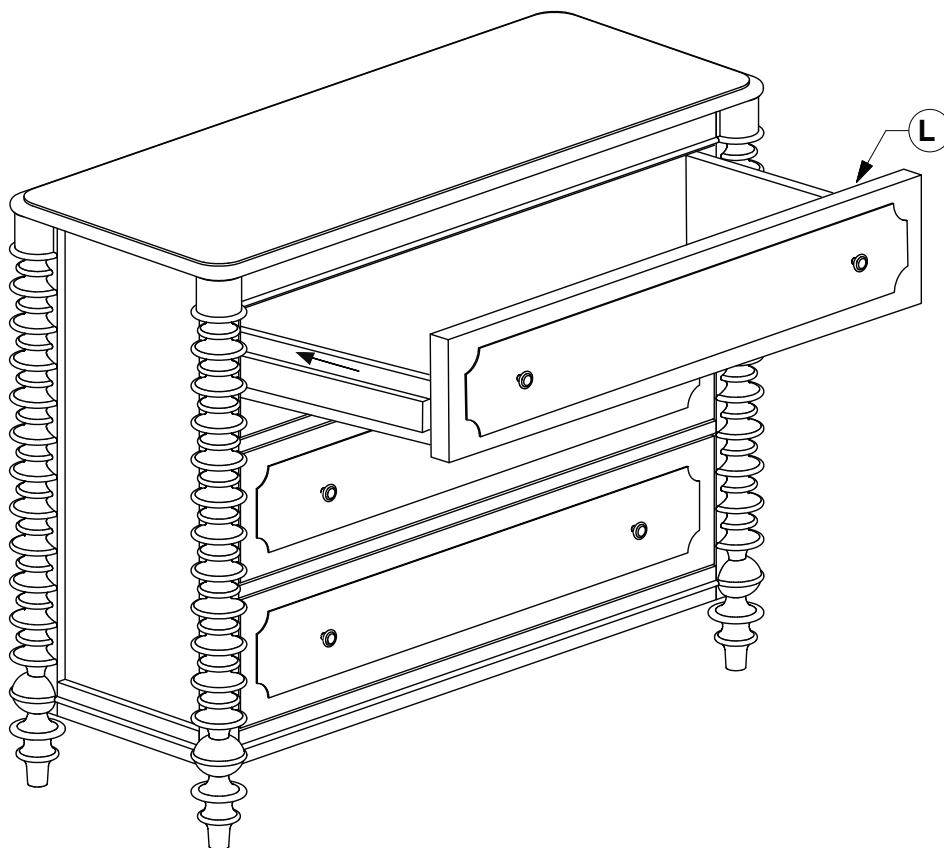

16 Adjust the Drawer Face (L) .

* NOTE: Before fitting the Wood Screws .
Loosen the JCBs on the Drawer Face if
the face needs alignment .

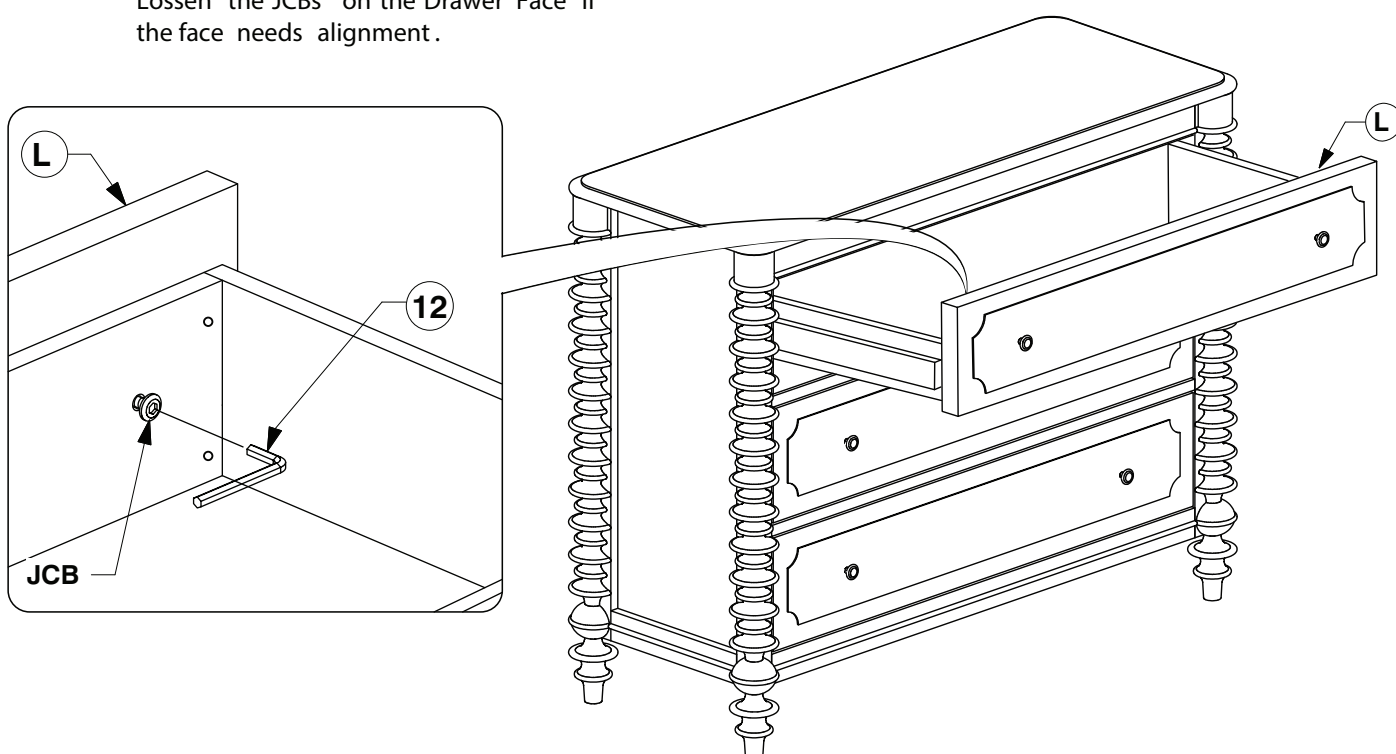

9029 3D Chest

Assembly Instructions

WI-0426

- 17** After the Drawer Faces (L) are aligned, secure with Wood Screw (7).

