


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

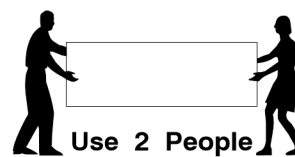

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

Parts in Box A:



A Top Panel x 1




B Front Upper Support Bar x 1



C Front Bottom Support Bar x 1



D Front Upper Drawer Support Bar x 1



E Front Bottom Drawer Support Bar x 1



F Rear Upper Support Bar x 2



G Rear Bottom Support Bar x 2




H Center Post x 1



J Back Panel x 3

Lower Drawers



N Drawer Face x 4



O Drawer Back x 4




P Drawer Bottom x 4




Q Drawer Rail x 4

Upper Drawers



K Drawer Face x 3



L Drawer Back x 3



M Drawer Bottom x 3


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

1 Parts List


Parts in Box B:

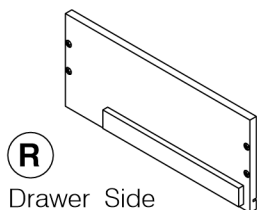


R
Drawer Side
(Left Hand) x 7

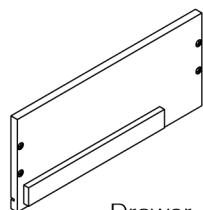


S
Drawer Side
(Right Hand) x 7

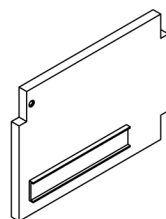


V
Center Panel
(Upper) x 2

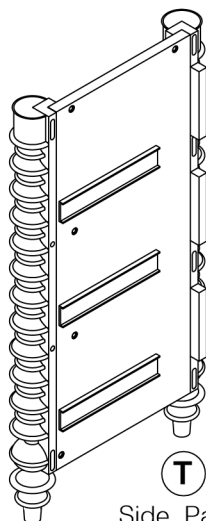

T
Side Panel
(Left Hand) x 1

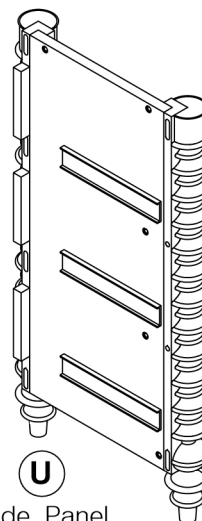

U
Side Panel
(Right Hand) x 1

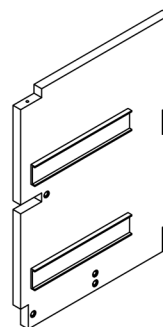

W
Center Panel
(Lower) x 1


2 Hardware List



1 M6 x
15mm JCB x 28




2 M6 x
40mm JCB x 12



3 M6 x
50mm JCB x 2



4 M6 JNC
Nut x 4




5 Adjustable
Foot x 1




6 'L' Bracket
(5005-3) x 16



7 Wood Screw
(M4 x 20mm) x 28



8 Wood Screw
(M4 x 25mm) x 64



9 M4 x 32mm
Wood Screw x 30



10 CSK Cap Wood Screw
(M6 x 60mm) x 9




11 Handle
(9029) x 7



12 M4 x 22mm
Wood Screw
x 7



13 M6 x 25mm
Wood Dowel x 16



14 M8 x 30mm
Wood Dowel x 4



15 Long Allen Key x 1


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

③ Assemble the Upper Drawers.


STEP 3.1

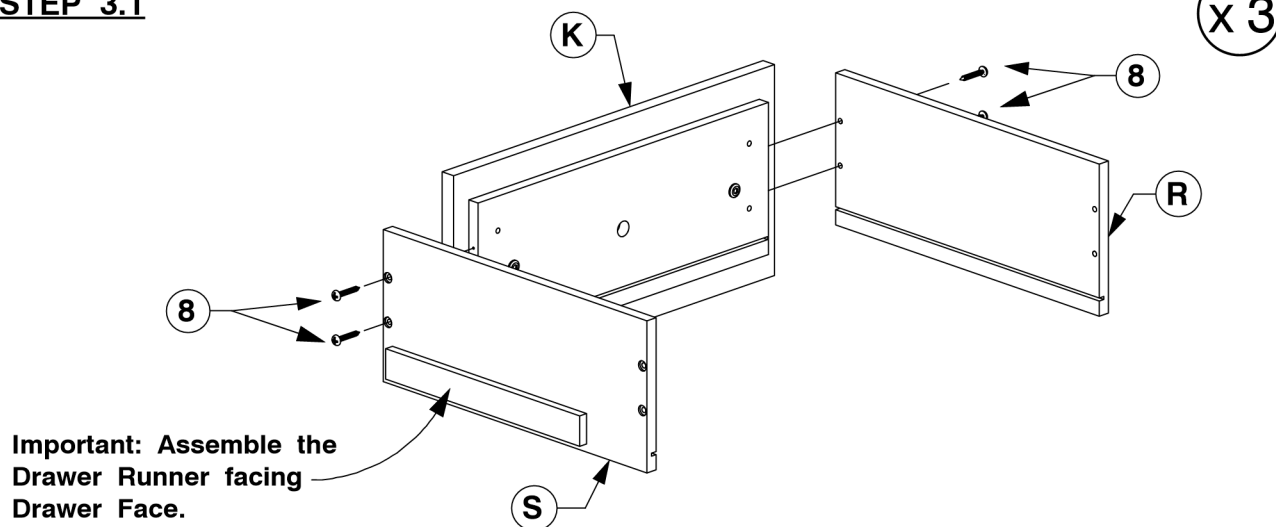

STEP 3.2

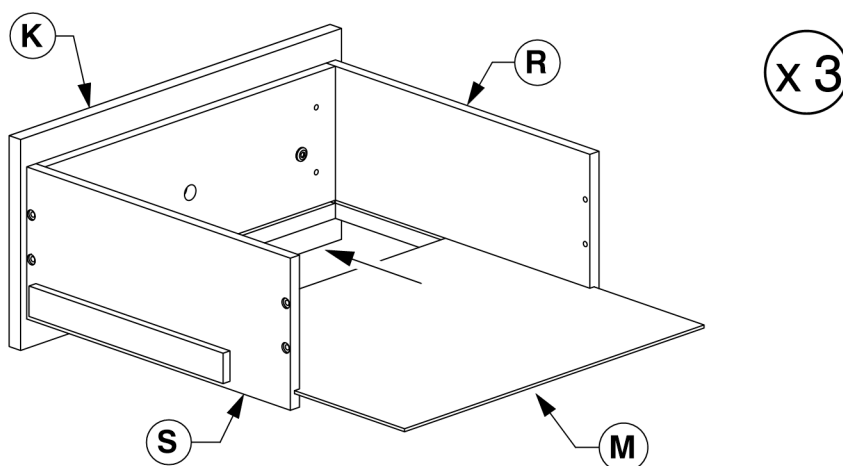

STEP 3.3

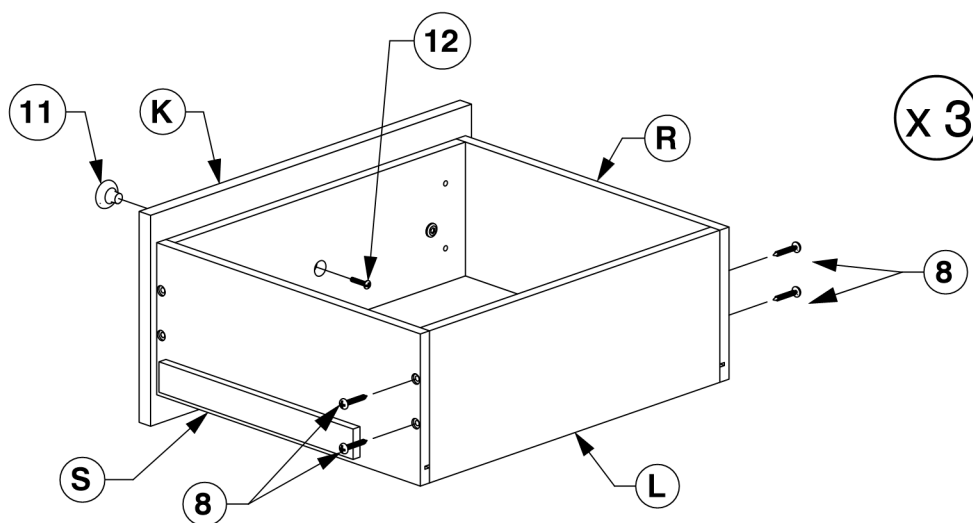

9029 7 Drawer Dresser


Assembly Instructions

WI-0426


3 Assemble the Lower Drawers.

STEP 3.4


Important: Assemble the Drawer Runner facing Drawer Face.

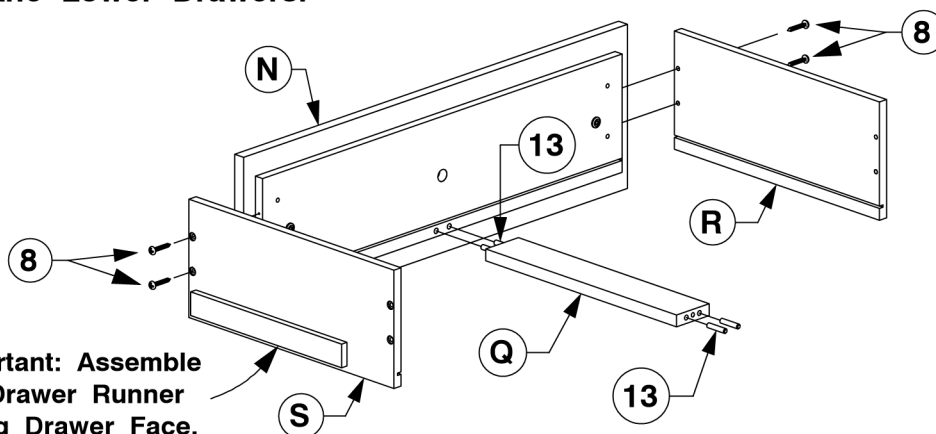


STEP 3.5

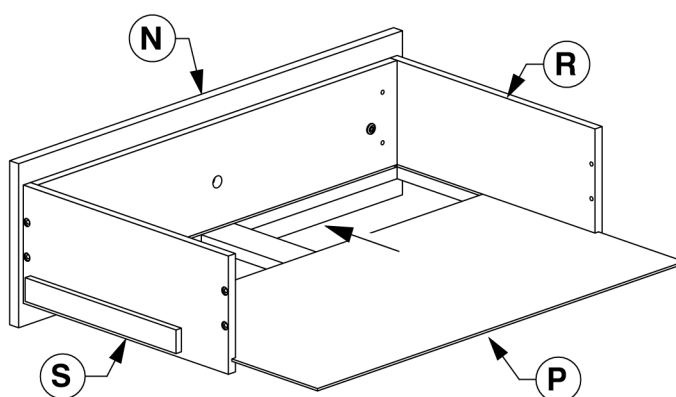

STEP 3.6

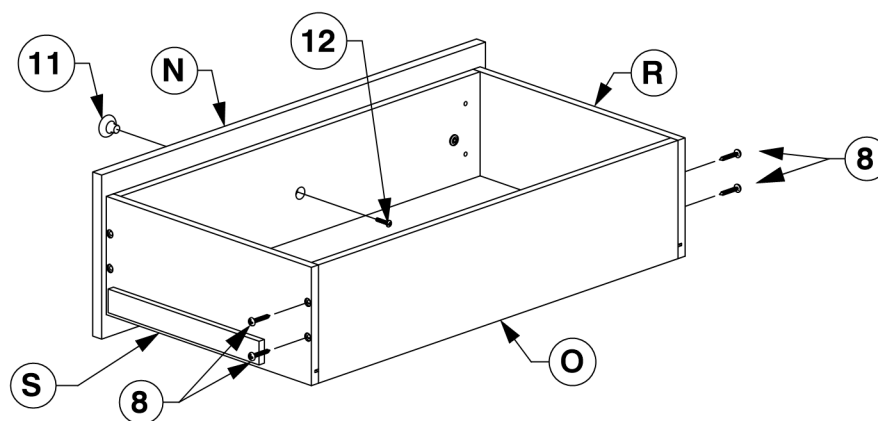

STEP 3.7

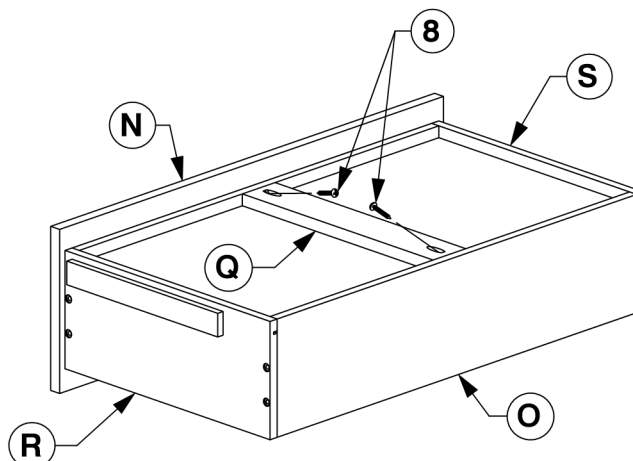


9029 7 Drawer Dresser


Assembly Instructions

WI-0426


4 Fit the 'L' Bracket to the Top Panel (A).

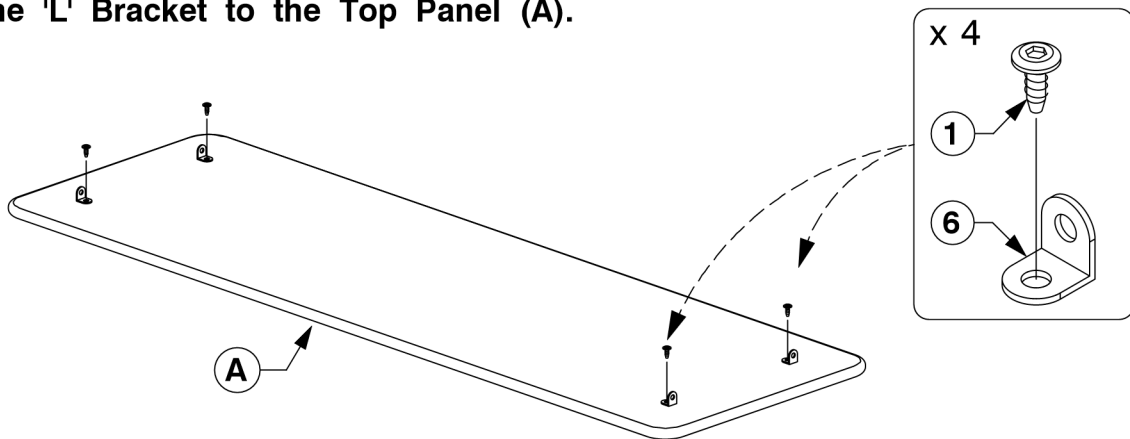

5 Attach 'L' Bracket (6) to the Upper and Lower Center Panels (V & W) using JNC (4) and Bolts (1).

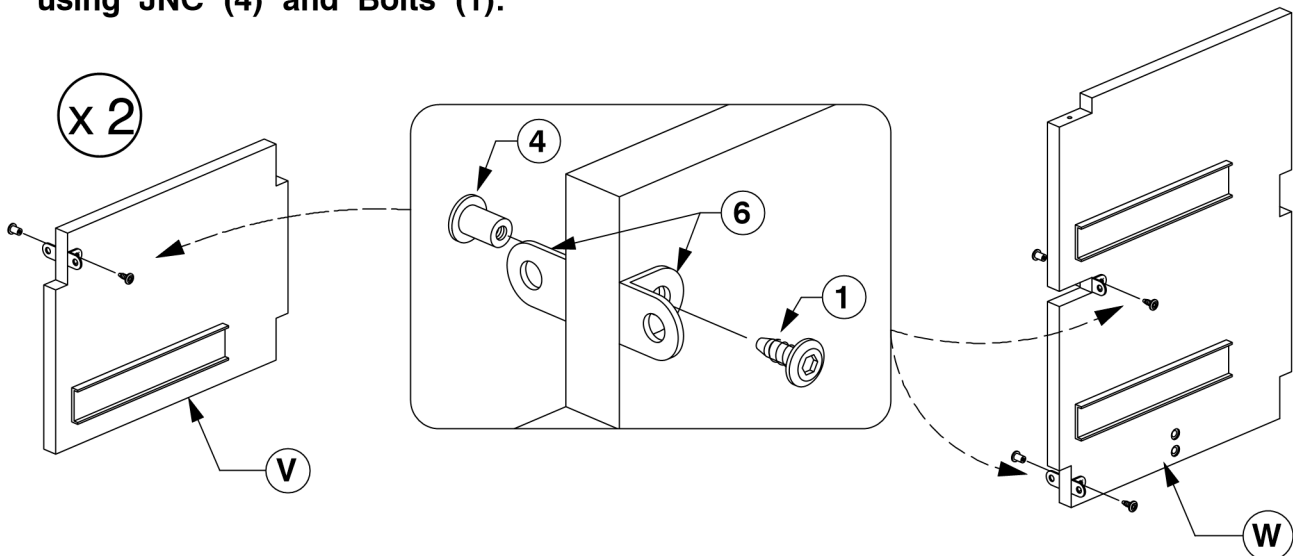

6 Insert Dowels (14) into the ends of Support Bars (D & E). Then attach Brackets (6) to the Support Bars using Bolts (1).


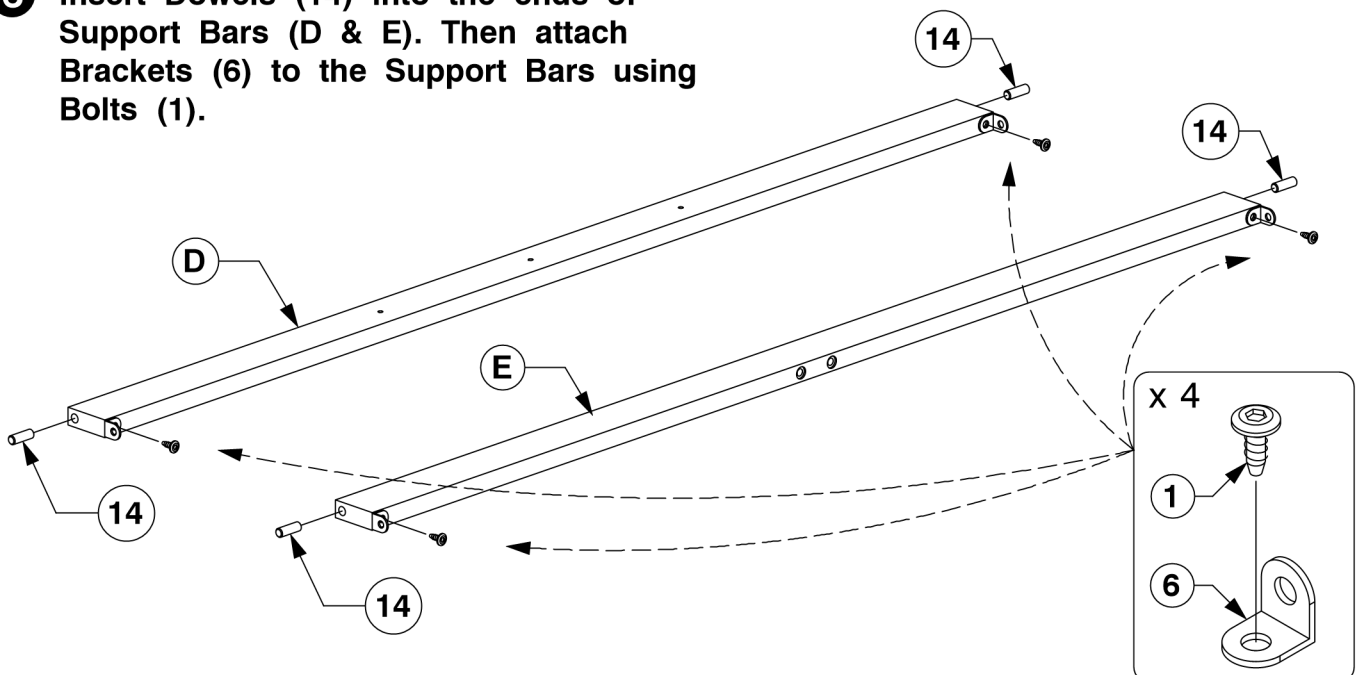


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 7** Fit the Right Side Panel (U) to the Top Panel (A).

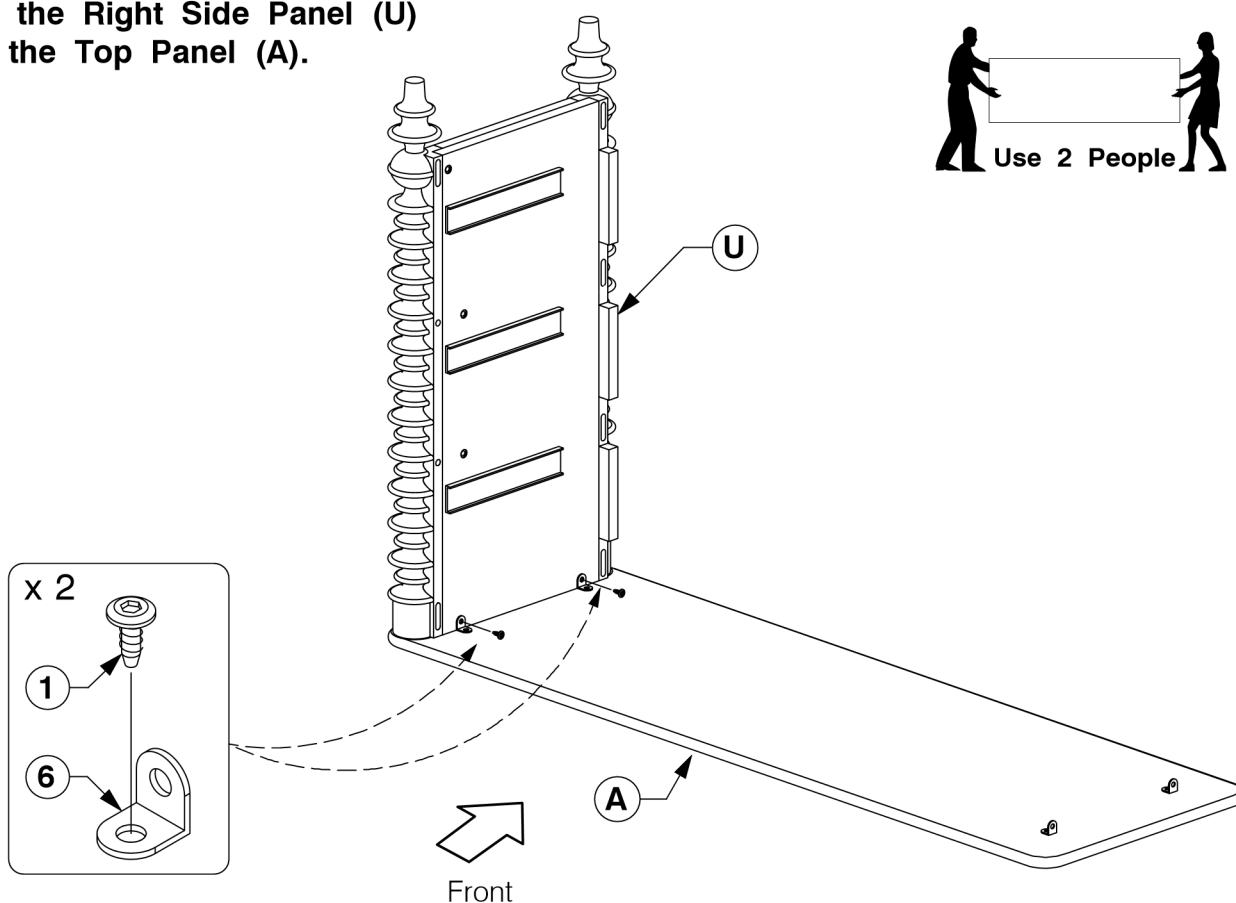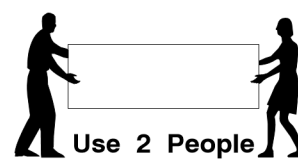


- 8** Assemble the Support Bar (B & F) to the Right Side Panel (U).

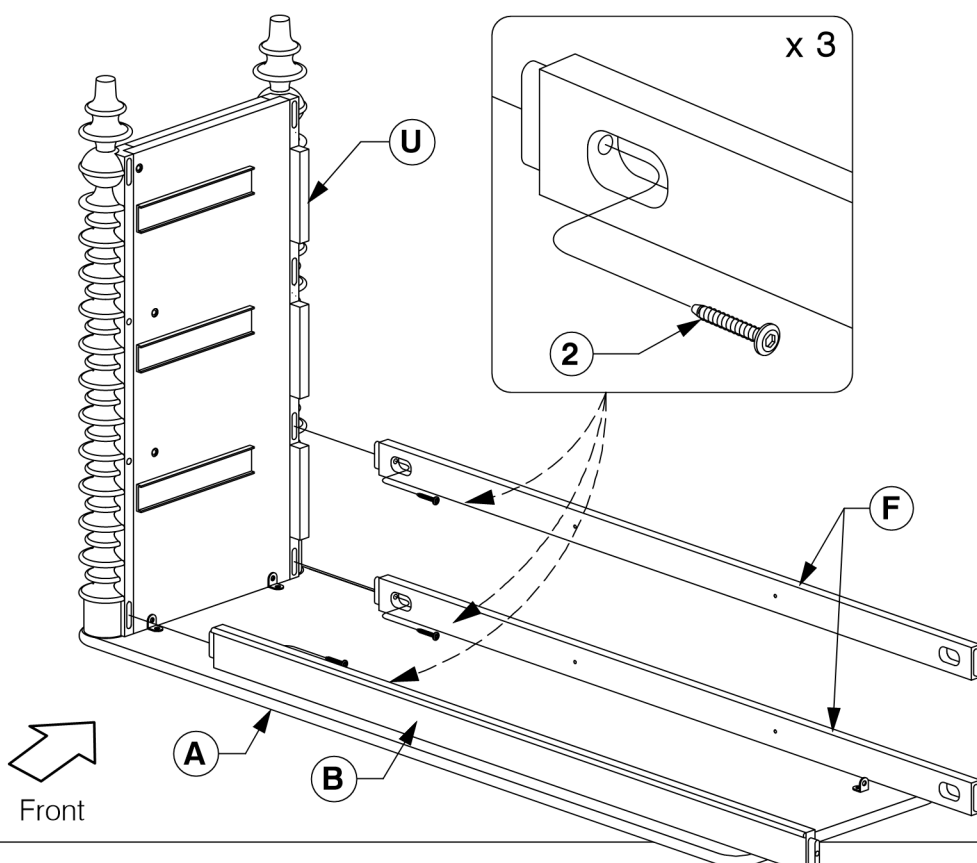


Step 1

Use the ball end of Allen key to start the bolt.

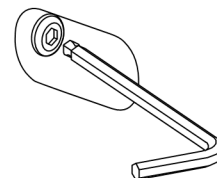

Step 2

Tighten fully with the straight end.

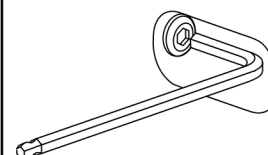


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 9** Assemble the Center Panel (V) to Support Bar (B & F).

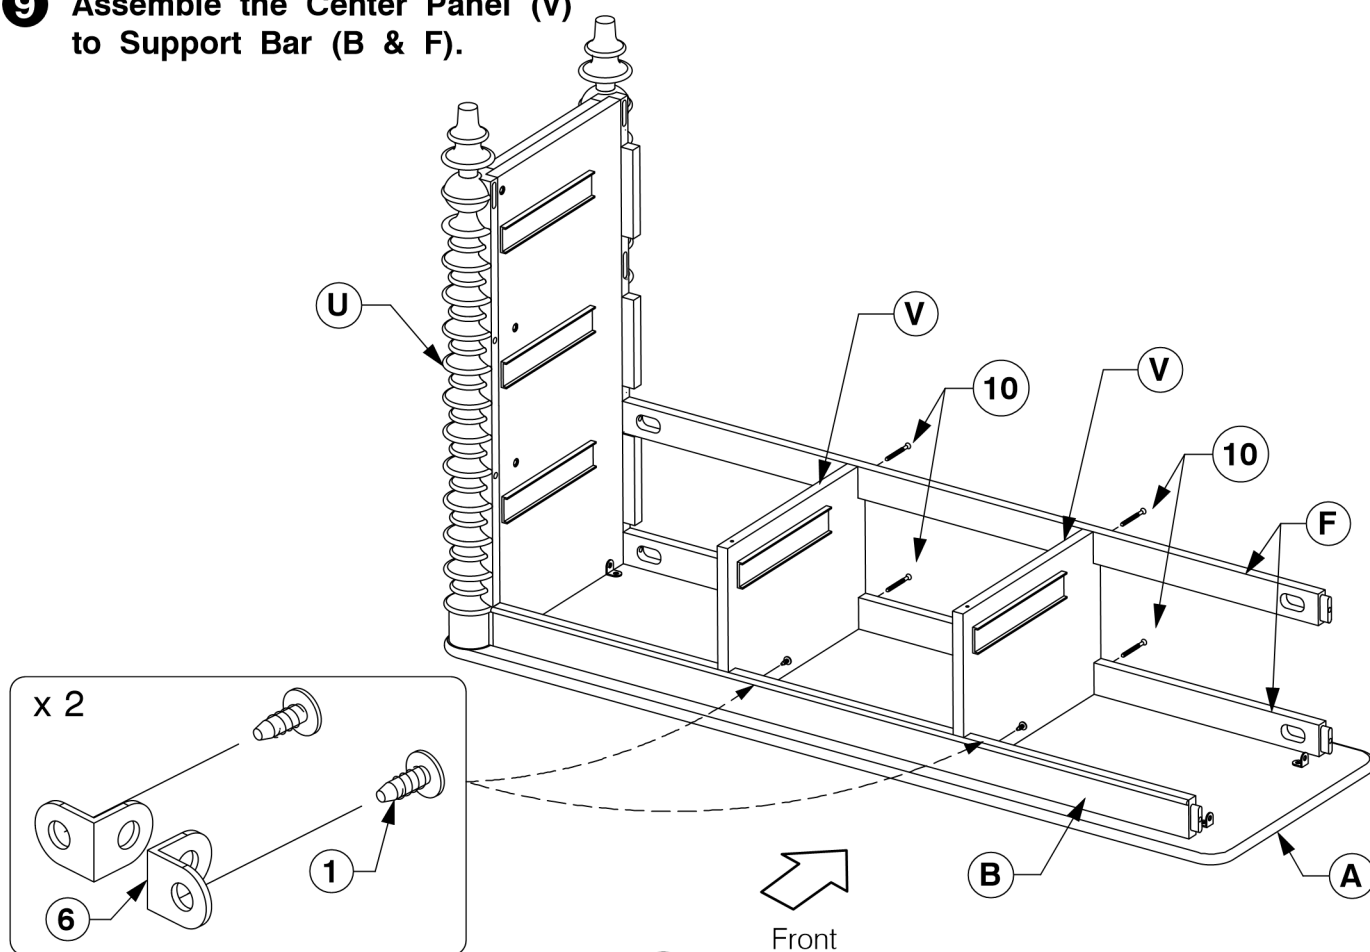

- 10** Attach Support Bars (D & E) to the Right Side Panel (U). Then tighten using Bolts.

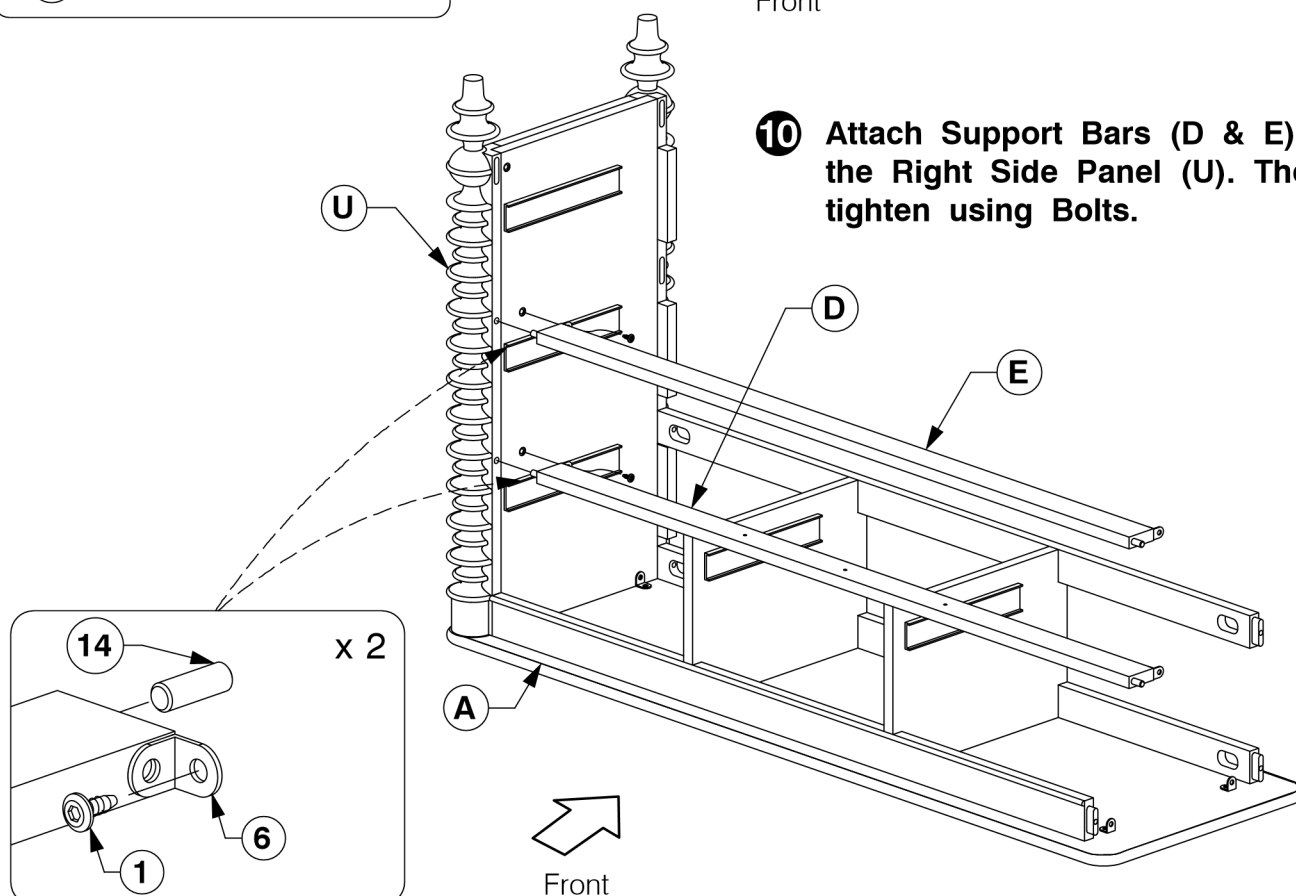


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 11** Assemble the Center Panel (W) to Support Bar (D, E, & F).

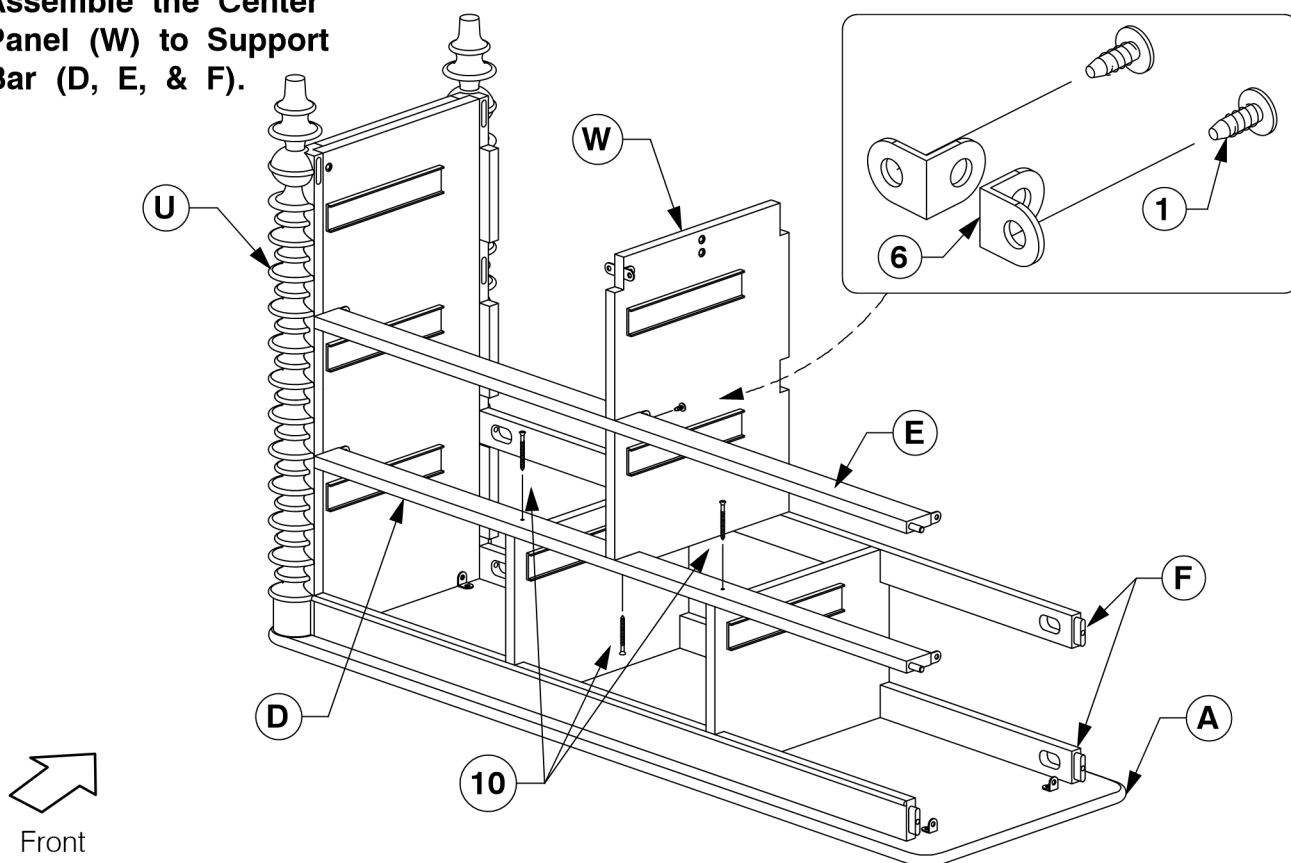


- 12** Fit the Support Bars (G) to the Center Panel (W).

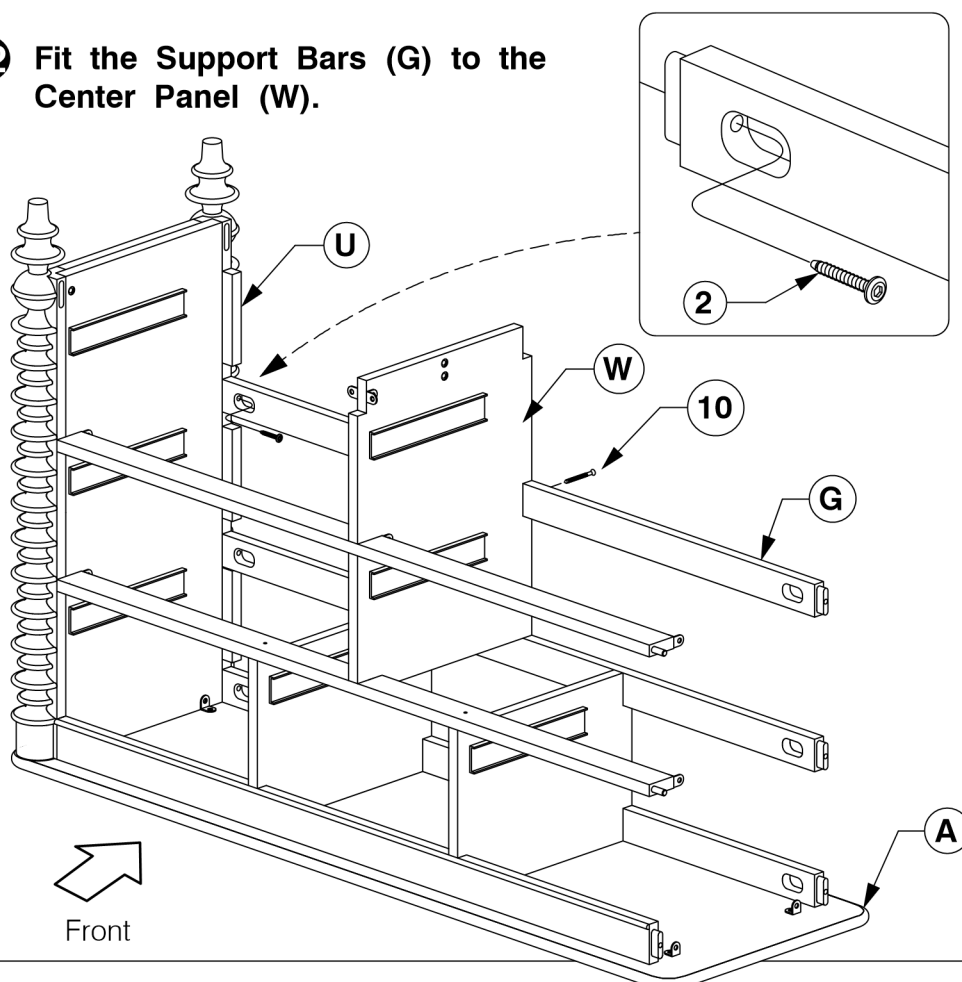


Step 1

Use the ball end of Allen key to start the bolt.

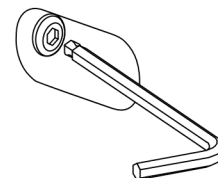

Step 2

Tighten fully with the straight end.

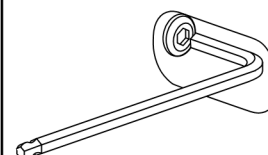


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

- 13** Attach the Support Bar (C & G) to the Right Side Panel (U) & Center Panel (W).

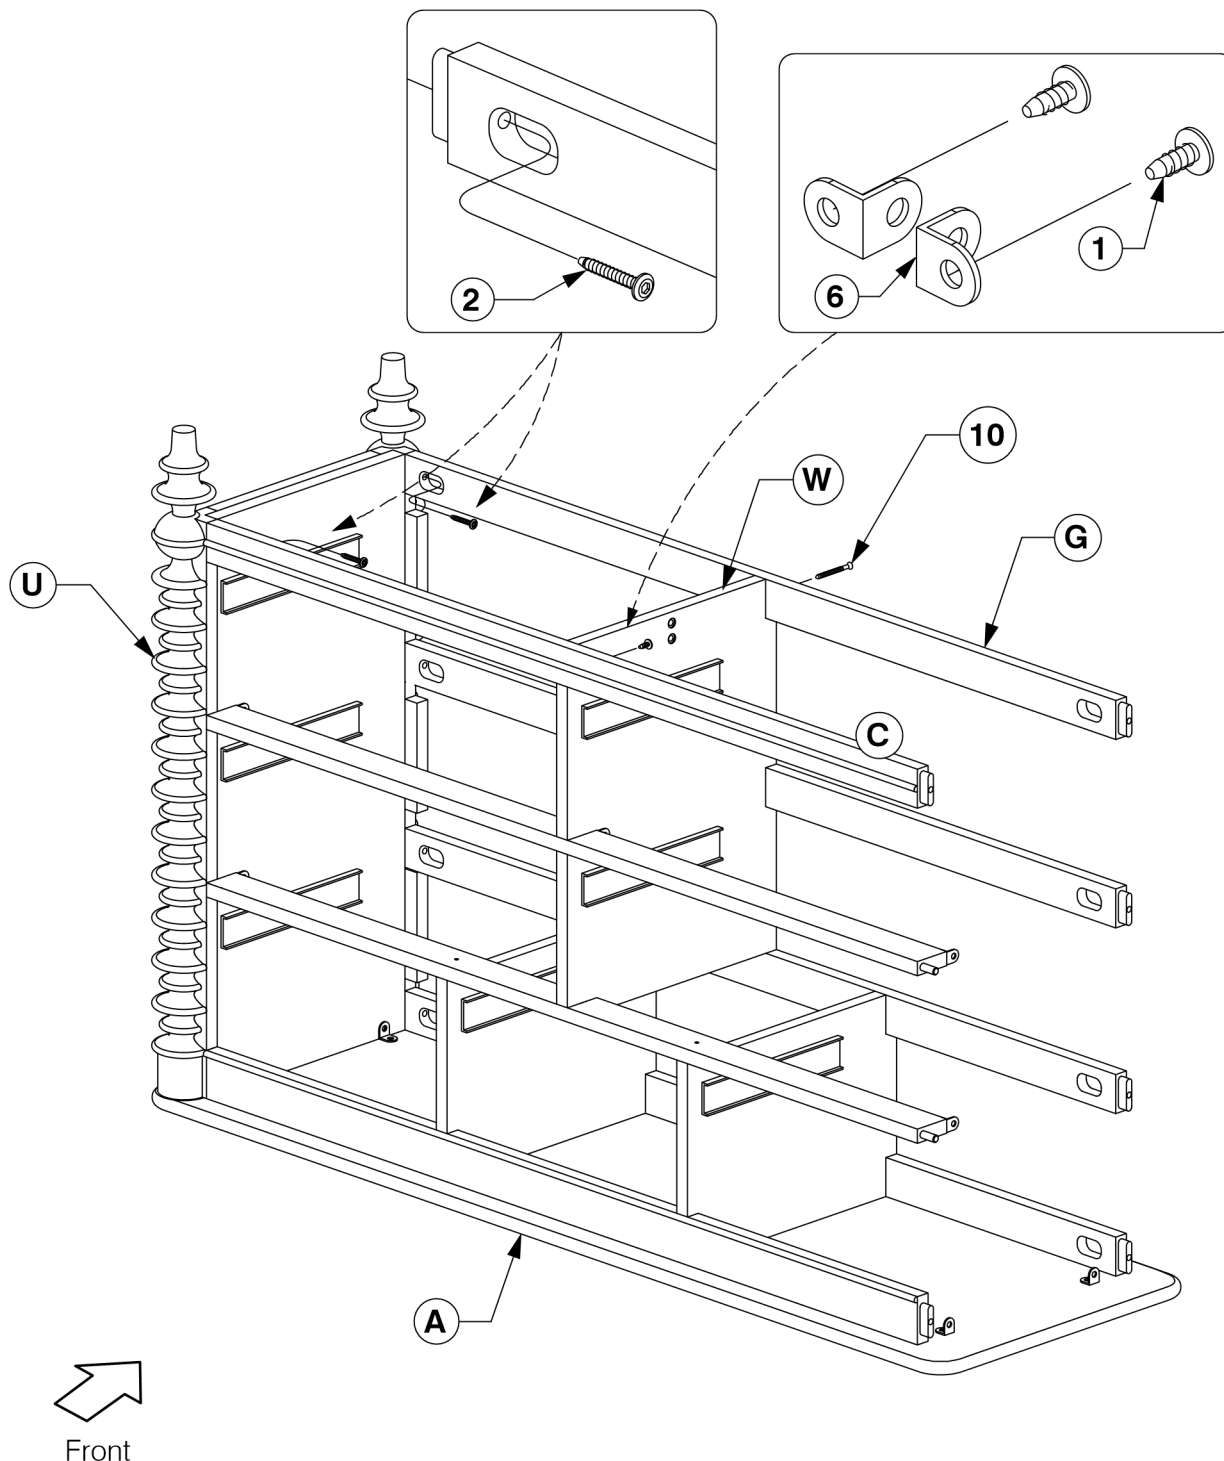


Step 1

Use the **ball end** of Allen key to start the bolt.

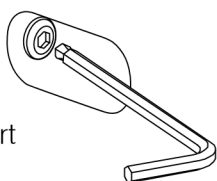

Step 2

Tighten fully with the **straight end**.


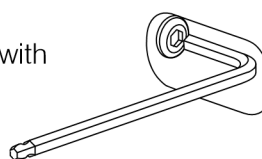


9029 7 Drawer Dresser

Assembly Instructions


WI-0426

- 14** Assemble the Left Side Panel (T) to the Support Bars (B, C, D, E, F & G).

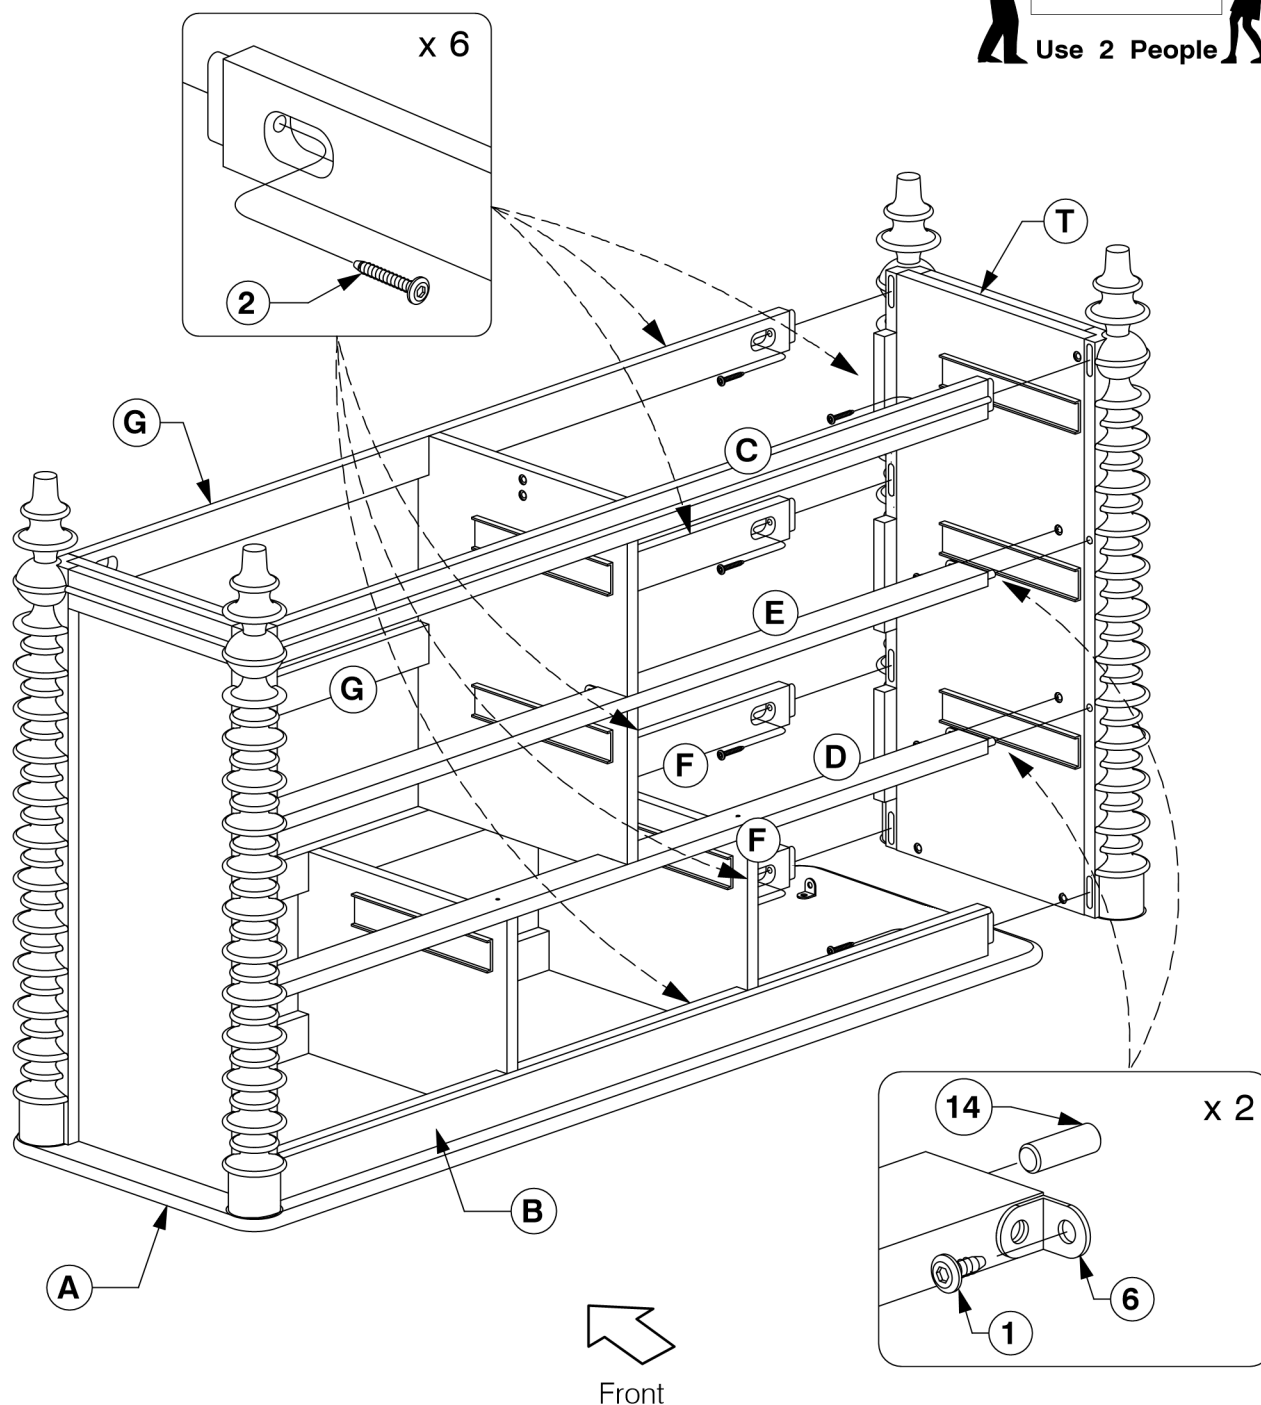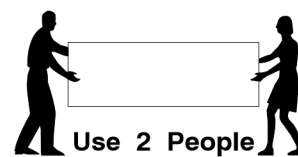


Step 1

Use the **ball end** of Allen key to start the bolt.

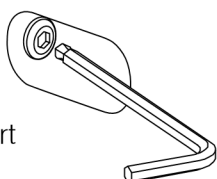

Step 2

Tighten fully with the **straight end**.

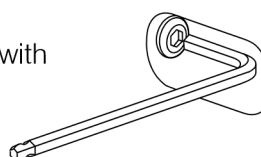


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 15** Tighten the bolts as shown.

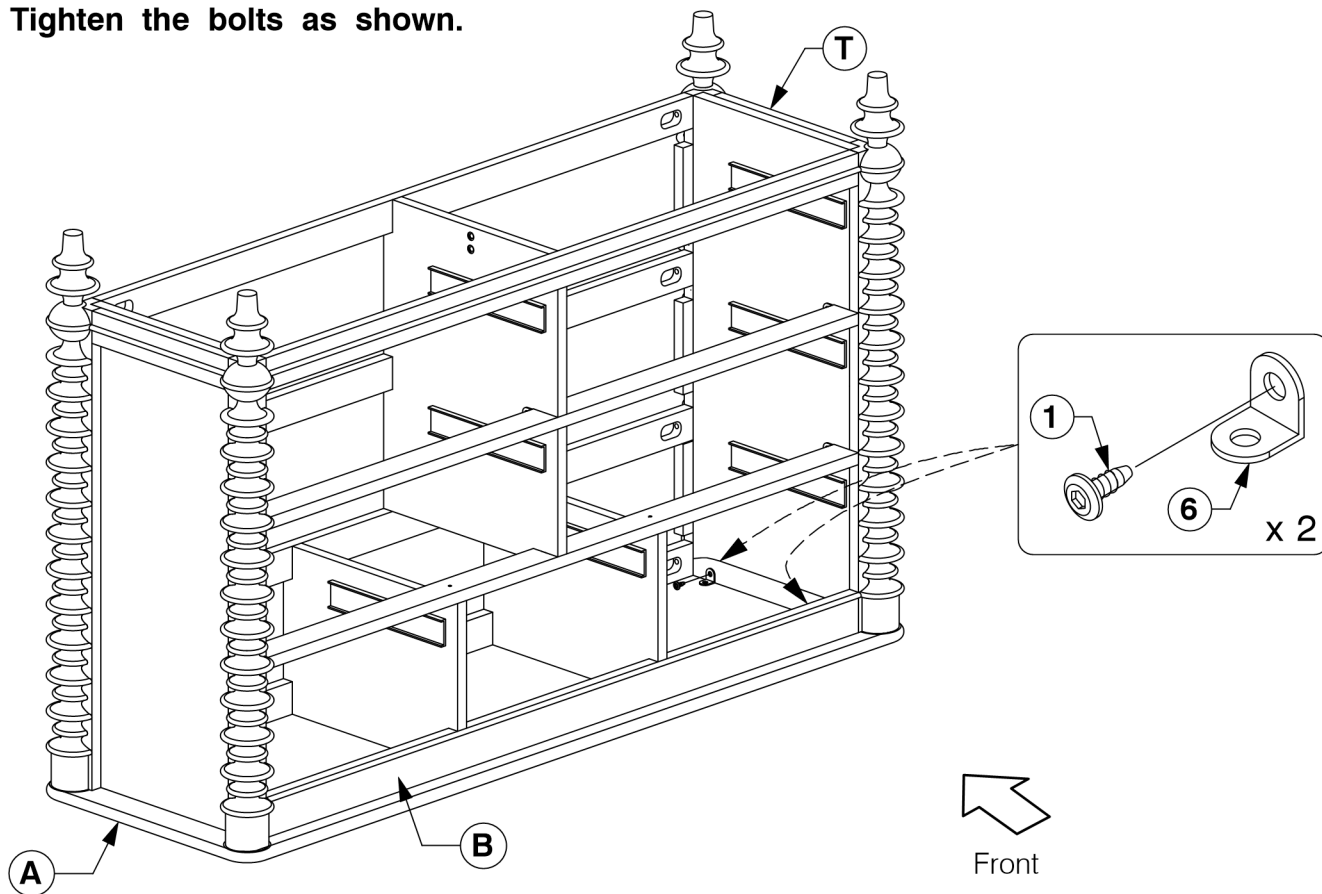

- 16** Fix the Adjustable foot to the bottom of the Center Post (H).
Fit the Center Post (H) to the Center Panel (W).

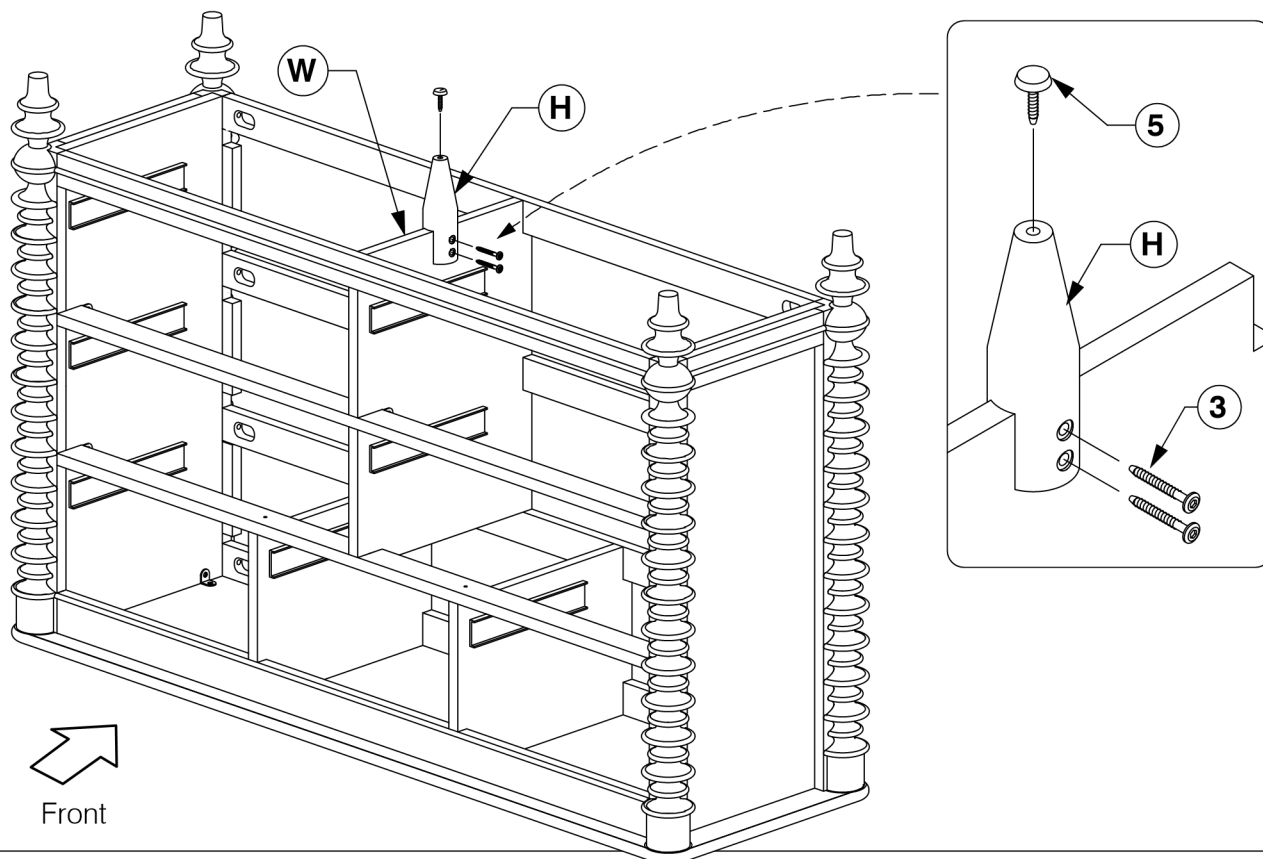


9029 7 Drawer Dresser


Assembly Instructions

WI-0426

- 17** Attached the Back Panel (J) to the back of the frame.

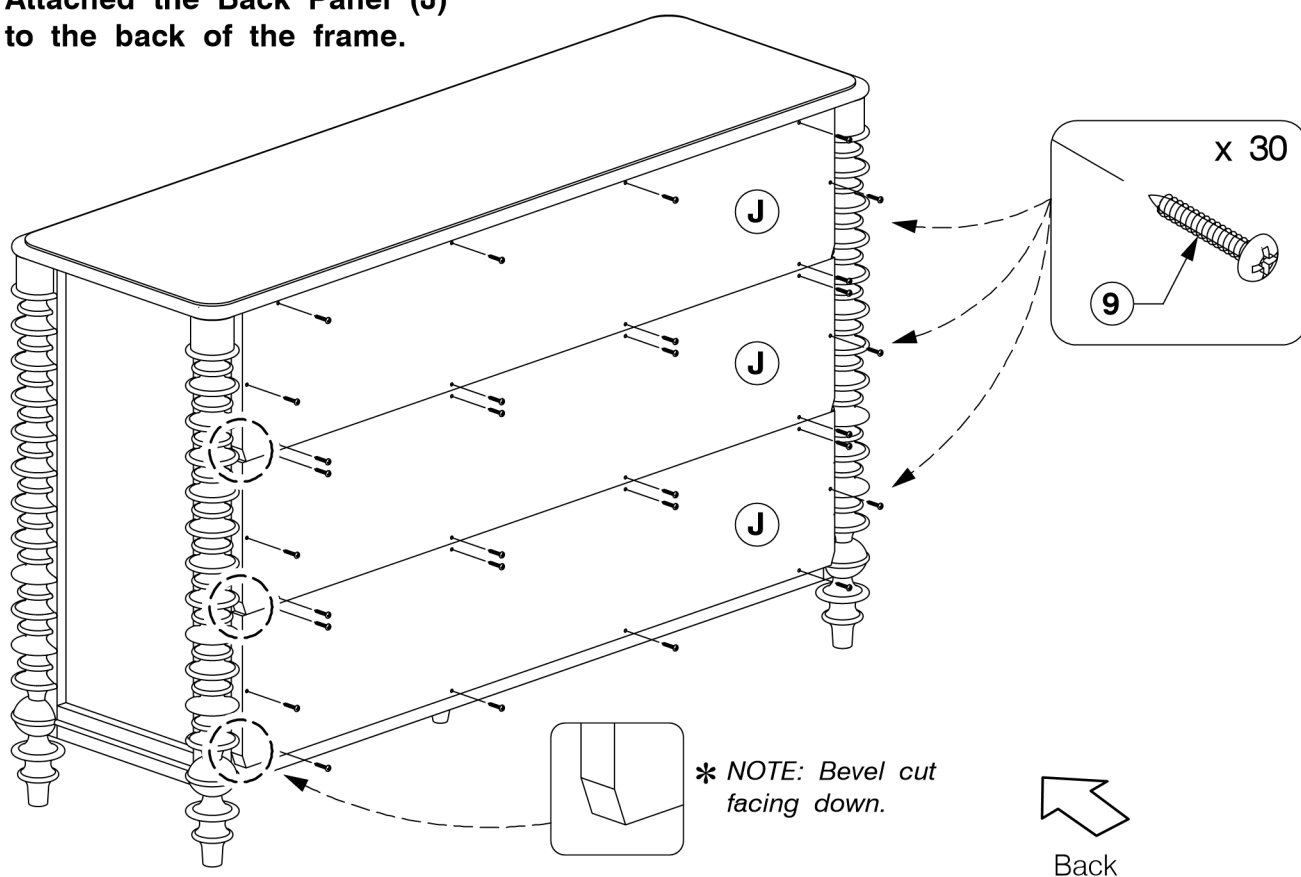

- 18** Fit the Drawer Box (K & N) to the casegood body.

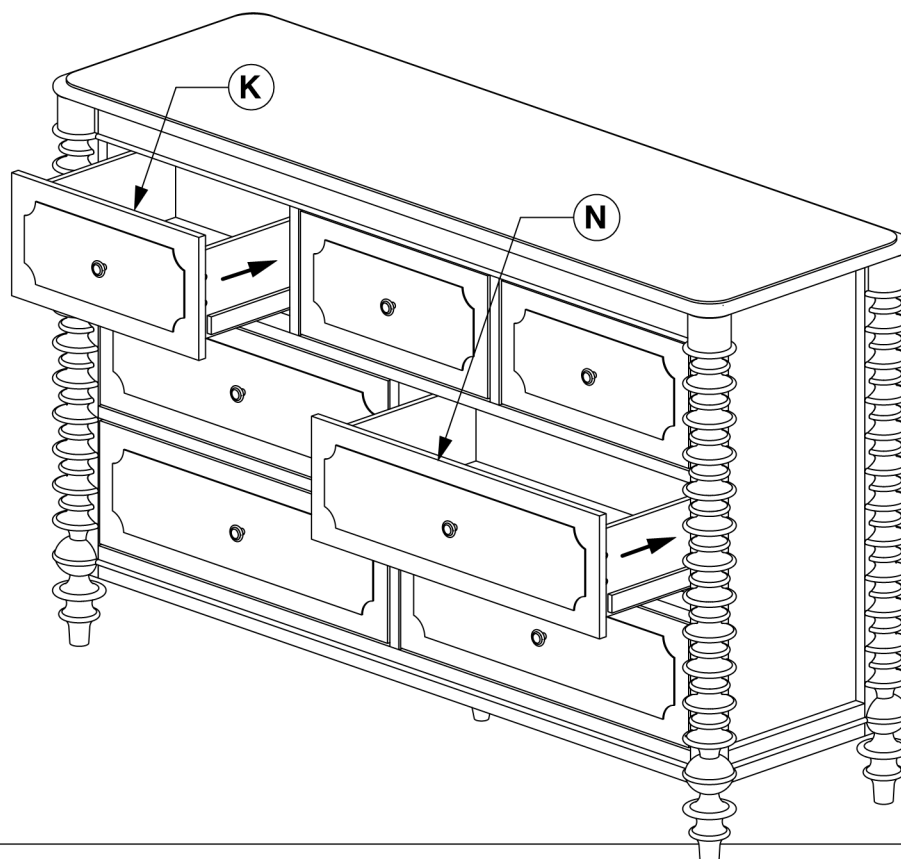


9029 7 Drawer Dresser

Assembly Instructions

WI-0426

19 Adjust the Drawer Face (K & N).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.

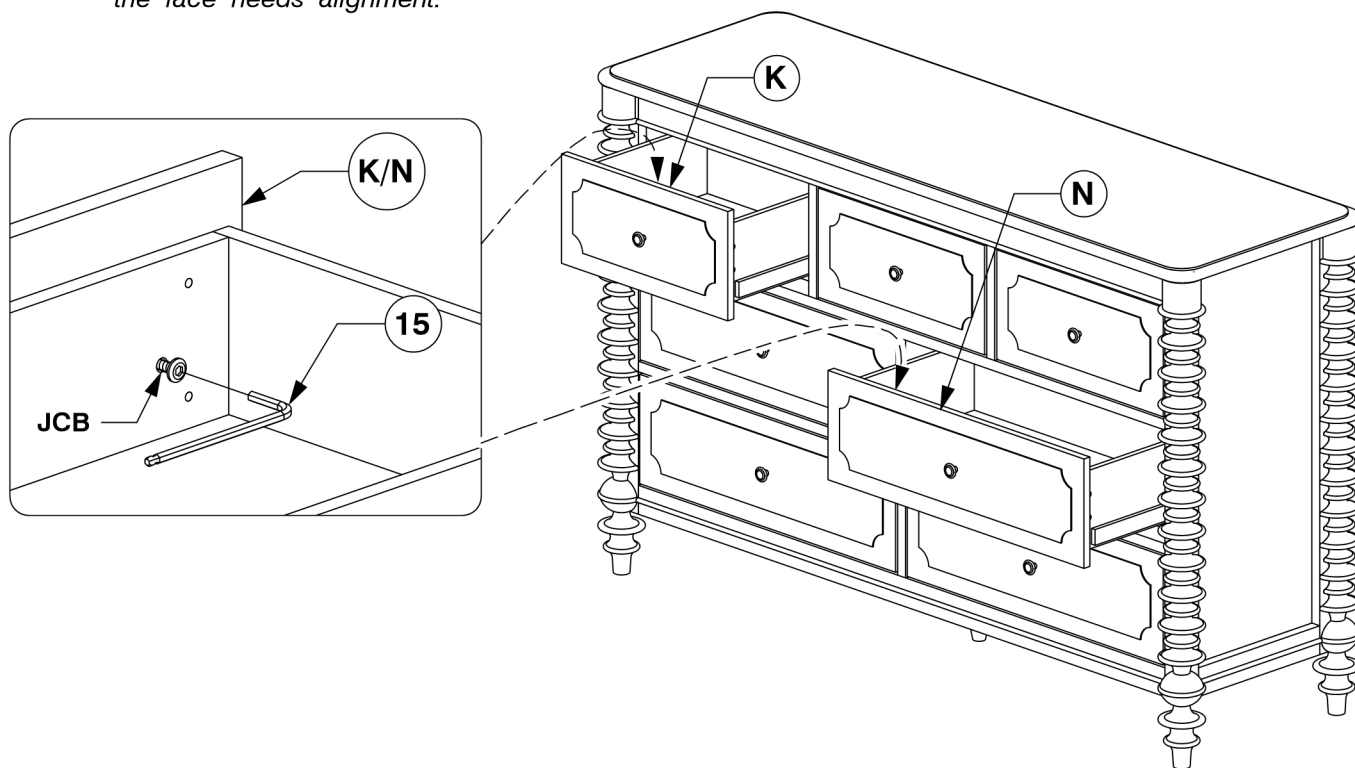

20 After the Drawer Faces (K & N) are aligned, secure with wood screws.

