0030 Full Daybed

Assembly Instructions

WII-0720

1 Assembled View

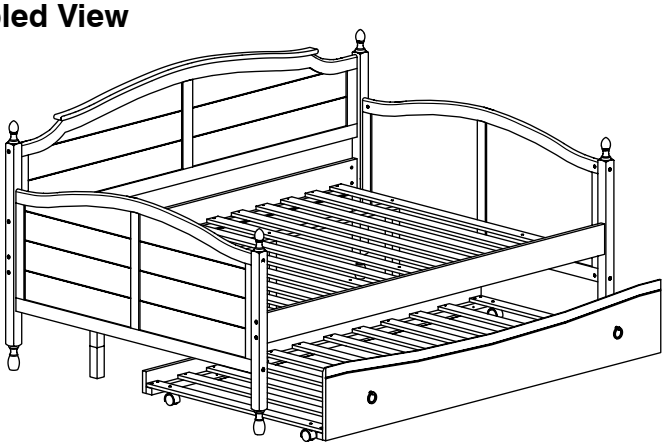

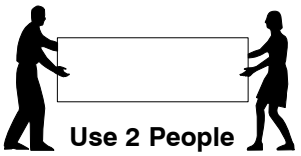

<u>Note:</u> Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts in this Box

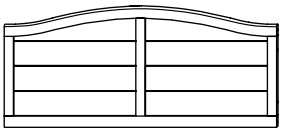

A Side Panel **x 2**



B Back Panel **x 1**



C Side Rail **x 2**



D Long Support **x 1**

Slats are packed in separately in Box B

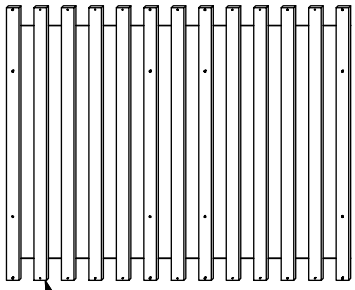

L Set of Slats **x 1**

E Support Leg **x 4**

F Mini Support Leg **x 4**

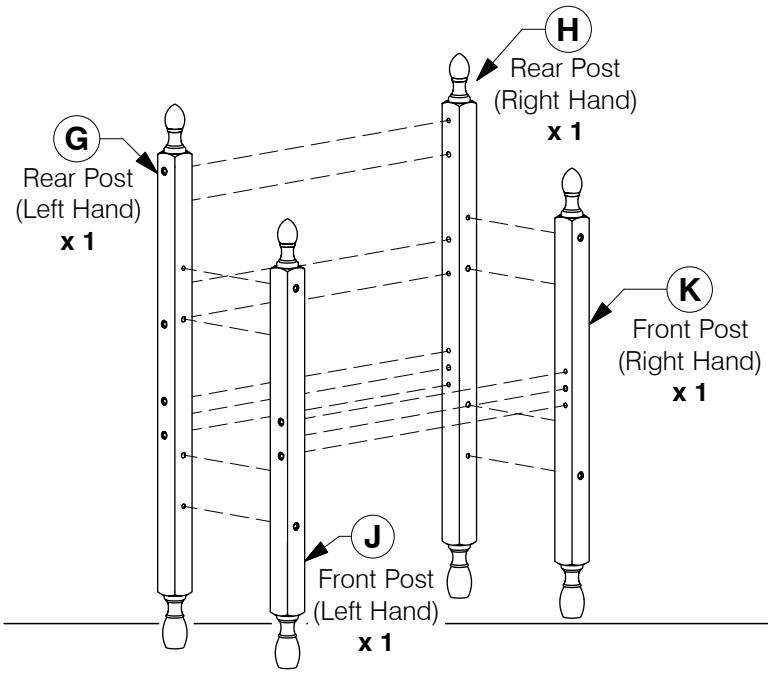

3 Hardware in this Box

1 M6 x 90mm JCB **x 28**

4 Barrel Nut **x 24**

2 M6 x 40mm JCB **x 8**

5 Wood Dowel (10 x 40mm) **x 16**



3 Wood Screw (M4 x 32mm) **x 18**

6 Allen Key **x 1**

4 **Fit the Mini Support Leg (F) to the Support Leg (E).**

x4

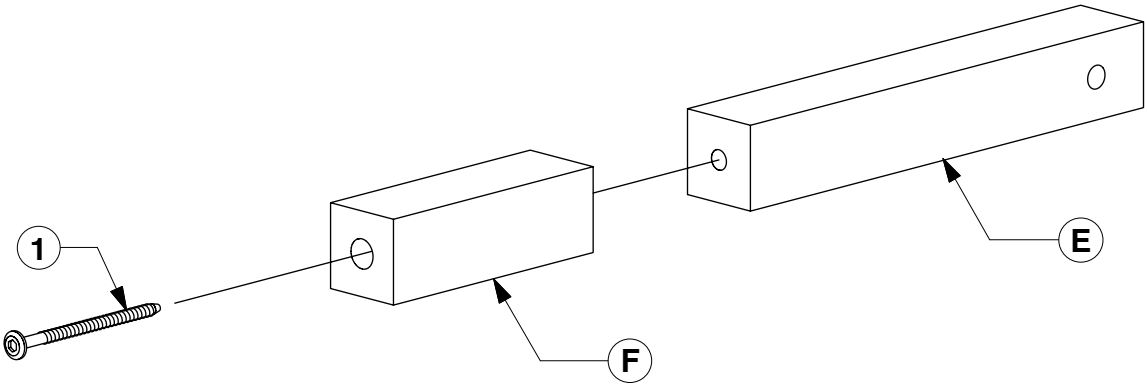

5 **Assemble the Rear Post (G/H) to the Side Panel (A).**

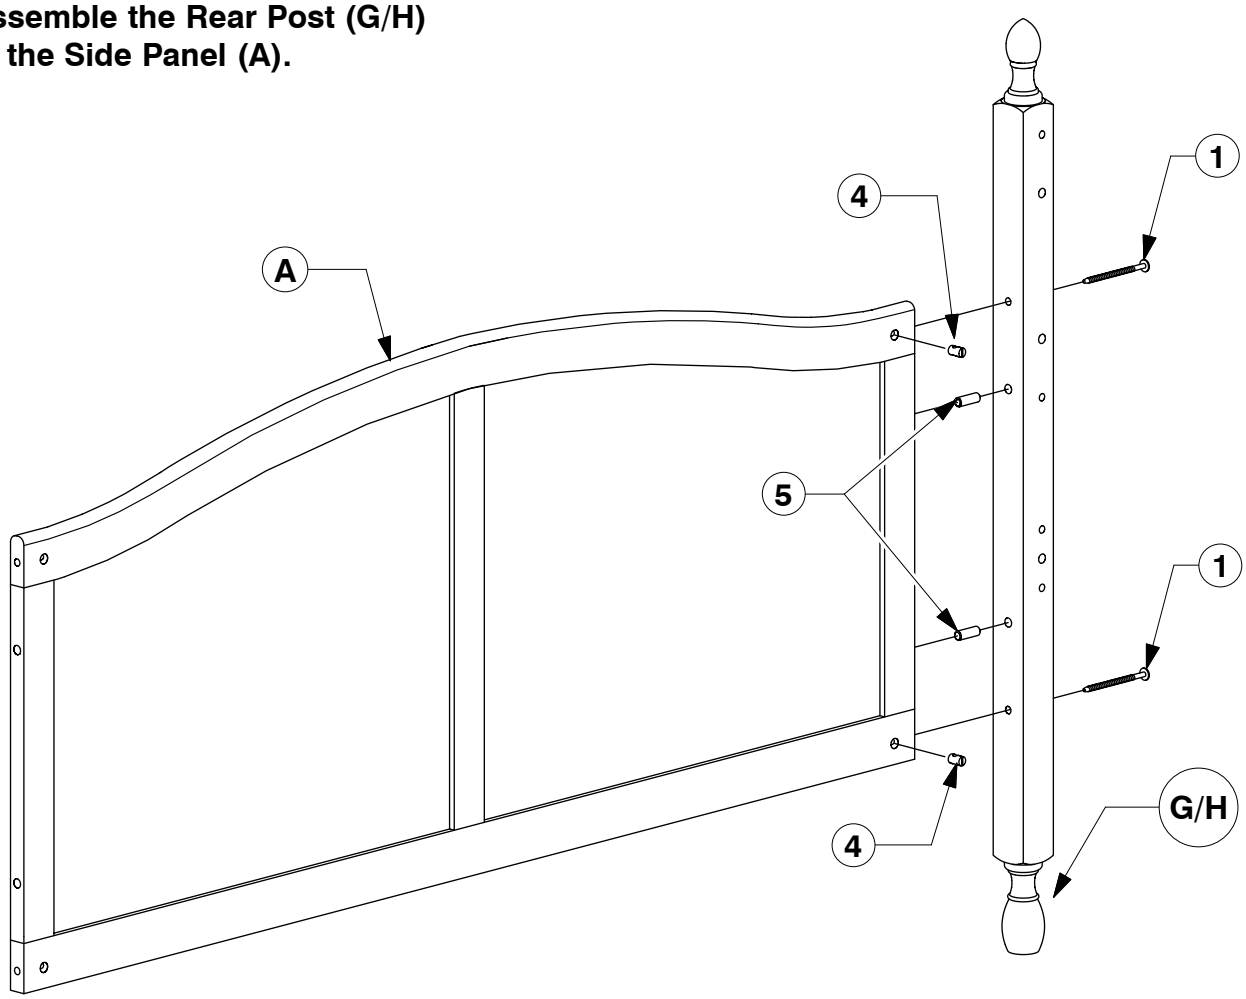

0030 Full Daybed

Assembly Instructions

WII-0720

6 **Assemble the Front Post (J/K) to the Side Panel (A).**

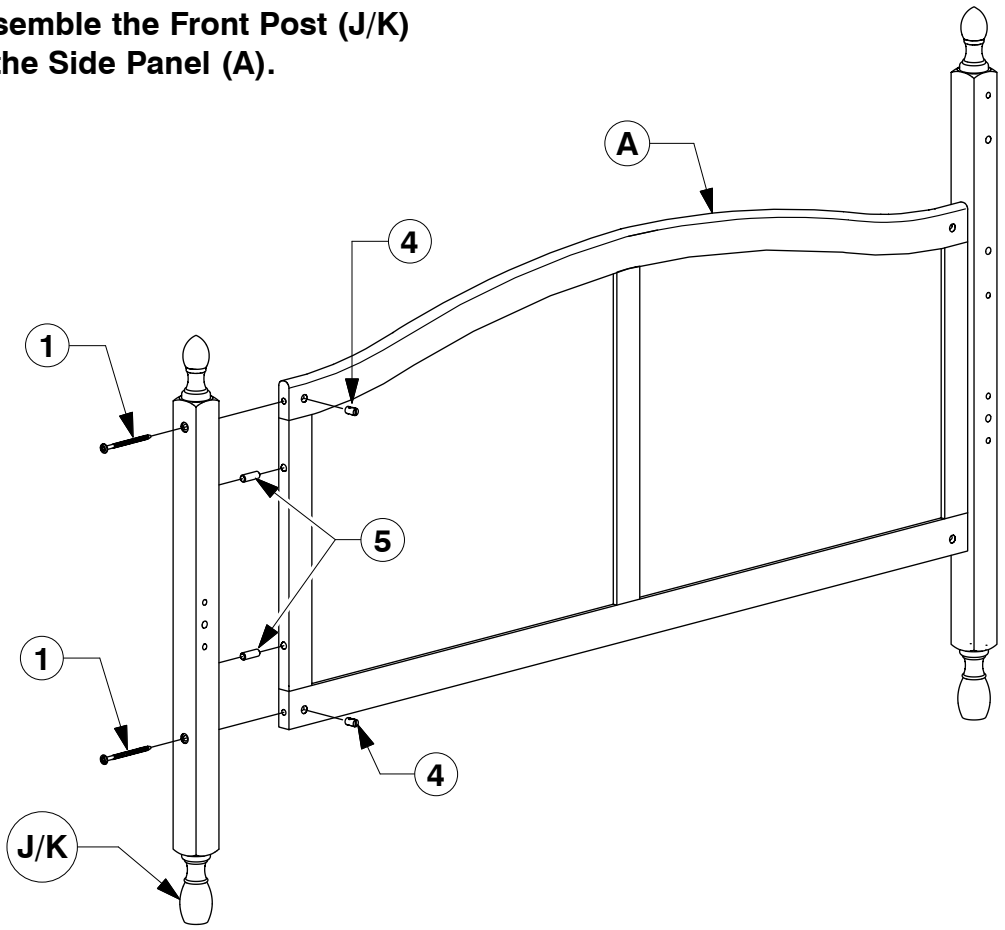

7 **Assemble the Side Panel (A) to the Back Panel (B) & Side Rail (C).**

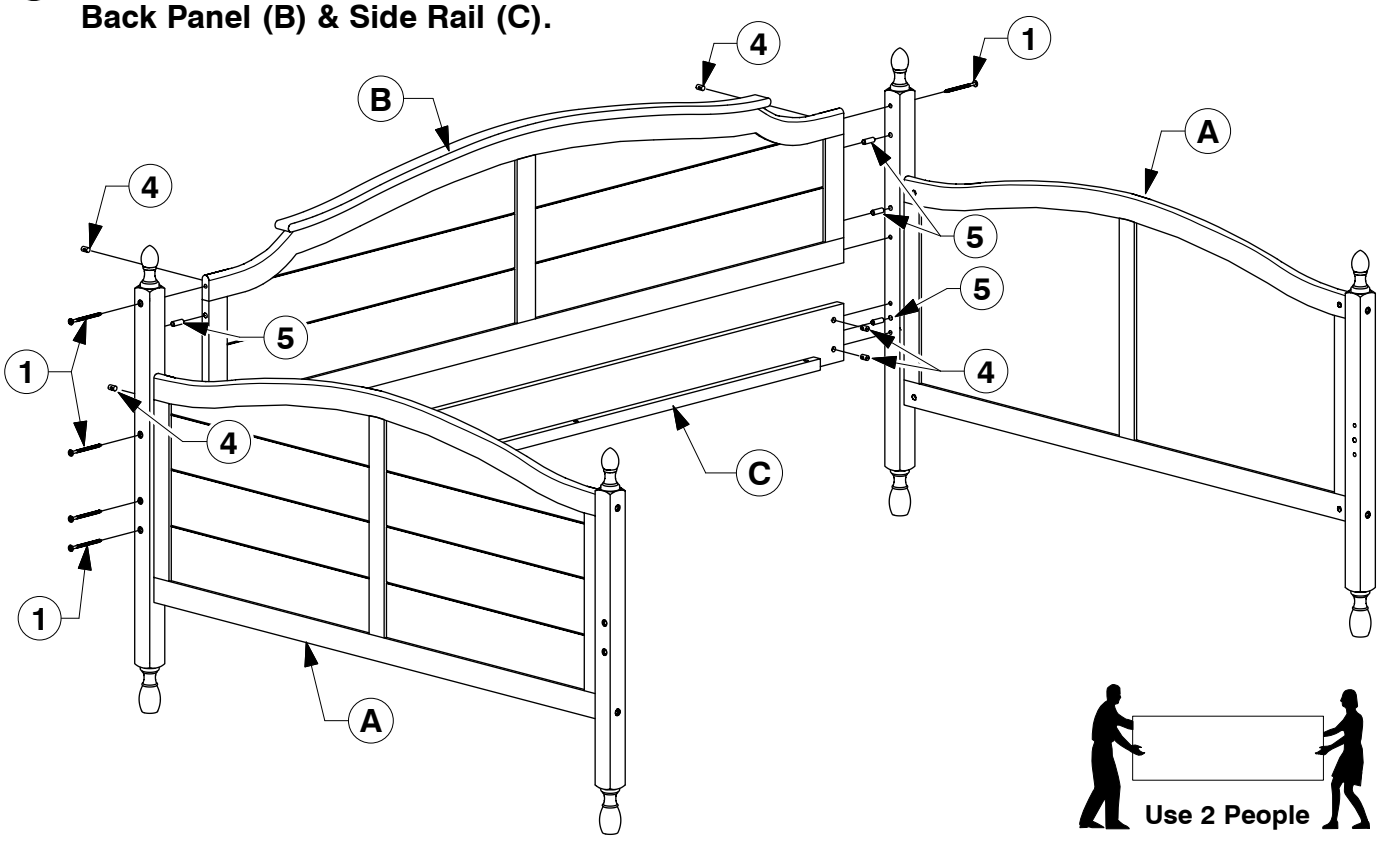

8 **Assemble the Side Rail (C) to the Front Post (J/K).**

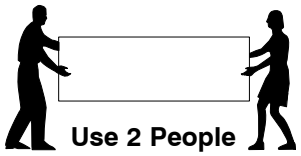

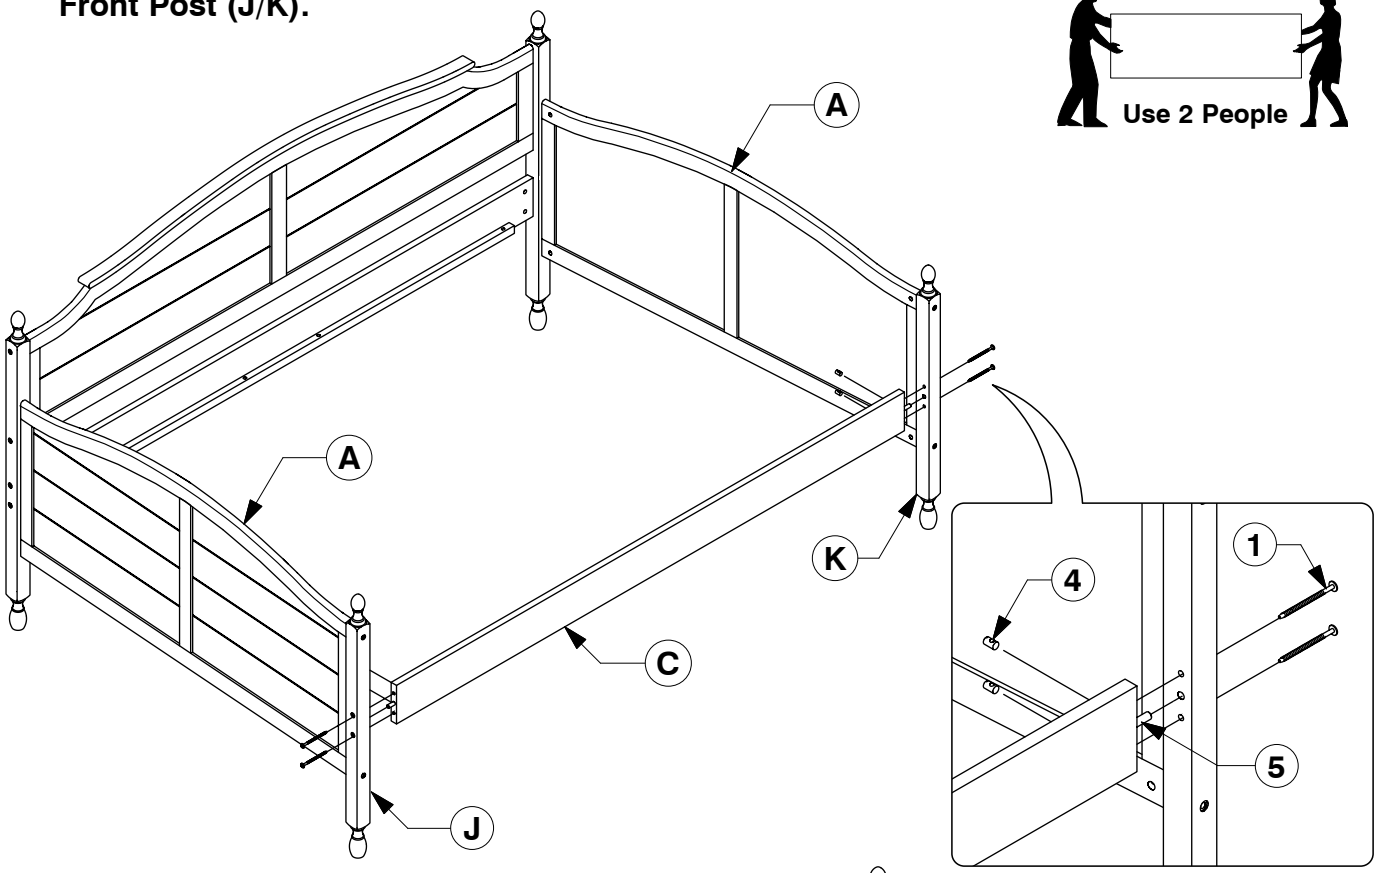

9 **Fit the first Slat and assemble the Support Leg (E) to the Bed Slat (L). Bolt the Bed Slats (L) to the Side Rail (C) & Long Support (D).**

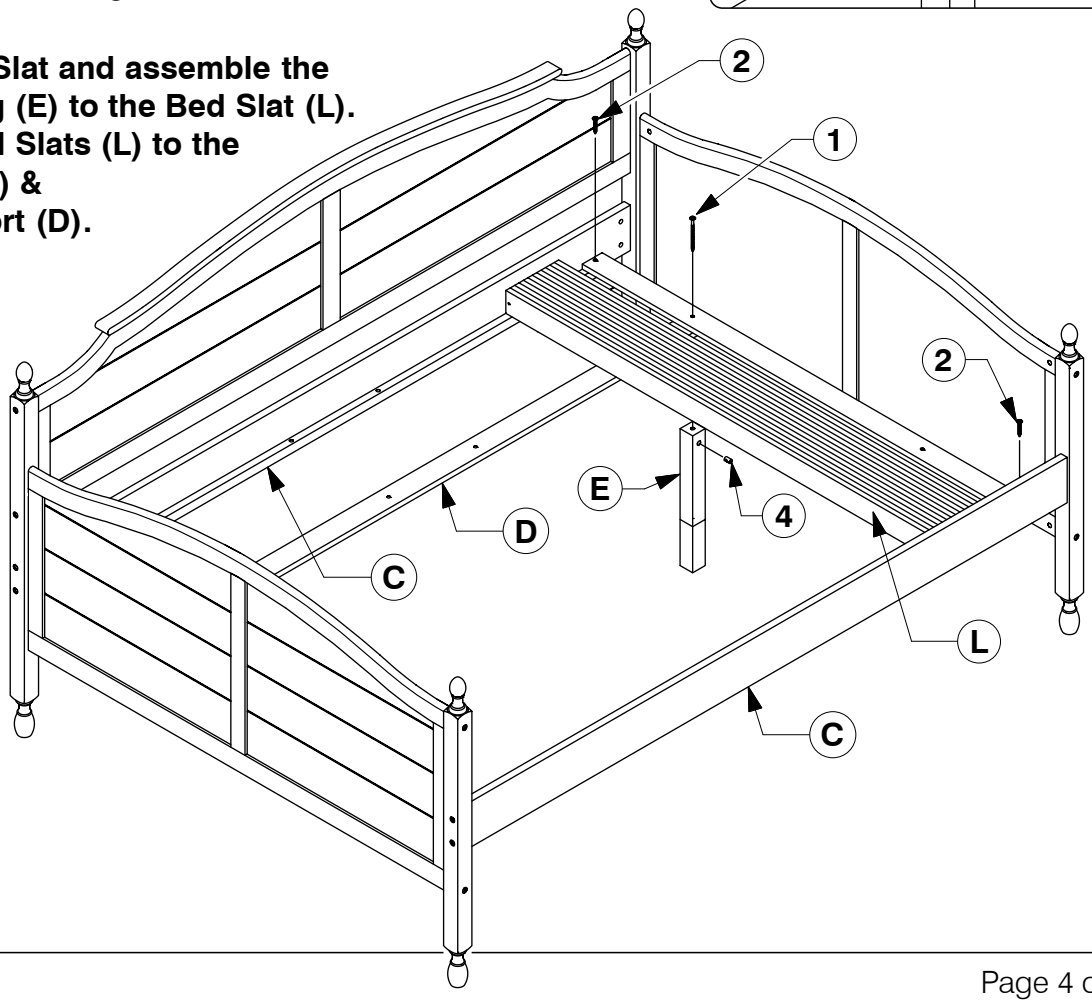

0030 Full Daybed

Assembly Instructions

WII-0720

10 **Fit the other Slats out and assemble the Support Leg (E) to the Bed Slat (L). Bolt & screw the Bed Slats (L) to the Side Rail (C) & Long Support (D).**

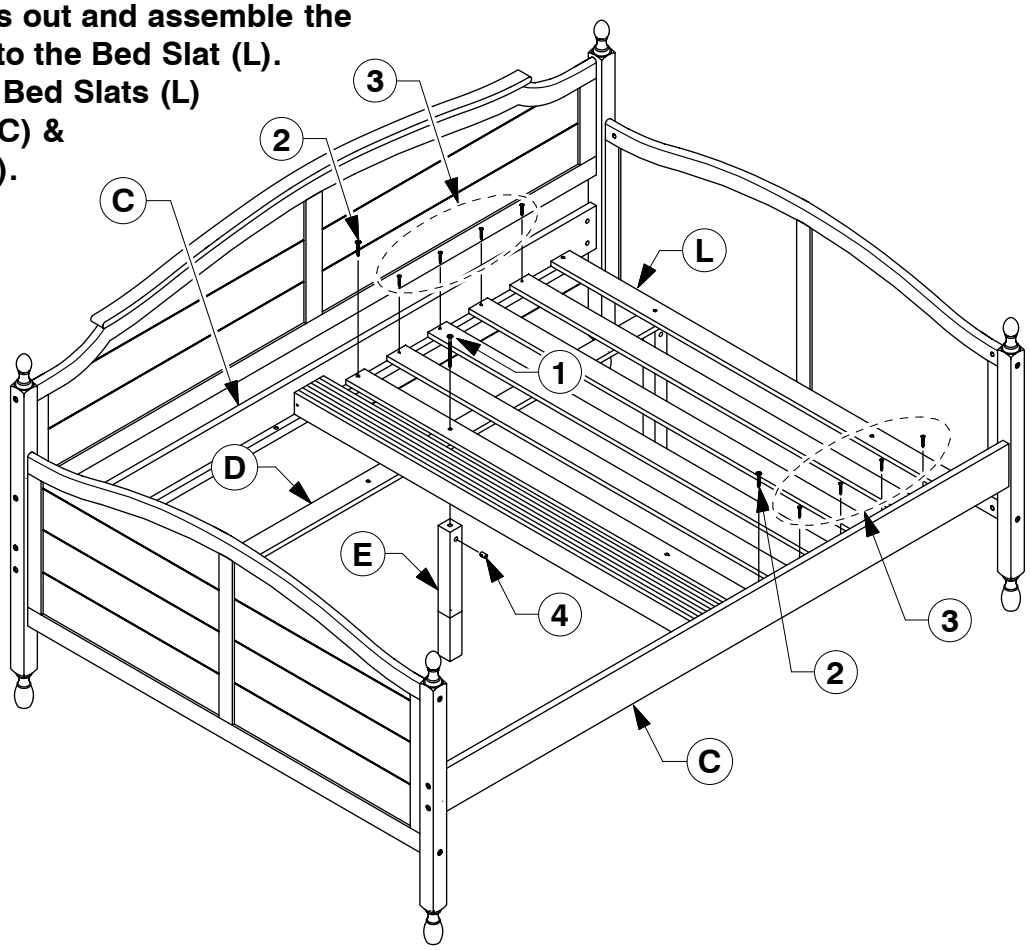

11 **Fit the other Slats out and assemble the Support Leg (E) to the Bed Slat (L). Bolt & screw the Bed Slats (L) to the Side Rail (C) & Long Support (D).**

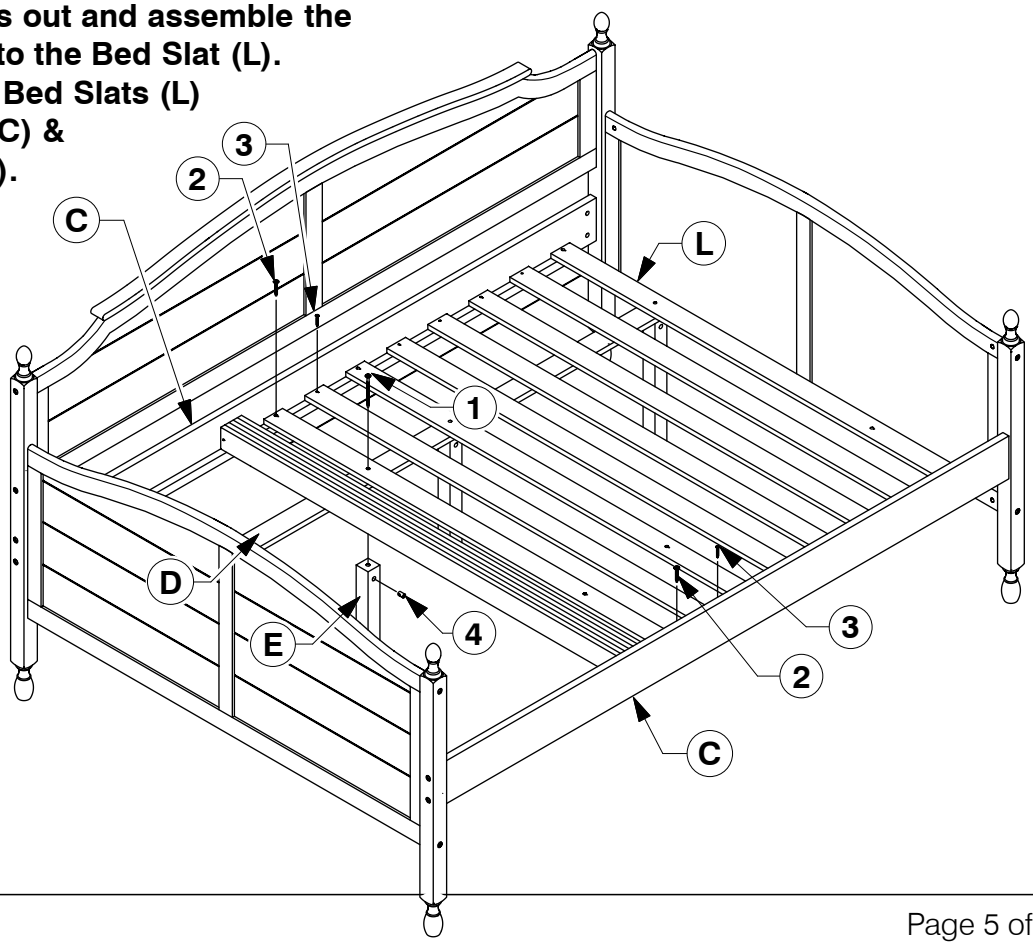

0030 Full Daybed

Assembly Instructions

WII-0720

12 **Assemble the Support Leg (E) and bolt & screw the remaining Bed Slats (L) to the Side Rail (C) & Long Support (D).**

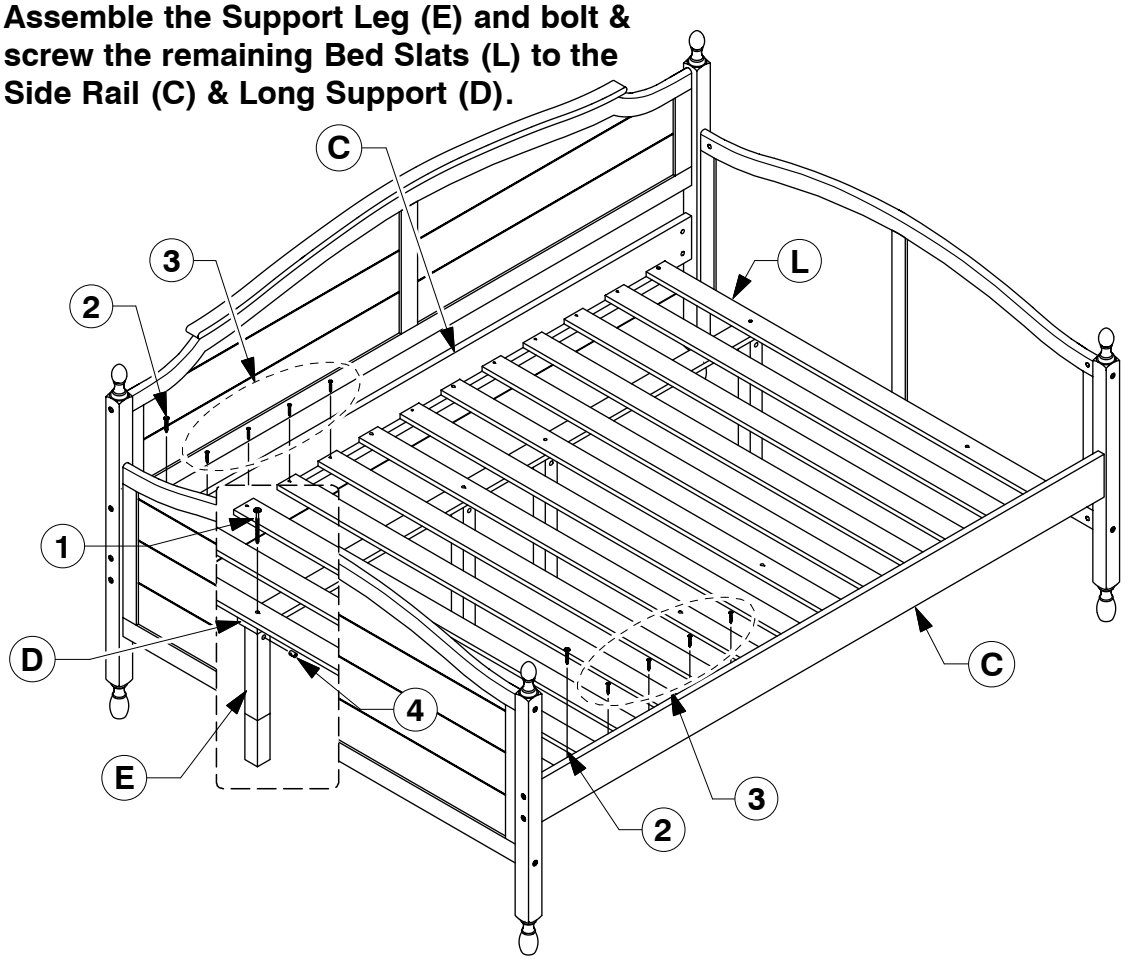

13 **Finally, fit the assembled trundle.**

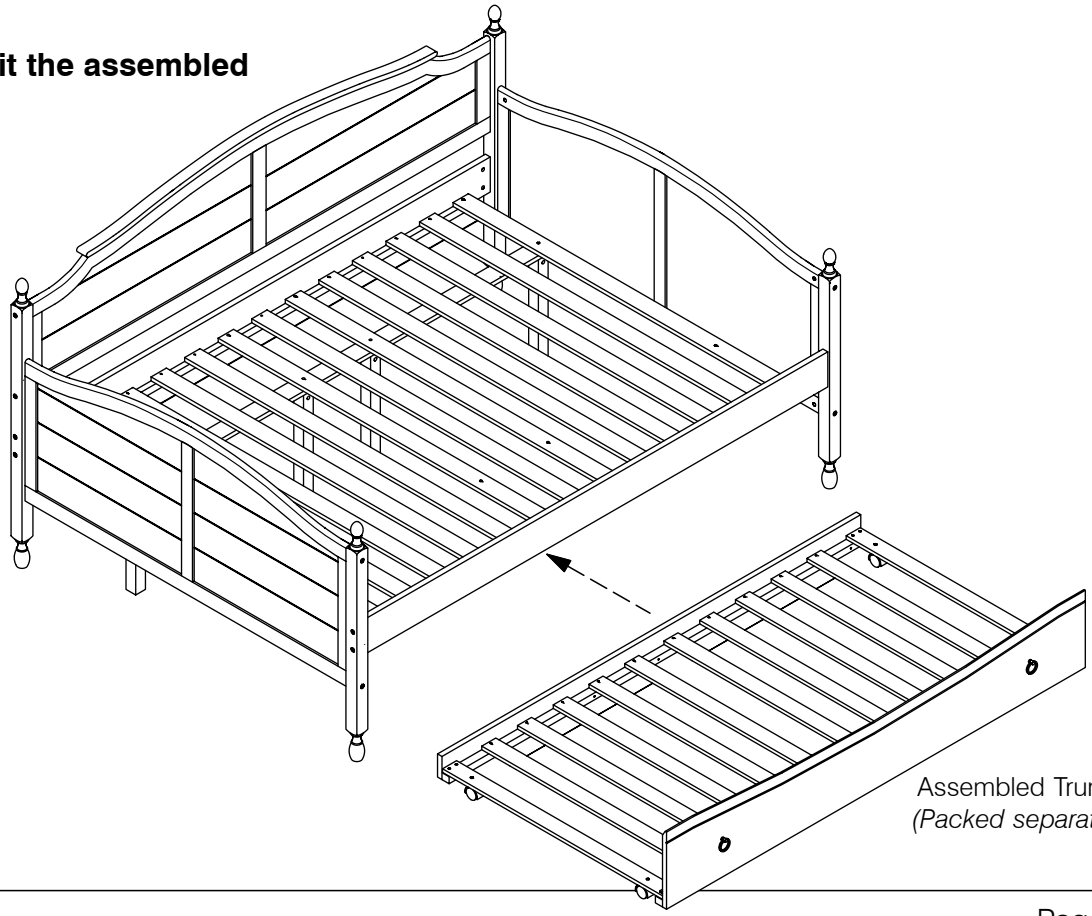

Assembled Trundle
(Packed separately)

0030/0034 Daybed Trundle

Assembly Instructions

WII-0320

1 Assembled View

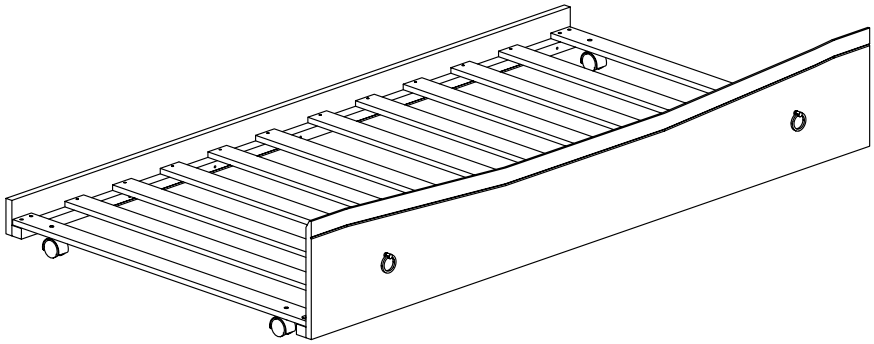

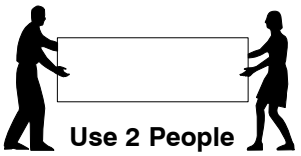

<u>Note:</u> Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List

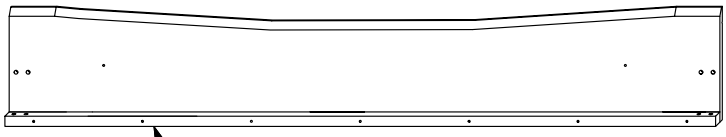

A Trundle Front Panel **x 1**

C Trundle Support Rail **x 2**



B Trundle Rear Panel **x 1**

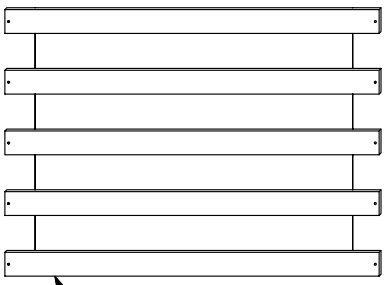

D Set of Slats **x 2**

3 Hardware List

1 M6 x 40mm JCB **x 8**

2 M6 x 10mm JCB **x 4**



3 Wood Screw (M4 x 32mm) **x 20**



4 Wood Screw (M4 x 22mm) **x 2**

5 Allen Key **x 1**

6 Handle **x 2**



7 Metal Bracket **x 2**



8 Wheels **x 4**

0030/0034 Daybed Trundle

Assembly Instructions

WII-1118

4 **Fit the Wheels (8) to the Trundle Support Rail (C).**

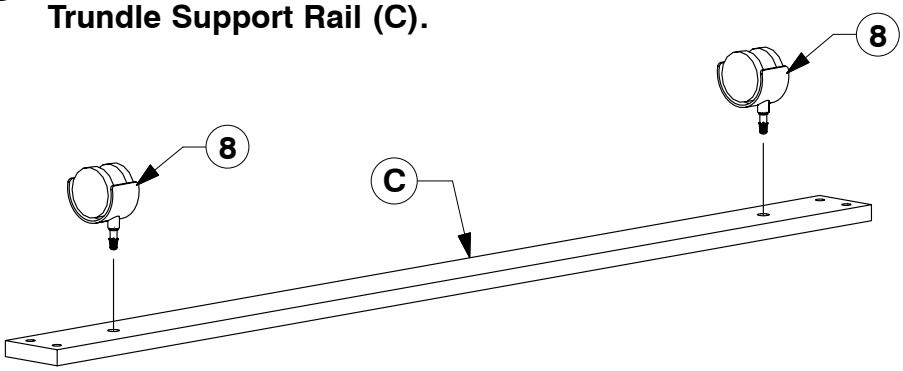

5 **Assemble the Set of Slats (D) & Trundle Support Rail (C) to the Trundle Front Panel (A) & Trundle Rear Panel (B).**

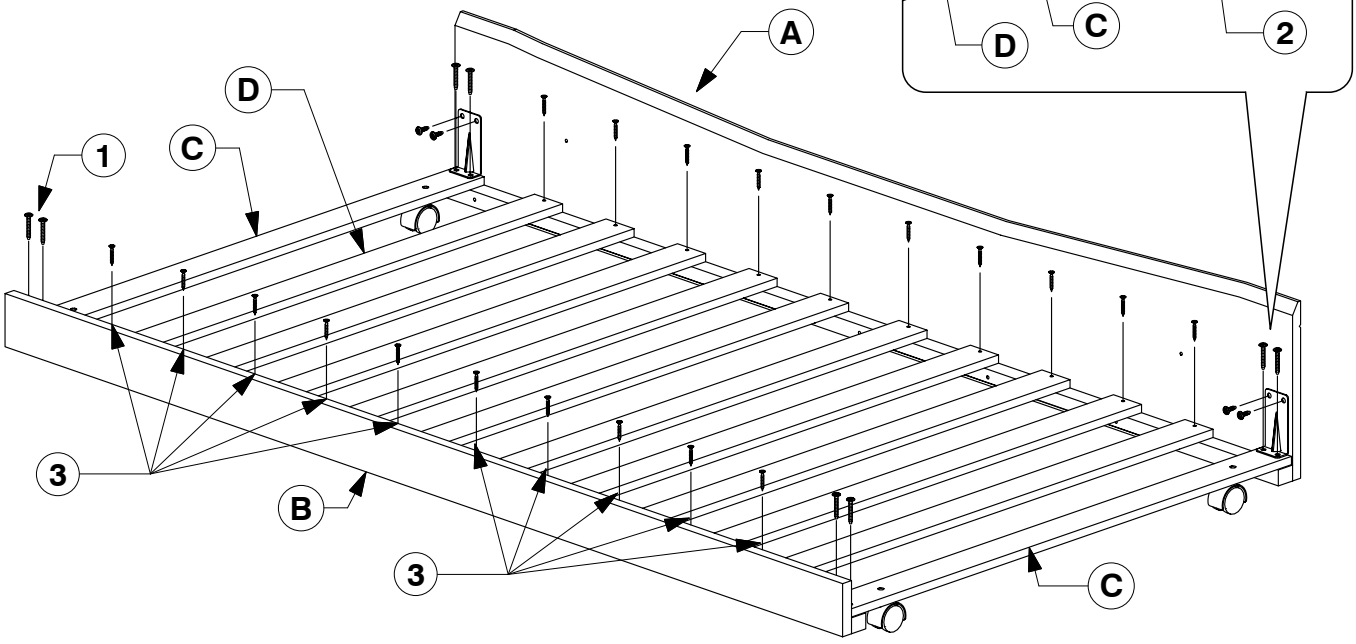

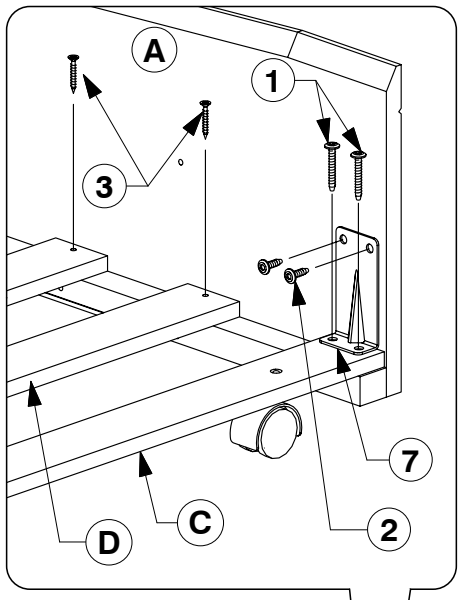
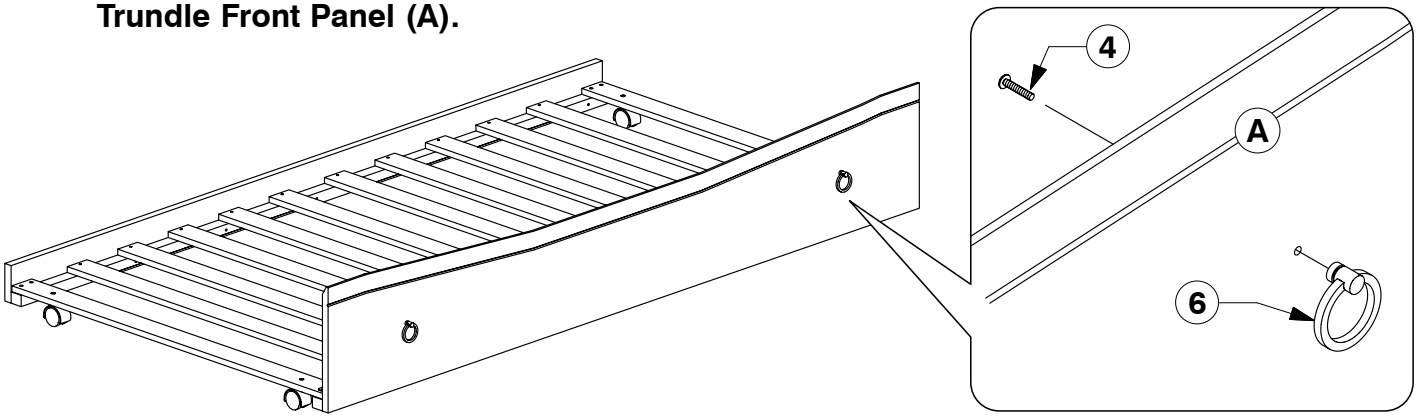
6 **Fit the Handle (6) to the Trundle Front Panel (A).**